THOMSON 32WN42E

MODEL

SERVICE MANUAL

SERVICE POSITION - POSITION SERVICE - SERVICESTELLUNG - POSIZIONE SERVIZIO - POSICIÓN SERVICIO

A - CHASSIS - CHASIS

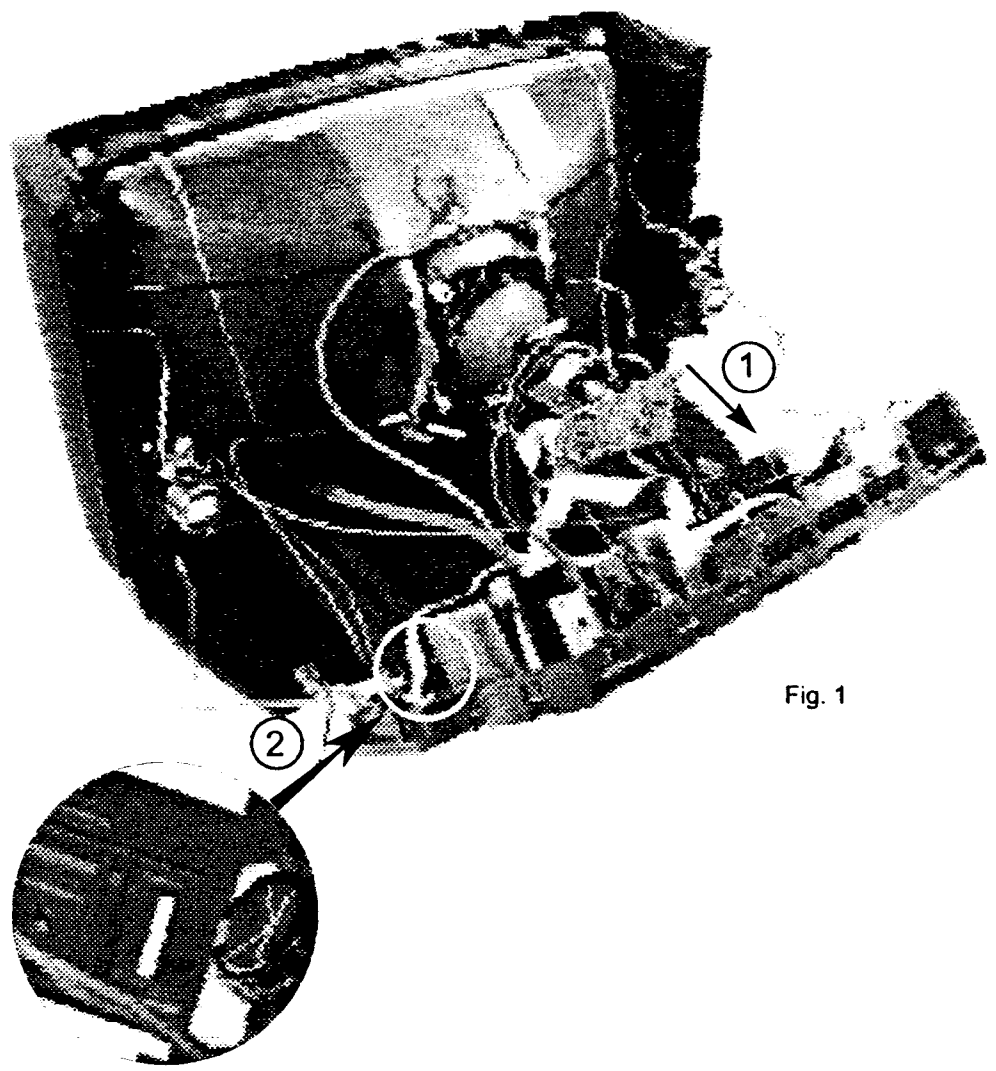

Fig. 1

1- Raise lightly the chassis, pull it (1) up to an intermediate position to get free.
2- Tip the chassis and insert the small tongue (2) in extremity of the maintain rail to fix the chassis in service position (Fig.1).

1- Soulever légèrement le chassis et le tirer (1) jusqu'à une position intermédiaire pour le dégager.
2- Basculer le chassis et engager les languettes (2) en extémité des réglettes de maintien pour fixer le chassis en position de service (Fig.1).

1- Heben Sie das Chassis leicht an und ziehen es nach hinten halb heraus. Heben Sie das Chassis aus den Führungsschienen.
2- Kippen Sie das Chassis und hängen es mit den Laschen (2) am Chassisrahmen in die sich am Ende der Führungsschienen befindlichen Ösen (Fig.1) ein.

1- Sollevare leggermente il telaio e tirarlo (1) fino ad una posizione intermedia per poterlo estrarre.
2- Inclinare e inserire le linguette (2) nelle apposite guide per mantenere il telaio fisso nella posizione service(Fig.1)

1- Alzar ligeramente el chasis, y dejarlo en una posición intermedia (1)
2- Bascular el chasis e insertar las lengüetas (2) en los extremos, para mantener el chasis fijo en la posición de servicio (Fig. 1).

B - POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

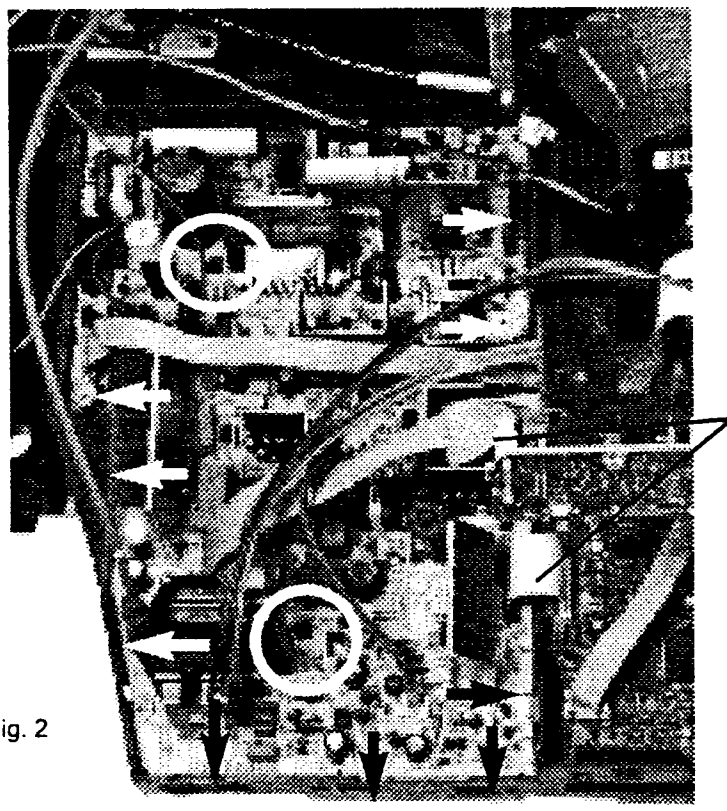

Fig. 2

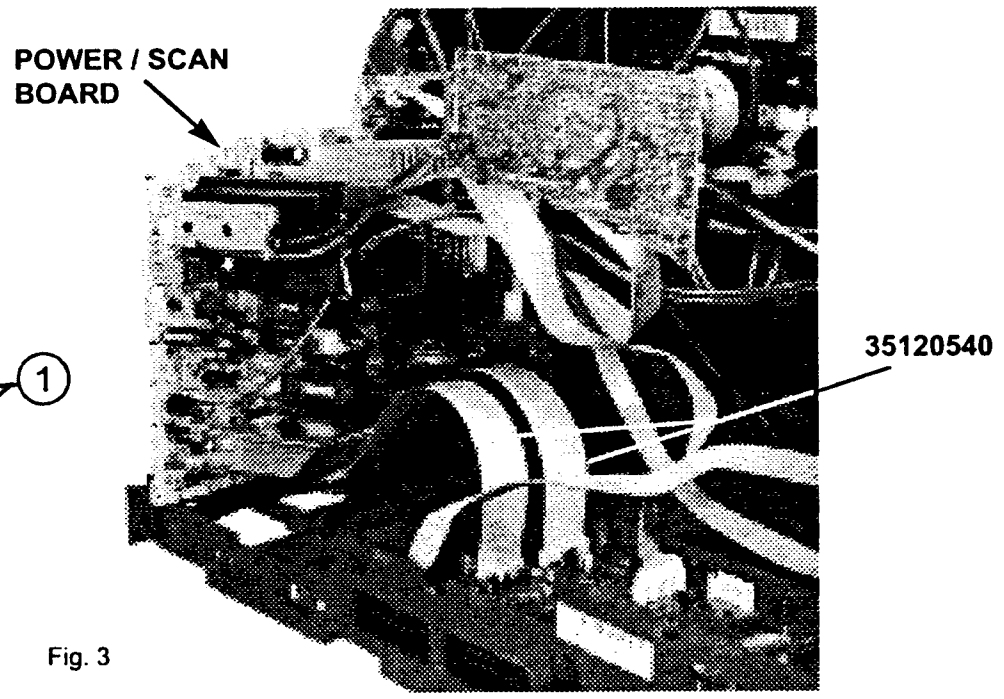

Fig. 3

1 - Remove the two connection cable PSB/SSB (1) (Fig.2) and get free the "PSB" board from the chassis in pressing the maintain tongue (9 in periphery and 2 in the board) (Fig.2) . Put the two extension cable PSB/SSB (35120540) (Fig.3).
2 - Put the PSB board in service position (Fig. 3)

1 - Retirer les cordons de raccordement PSB/SSB (1) (Fig.2) et dégager la platine "PSB" du chassis en appuyant sur les languettes de maintien (9 en périphérie et 2 en interne) (Fig.2) . Mettre les cordons prolongateurs de raccordement PSB/SSB (35120540) (Fig.3).
2 - Mettre la platine PSB en position de service (Fig. 3)

1 - Entfernen Sie die beiden Verbindungskabel PSB/SSB (1) (Fig.2). Zum Ausbau der PSB-Platine lösen Sie die 9 Halteklammern um die Platine herum und die 2 Klammern in der Platine wie (Fig.2) dargestellt. Stecken Sie die Verlängerungskabel PSB/SSB (35120540) (Fig.3) ein.
2 - Bringen Sie die PSB-Platine in die Service-Position (Fig. 3).

1 - Togliere idue cavi di collegamento PSB/SSB (1) (Fig.2) e liberare la piastra "PSB" dal telaio premendo le linguetto di fissaggio (9 periferiche e due interne) collegare le prolunghe PSB/SSB (35120540) (Fig.3).
2 - Sistemare la piastra PSB in posizione di service (Fig. 3).

1 – Retirar los dos cables de conexión PSB/SSB (1) (Fig.2) y soltar la placa "PSB" del chasis presionando las lengüetas (9 en la periferia y 2 en la placa) *(Fig. 2). Enchufar los dos cables prolongadores PSB/SSB (35120540) (Fig.3).*
2 – Poner la placa PSB en la posición de servicio (Fig. 3)

CONNECTING SAFETY POWER BOARD / SIGNAL BOARD
SECURITE DE CONNEXION PLATINES PUISSANCE / PETITS SIGNAUX
VERBINDER ZWISCHEN NETZTEIL/ABLENK-PLATINE UND SIGNAL-PLATINE
COLLEGAMENTI DI SICUREZZA DELLA PIASTRA POTENZA/PIASTRA SEGNALI
CONEXIONES DE LA SEGURIDAD ENTRE LA PLACA ALIMENTACIÓN / SEÑAL

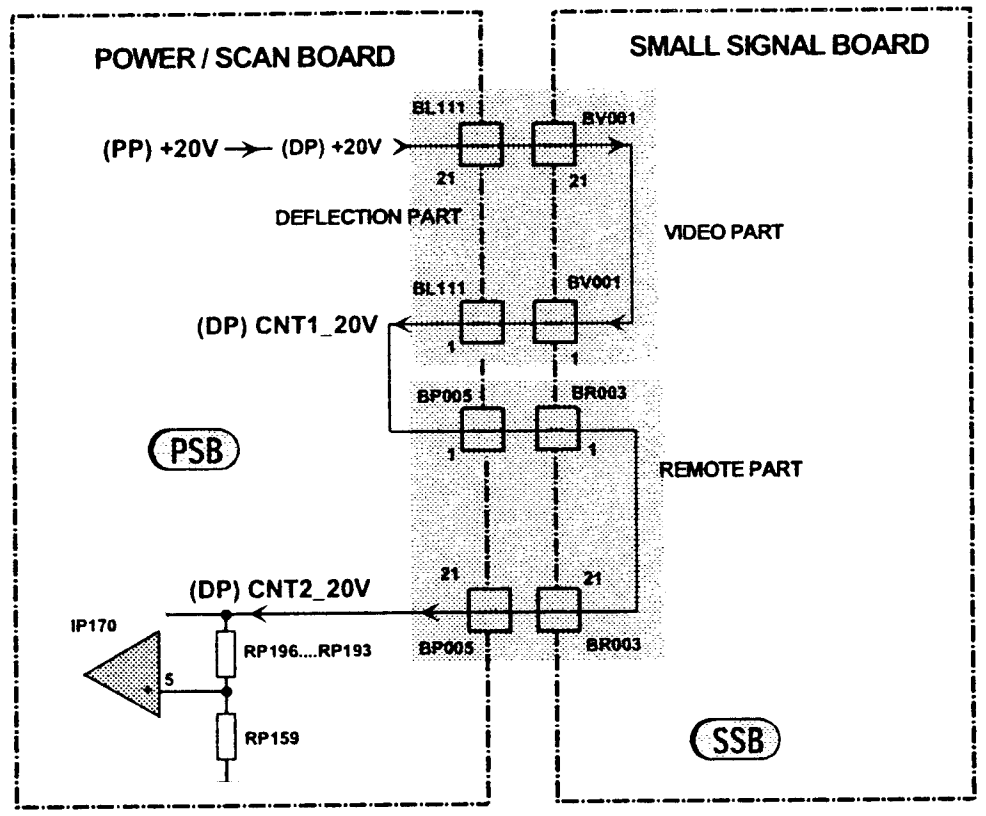

GB

The **20V** voltage which is fed in a loop **CNT1_20V => CNT2_20V** through the connectors going to the signal processing boarder in order to insure a good connection between both boards and to protect the **PSB** and the **SSB** boards :
CNT1_20V => safety of the sheet BL111 / BV001
CNT2_20V => safety of the sheet BP005 / BR003
If one of these voltage does not exist (20V comprise) the IP170 output will be 0 and the phototransistor IP070 is blocked and the set will be in standby.

F

Le cheminement de la tension **20V** par la platine petits signaux est effectué sous forme de boucle **CNT1_20V => CNT2_20V** afin de protéger les platines **PSB et SSB** en cas de mauvaise connexion des nappes BR003 et BV003.
CNT1_20V => sécurité de la nappe BL111 / BV001
CNT2_20V => sécurité de la nappe BP005 / BR003.
Si l'une de ces tensions (20V inclu) n'est pas présente la sortie de IP170 passe à 0 entraînant le blocage du phototransistor IP070 et par suite le passage en standby.

D

Um die **PSB**- und die **SSB**-Platinen zu schützen und um eine sichere Betriebsspannungsversorgung dieser Platinen zu gewährleisten, ist die **+20V-Versorgungsschiene (CNT1_20V => CNT2_20V)** über die Verbinder BV001 und BR003 durchgeschleift.
CNT1_20V => Schutz über Flachbandkabel BL111 / BV001
CNT2_20V => Schutz über Flachbandkabel BP005 / BR003
Sollte eine dieser Betriebspannungen fehlen, wird der Ausgang des IC IP170 (Pin 7) 0V, der Fototransistor im Optokoppler IP070 sperrt und das Gerät schaltet in Standby.

I

L'alimentazione di **20V** alla piastra elaborazione segnali viene fornita dai connettori **CNT1_20V => CNT2_20V** in modo da assicurare une protezione delle piastre **PSB** e **SSB** nel caso che si manifesta se un cattivo collegamento.
CNT1_20V => protezione BL111 / BV001
CNT2_20V => protezione BP005 / BR003
Se una di queste tensioni 20V non fosse presente l'uscita di IP170 passa a 0V determinando il blocco del phototransistor IP070 e il successivo passaggio in standby.

E

El recorrido de la tensión de **20V** por la placa SSB se efectúa en forma de bucle **CNT1_20V => CNT2_20V** con el fin de proteger las placas **PSB** y **SSB** en el caso de un fallo de los conectores
CNT1_20V => seguridad del mazo BL111 / BV001
CNT2_20V => seguridad del mazo BP005 / BR003
Si una de estas tensiones faltan (incluidos los 20 V), la salida de IP70 será 0, el fototransistor IP070 se bloquea y el TV pasará a Standby (modo espera)

LOCATION OF CONTROLS – EMPLACEMENT DES REGLAGES – SERVICE LAGEPLAN – POSIZIONE REGULATORI DI SERVIZIO – SITUACIÓN DE LOS AJUSTES

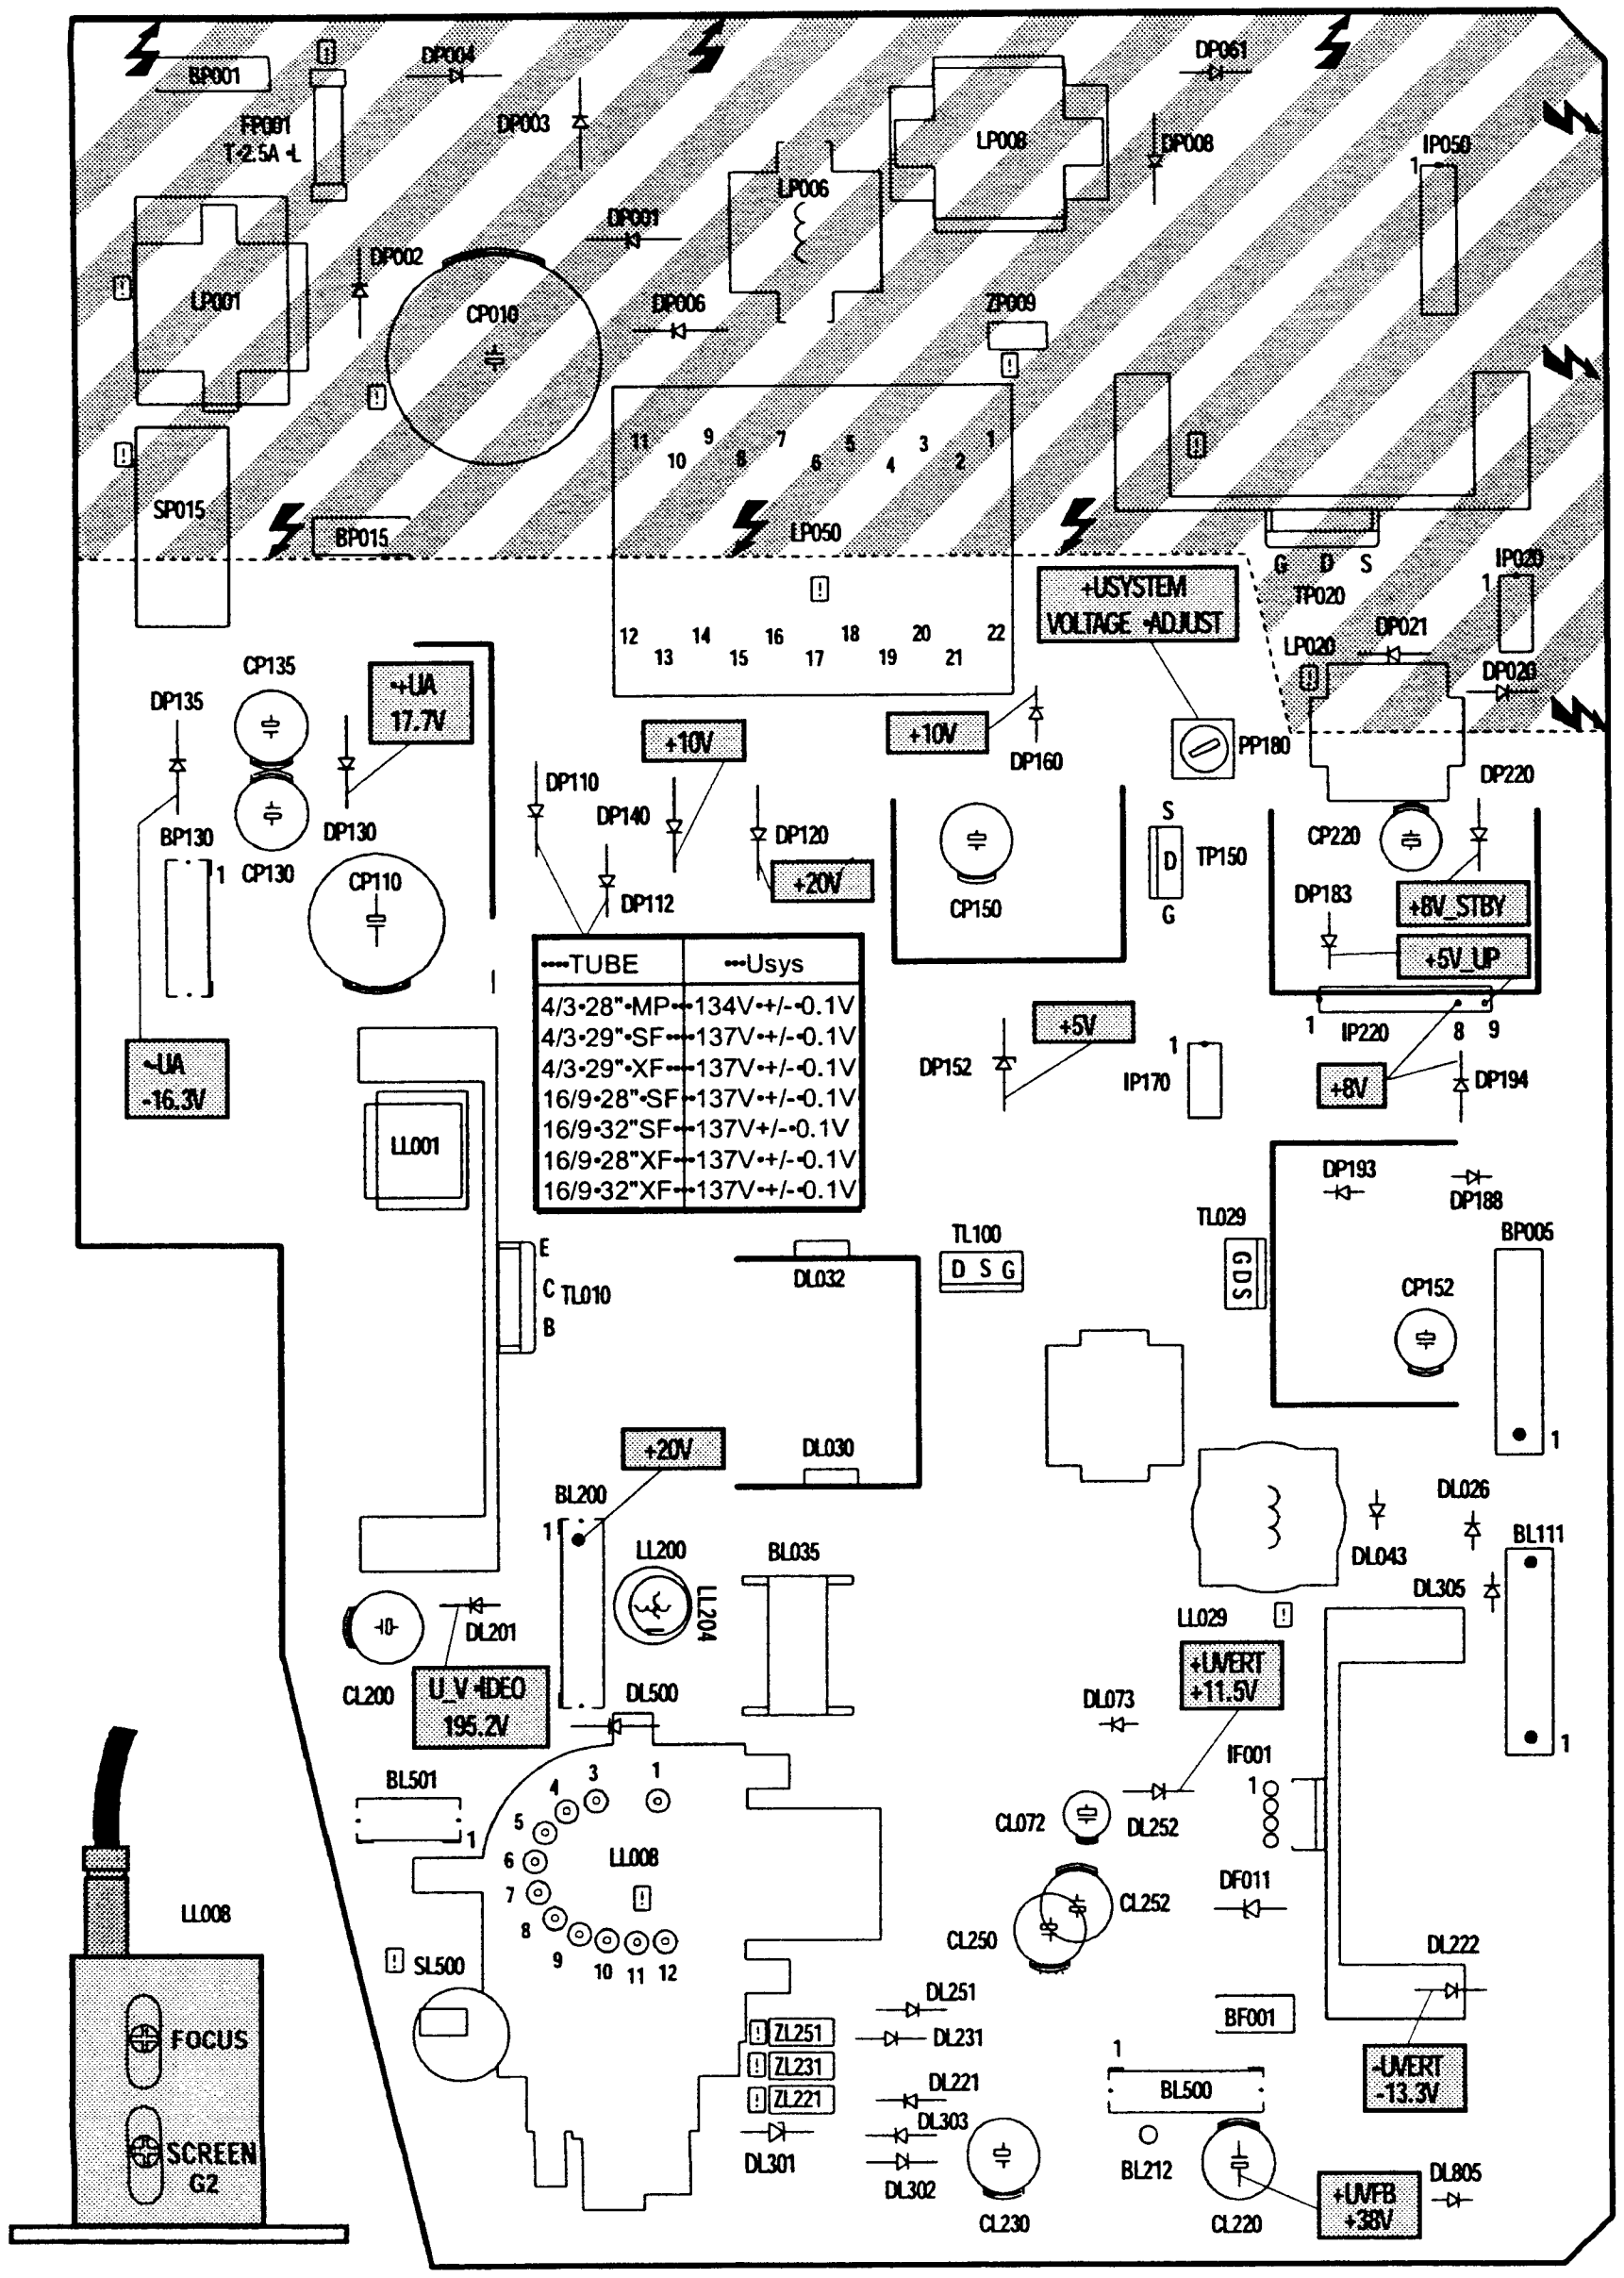
BP001
FP001
T 2.5A L
DP004
DP003
DP061
LP008
DP008
IP050
1
LP006
DP001
DP002
LP001
CP010
DP006
ZP009
SP015
BP015
LP050
11 10 9 8 7 6 5 4 3 2 1
12 13 14 15 16 17 18 19 20 21 22
+USYSTEM VOLTAGE ADJUST
G D S
TP020
IP020
DP021
LP020
DP020
PP180
DP220
CP135
DP135
+UA 17.7V
BP130
CP130
DP130
CP110
-UA -16.3V
DP110
DP140
DP112
+10V
DP120
+20V
+10V
DP160
CP150
S D G
TP150
CP220
DP183
+8V_STBY
+5V_UP
IP220
1 8 9
+8V
DP194
+5V
DP152
IP170
LL001
DP193
DP188
BP005
TL029
G D S
CP152
TL100
D S G
E C B
TL010
DL032
DL030
+20V
BL200
LL200
LL204
BL035
DL043
DL026
BL111
DL305
CL200
DL201
U_VIDEO 195.2V
DL500
LL029
+UVERT +11.5V
DL073
IF001
BL501
LL008
SL500
CL072
DL252
CL252
CL250
DF011
DL222
DL251
DL231
ZL251
ZL231
ZL221
DL221
DL303
DL301
DL302
CL230
BF001
BL500
BL212
CL220
-UVERT -13.3V
+UVFB +38V
DL805
FOCUS
SCREEN G2

TUBE	Usys
4/3 28" MP	134V +/- 0.1V
4/3 29" SF	137V +/- 0.1V
4/3 29" XF	137V +/- 0.1V
16/9 28" SF	137V +/- 0.1V
16/9 32" SF	137V +/- 0.1V
16/9 28" XF	137V +/- 0.1V
16/9 32" XF	137V +/- 0.1V

▨ Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte dello châssis collegata alla rete.
Parte del chasis conectada a la red

⚠ Use isolating mains transformer –
Utiliser un transformateur isolateur du secteur –
Trenntrafo verwenden –
Utilizar un transformador aislador de red –
Utilizzare un transformatore per isolarvi dalla rete

ADJUSTMENTS – REGLAGES – EINSTELLUNGEN – REGOLAZIONE – AJUSTES

<table>
<tr>
<td>U Sys</td>
<td>PP180</td>
<td>Standard TV – Settings :
☼ + ◕ + ◑ =50%
TV to AV1 : Black test pattern</td>
<td> </td>
<td>
<table>
<tr><th>TUBE NAME</th><th>DESCRIPTION</th><th>Usys jumper</th><th>Usys</th></tr>
<tr><td>A66EHJ43X12</td><td>4/3 28" MP</td><td>JP912</td><td>134V +/- 0.1V</td></tr>
<tr><td>A68EGD038X322</td><td>4/3 29" SF</td><td>JP912</td><td>137V +/- 0.1V</td></tr>
<tr><td>A68EJZ011X121</td><td>4/3 29" XF</td><td>JP912</td><td>137V +/- 0.1V</td></tr>
<tr><td>W66EGV023X522</td><td>16/9 28" SF</td><td>JP912</td><td>137V +/- 0.1V</td></tr>
<tr><td>W76EGV023X522</td><td>16/9 32"SF</td><td>JP912</td><td>137V+/- 0.1V</td></tr>
<tr><td>W66EJY011X121</td><td>16/9 28"XF</td><td>JP912</td><td>137V +/- 0.1V</td></tr>
<tr><td>W76EJY011X121</td><td>16/9 32"XF</td><td>JP912</td><td>137V +/- 0.1V</td></tr>
</table>
</td>
</tr>
<tr>
<td>U G2
SERVICE MODE</td>
<td>SERVICE MODE
G2 potentiometer :
SCREEN</td>
<td colspan="3">-Select and enable the "G2 Alignment" item in VIDEO menu of the Service Mode : the displayed will change to a full black OSD screen.
The following adjustment is best carried in semi-darkness:
- Adjust the **SCREEN** potentiometer (LL008) so that the retrace lines are just visible.
- Now carefully adjust the **SCREEN** potentiometer until the retrace lines just become invisible.
- Press any RCU key to leave the G2 alignment.
Note: If the G2 value is set too low, the chassis will display error code 26 (tube does not get warm in time).

- Sélectionner et valider le réglage "G2 Alignment" dans le menu Vidéo de Service Mode: l'écran devient totalement noir.
En obscurité:
- Régler le potentiomètre "**SCREEN**" (LL008) pour apercevoir le retour des lignes.
- Régler ensuite le potentiomètre "**SCREEN**" pour rendre juste invisible les lignes de retour.
- Appuyer sur une des touches de la télécommande utilisateur pour sortir du mode G2 Alignment.
Note : En cas de réglage G2 trop faible le chassis passe en code panne 26 (absence de l'information tube chaud.

- Wählen Sie im Service-Mode im Menü VIDEO die Funktion "G2 Alignment" an: der Bildschirm wird schwarz.
Die folgenden Einstellungen sollten in einem abgedunkelten Raum vorgenommen werden.
- Stellen Sie den Einsteller **SCREEN** (am DST LL008) so ein, dass Rücklaufstreifen sichtbar werden.
- Stellen Sie den Einsteller SCREEN so ein, dass die Rücklaufstreifen gerade unsichtbar werden.
- Drücken Sie irgendeine Taste auf der Fernbedienung um den G2-Abgleich zu verlassen.
Achtung: Wenn die Schirmgitter- (G2-) Einstellung zu niedrig ist, kann der Fehlercode 26 (Bildrohr nicht rechtzeitig aufjeheizt) angezeigt werden.

Selezionare e abilitare"G2 Alignment" interno al menu VIDEO del Service Mode: Verrà visualizzato uno schermo nero.
In condizione con ambiente scuro.
Regolare il potenziometro **SCREEN** (LL08) per rendere visibili le ritracce sullo schermo
Regolare il potenziometro **SCREEN** per eliminare le ritracce sullo schermo
Premere un tasto del tecomando per abbandonare G2 alignment.
NOTA: se la regolazione della tensione G2 è tropppo bassa il telaio visualizzerà il codice 26(il tubo non raggiunge la temperatura nel tempo richiesto)

- Seleccionar y validar la línea del "ajuste G2" en el menú VIDEO del Modo Servicio : La pantalla se pondrá oscura y el OSD pasará a color negro.
Cuando esté oscura:
- Ajustar el potenciómetro **SCREEN** (LL008) hasta hacer visibles las líneas de retrazado.
- Ajustar el potenciómetro **SCREEN** justo, hasta hacer invisibles las líneas de retrazado.
- Pulsar cualquier tecla del telemando para salir del ajuste de G2.
Nota: Si el valor del ajuste de G2 es muy bajo, el chasis puede indicar el código de error 26 (TRC no se calienta en el tiempo establecido)</td>
</tr>
<tr>
<td>FOCUS</td>
<td>FOCUS</td>
<td>Test pattern
(standard values)</td>
<td> </td>
<td>Sharp picture</td>
</tr>
</table>

I - ENTER/EXIT SERVICE MODE - ENTREE/SORTIE DU MODE SERVICE - EIN-AUSTIEG SERVICE MODE - ACCESSO/USCITA ALLA/DALLA FUNZIONE - ENTRADA/SALIDA MODO SERVICIO

SERVICE MODE (GB)

1 ACCESSING SERVICE MODE

TV Control Panel Access

- Switch the TV into "**Standby**" mode by pressing the Standby button on the RCU. Wait till the TV goes into the standby.
- Press the **VOL-** button and then the **PR-** button on the TV keyboard. Hold them down for more than 8 seconds.
- After the normal switch on time, when the 8 seconds have elapsed, the main service menu appears on the screen.

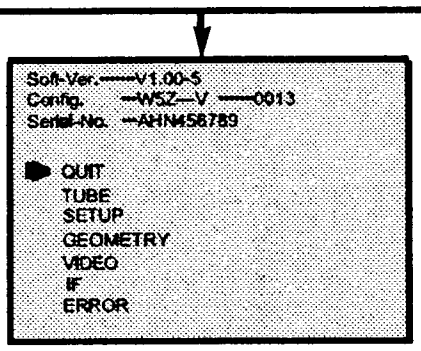

```
Soft-Ver.  V1.00-5
Config.    WSZ-V   0013
Serial-No. AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Note :

In service mode :
- *The child lock function is re-initialized*
- *Clear any wake-up/sleep timers*
- *Pin 8 of the scart plug has to be ignored.*
- *AV- Link WSS detection and letterbox detection (autoformat) have to be disabled.*
- *Automatic standby functions, in case of no antenna signal have to be disabled.*
- *Sharpness : middle (nominal)*
- *Install Mode disabled.*
- *Default format and zoom.*
- *The Chassis Variant will be checked and stored.*

2 TEMPORARY EXIT FROM SERVICE MODE

- Press Exit on the Remote control.
- Everyday use menu can be accessed via Menu button. (Text and EPG not available)
- Field Service Menu can be re-entrered via Blue button.

3 EXITING FROM SERVICE MODE

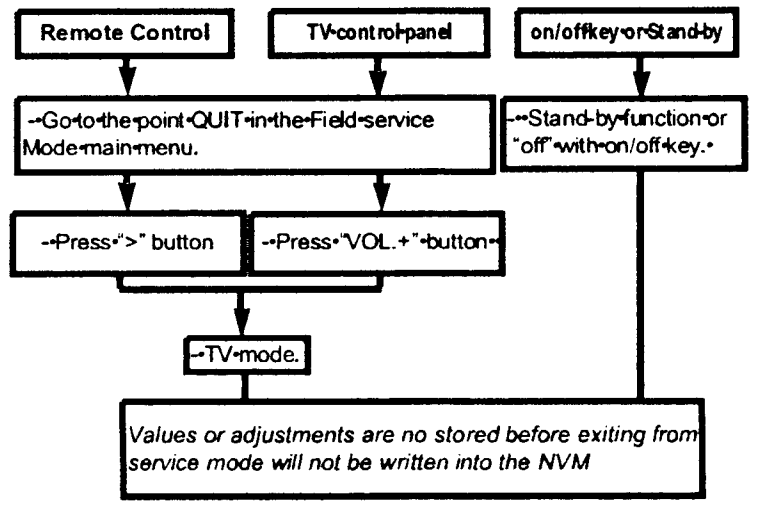

Remote Control → - Go to the point QUIT in the Field service Mode main menu. → - Press ">" button

TV control panel → - Go to the point QUIT in the Field service Mode main menu. → - Press "VOL.+" button

→ - TV mode.

on/offkey or Stand-by → - Stand-by function or "off" with on/off key.

Values or adjustments are no stored before exiting from service mode will not be written into the NVM

MODE SERVICE (F)

1 ACCES AU MODE SERVICE

Accès avec le clavier du téléviseur

- Mettre le téléviseur en position "**veille**" avec la télécommande utilisateur.
- Appuyer sur la touche **VOL-** puis sur la touche **PR-** du clavier du téléviseur. Maintenir enfoncées ces touches ensemble plus de 8 secondes.
- Après le temps normal de mise en fonctionnement et lorsque les 8 secondes sont écoulées, le menu principal du Mode Service apparait.

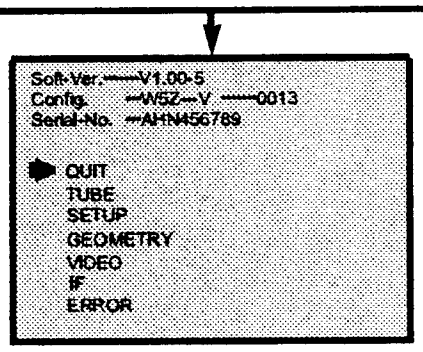

```
Soft-Ver.  V1.00-5
Config.    W5Z-V   0013
Serial-No. AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Note :

En mode service:
- *Le verrouillage parental est effacé (réinitialisé).*
- *La programmation des heures "reveillmatin" est annulée.*
- *Pin 8 de la prise SCART ignorée.*
- *AV- Link , la détection WSS et la détection letterbox ne sont pas validées.*
- *La fonction de veille automatique en cas d'absence de signal d'antenne n'est pas validée.*
- *Le contour est appelé à sa valeur moyenne.*
- *Le mode d'installation n'est pas pas valide.*
- *Zoom et format ignorés.*
- *Le type de chassis est contrôlé et mémorisé.*

2 SORTIE TEMPORAIRE DU MODE SERVICE

- Utiliser la touche Exit de la télécommande.
- Le menu utilisateur peut être accessible via la touche "Menu". (Télétexte et EPG non valides).
- Pour entrer à nouveau dans le mode service utliliser la touche bleue.

3 SORTIE DEFINITIVE DU MODE SERVICE

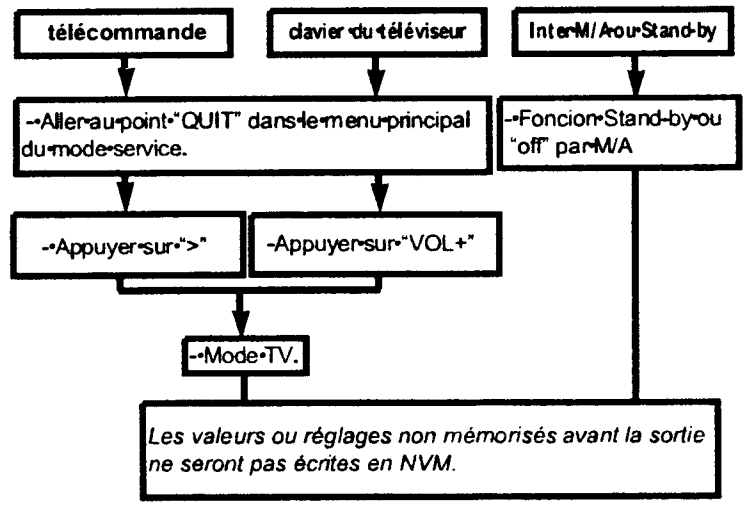

télécommande → - Aller au point "QUIT" dans le menu principal du mode service. → - Appuyer sur ">"

clavier du téléviseur → - Aller au point "QUIT" dans le menu principal du mode service. → -Appuyer sur "VOL+"

→ - Mode TV.

Inter M/A ou Stand-by → - Foncion Stand-by ou "off" par M/A

Les valeurs ou réglages non mémorisés avant la sortie ne seront pas écrites en NVM.

SERVICE MODE (D)

1 EINSTIEG IN DEN SERVICE MODE

Zugriff über die Tastatur des Fernsehgeräts

- Schalten Sie das Gerät mit der Fernbedienung in **Standby**.
- Drücken Sie die **VOL-** Taste und dann die **PR-** Taste am Nahbedienteil des Gerätes. Halten Sie beide Tasten für länger als 8 Sekunden gedrückt.
- Nach der normalen Einschaltzeit erscheint auf dem Bildschirm das Menü des Service-Modes.

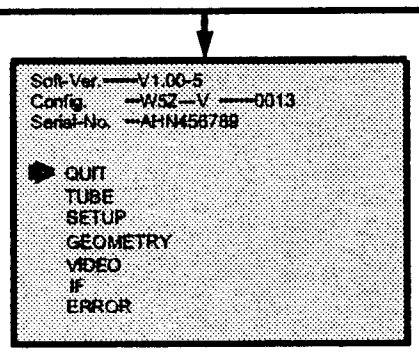

```
Soft-Ver.  V1.00-5
Config.    WSZ-V   0013
Serial-No. AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Anmerkung :

Im SERVICE MODE :
- *wird die Kindersicherung gelöscht.*
- *werden alle Ein- und Ausschaltzeitgeber gelöscht.*
- *wird die SCART - Schaltspannung nicht ausgewertet.*
- *AV- Link WSS Detektion and Letterbox Detektion (Autoformat) sind abgeschaltet.*
- *wird die Automatische Abschaltung bei fehlendem Antennensignal gesperrt.*
- *wird die Bildschärfe auf Mittelstellung (nominal) gesetzt.*
- *wird der Installations-Modus gesperrt.*
- *wird das Standardformat bzw. der Standard-Zoom-modus gewählt.*
- *die Chassis-Variante wird überprüft und gespeichert.*

2 VORÜBERGEHENDES VERLASSEN DES SERVICE MODE

- Auf der Fernbedienung EXIT drücken.
- Mit der Taste Menü gelangen Sie zum Menü "Übersicht". (Videotext und EPG sind nicht verfügbar).
- Mit der blauen Taste gelangen sie zurück in den Service-Mode.

3 ENDGÜLTIGES VERLASSEN DES SERVICE MODES

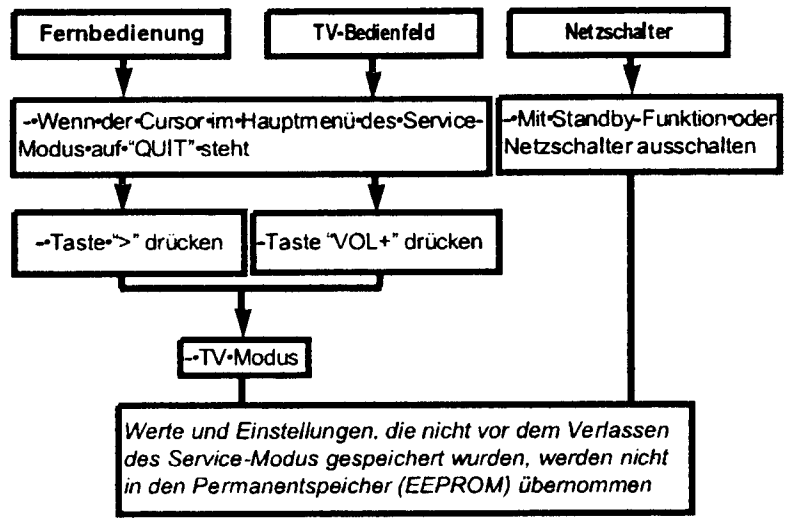

Fernbedienung → - Wenn der Cursor im Hauptmenü des Service-Modus auf "QUIT" steht → - Taste ">" drücken

TV-Bedienfeld → - Wenn der Cursor im Hauptmenü des Service-Modus auf "QUIT" steht → -Taste "VOL+" drücken

→ - TV Modus

Netzschalter → - Mit Standby-Funktion oder Netzschalter ausschalten

Werte und Einstellungen, die nicht vor dem Verlassen des Service-Modus gespeichert wurden, werden nicht in den Permanentspeicher (EEPROM) übemommen

SERVICE MODE (I)

1 ACCESSO AL SERVICE MODE

tramite i comandi del televisore

- Posizionare il TV nel modo "**Standby**" usando il tasto standby del telecomando. Attendere che il TV si posizioni in standby.
- Premere prima il tasto **VOL-** e poi il tasto **PR-** sulla tastiera del TV. Mantenere premuto i due tasti per più di 8 secondi.
- Dopo circa 8 secondi il TV si accenderà mostrando sullo schermo il menu service.

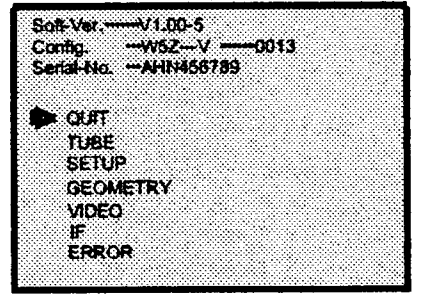

```
Soft-Ver.  V1.00-5
Config.    W5Z-V   0013
Serial-No. AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Nota :

Nel service mode:
- *La funzione Blocco Bambini è reinizializzata.*
- *La programmazione sveglia è cancellata.*
- *Il piedino 8 della scart è ignorato.*
- *La rilevazione AV-Link WSS e rilevazione letterbox (formato) è statà disabilitata.*
- *Funzione automatica di standby, nel caso di mancanza del segnale d'antenna è disabilitata.*
- *Nitidezza: media (nominale)*
- *Il Modo Install disabilitato.*
- *Formato ignorati e zoom.*
- *Le varianti del telaio verranno controllate e memorizzate.*

2 USCITA TEMPORANEA DAL SERVICE MODE

- Premere Exit sul telecomando.
- Al menu di uso quotidiano si accede attraverso il pulsante Menu. (Text and EPG disabilitati).
- É possibile rientrate nel Menu Service tramite il pulsante Blue.

3 USCIRE DAL SERVICE MODE

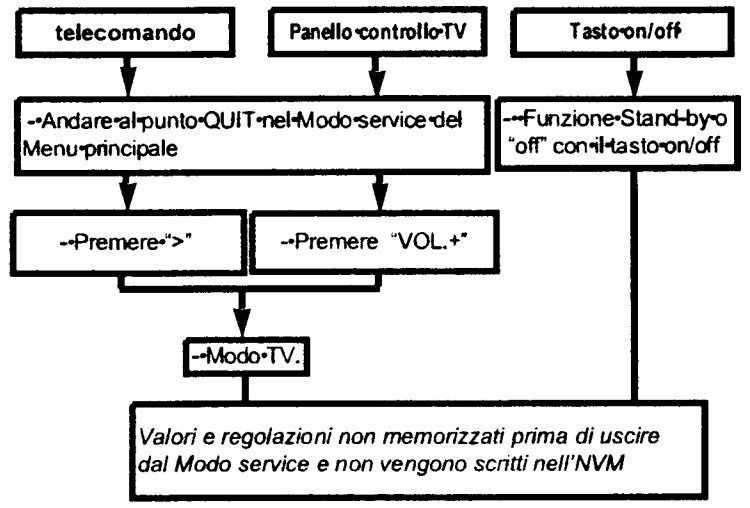

telecomando → - Andare al punto QUIT nel Modo service del Menu principale → - Premere ">"

Panello controllo TV → - Andare al punto QUIT nel Modo service del Menu principale → - Premere "VOL.+"

→ - Modo TV.

Tasto on/off → - Funzione Stand-by o "off" con il tasto on/off

Valori e regolazioni non memorizzati prima di uscire dal Modo service e non vengono scritti nell'NVM

MODO SERVICIO (E)

1 ACCESO AL MODO SERVICIO

Acceso panel control TV

- Con el TV encendido, apagarlo con la tecla "**Standby**" del telemando. Asegurarse de que el aparato ha pasado a "Standby".
- Pulsar primero, la tecla VOL- y después PR- del teclado del TV. Mantenerlas pulsadas al mismo tiempo durante unos 8 segundos
- Después del arranque normal, cuando hayan pasado los 8 segundos, aparecerá el menú principal del Modo Servicio

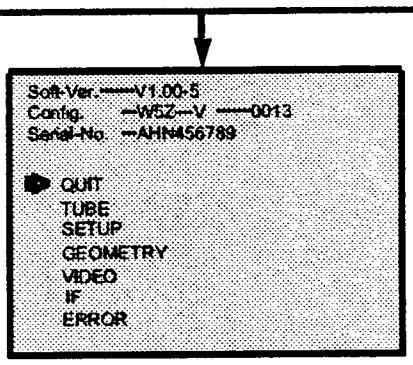

```
Soft-Ver.  V1.00-5
Config.    W5Z-V   0013
Serial-No. AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Nota :

En modo servicio:
- *La función "Bloqueo niños" es reinicializada.*
- *Anula todos las horas programadas*
- *La patilla 8 del SCART es ignorada*
- *La detección de AV- Link, WSS y "modo buzón" (autoformato) se desactiva.*
- *El apagado automático en caso de ausencia de señal de antena es desactivado.*
- *la nitidez es puesta al punto medio.*
- *El Modo Instalación es desactivado.*
- *Zoom y formato ignorados.*
- *El tipo de chasis será comprobado y memorizado.*

2 SALIDA TEMPORAL DEL MODO SERVICIO

- Pulse Salir en el mando a distancia
- Con el botón Menu puede acceder al menú de uso cotidiano. (Teletexto y EPG no disponibles).
- Puede entrar al Menú Servicio con el botón azul.

3 SALIDA DEL MODO SERVICIO

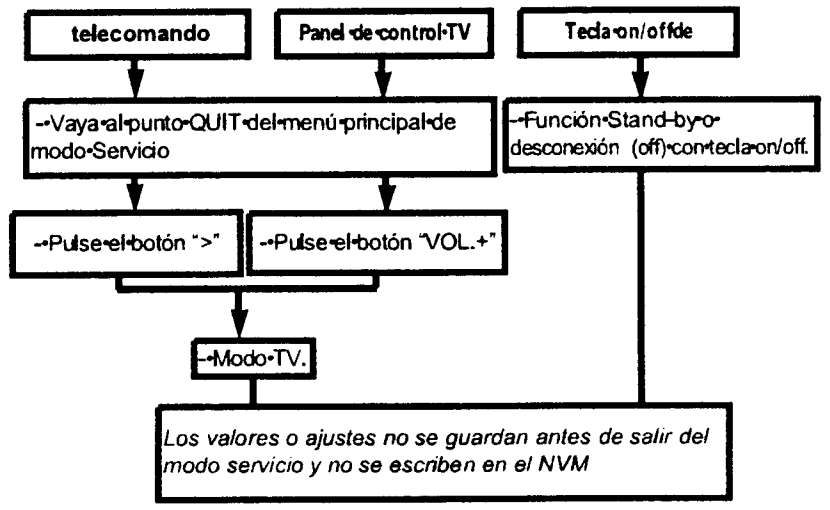

telecomando → - Vaya al punto QUIT del menú principal de modo Servicio → - Pulse el botón ">"

Panel de control TV → - Vaya al punto QUIT del menú principal de modo Servicio → - Pulse el botón "VOL.+"

→ - Modo TV.

Tecla on/offde → - Función Stand-by o desconexión (off) con tecla on/off.

Los valores o ajustes no se guardan antes de salir del modo servicio y no se escriben en el NVM

MODO SERVICIO (E)

O SERVICIO

1 ACCESO AL MODO SERVICIO

Acceso panel control TV

- Con el TV encendido, apagarlo con la tecla "**Standby**" del telemando. Asegurarse de que el aparato ha pasado a "Standby".
- Pulsar primero, la tecla VOL - y después PR - del teclado del TV. Mantenerlas pulsadas al mismo tiempo durante unos 8 segundos
- Después del arranque normal, cuando hayan pasado los 8 segundos, aparecerá el menú principal del Modo Servicio

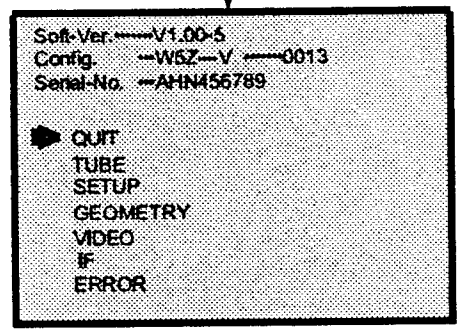

```
Soft-Ver.    V1.00-5
Config.      W5Z—V     0013
Serial-No.   AHN456789

▶ QUIT
  TUBE
  SETUP
  GEOMETRY
  VIDEO
  IF
  ERROR
```

Nota :

En modo servicio:
- *La función "Bloqueo niños" es reinicializada.*
- *Anula todos las horas programadas*
- *La patilla 8 del SCART es ignorada*
- *La detección de AV- Link, WSS y "modo buzón" (autoformato) se desactiva.*
- *El apagado automático en caso de ausencia de señal de antena es desactivado.*
- *la nitidez es puesta al punto medio.*
- *El Modo Instalación es desactivado.*
- *Zoom y formato ignorados.*
- *El tipo de chasis será comprobado y memorizado.*

2 SALIDA TEMPORAL DEL MODO SERVICIO

- Pulse Salir en el mando a distancia
- Con el botón Menu puede acceder al menú de uso cotidiano. (Teletexto y EPG no disponibles).

- Puede entrar al Menú Servicio con el botón azul.

3 SALIDA DEL MODO SERVICIO

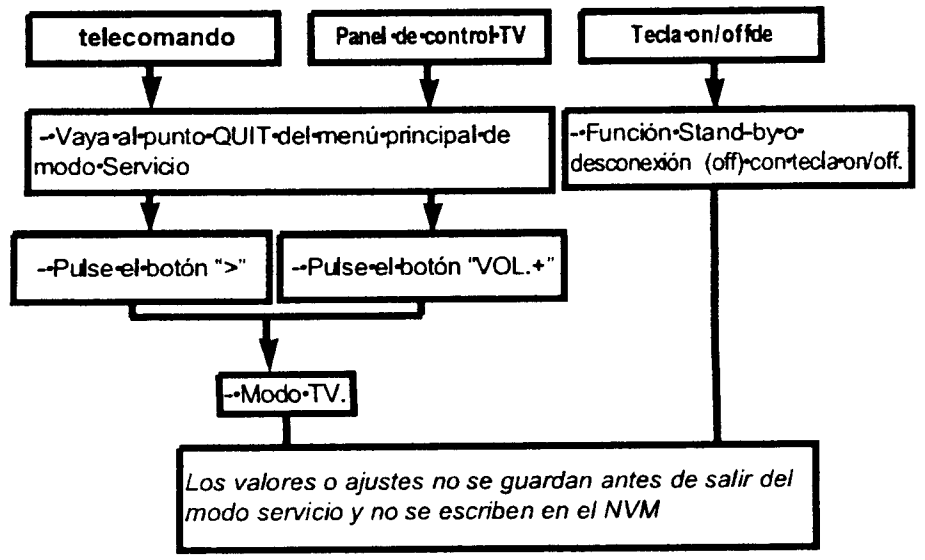

telecomando | **Panel de control TV** | **Tecla on/off de**

- Vaya al punto QUIT del menú principal de modo Servicio
- Pulse el botón ">"
- Pulse el botón "VOL.+"
- Modo TV.

- Función Stand-by o desconexión (off) con tecla on/off.

Los valores o ajustes no se guardan antes de salir del modo servicio y no se escriben en el NVM

II - NAVIGATION INSIDE THE SERVICE MODE - DEPLACEMENT DANS LE MODE SERVICE SUCHE IN SERVICE MODE - OPZIONI NEL SERVICE MODE - BUSQUEDA EN MODO SERVICIO

1 REMOTE CONTROL - TELECOMMANDE - FERNBEDIENUNG TELECOMANDO - MANDO A DISTANCIA

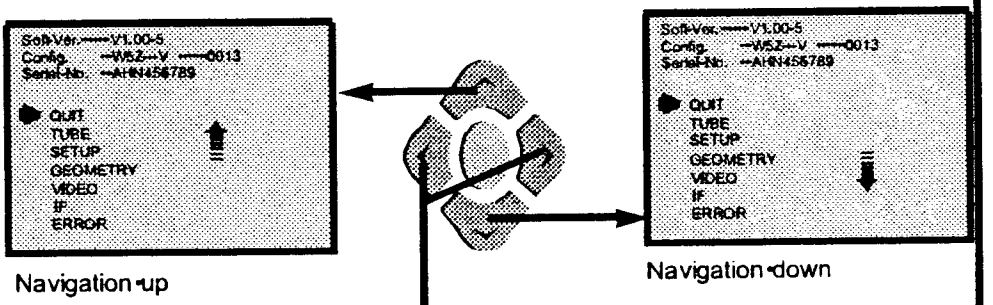
Soft-Ver. V1.00-5
Config. W5Z—V 0013
Serial-No. AHN456789
QUIT
TUBE
SETUP
GEOMETRY
VIDEO
IF
ERROR
Navigation up
Navigation down

- Select option
- Option anwählen
- Selezionare l'opzione
- Seleccionar opción

- "Change" value
- Wert "änden"
- "Cambiare" valore
- "Cambiar" valor

> → VALUE ↗

< → VALUE ↘

2 TV CONTROL PANEL - CLAVIER TV - TASTATUR DES FERNSEHGERÄTS - COMANDI DEL TELEVISORE

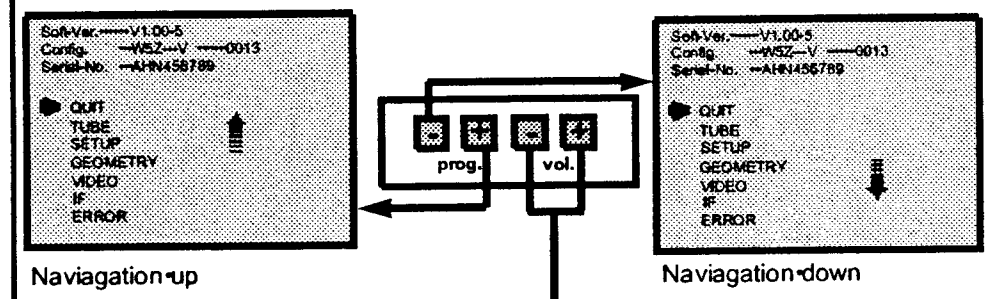
Soft-Ver. V1.00-5
Config. W5Z—V 0013
Serial-No. AHN456789
QUIT
TUBE
SETUP
GEOMETRY
VIDEO
IF
ERROR
prog.
vol.
Naviagation up
Naviagation down

- Select option
- Option anwählen
- Selezionare l'opzione
- Seleccionar opción

- "Change" value
- Wert "änden"
- "Cambiare" valore
- "Cambiar" valor

Vol. + → VALUE ↗

Vol. - → VALUE ↘

3 DISPLAYING THE VALUE OF THE SETTING - AFFICHAGE DES VALEURS - ANZEIGE DES EINSTELLUNGSWERTES VISUALIZZAZIONE DEL VALORE DELLA REGOLAZIONE - VISUALIZACION DEL VALOR DE AJUSTE

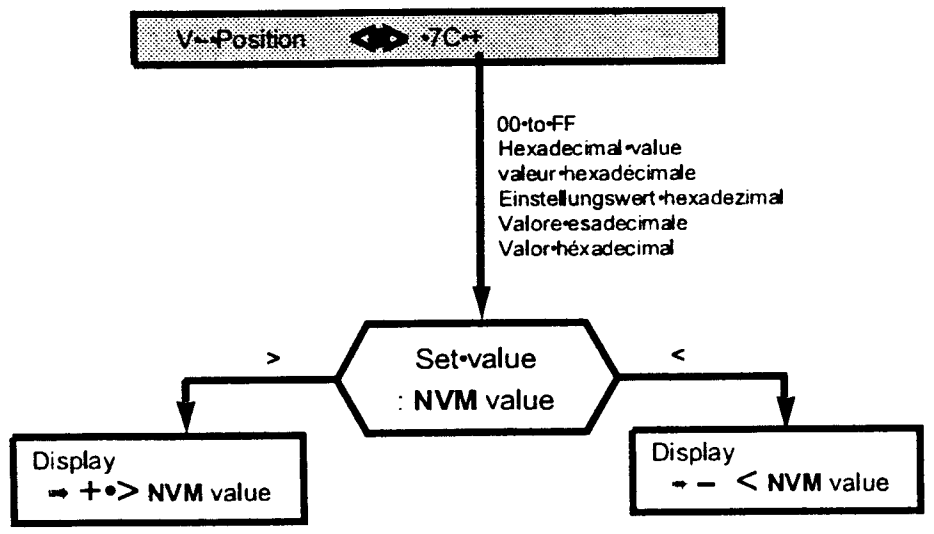
V- Position ◄► 7C
00 to FF
Hexadecimal value
valeur hexadécimale
Einstellungswert hexadezimal
Valore esadecimale
Valor héxadecimal
Set value
: NVM value
>
<
Display
→ + > NVM value
Display
→ - < NVM value

4 TOGGLE FUNCTIONS - VALIDATION DES FONCTIONS EIN-UND-AUSSCHALT FUNKTIONEN - FUNZIONI DI COMMUTAZIONE - FUNCION CONMUTACION

To enable a function check (tick) ☒ the box.
Pour valider une fonction cocher ☒ la case correspondante
Zum Implementieren einer Funktion das Kontrollkästchen ☒ aktivieren (ankreuzen)
Per implementare una funzione di verifica, (vistare) ☒ la casella
Para poner en fucionamiento una función verifique (señale) ☒ la casilla

☒ : Implemented function ☐ : No implemented function

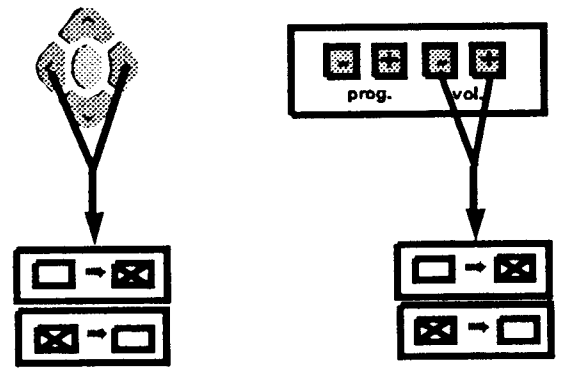

5 STORING VALUES IN MEMORY - MEMORISATION DES VALEURS - SPEICHERN DER WERTE - MEMORIZZAEZ I VALORI - VALORES ALMACENADOS EN LA MEMORIA

After setting, the values are stored in NVM.
Après réglages les valeurs sont mémorisées en NVM.
Nach dem Einstellen werden die Werte im NVM gespeichert.
Dopo la regolazione i valori vengono memorizzati in NVM.
Después del ajuste, los valores son almacenados en NVM

The box ☐ becomes ☒
During alignment, values are temporarily stored in RAM.
En cours d'alignement les valeurs sont mémorisées temporairement en RAM
Während des Abgleichs werden die Werte vorübergehend im RAM gespeichert
Durante l'allineamento i valori vengono memorizzati provvisoriamente sulla RAM
Durante el alineamento, los valores son almacenados temporalmente en RAM

Store ➡	Copies RAM values into NVM Copie la valeur RAM en NVM Kopieren des Wertes von RAM nach NVM Copiare i valori RAM in NVM Copiar valores RAM en NVM
Restore ➡	Copies all values from NVM into RAM. Copie toutes les valeurs des données NVM en RAM Kopiert alle NVM-Datenwerte in des RAM Copiare tutti i valori da NVM sulla RAM Copia todos los valores de NVM a RAM
Default ➡	All the default values of a page in use are stored in RAM. L'ensemble des valeurs par défaut d'une page courante est chargé en RAM. Sämtliche Standardwerte der aktuellen Seite werden ins RAM geladen Tutti i valori di default di una pagina in uso vengono memorizzati sulla RAM Todos los valores por defecto de la página en curso están almacenados en RAM.

III - LITE-MENU FOR FIELD SERVICE MODE - MENUS DU MODE SERVICE

1 MAIN MENU - MENU PRINCIPAL

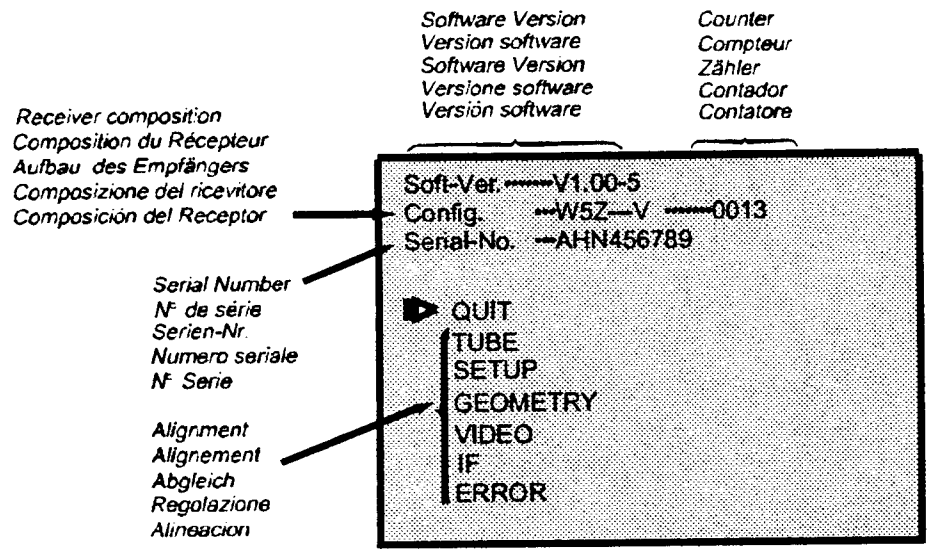
Software Version
Version software
Software Version
Versione software
Versión software
Counter
Compteur
Zähler
Contador
Contatore
Receiver composition
Composition du Récepteur
Aufbau des Empfängers
Composizione del ricevitore
Composición del Receptor
Soft-Ver. V1.00-5
Config. W5Z—V 0013
Serial-No. AHN456789
Serial Number
N° de série
Serien-Nr.
Numero seriale
N° Serie
QUIT
TUBE
SETUP
GEOMETRY
VIDEO
IF
ERROR
Alignment
Alignement
Abgleich
Regolazione
Alineacion

TV CONFIGURATION - CONFIGURATION DU TV - GERÄTEKONFIGURATION - CONFIGURAZIONE DEL TV - CONFIGURACIÓN Y TV

Config. **W5Z....V**

Character 1 : Tube type : "A" = 4/3 , "W" =16/9
Character 2 : Teletext external memory detected:
"T" = 128 page, "-" = not (only internal memory)
Character 3 : Ambiant Sensor : "S" = detected, "-" = not
(not ambiant sensor on ICC20 step 1)
Character 4 : Chassis variant : "N"=Nicam, "V"=Virtual Dolby, "D"=Dolby prologic
Character 5 : Noise Reduction upconversion memory detected: "N"=detected
"-" = not
Character 6 : not used / spare
Character 7 : not used / spare

SERIAL-N° **A15...**

Character 1 : Factory, A= Angers, B= Tarancon, Z= Zyrardow
Character 2 : Year :, H= 1996, J= 1997 etc. (International code UTEC90511)
Character 3 : Month, from 1= January to 9=September, O=October, N=November
D=December.
Character 4-9 : Serial N°.

TIME COUNTER - COMPTEUR DE TEMPS - ZÄHLER - CONTATORE - CONTADOR

The counter indicates the TV's number of service hours.It counts from to 0 to 65535 hours. The display is hexadecimal.
Le compteur de temps indique le nombre d'heures de service du TV. Il compte de 0 à 65535 heures. L'affichage est en hexadécimal.
Der Zähler zeigt an, wieviele Stunden der Fernseher in Betrieb ist. Die Anzeige ist hexadezimal.
Il contatore indica il numero di ore di servizio del TV. Puo' contare da 0 a 65535. La visualizzazione è esadecimale.
El contador indica el número de horas de servicio de la TV. Cuenta de 0 a 65535 horas. El visualizador es hexadecimal.

2 SUBMENU - SOUS-MENU

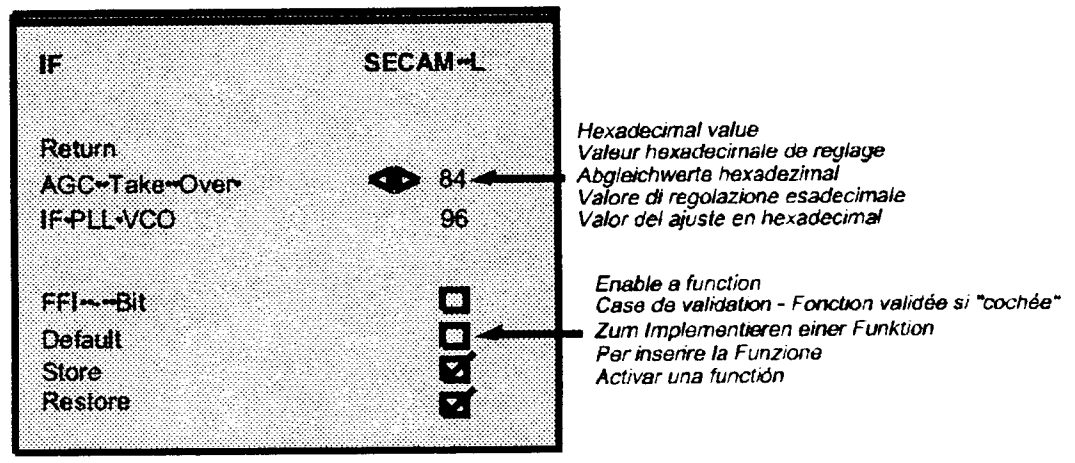
IF
SECAM L
Return
AGC Take Over
◄► 84
IF PLL VCO
96
FFI Bit ☐
Default ☐
Store ☑
Restore ☑
Hexadecimal value
Valeur hexadecimale de reglage
Abgleichwerte hexadezimal
Valore di regolazione esadecimale
Valor del ajuste en hexadecimal
Enable a function
Case de validation - Fonction validée si "cochée"
Zum Implementieren einer Funktion
Per inserire la Funzione
Activar una función

ALIGNMENT•PROCEDURE•-•PROCESSUS•DE•REGLAGES•-•ABGLEICH•-•VISUALIZZAZIONE•DEL•VALORE•DELLA•REGOLAZIONE•-•PROCEDIMIENTO•DE•ALINEACION

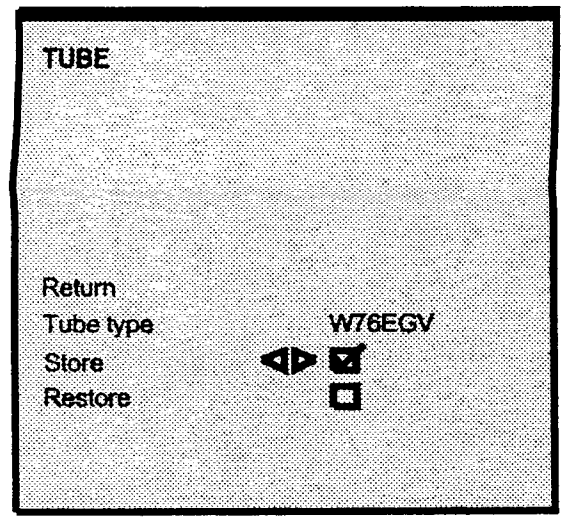

TUBE

Return		
Tube type		W76EGV
Store	◀▶	☑
Restore		☐

TUBE

Return

Closes the sub-menu and returns to the "Main Service Menu"

Retourne au menu principal.

Schließt das Untermenü, und das Haupt-Menü des Service-Modus erscheint.

Chiude il sottomenu e fa apparire il menu principale Service Mode.

Cierra el submenú. El menú Field Service Mode aparece.

Press </>: remote control; Vol. +/- : TV keyb.

Tube type

After replacing the NVM, the correct tube type number must be entered (6 characters). Once entered, the tubes geometry and video default values are immediately activated. Variable geometry and video parameters are written to the NVM when the "STORE" line is selected. See below the tube type number list.

Definit le tube exact après changement de NVM. Les nouvelles valeurs de tubes (avec video et géometrie) sont actives de suite. Les paramètres de vidéo et de géométrie sont chargés en NVM lorsque STORE est sélectionné. Voir liste ci-dessous.

Nach dem Tausch des NVM (EEPROM) muB der richtige Bildrohrtyp eingegeben werden. Es werden dann sofort die entsprechenden Geometrie-und Video-Defaultwerte aktiviert. Variable Geometrie-und Videowerte müssen mit "STORE" in das NVM geschrieben werden. Liste der Röhren: siehe unten.

Definire il tubo appropriato dopo aver cambiato la NVM; I valori per il nuovo tipo di tubo (con video e geometria) sono immediatamente attivi. I parametri per video e geometria variabili vengono immessi nella NVM quando viene selezionata la funzione Store. Si veda la lista dei tubi riportata sotto.

Definir el tubo correcto después de haber cambiado el NVM.Los nuevos valores de tipo de tubo (con la video y la geometria por defecto) se activan inmediatamente. Los parámetros variables de geometría y vídeo se graban en el NVM al seleccionar la función Store. Vea más abajo la lista de tubos.

TUBE NAME	LIST	DESCRIPTION
A66EHJ43X12	A66EHJ	4/3 28" MP(1)
A68EGD038X322	A68EGD	4/3 29" SF(2)
A68EJZ011X121	A68EJZ	4/3 29" XF(2)
A68LPQ356X99	A68LPQ	4/3 29" XF (3)
A80EJA16X120	A80EJA	4/3 33" MP(2)
A90AFX14X12	A90AFX	4/3 37" MP(2)
W66EGV023X522	W66EGV	16/9 28" SF(2)
W66LPQ356X99	W66LPQ	16/9 28" SF(3)
W66EJY011X121	W66EJY	16/9 28" XF(2)
W76EGV023X522	W76EGV	16/9 32"SF(1)
W76EJY011X121	W76EJY	16/9 32"XF(2)
W76LPF350X99	W76LPF	16/9 32"SF(4)

(1) : AK, Coty-M
(2) : Invar vector gun, BSVM, Extra Flat
(3) : Invar, DF-II gun, BSVM,NS, Extra Flat
(4) : Invar, DF-III gun, BSVM,NS

→ After setting → Store (+) ☑

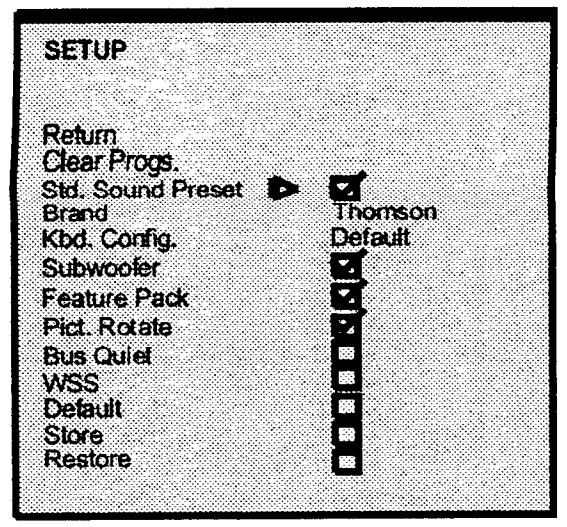

SETUP

Return		
Clear Progs.		
Std. Sound Preset	▶	☑
Brand		Thomson
Kbd. Config.		Default
Subwoofer		☑
Feature Pack		☑
Pict. Rotate		☑
Bus Quiet		☐
WSS		☐
Default		☐
Store		☐
Restore		☐

SETUP

Return

Closes the sub-menu and returns to the "Main Service Menu"

Retourne au menu principal.

Schließt das Untermenü, und das Haupt-Menü des Service-Modus erscheint.

Chiude il sottomenu e fa apparire il menu principale Service Mode.

Cierra el submenú. El menú Field Service Mode aparece.

Press </>: remote control; Vol. +/- : TV keyb.

Clear Prog.

Clears•all•programms•stored•in•memory•and•resets•all•Picture•and•Sound•settings•to•the•factory defaults.•The•AUTO•INSTALL•(out•of•factory) mode•can•be•initialised•by•a•long•press•(>2.5s.)• of•the•selection•button.•

Efface•tous•les•programmes•mémorisés.

Valeurs•SON•et•IMAGES:•valeurs•usines. Fonction•valide•par•une•longue•pression•(>2.5s.) sur•la•touche•de•sélection•</>.

Löscht•alle•Programmplätze•und•setzt•alle•Bild-und•Toneinstellungen•auf•Fabrikwerte•zurück.• Der•AUTO-INSTALL-Modus•kann•durch•einen langen•Knopfdruck•(>2,5s)•initialisiert•werden.

Clear•Prog.
Cancella•tutti•i•programmi•in•memoria•e•regola•i Valori•analogici•SUONO•IMMAGINE:•ai•livelli•di• fabbrica.Riportare•la•TV•al•modo•Selezione:• pressione•prolungata:•2,5•sec.•su•il•pulsante•</>.

Programa•de•borrado.
Borra•todos•los•programas•almacenados•en•la• memoria.Valores•analógicos•de• IMAGEN•y•SONIDO:•valores•de•fábrica.Regreso• a•la•TV•para•"salir•del•modo•fábrica".Selección:• Presión•larga•igual•a•2,5•s.

Std.Sound Preset

Sets•the•default•value•for•the•Standard•Sound•Preset.
Factory adjusted
Reserve au reglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

Brand

Set the "Brand": Thomson, Telefunken, Other
Factory adjusted
Réservé au réglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

Kbd. Config.

Factory adjusted
Réservé au réglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

Subwoofer

Enable the subwoofer on equiped set.

Validation du Subwoofer sur les appareils équipés .

Einschalten des Subwoofers (wenn vorhanden).

Abilita il subwoofer negli apparecchi equipaggiati.

Validaciónde que existe el subwoofer.

☑ Subwoofer enable ☐ Subwoofer disable

SETUP

Feature Pack

Enables or disables the option to decode and display EPG program data,the Graphic Equalizer, Picture Presets and Sound Presets features (in user menu).

Validation ou inhibition du décodage/affichage des données du programme EPG, de l'équalizer graphique, des pré-réglages son et image dans le menu utilisateur.

Ein- und Abschalten der Optionen Decodierung und Anzeige der EPG Programmdaten, Grafischer Equalizer, Bildvoreinstellungen und Tonvoreinstellungen (in den Benutzermenüs).

Abilita l'EPG, l'equalizzatore grafico, Ipreset Video e preset suono (in menu suono)

Valida las funciones EPG, Ecualizador gráfico y predeterminados para imagen y sonido (en el menú "Ajustes personales")

☑ Enable ☐ Disable

Picture•Rot

Enables the "Earth Field Correction" function (EFC) on ICC20 16/9 and some large screen 4/3 by adding a special bargraph in the "personal settings" menu (user menus). It is necessary to validate this function if the EFC correction circuit is inserted.

Valide la fonction "correction de champ magnétique terrestre" (EFC) sur les chassis ICC20 16/9 et les appareils 4/3 grand écran par addition d'un bargraphe spécifique dans le menu "réglages personnels" (menu utilisateur). Cette fonction doit être validée lorsque les circuits de correction "EFC" sont insérés.

Freigabe der Erdfeldkorrektur (EFC) bei ICC20 16/9 und einigen 4/3 Geräten. Im Menü "Eigene Einstellungen" (Menü "Installation") wird ein zusätzlicher Anzeigebalken eingeblendet Nach dem Einbau des EFC-Moduls ist diese Funktiozu aktivieren.

Attiva la funzione "Correzione del campo magnetico terrestre" (EFC) sul telaio ICC20 16/9 e alcuni grandi schermi 4/3 , aggiungendo una speciale barra grafica nei menu di "Menu Principale". Se il circuito di correzione è montato, è necessario convalidare questa funzione.

Valida la función "corrección del campo magnético terrestre" (EFC) en los chasis ICC20 and some large screen 4/3 añadiendo una barra gráfica en el menú "Ajustes personales". Es necesario validar ésta función si el circuito de corrección EFC está montado.

☑ Rotation bargraph available menu, EFC function active.

☐ Rotation bargraph suppressed from personal settings, EFC circuit disactivated

WSS

Automatic detection of DOLBY surround sound and 16/9 format pictures via Teletext line number 23 is valid on all programmes.

Détection automatique du son surround DOLBY et du format 16/9 via la ligne 23 du Teletxte. Valide pour tous programmes.

WSS (nur bei 16:9 oder Dolby) Auswertung der Zeile 23 zur automatischen Format-und Dolbyumschaltung.

Identificazione "auto-Dolby" e "format 16/9" via televideo alla riga 23.La selezione di WSS Processing vale per tutti i programmi.

Detección "auto-surround" y "format" a través de la linea 23 de Teletext.La selección del procesamiento WSS es válida para todos los programas.

☑ Detection enable ☐ Detection disable

→ After•setting• → Store•(+) ☑

SETUP

Bus Quiet

In "Bus Quiet", the NVM can be read, modified and reprogrammed by means of a NVM Programmer.
To access "Bus Quiet" : Long press ">".
The TV should remain in "Bus Quiet" mode until either Exit, Left, Right, Up,Down or Standby keys on the RCU or local keyboard are pressed; at which point the TV should carry out a warmstart in order to prevent differences between the NVM and RAM contents.
After returning from Bus Quiet, the software checks the NVM content.
If it is not valid, the software perform a new default writing of the NVM content.

En mode bus quiet la NVM peut être lue, modifiée et reprogrammée.
Accès au mode Bus quiet :
Longue pression ">".
Utiliser l'une des touches Exit, Gauche, Droite Haut, Bas, standby ou une des touches du clavier pour sortir le téléviseur du mode bus quiet.
À partir de ce point de sortie le démarrage du téléviseur s'effectue à chaud pour éviter toute différence des contenus RAM et NVM.
En sortie de mode bus quiet, le logiciel contrôle le contenu de la NVM.
S'il n'est pas correct le logiciel exécute une nouvelle écriture par défaut de celle-ci.

Im "Bus Quiet"-Modus kann der Inhalt des NVM mittels eines externen NVM-Programmiergerätes ausgelesen, geändert oder neu programmiert werden. "Bus Quiet" wird einem längeren Druck auf ">" aktiviert. Das Gerät bleibt solange im "Bus Quiet" - Mode, bis durch Druck auf die EXIT-, LINKS-, RECHTS-, HOCH-, RUNTER- oder STANDBY-Taste (am Gerät oder auf der Fernbedienung) ein Warmstart des Gerätes veranlaßt wird, um unterschiedliche Daten in RAM und NVM zu vermeiden.
Es folgt ein Software-Check des NVM-Inhaltes.
Sollte dieser nicht gültig sein, wird der Inhalt mit Default-Werten überschrieben.

In Modo Bus Quiet, la memoria NVM può essere letta, modificata o riprogrammata.
Per accedere al modo Bus Quiet premere a lungo il tasto ">".
Il TV rimane in modo Bus Quiet fino a che vengono premuti i tasti Exit, o Destro Sinistro, Su o Giù o Standby dal telecomando o dalla tastiera locale; a questo punto il TV riparte per evitare interferenze tra i contenuti della memoria NVM e della RAM.
All'uscita dal modo Bus Quiet, il software controlla il contenuto della memoria NVM. Se tale contenuto non è valido, il software provvede a una nuova programmazione della NVM con l'inserimento dei dati di default.

En bus quieto, la NVM puede ser leída, modificada y reprogramada.
Acceso a bus quieto : Larga presión en ">"
El TV permanecerá en bus quieto hasta que se pulse cualquiera de las teclas siguientes: Exit, "<", "Λ", "V", ">"o Standby del telemando o del teclado.
En este momento el TV arrancará para evitar cualquier diferencia entre los contenidos de la RAM y NVM.
Al salir del modo bus quieto, el software comprueba el contenido de la NVM.
Si no coincide, el software ejecuta la escritura de los datos en la NVM.

☑ Bus quiet enable ☐ Bus quiet disable

→ After setting → Store (+) ☑

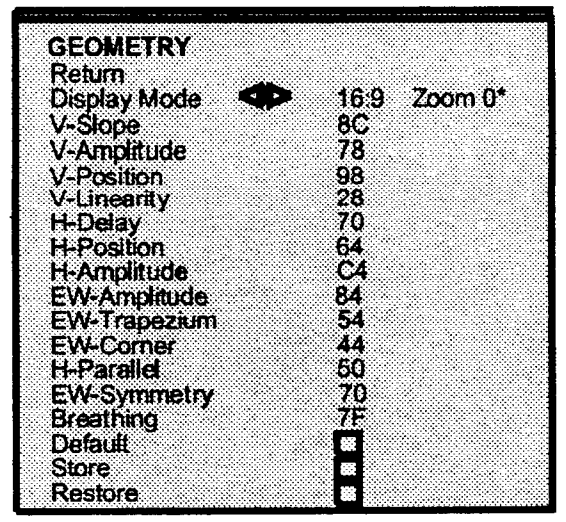

GEOMETRY

Return			
Display Mode	◀▶	16:9	Zoom 0*
V-Slope		8C	
V-Amplitude		78	
V-Position		98	
V-Linearity		28	
H-Delay		70	
H-Position		64	
H-Amplitude		C4	
EW-Amplitude		84	
EW-Trapezium		54	
EW-Corner		44	
H-Parallel		50	
EW-Symmetry		70	
Breathing		7F	
Default		☐	
Store		☐	
Restore		☐	

* *Test Bar pattern used : 4/3 with a geometric circle. Complete geometry Adjustment is done according to chassis tube format :* **4/3•zoom•0** *mode for* **4/3** *tubes.* **16/9•zoom•0** *mode for* **16/9•tubes** *: see annexed .*

Mire de barre utilisée : 4/3 avec cercle de géométrie. les réglages complets de géométrie sont faits dans le format du tube équipant l'appareil : mode **4/3•zoom•0** *pour les tubes* **4/3**, **16/9•zoom•0** *pour les appareils équipés de* **tubes•16/9•**. *voir ci-après*

Verwendetes Testbid : 4/3 mit geometrischem Kreis Ein vollständiger Geometrie-Abgleich ist nur notwendig bei **4/3-Röhren** *Zoomstufe* **4/3•Zoom•0**•*und* **16/9-Röhren** *Zoomstufe* **16/9•Zoom•0** *: siehe unten.*

Formato Testo utizzato: 4/3 con cerchio geomatrico. La regolazione viene effettuata nel formato del telaio del cinescopio: **4/3•zoom•0** *:tubo* **4/3**; **16/9•zoom•0**: *tubo* **16/9**. *see annexed*

Carta de ajuste utilizada : 4/3 con círculo geométrico. El ajuste completo de la geometría hay que hacerlo de acuerdo con el tipo de chasis y el formato del tubo : Modo **4/3•zoom•0** *para tubos de* **4/3**; *modo* **16/9 zoom•0** *para tubos de* **16/9**. *See annexed*

GEOMETRY

Return

Closes the sub-menu and returns to the "Main Service Menu"

Retourne au menu principal.

Schließt das Untermenü, und das Haupt-Menü des Service-Modes erscheint.

Chiude il sottomenu e fa apparire il menu principale Service Mode.

Cierra el submenú. El menú Field Service Mode aparece.

Press </>: remote control; Vol. +/- : TV keyb.

Display•Mode

Complete geometry adjustment is done according to chassis tube format : **4/3•zoom•0** mode for **4/3•tubes**, **16/9•zoom•0** mode for **16/9•tubes.**
In all other modes it is only necessary to adjust some few registers.
The actual format mode has to be displayed in the Geometry Service mode.
It has to be possible to change the format during the geometry alignment without leaving the Service mode.

The available display modes depend on the picture tube format.
4/3 tube : 2 modes 4/3 and 16/9
16/9 tube : 3 modes 16/9 standard,
4/3 Zoom 0, Cinerama

The menu shows only the registers which have to be aligned for the actual picture format currently displayed.

Les réglages complets de géométrie sont faits dans le format du tube équipant l'appareil.
Mode **4/3•zoom•0** pour les tubes **4/3**, **16/9•zoom•0** pour les tubes **16/9**.
Dans les autres modes seuls quelques registres nécessitent un réglage.
Le format de réglage doit être affiché dans le menu de géométrie du mode service.
Il est possible de changer le format sans quitter le mode service.

Différents types d'affichage disponibles :

tube 4/3 : 2 modes 4/3 et 16/9
tube 16/9 : 3 modes 16/9 standard,
4/3 Zoom 0, Cinerama

Le menu correspondant montre seulement les registres à régler.

Ein vollständiger Geometrie-Abgleich ist bei **4/3-Röhren** nur in der Zoomstufe **4/3•Zoom•0** und bei **16/9-Röhren** nur in der Zoomstufe **16/9•Zoom•0** notwendig.
In allen anderen Zoomstufen sind eine geringere Anzahl von Einstellungen vorzunehmen.
Während des Geometrie-Abgleiches wird zur Kontrolle ständig das aktuelle Bildformat eingeblendet. Während des Geometrie-Abgleiches ist es möglich, das Bildformat zu ändern, ohne den Service Mode zu verlassen.

Die verfügbaren Bildformate sind abhängig vom Bildrohr-Format.
4/3-Röhre : 2 Bildformate 4/3 und 16/9
16/9-Röhre : 3 Bildformate 16/9 Standard,
4/3 Zoom 0 und Cinerama

Das Abgleich-Menü zeigt immer nur die Funktionen an, die im aktuellen Bildformat eingestellt werden müssen.

La disponibilita dei modi display dipende dal formato del tubo:
tubo•4/3 : 2 modi 4/3, 16/9
tubo•16/9•: 3 modi 16/9 standard, 4/3 zoom0
cinerama
Il corrispondente menu mostra solo i registri di regolazione.
Le regolazioni complete di geometria vengono fare in base al tubo.
per **tubi•4/3** - 4/3 zoom 0
per **tubi•16/9** - 16/9 zoom 0

In tutti gli altri modi è necessario regolare solo alcuni registri.
Il formato di regolazione deve essere selezionato nel menu di geometria nel modo service.
E´ possibile canbiare formato senza uscire da service mode

GEOMETRY

Display•Mode

Los ajustes completos de geometría se harán de acuerdo al formato del tubo montado:
modo•4/3 para tubos de **4/3•zoom•0**,
modo•16/9•zoom•0 para tubos•**de•16/9**.
En todos los otros modos, sólo será necesario ajustar unos pocos registros.
El modo de formato actual debe ser accedido desde el Modo Servicio.
Es posible cambiar el formato sin salir del Modo Servicio.

Los formatos que se pueden visualizar, dependen del tipo de tubo.
Tubos de 4/3 : 2 modos, 4/3 y 16/9
Tubos de 16/9: 3 modos, 16/9 estándar,
4/3 Zoom 0 y Cinerama.

El menú correspondiente mostrará sólo los ajustes a efectuar.

V-Slope

- Apply a test pattern signal to the TV with a single horizontal and vertical line on the screen.
- Select the **"VS"** line of the menu. The bottom half of the screen will go black.
- Adjust VS until the centre line of the pattern is just invisible.
- Leave the line **"V_Slope"**.
- Switch the test pattern signal to the crosshatch geometry pattern.
- Perform the geometry adjustments described below.

- Appliquer une mire de barres avec seulement une ligne blanche horizontale en milieu de l'écran.
- Sélectionner la ligne **"V-Slope"**.
  La moitié basse de l'écran devient noire.
- Aligner **"V_Slope"** pour que la ligne médiane soit à peine non visible.
- Commuter la mire en mode de réglage de géométrie (quadrillage).
- Effectuer les reglages de geometrie.

- Speisen Sie ein Testbild mit einem horizontalen Strich in der Bildmitte ein.
- Wählen Sie im Menü die Funktion "V-Slope" an.
  Die untere Bildhälfte wird dunkel.
- Stellen Sie "V-Slope" so ein, daß die Mittellinie fast verschwindet.
- Verlassen Sie die Funktion "V-Slope".
- Speisen Sie ein Gittertestbild ein.
- Nehmen Sie die Geometrieeinstellungen wie nebenstehend beschrieben vor.

- Applicare un monoscopio con un'unica linea bianca orizzontale al centro dello schermo
- Selezionare la riga **"V• slope"** del menu. La parte bassa dello schermo viene oscurata.
- Allineare la "Vertical Slope" in modo che la linea centrale sia appena visibile
- Abbandonare la riga **"V• slope"**.
- Posizionare il monoscopio
- Effettuare le regolazioni di geometria descritte in precedenza
- Memorizzare.

- Aplique una carta de ajuste con sólo una línea blanca horizontal y una vertical en el centro de la pantalla.
- Seleccionar en el menú, la línea **"V-Slope"**. La mitad inferior de la pantalla se pondrá oscura.
- Ajuste **"V-Slope"** justo hasta que la línea horizontal sea invisible.
- Cambiar la carta de ajuste a "cuadrícula" y efectuar los ajustes de geometría descritos a continuación
- Antes de salir, memorizar con "Store"



GEOMETRY

V-Amplitude	
V-Position	
V-Linearity	

H-Delay
Horizontal-Delay

Increase/decrease value to center the image inside the displayed curtains.
Adjust H-Delay before "H-Position"

Augmenter/diminuer la valeur de H-Delay pour centrer l'image à l'intérieur des "rideaux".
Ajuster H-Delay avant "H-Position"

Zentrieren Sie das Bild horizontal zwischen die dunkelgetasteten senkrechten Balken.
Gleichen Sie H-Delay vor "H-Position" ab.

Incrementare / Decrementare il valore per centrare l'immagine.
Regolare H-Delay prima "H-Position".

Aumentar ó disminuir el valor de H-Delay para el centro de la imagen en el interior de las "cortinas".
Ajustar H-Delay antes que H-Position

Press </>: remote control; Vol. +/- : TV keyb.

H-Position	
H-Amplitude	
EW-Amplitude	
EW-Trapezium	
EW-Corner	
H-Parallel	
EW-Symmety	

Breathing
EHT•compensation

Factory adjusted
Réservé au réglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

→ After•setting• → Store•(+) ☑

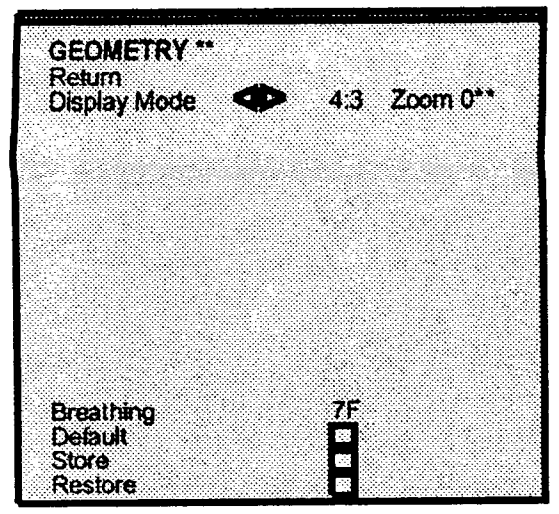

GEOMETRY **
Return
Display Mode ◀▶ 4:3 Zoom 0**

Breathing 7F
Default ☐
Store ☐
Restore ☐

GEOMETRY

Breathing
EHT compensation

Factory adjusted
Réservé au réglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

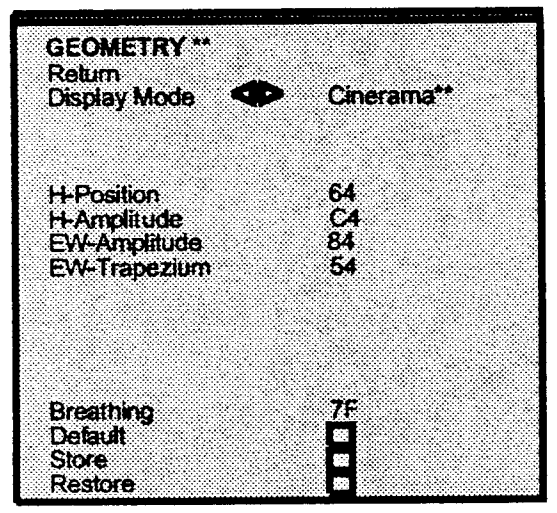

GEOMETRY **
Return
Display Mode ◀▶ Cinerama**

H-Position	64
H-Amplitude	C4
EW-Amplitude	84
EW-Trapezium	54

Breathing 7F
Default ☐
Store ☐
Restore ☐

GEOMETRY

H-Position		
H-Amplitude		
EW- Amplitude		
EW- Trapezium		

Breathing
EHT compensation

Factory adjusted
Réservé au réglage usine
Reserviert für Fabrikeinstellungen
Riservato alla regolazione di fabbrica
Ajuste reservado fábricas

➡ After setting ➡ Store (+) ☑

Note:
** Specific menu : 16/9 set
Menú específico : aparatos 16/9

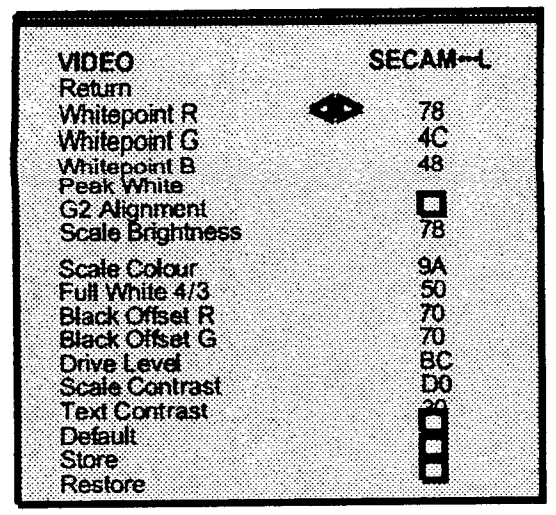

VIDEO SECAM L
Return

Whitepoint R ◀▶	78
Whitepoint G	4C
Whitepoint B	48
Peak White	
G2 Alignment	☐
Scale Brightness	78
Scale Colour	9A
Full White 4/3	50
Black Offset R	70
Black Offset G	70
Drive Level	BC
Scale Contrast	D0
Text Contrast	30
Default	☐
Store	☐
Restore	☐

VIDEO PAL

Return
Closes the sub-menu and returns to the "Main Service Menu"
Retourne au menu principal.
Schließt das Untermenü, und das Haupt-Menü des Service-Modes erscheint.
Chiude il sottomenu e fa apparire il menu principale Service Mode.
Cierra el submenú. El menú Field Service Mode aparece.
Press </>: remote control; Vol. +/- : TV keyb.

Whitepoint R* **Whitepoint G*** **Whitepoint B***	☼ + ◐ + ◑ = standard Grey scale test pattern white =50% Amplitude: 350mVBW RF-PAL RF-SECAM AV1- RGB grey
Peak-White**	☼ + ◑ + ◐ = standard Peak white test pattern white = 100% RF-BG; RF-L; AV1 RGB Colourimeter

Tube Type	[Nits]	Tube Type	[Nits]
A59EHJ	380	W66EGV	480
A68EGD	400	W66LPQ	450
A68EJZ	-	W66EJY	-
A68LPQ	-	W76EGV	380
A80EJA	350	W76EJY	-
A90AFX	-	W76LPF	-

G2 Alignment	Display a full screen black OSD Adjust G2 with SCREEN potentiometer: see adjust table Ecran totalement noir. Régler G2 avec le potentiomètre SCREEN : voir tableau des réglages.(p.12). Das Bild wird dunkelgetastet Gleichen Sie G2 mit dem SCREEN-Potentiometer wie auf seite 12. beschrieben ab. Visualizzare uno schermo nero e regolar il potenziomero G2 riferendos alla tabella regolazione (p.12) Pantalla totalmente oscura sin OSD. Ajustar la G2 con el potenciómetro SCREEN: ver tabla (p.12). ☑ G2_adjust on ☐ Reset G2-adjust and restores the video menu.

Note:
* Adjust separate for PAL RF/SECAM RF and RGB/AV Whitepoints cannot be aligned in I PAL

** After PEAK white adjustment control whitepoints setting.
Repeat the adjustments if necessary.

Color standard or RGB is autodetected and displayed opposite the displayed opposite the menu title.

VIDEO PAL

Scal. Brightness	☼ + ◐ + ◑ = standard Grey scale test pattern white = 100% black
Scal*. Colour	☼ + ◐ + ◑ = standard PAL (then SECAM +RGB) 75% Colour bar test pattern via RF. 
Full White 4/3 **Black Offset R** **Black Offset G** **Drive Level** **Scale Contrast**	Factory adjusted Réservé au réglage usine Reserviert für Fabrikeinstellungen Riservato alla regolazione di fabbrica Ajuste reservado fábricas

Text Contrast ☼ + ◐ + ◑ = standard

Adjust Text contrast for V=60V at pin 11 (Blue) of the CRT : 40% V peak white

Ajuster Text Contrast pour obtenir un niveau de sortie V=60V sur la cathode Bleue du tube (point 11 de la CRT): 40% V peak white.

Stellen Sie mit Text Contrast V=60V an der Blau-Kathode (Pin 11) der Bildröhre ein: 40% Vpeak white

Regolare il guadagno contrasto televideo per ottenere al catodo del blu un livello pari a V=60V (CRT pin 11): 40% Vpeak white.

Ajuste Text Gain para dejar V=60V en azul del TRC (CRT Patilla 11): 40% Vpeak white





CRT Pin 11

➡ After setting ➡ Store (+) ☑

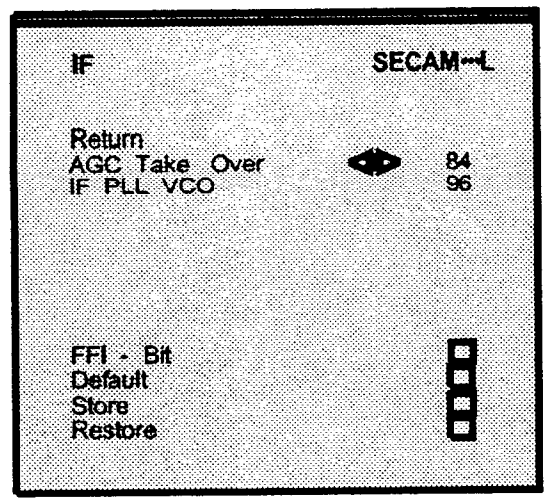

IF SECAM L

Return
AGC Take Over ◀▶ 84
IF PLL VCO 96

FFI - Bit ☐
Default ☐
Store ☐
Restore ☐

IF

Return
Closes the sub-menu and returns to the "Main Service Menu"
Retourne au menu principal.
Schließt das Untermenü, und das Haupt-Menü des Servic e-Modes erscheint.
Chiude il sottomenu e fa apparire il menu principale Service Mode.
Cierra el submenú. El menú Field Service Mode aparece.
Press </>: remote control; Vol. +/- : TV keyb.

AGC Take Over	1mV : antenna input of the tuner - Minimum noise- - Minimum de bruit - Minimum Rauschen - Rumore minimo - Minimo ruido
IF PLL VCO	Adjust IF PLL VCO for "OK" indicating. Adjust for standard L' and others.
FFI Bit	Fast Filter (IF / PLL) Filtre rapide (FI / PLL) Schnelles filter (ZF / PLL) Filtro /rapido (IF / PLL) ☑ Asia ☐ Europ

➡ After setting ➡ Store (+) ☑

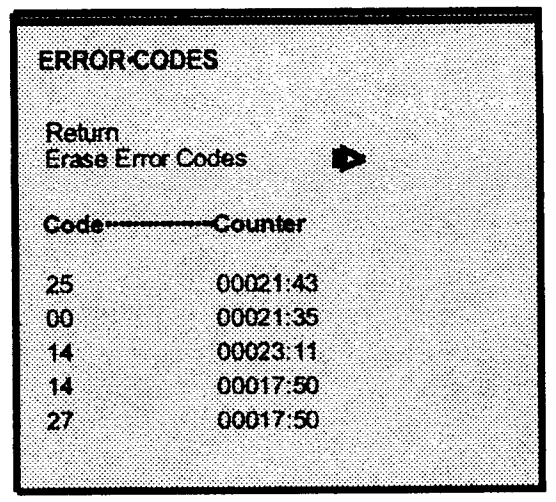

ERROR CODES

Return
Erase Error Codes ▶

Code	Counter
25	00021:43
00	00021:35
14	00023:11
14	00017:50
27	00017:50

ERROR CODE

Return
Closes the sub-menu and returns to the "Main Service Menu"
Retourne au menu principal.
Schließt das Untermenü, und das Haupt-Menü des Servic e-Modes erscheint.
Chiude il sottomenu e fa apparire il menu principale Service Mode.
Cierra el submenú. El menú Field Service Mode aparece.
Press </>: remote control; Vol. +/- : TV keyb.

Erase Error Codes To clear all error codes stored in the NVM. Action: Long press (> 2.5sec.).
Press </>/OK: remote control;Vol. +/- :TV keyb.

CODE LED Error Codes

The last five error codes are stored and displayed as they occured in real time, the most recent error code is displayed on the top line. A repeated top line error code has its real time count updated. There are 35 different error codes, which are signalled by the TV's Standby LED, ranging in value from 10 to 49 hex. The error code is displayed as two separate digits separated by a suitable pause, this is repeated until the either the TV fixes the fault or the TV is repaired. For example Error code : 23 will be displayed thus :
2 flashes and a short pause
3 flashes and a long pause
....
List of Errors Codes : see table

Mémorise les cinq derniers codes erreurs et affiche en haut d'écran les plus récents.
35 codes erreurs différents sont signalés par deux digits selon une séquence spécifique
Exemple :
Code erreur : 23 affiché
2 flashes, courte pause
3 flashes : longue pause
....
Voir ci-contre la liste des codes erreurs

Zeigt die letzen 5 Fehlercodes mit der Laufzeit an. Der zuletzt aufgetretene Fehler steht an erster Stelle. Sollte ein Fehler wiederholt auftreten wird nur die Laufzeit aktualisiert.
Die Fehlercodes können im Menü Error Code angezeigt werden oder über die Kontroll LED angezeigt werden;

Beispiel für die Anzeige über die Kontroll LED:

Fehlercode 23 :
Zweimaliges Blinken der LED, kurze Pause.
Dreimaliges Blinken der LED, lange Pause.
Auflistung der Fehlercodes : siehe Liste

Memorizza gli ultimi cinque codici d'errore dopo che ognuno di essi e verrà visualizzato (attraverso il contatore della durata di esecuzione). L'errore più recente viene visualizzato in cima. La ripetizione del codice di errore in cima alla lista non farà altro che aggiomare la durata di esecuzione. Dal LED del TV vengono segnalati 35 codici d'errore differenti, numerati da 10 a 49. Il codice d'errore è indicato da due cifre separate da un opportuno intervallo di tempo e verrà ripetuto fino a quando il televisore non sarà stato riparato o non si sarà corretto da solo.
Ad es:
Il codice d'errore 23 visualizzerà:
2 segnali luminosi con pausa breve
3 segnali luminosi con pausa lunga
Per la lista dei Codici d'Errore, si veda la tabella

Guarda los últimos cinco códigos de error cuando cada uno ocurre (gracias al contador de tiempo de ejecución). El error más reciente se visualiza en la parte superior. Una repetición del código de error en la parte superior de la lista solamente actualiza el tiempo de ejecución. El indicador TV LED indica 35 códigos de error diferentes, de 10 a 49. El código de error se señala en forma de dos dígitos separados con una pausa apropiada entre los dos y se repetirá hasta que repare el TV o él se repara a sí mismo.
Por ejemplo,
Se va visualizar el código de error 23:
2 parpadeos, una pausa corta;
3 parpadeos, una pausa larga.
Para la Lista de códigos de error, consulte la tabla.

ERROR CODES

GB

10 Display effective child lock mode
11 Display timer mode
12 Audio-MSP doesn't answer anymore
13 Audio-Dpl doesn't answer anymore
14 TDA9330H doesn't answer anymore
15 TDA9321 doesn't answer anymore
16 DMU0 doesn't answer anymore
17 SAA4956 doesn't answer anymore
18 TDA9178 doesn't answer anymore
19 Tuner doesn't answer anymore
20 I2C Bus is loocked
21 I2C Bus data line held low
23 I2C Bus clock line held low
25 Switched 5V not available
26 Tube gets not warm in time
27 Deflection detects >3 times prot
28 Vertical deflection safety is effective
29 Horizontal deflection safety is effective
31 Call with pointer that was not allocated
32 A software-timer has been requested but isn't available yet
34 The NVM chip doesn't answer anymore
35 5V and 8V not available
36 Wrong address passed to the bus-handler
37 Unexpected level on NMI line found
38 Heap full - There is no RAM available for the requested operation
39 I2C Bus data line not recoverable
41 Power down detection TDA9178 (PSI)
42 Power on reset error TDA9320 (HIP)
43 Power on reset error TDA9330 (HOP)
44 NRF bit problem (only factory information)
45 FLS bit problem (only factory information)
46 NHF bit problem (only factory information)
47 NDF bit problem (only factory information)
48 XPR bit problem (only factory information)
49 Problem with bits SXA…D (factory information)

F

10 Fonction clef enfant active
11 Mode timer
12 Audio MSP ne répond plus
13 Audio-Dpl ne répond plus
14 TDA9330H ne répond plus
15 TDA9321 ne répond plus
16 DMU0 ne répond plus
17 SAA4956 ne répond plus
18 TDA9178 ne répond plus
19 Tuner ne répond plus
20 I2C-bus bloqué
21 I2C-bus data forcé au niveau bas
23 I2C-bus clock forcé au niveau bas
25 Le "5V commuté" n'est pas disponible
26 Tube ne chauffe pas a temps
27 Plus que 3-fois la déflection a détecté une "protection"
28 Sécurité déviation verticale active
29 Sécurité déviation horizontale active
31 Appel par pointeur non alloué
32 Logiciel-timer non disponible
34 NVM (mémoire) ne répond plus
35 5V et 8V non disponibles
36 NVM adresse erronée
37 Niveau incorrect sur la ligne NMI
38 Pile pleine - Il n'y a plus de RAM disponible pour l'opération requise
39 I2C-bus data non récupérable
41 Détection mauvaise alimentation TDA9178
42 Erreur de reset TDA9320
43 Erreur de reset TDA9330
44 Problème bit NRF (information usine seulement)
45 Probleme bit FLS (information usine seulement)
46 Problème bit NHF (information usine seulement)
47 Problème bit NDF (information usine seulement)
48 Problème bit XPR (information usine seulement)
49 Problème avec les bits SXA…D (information usine seulement)

D

10 Kindersicherung aktiv
11 Weckerfunktion aktiv
12 Audio-MSP antwortet nicht
13 Audio-Dpl antwortet nicht
14 TDA9330H antwortet nicht
15 TDA9321 antwortet nicht
16 DMU0 antwortet nicht
17 SAA4956 antwortet nicht
18 TDA9178 antwortet nicht
19 Tuner antwortet nicht
20 I2C Bus ist blockiert
21 I2C Bus Data ist immer L
23 I2C Bus Clock ist immer L
25 Geschaltete 5V nicht vorhanden
26 Bildrohr ist nicht rechtzeitig aufgeheizt
27 Schutzschaltung hat dreimal ausgelöst
28 Vertikal-Schutzschaltung ist aktiv
29 Horizontal-Schutzschaltung ist aktiv
31 Softwarefehler (nur für Produktionsstätten)
32 Softwarefehler (nur für Produktionsstätten)
34 NVM (EEPROM) antwortet nicht
35 5V und 8V nicht vorhanden
36 Softwarefehler (nur für Produktionsstätten)
37 Unerwarteter Zustand auf NMI-Leitung
38 Softwarefehler (nur für Produktionsstätten)
39 I2C Bus Data-Leitung nicht reaktivierbar
41 Power down detection TDA9178 (PSI)
42 Problem während des Resets TDA9320 (HIP)
43 Problem während des ResetsTDA9330 (HOP)
44 NRF Bit Problem (nur für Produktionsstätten)
45 FLS Bit Problem (nur für Produktionsstätten)
46 NHF Bit Problem (nur für Produktionsstätten)
47 NDF Bit Problem (nur für Produktionsstätten)
48 XPR Bit Problem (nur für Produktionsstätten)
49 Problem mit Bits SXA…D (nur für Produktionsst.)

I

10 Funzione child lock attiva
11 Modo timer
12 MSP-Audio non risponde
13 DPL-Audio non risponde
14 TDA9330H non risponde
15 TDA9321 non risponde
16 DMU0 non risponde
17 SAA4956 non risponde
18 TDA9178 non risponde
19 Tuner non risponde
20 I2C Bus è bloccato
21 I2C Bus data forzata bassa
23 I2C Bus clock forzata bassa
25 Tensione 5V commutata non disponibile
26 Tubo non trasmette informagione caldo entro il tempo stabilito
27 Deflessione rileva>3 volte protezione
28 Protezione deflessione verticale attiva
29 Protezione deflessione orizzontale attiva
31 Chiamata al pointer non assegnata
32 Logica timer non disponibile
34 L'integrato NVM non risponde
35 5V e 8V non disponibili
36 Indirizzamento NVM errato
37 Livello incorretto sulla linea NMI
38 Pile piena - RAM non disponibile per l'operazione richiesta
39 Linea I2C Bus non recuperabile
41 Rilevazione mancata alimentazione el TDA9178 (PSI)
42 Errore di reset TDA9320 (HIP)
43 Errore di reset TDA9330 (HOP)
44 Problema di bit NRF (informazione solo per fabrica)
45 Problema di bit FLS (informazione solo per fabrica)
46 Problema di bit NHF (informazione solo per fabrica)
47 Problema di bit NDF (informazione solo per fabrica)
48 Problema di bit XPR (informazione solo per fabrica)
49 Problema con bit SXA…D (informazione di fabrica)

E

10 Función "bloqueo niños" activa
11 Modo "timer" activado
12 El procesador de audio MSP no responde
13 El DPL de audio no responde
14 El TDA9330H no responde
15 El TDA9321 no responde
16 El DMU 0 no responde
17 El SAA4956 no responde
18 El TDA9178 no responde
19 El sintonizador no responde
20 El bus I2C está bloqueado
21 La línea de datos del bus I2C forzada a nivel bajo
23 La línea clock del bus I2C forzada a nivel bajo
25 Faltan los +5V conmutados
26 El TRC no se calienta en el tiempo establecido
27 La deflexión detecta una protección > de 3 veces
28 Seguridad de la deflexión vertical activada
29 Seguridad de la deflexión horizontal activada
31 El puntero no puede encontrar la posición solicitada
32 Una solicitud de "timer" no está disponible
34 La NVM no responde
35 Faltan los 5V y los 8V
36 Dirección errónea solicitada por el bus
37 Encontrado un nivel inesperado en la línea NMI
38 Pila llena. No queda RAM disponible para la operación solicitada
39 Línea de datos del bus I2C no recuperable
41 Detección de fallo en alimentación TDA9178 (PSI)
42 Error de reset en el encendido TDA9320 (HIP)
43 Error de reset en el encendido TDA9330 (HOP)
44 Fallo en el bit NRF (información sólo para fábrica)
45 Fallo en el bit FLS (información sólo para fábrica)
46 Fallo en el bit NHF (información sólo para fábrica)
47 Fallo en el bit NDF (información sólo para fábrica)
48 Fallo en el bit NDF (información sólo para fábrica)
49 Fallo en los bits SXA…D (información sólo para fábrica)

GEOMETRY MODE ALIGNMENT

4/3 picture tube

A ICC20 4/3 set needs a geometry alignment only in the 4/3 Zoom 0 mode. All other formats and zoom mode are calculated.

Un chassis ICC20 4/3 ne nécessite des réglages de géométrie que dans le mode 4/3 zoom 0. La géométrie des autres formats et zoom est calculée.

Beim Chassis ICC20 4/3 ist ein Geometrie-Abgleich nur im Bildformat 4/3 Zoom 0 notwendig. Die Werte für alle weiteren Formate und Zoomstufen werden berechnet.

Il telaio ICC20 4/3 richiede l'allineamento solo nel formato 4/3 zoom 0. Tutti gli altri formati zoom sono calcolati.

Un TV ICC20 4/3 sólo necesita ajustar la geometría en modo 4/3 Zoom 0. Todos los otros formatos y modos de zoom, son calculados.

Signal : 4/3 test pattern

4/3 standard mode zoom 0	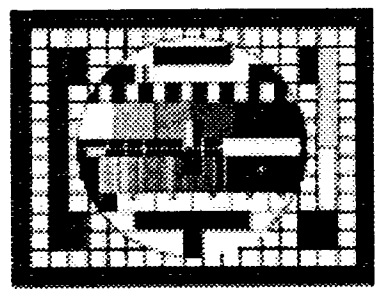	**Overscan V=107% , H=107%** 1- Adjust Vertical position and Vertical amplitude 2- Adjust Vertical Slope and linearity  3- Adjust Horizontal Delay, Horizontal Position and Horizontal amplitude  4-Adjust EW Amplitude ,EW Shape and Trapezium, EW Corner,  5-Adjust EW Symmetry and Horizontal parallelogram 

16/9 picture tube

A ICC20 16/9 set needs a complete geometry alignment in the 16/9 Zoom 0 mode and additionnaly an alignment of H-amplitude (104%), EW-Amplitude, H-position and EW-trapezium in Cinerama mode (if fitted). All others formats all others formats and zoom mode are calculated.

Un chassis ICC20 16/9 ne nécessite un alignement complet des réglages de géométrie que dans le mode 16/9 zoom 0 et en outre des réglages de H-amplitude (104%), EW-Amplitude, H-position et EW-trapèze en mode Cinérama (si les circuits correspondants sont insérés).
La géométrie des autres formats et zoom est calculée.

Beim Chassis ICC20 16/9 ist ein vollständiger Geometrie-Abgleich nur im Bildformat 16/9 Zoom 0 notwendig. Wenn das Bildformat Cinerama verfügbar ist, müssen für diesen H-Amplitude (104%),EW-Amplitude, H-Position und EW-Trapezium abgeglichen werden.
Die Werte für alle weiteren Formate und Zoomstufen werden berechnet.

Il telaio ICC20 16/9 richiede l'allineamento nel formato 16/9 zoom 0 e un allineamento supplementare dell' Ampiezza H (104%), Ampiezza EW Posizione H e Trapezio EW nel modo Cinerama. Tutte le regolazioni negli altri formati zoom sono calcolate.

Un TV ICC20 16/9 necesita un ajuste completo de geometría en el modo 16/9 zoom 0 y además un ajuste de la anchura horizontal (104%), posición horizontal y amplitud / trapecio E/W en modo "Cinerama" (si está incorporado). Todos los otros formatos y modos de zoom, son calculados.

Signal : 4/3 test pattern

16/9 standard mode zoom 0	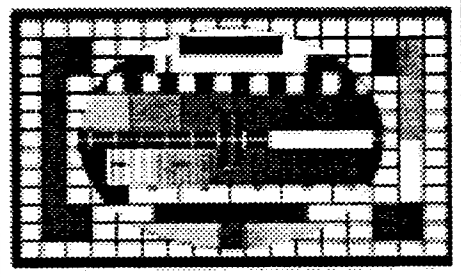	**Overscan V=107%, H=104%** 1- Adjust Vertical position and Vertical amplitude 2- Adjust Vertical Slope and linearity  3- Adjust Horizontal Delay, Horizontal Position and Horizontal amplitude  4-Adjust EW Amplitude ,EW Shape and Trapezium, EW Corner,  5-Adjust EW Symmetry and Horizontal parallelogram 
4/3 CINERAMA mode	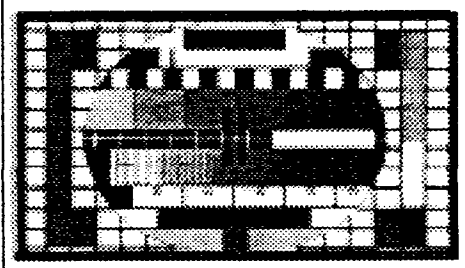	**Mode CINERAMA** **Overscan V=114%, H=104%** 1- Adjust Horizontal position and Horizontal amplitude  2- Adjust EW Amplitude, EW Trapezium 

ALLGEMEINE INFORMATIONEN

FEHLERSUCH-METHODIK

1 - EINSCHALTEN DES GERÄTES:

- Beobachten Sie beim Einschalten des Gerätes die Standby-LED. Abweichungen vom "normalen" Einschaltverhalten des Gerätes können Hinweise auf eventuelle Fehler im Gerät und deren möglichen Ursachen geben.

2 - FEHLERSUCHE : VERHALTEN DER LED :

In bestimmten Fällen bedeutet ein Blinken der LED die Anzeige eines Fehlercodes:

- Zählen Sie die Anzahl des Aufblinkens mit. Der zweistellige Fehlercode wird in zwei Gruppen von Blinkimpulsen, getrennt von einer 0,7s Pause, dargestellt.
  Die Anzeige des Fehlercodes wird mehrere Male wiederholt.

Siehe ***TABELLE DER FEHLERCODES***.

3 - FEHLERSUCHE :

Das Chassis ICC20 besteht im Wesentlichen aus zwei Platinen. Zuerst sollte festgestellt werden, welche Platine defekt ist und ob eine der Schutzschaltungen abgesprochen hat.

ÜBERPRÜFEN SIE ZUERST DEN KORREKTEN SITZ DIE BEIDEN PLATINEN VERBINDENDEN **FLACHBANDKABEL**

a - Das Chassis arbeitet ganz oder teilweise :
- Beobachten Sie die LED benutzen Sie die die Fehlersuchmethoden 1 und 2.
- Schauen Sie auch bei "***Symptom*** " nach ähnlichen Fehlererscheinungen nach.

b - Das Chassis geht ständig oder periodisch in Schutzzustand :
b.1- Beobachten Sie das Verhalten der LED (Blinken rot, ständig orange gefolgt von Blinken usw.)
-Wählen Sie die entsprechende Box: " ***Fehlersuche über das Verhalten der LED*** ".

Siehe Tabelle der Fehlercodes.
Beispiel :
Das Gerät macht drei Startversuche ehe es in Standby geht :

- Fehlercode 25 : +5V nicht verfügbar
- Fehlercode 35 : +5V and +8V nicht verfügbar.
- Fehlercode 37 : Unerwarteter Zustand auf der NMI (POWER FAIL)-Leitung

Dieses deutet auf ein Fehler auf der "***NETZTEIL- UND ABLENKPLATINE*** " hin.
Bitte beachten Sie :
Diese Informationen sind nur Hinweise ! Die Anzeige der Fehlercodes und die Reaktion des Gerätes ist stark davonabhängig, wie der Fehler beschaffen ist und dem Zeitpunkt, wann er festgestellt wird. (Betriebszustand des Gerätes).

Wird ein Fehler während der Warmstarroutine dreimal festgestellt, wird im EEPROM zusätzlich zum Code der Fehlerursache auch der Fehlercode 27 mit abgespeichert

b.2- Die LED bleibt aus:
Überprüfen Sie zuerst die "***NETZTEIL- UND ABLENKPLATINE*** ".

ALLGEMEINE INFORMATIONEN - VERHALTEN DER LED

Blinken der LED

Anzeige eines Fehlercodes
Die Fehlercodes werden durch ein Blinken der roten

Zählen Sie die Anzahl der Blinkimpulse: der Fehlercode wird in zwei Gruppenn, getrennt von einer 0,7s Pause übertragen. Zwischen der Anzeige von zwei Fehlercodes ist eine Pause von 1.7 s.

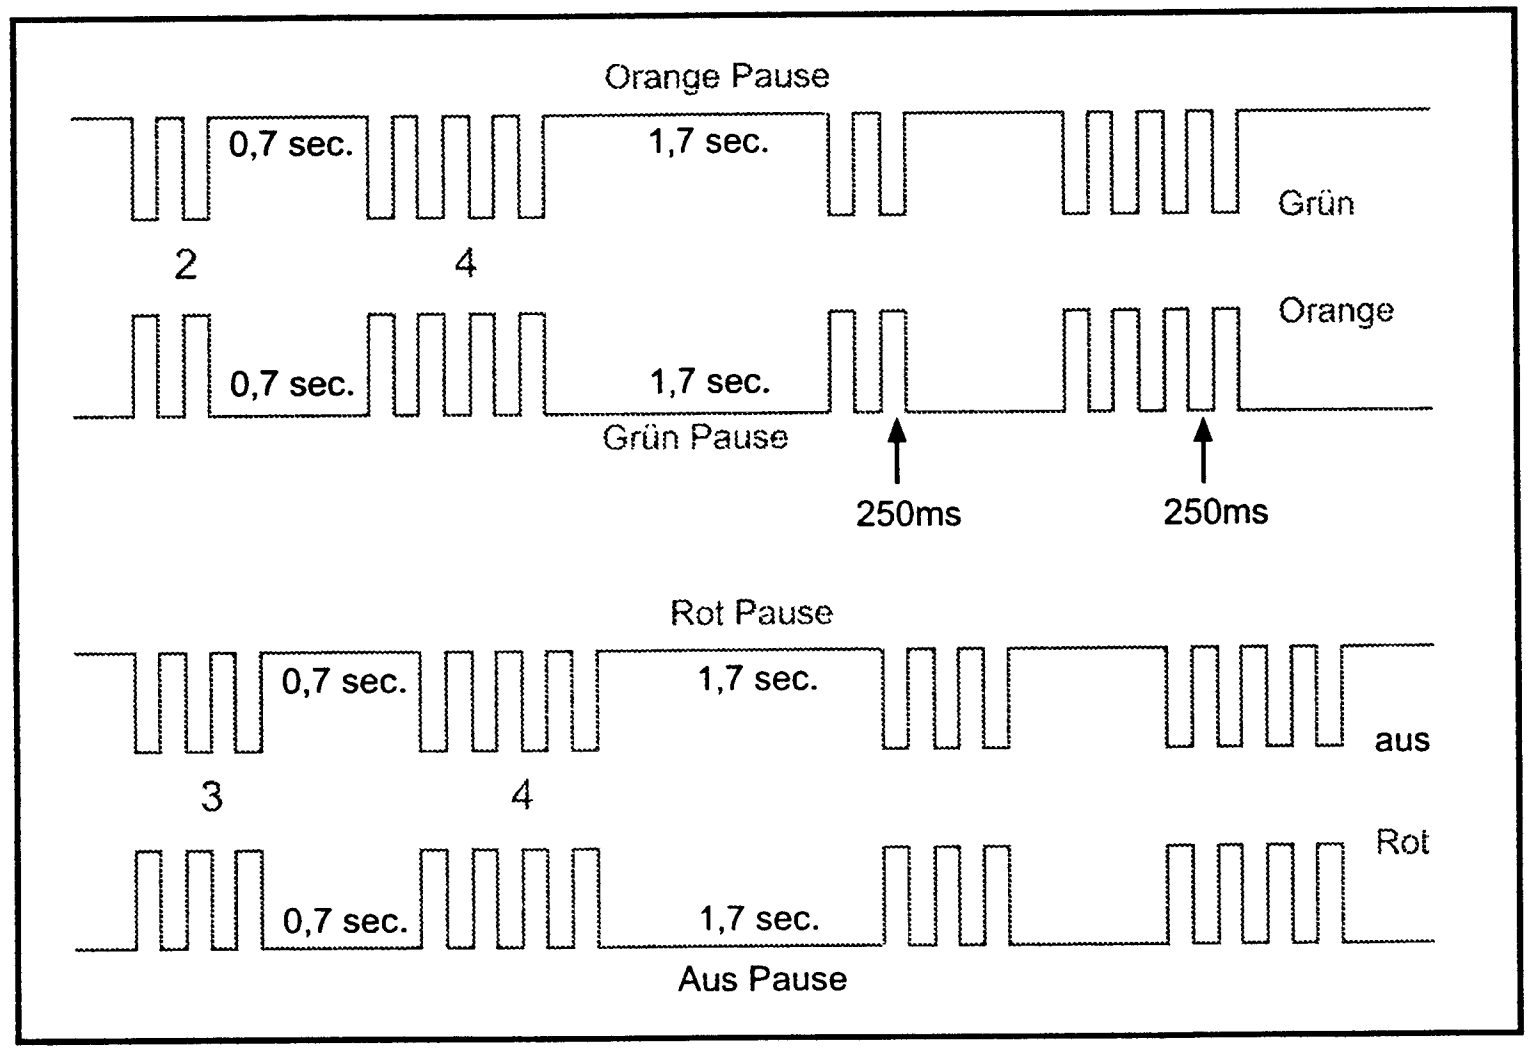

CODES	FEHLER
10	Kindersicherung aktiv (Kein Fehlercode!)
11	Weckerfunktion aktiv (Kein Fehlercode !)
12	Erster Audio- MSP antwortet nicht
13	(Audio- DPL antwortet nicht)
14	TDA9330H antwortet nicht (oder +8V fehlen)
15	TDA9321 antwortet nicht (oder +8V fehlen)
16	DMU0 antwortet nicht
17	SAA4956 antwortet nicht
18	TDA9178 antwortet nicht
19	(Tuner antwortet nicht)
20	(I2C Bus ist blockiert)
21	I2C Bus Data ist immer L
23	I2C Bus Clock ist immer L
25	Geschaltete 5V nicht vorhanden
26	Bildrohr ist nicht rechtzeitig aufgeheizt
27	Schutzschaltung hat dreimal ausgelöst (wird nur im Service- Mode angezeigt)
28	Vertikal- Schutzschaltung ist aktiv
29	Horizontal- Schutzschaltung ist aktiv
31	Softwarefehler (nur für Produktionsstätten)
32	Softwarefehler (nur für Produktionsstätten)
34	NVM (EEPROM) antwortet nicht
35	5V und 8V nicht vorhanden (Netzspannung zu niedrig/ Power- Fail- Schaltung)
36	Softwarefehler (nur für Produktionsstätten)
37	Unerwarteter Zustand auf NMI- Leitung (z. B. durch Überschlag im Bildrohr)
38	Softwarefehler (nur für Produktionsstätten)
39	I2C Bus Data- Leitung nicht reaktivierbar
41	PDD Flag TDA9178 zu geringe Betriebsspannung
42	POR Flag TDA9321 zu geringe Betriebsspannung
43	POR Flag TDA9330H zu geringe Betriebsspannung
44	NRF Flag TDA9330H Referenz- PLL (Clock) nicht eingerastet
45	FLS Flag TDA9330H Pin 5 ('FLASH')> 2V, Ablenkschutzschaltung aktiv
46	NHF Flag TDA9330H Pin 13 H- Rückschlagimpuls fehlt
47	NDF Flag TDA9330H Pin 9 VERTICAL_ GUARD fehlt oder dauert zu lange
48	XPR Flag TDA9330H Pin 4 Überspannung (> 4V)
49	PSX Flag TDA9321H Quarz (Clock) nicht vorhanden

ÜBERPRÜFUNG SIGNAL-PLATINE

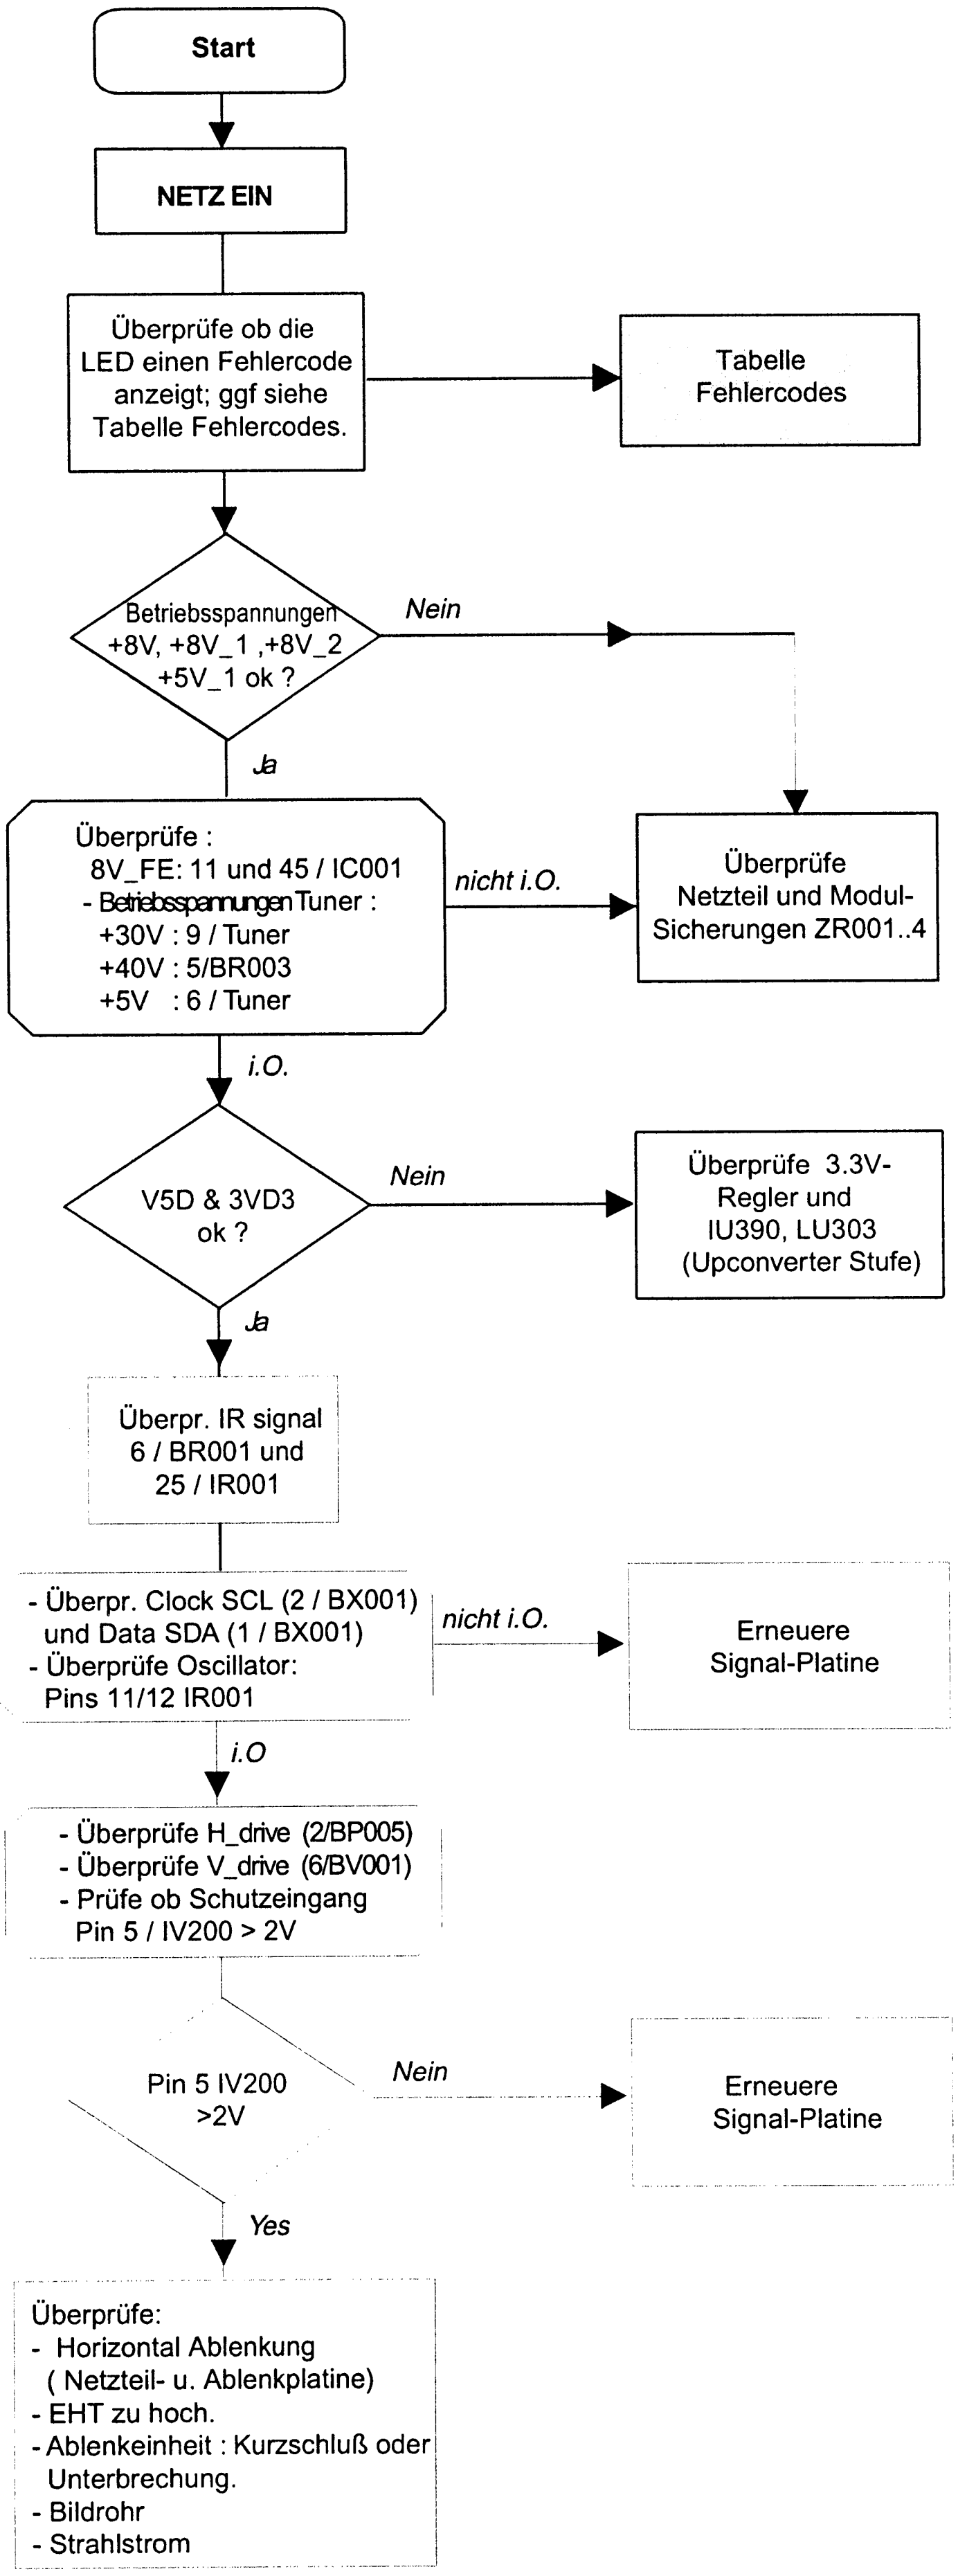
Start
NETZ EIN
Überprüfe ob die LED einen Fehlercode anzeigt; ggf siehe Tabelle Fehlercodes.
Tabelle Fehlercodes
Betriebsspannungen +8V, +8V_1 ,+8V_2 +5V_1 ok ?
Nein
Ja
Überprüfe :
8V_FE: 11 und 45 / IC001
- Betriebsspannungen Tuner :
+30V : 9 / Tuner
+40V : 5/BR003
+5V : 6 / Tuner
nicht i.O.
Überprüfe Netzteil und Modul-Sicherungen ZR001..4
i.O.
V5D & 3VD3 ok ?
Nein
Überprüfe 3.3V-Regler und IU390, LU303 (Upconverter Stufe)
Ja
Überpr. IR signal 6 / BR001 und 25 / IR001
- Überpr. Clock SCL (2 / BX001) und Data SDA (1 / BX001)
- Überprüfe Oscillator: Pins 11/12 IR001
nicht i.O.
Erneuere Signal-Platine
i.O
- Überprüfe H_drive (2/BP005)
- Überprüfe V_drive (6/BV001)
- Prüfe ob Schutzeingang Pin 5 / IV200 > 2V
Pin 5 IV200 >2V
Nein
Erneuere Signal-Platine
Yes
Überprüfe:
- Horizontal Ablenkung (Netzteil- u. Ablenkplatine)
- EHT zu hoch.
- Ablenkeinheit : Kurzschluß oder Unterbrechung.
- Bildrohr
- Strahlstrom

WARNING : *Before servicing this chassis read the safety recommendations.*

ATTENTION : *Avant toute intervention sur ce châssis, lire les recommandations de sécurité.*

ACHTUNG : *Vor jedem Eingriff auf diesem Chassis, die Sicherheitsvorschriften lesen.*

ATTENZIONE : *Prima di intervenire sullo chassis, leggere le norme di sicurezza.*

IMPORTANTE : *Antes de cualquier intervención, leer las recomendaciones de seguridad.*

Do not disconnect modules when they are enregized! Repairs on power supply section are to be carried out only with isolating transformer.
Ne pas retirer les modules lorsqu'ils sont sous tension. N'effectuer les travaux de maintenance sur la partie reliée au secteur (Switch Mode) qu'au travers d'un transformateur d'isolement.
Module nicht bei eingeschaltetem Gerät entfernen ! Servicearbeiten am Netzteil nur unter Verwendung eines Regeltrenntrafos durchführen.
Non scollegare i moduli quando sono alimentati! Intraprendere riparazioni sulla sezione alimentatore solo con trasformatore isolante.
No desconectar los módulos cuando están activados. Las reparaciones en la sección de alimentación de energía deben ser ejecutadas solamente con un transformador de separación.

⚠ Indicates critical safety components, and identical components should be used for replacement. Only then can the operational safety be garanteed.
Le remplacement des éléments de sécurité (repérés avec le symbole ⚠) par des composants non homologués selon la Norme CEI 65 entraine la non-conformité de l'appareil. Dans ce cas, la responsabilité du fabricant n'est plus engagée.
Wenn Sicherheitsteile (mit dem Symbol⚠ gekennzeichnet) nicht durch Original - Ersatzteile ersetzt werden, erlischt die Haftung des Herstellers.
La sostituzione degli elementi di sicurezza (marcati con il segno⚠) con componenti non omologati secondo la norma CEI 65 comporta la non conformitá dell'apparecchio. In tal caso è "esclusa la responsabilità " del costruttore.
La sustitución de elementos de seguridad (marcados con el simbolo ⚠) por componentes no homologados segun la norma CEI 65, provoca la no conformidad del aparato. En ese caso, el fabricante cesa de ser responsable.

Note : During measurements in the power supply unit, use the primary power unit ground (Emit. TP060).

Attention : Mesures dans le bloc alimentation. Utiliser la masse du bloc alimentation (Emet. TP060).

Achtung : Bei Messungen im Primärnetzteil. Primärnetzteilmasse verwenden (Emit. TP060).

Attentionze : Misure nell'alimentatore primario. Usare massa alimentazione primario (Emet. TP060).

Cuidado : Medida en el bloque de alimentación. Utilizar la masa del bloque de alimentación (Emet. TP060).

MEASUREMENT CONDITIONS - CONDITIONS DE MESURES - MESSBEDINGUNGEN CONDIZIONI DI MISURA - CONDICIONES DE MEDIDAS

RECEIVER :
Bar test pattern : PAL, I standard, 100% white.

- On UHF, input level 1 mV
- Via the scart socket, input level 1 Vpp

Colour, contrast and brightness at mid-position, sound at minimum.
Programme selected : PR 01.
DC voltages measured between the point and earth using a digital voltmeter.

RECEPTEUR :
Mire de barres : SECAM, Norm L, Blanc 100%.

- En UHF, niveau d'entrée 1 mV
- Par la prise Péritélévision, niveau d'entrée 1Vcc.

Couleur, contraste, lumière à mi-course, son minimum.
Programme affecté PR 01.
Tensions continues relevées par rapport à la masse avec un voltmètre numérique.

EMPFÄNGER :
Farbbalken : PAL, Norm G, Weiss 100%

- Bei UHF Eingangspegel 1 mV.
- Über die Scartbuchse : Eingangspegel 1 Vss.

Farbe, Kontrast, Helligkeit in der Mitte des Bereichs, Ton auf Minimum.
Zugeordnetes Programm PR 01.
Gleichspannungen mit einem digitalen Voltmeter zur Masse gemessen.

RICEVITORE :
Monoscopio per barre : PAL, norma G. bianco 100%.

- In UHF, livello d'entrata 1 mV,
- Per la presa SCART, livello d'entrata 1 Vcc.

Colore, Contrasto, Luce a metä corsa, Suono minimo.
Programma designato PR 01.
Tensioni continue rilevate rispetto alla massa con un voltametro numerico.

RECEPTOR :
Mira de barras : PAL, norma G, blanco 100%.

- En UHF, nivel de entrada 1 mV,
- Por la toma Peritelevision, nivel de entrada 1 Vpp.

Color, Contraste, luz a mitad de carrera, Sonido minimo.
Programa afectado PR 01.
Tensiones continuas marcadas en relacion a la masa con un voltimetro digital.



CLASS 1 LASER PRODUCT
APPAREIL A LASER DE CLASSE 1
LASER KLASSE 1
APARATO CON LASER DE CLASE 1
APPARECCHIO CON LASER DI CLASSE 1

DANGER :	**Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.**
ATTENTION :	**Le rayon laser est invisible. Eviter l'exposition directe lors de la maintenance.**
VORSICHT BEI REPARATUREN :	**Bei geöffneter Schublade und Defekt der Sicherheits - vorrichtungen besteht die Gefahr unsichtbaren Laserlichts. Niemals direkt in den Laserstrahl sehen.**
ATTENZIONE :	**Il raggio laser è invisibile. Evitare l'esposizione diretta durante la manutenzione.**
IMPORTANTE :	**El rayo laser es invisible. Evitar la exposición directa en el momento del mantenimiento.**

PREVENTION OF ELECTRO STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE DEVICES (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity.
Such components commonly are called Electrostatically Sensitive Devices (ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ESD devices.
4. Use only an anti-static solder removal devices. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESD devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.
6. Do not remove a replacement ESD device from its protective package until immediately before your are ready to install it. (Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).
7. Immediately before removing the protective materials from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
   CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are imporant for safety, these part are marked by ⚠ symbol on the schematic circuit diagrams and replacement part list. It is essential that these safety critical components are replaced with the manufacture's specified parts to prevent electric shock, fire, or other hazards. do not attempt to modify the original design without permission of the manufacturer.

DVD PLAYER REMOVAL - DEPOSE DU LECTEUR DVD - AUSBAU DES DVD-SPIELERS RIMOZIONE DEL DVD - RETIRADA DEL REPRODUCTOR DVD

GB

1 - Carefully remove the connexion cable between the TV chassis and the DVD player
2 - Disengage the TV chassis.
3 - Remove the screws (1) and lift off the DVD player (2) (Fig.1).

F

1 - Déconnecter les cables de liaison entre le chassis TV et le lecteur de DVD player.
2 - Dégager le TV chassis.
3 - Retirer les trois vis de fixation (1) et déposer le lecteur de DVD (2) (Fig.1).

D

1 - Entfernen Sie vorsichtig das Verbindungskabel zwischen dem TV-Chassis und dem DVD-Player
2 - Nehmen Sie das TV-Chassis aus dem Gehäuse.
3 - Entfernen Sie die Schrauben (1) und heben Sie den DVD-Spieler heraus (2) (Fig.1).

I

1 - Rimuovere con cura il cavo di connessione tra il telaio e il DVD.
2 - Sfilare il telaio TV.
3 - Tolgliere le viti (1) e estrarre il DVD (Fig.1).

E

1 - Retirar con cuidado el cable de conexión entre el chasis TV y el reproductor DVD.
2 - Desenganchar el chasis TV.
3 - Retirar los tornillos (1) y leventar verticalmente el reproductor DVD (2) (Fig.1).

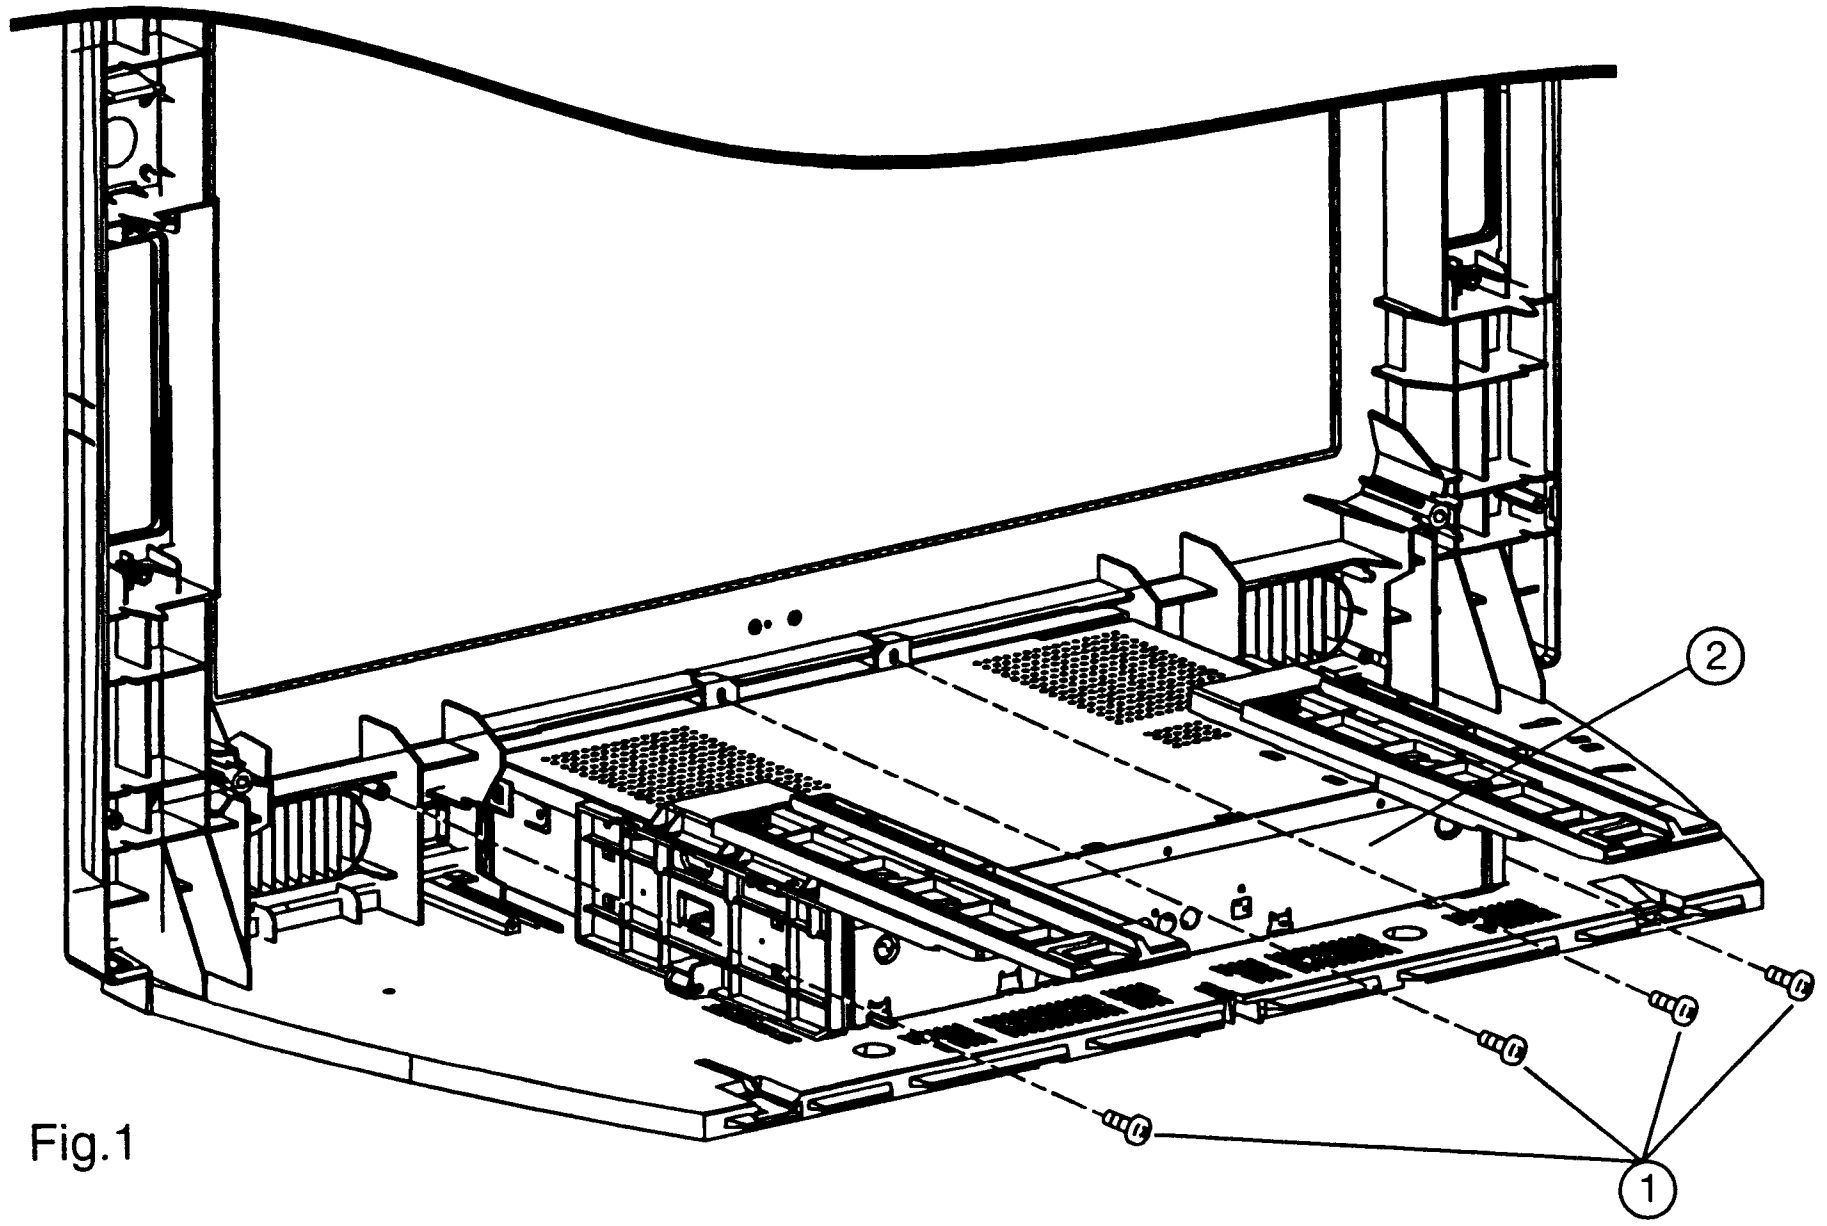

Fig.1

ADJUSTMENT PROCEDURES

Note: for the maintenance, it is possible to activate the DVD module as a standalone unit, see page 5.

1. Handling the optical pickup

The laser diode used in the optical pickup may break down due to potential differences caused by electricity produced by clothing or the human body, care should therefore be taken to prevent electrostatic discharge whilst repairing the optical pickup.

The following method is recommended.

1) Place a conductive sheet on the work bench (The black sheet used for wrapping repair parts.)
2) Place the set on the conductive sheet so that the chassis is grounded to the sheet.
3) Place your hands on the conductive sheet (doing this gives them the same ground as the sheet.
4) Remove the optical pickup block
5) Perform work on top of the conductive sheet. Be careful not to let your clothes or any other static sources to touch the unit.

* Grounding the Human Body, use an antistatic wrist strap to discharge static electricity from your body.

* Grounding the work place, use either an antistatic matt or a sheet of steel on the area where the optical pickup is to be placed and ground the matt/sheet.

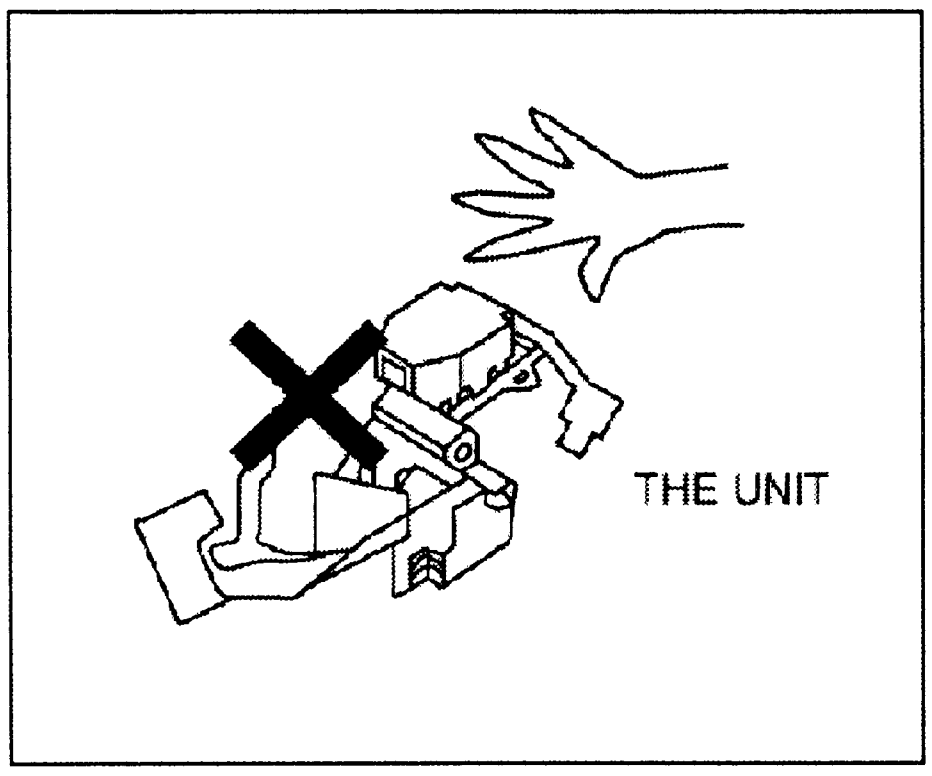

Fig. 1-1

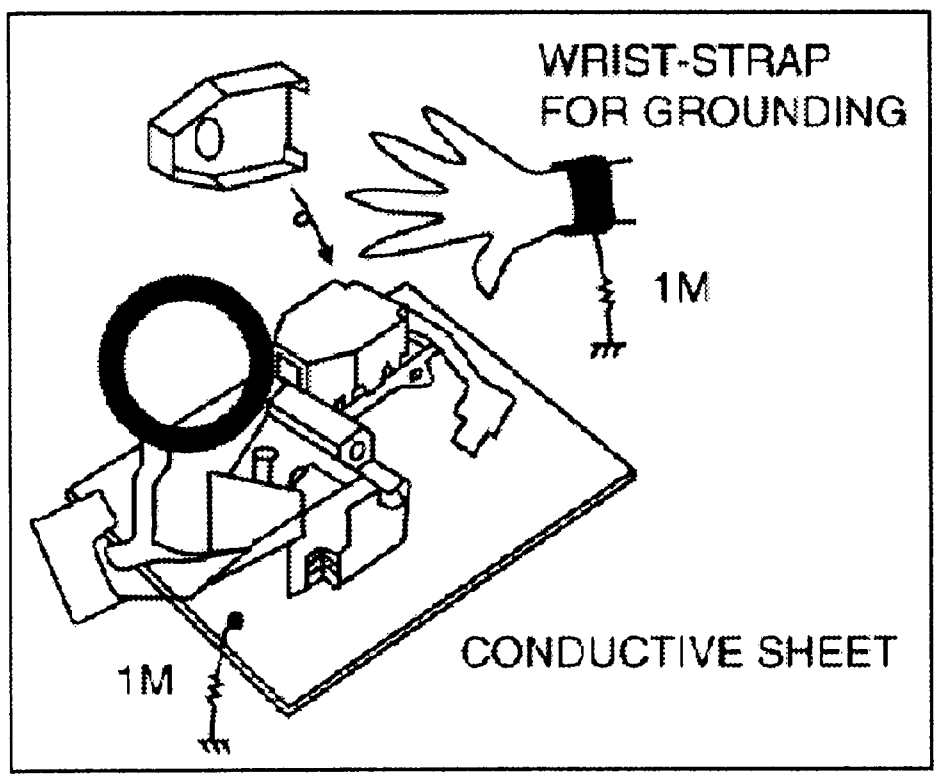

Fig. 1-2

6) Short the short terminal Ⓐ on the PCB, which is in-side the Pickup Assembly, before deconnecting the flexible cable Ⓑ for replacing the Pickup. (The short terminal is shorted when the Pickup Assembly is being lifted or moved.)

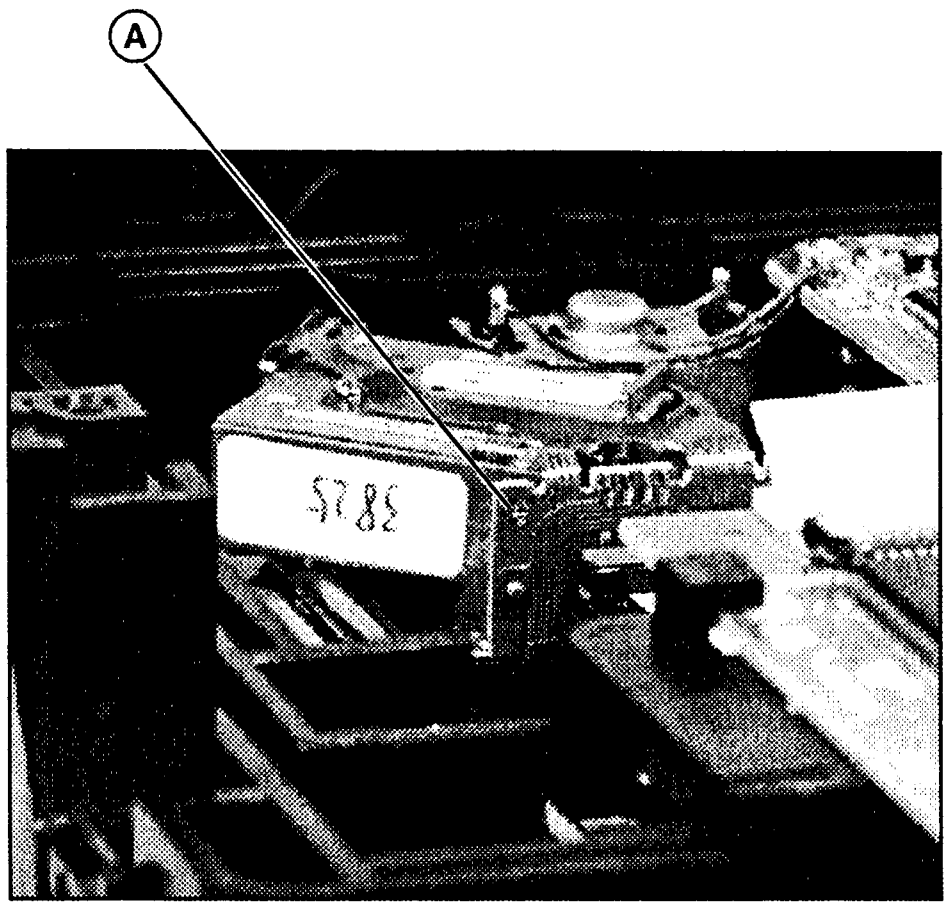

Fig. 1-3

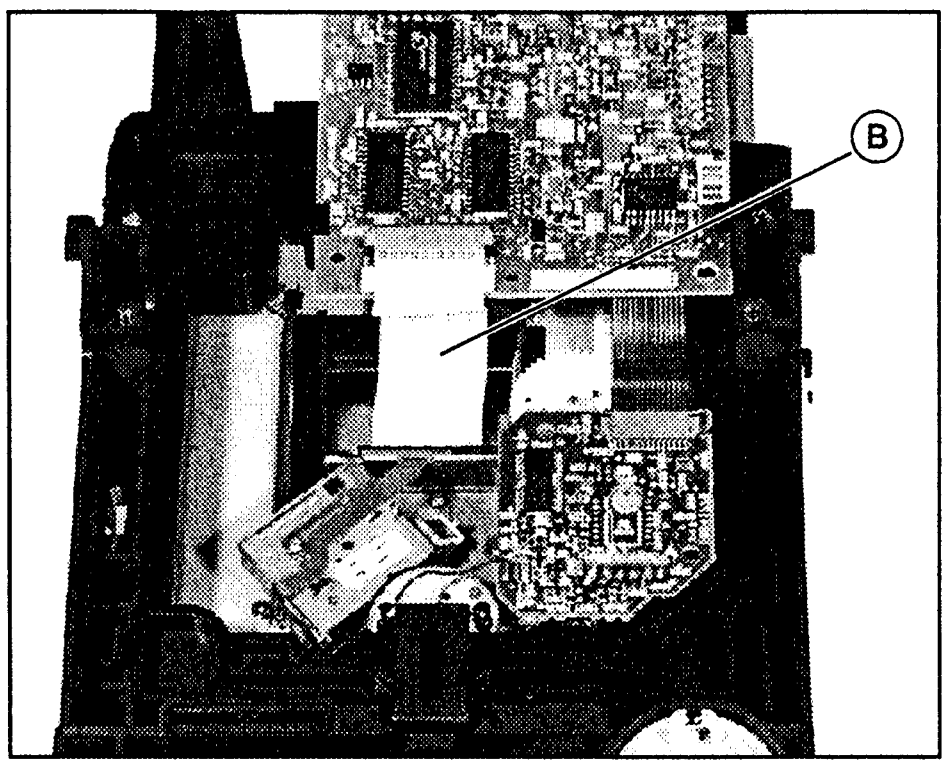

Fig. 1-4

(7) After replacing the Pickup, open the short terminal on the PCB.

2. Disassembly and assembly

Note : Reassemble in reverse order.

2.1 Removing the top cabinet

1) Remove the 3 screws of the right bracket. Pull the clip (01) in the direction of arrow Ⓒ, then push the bracket in the direction of arrow Ⓓ.
2) Perform the same operation for the left bracket.
3) Remove the screw on the back of the top cabinet
4) Lift the top cabinet up.

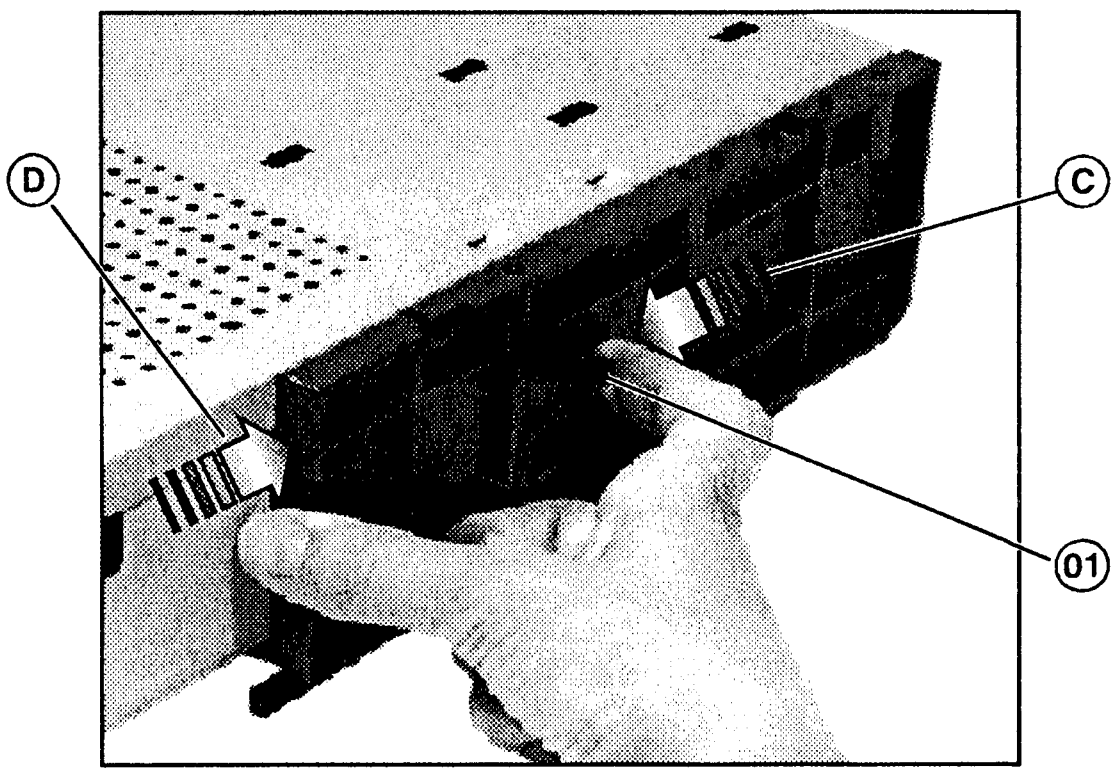

fig 2.1

2-2 Removing the door-tray

1) Switch the power on and open the tray.
2) Remove the door-tray.
3) Close tray and switch the power off.

Note : If the tray cannot be opened, insert a screw driver into the plastic slot accessible through emergency hole ② (as shown below) and push it in the direction of arrow Ⓔ Open the tray manually.

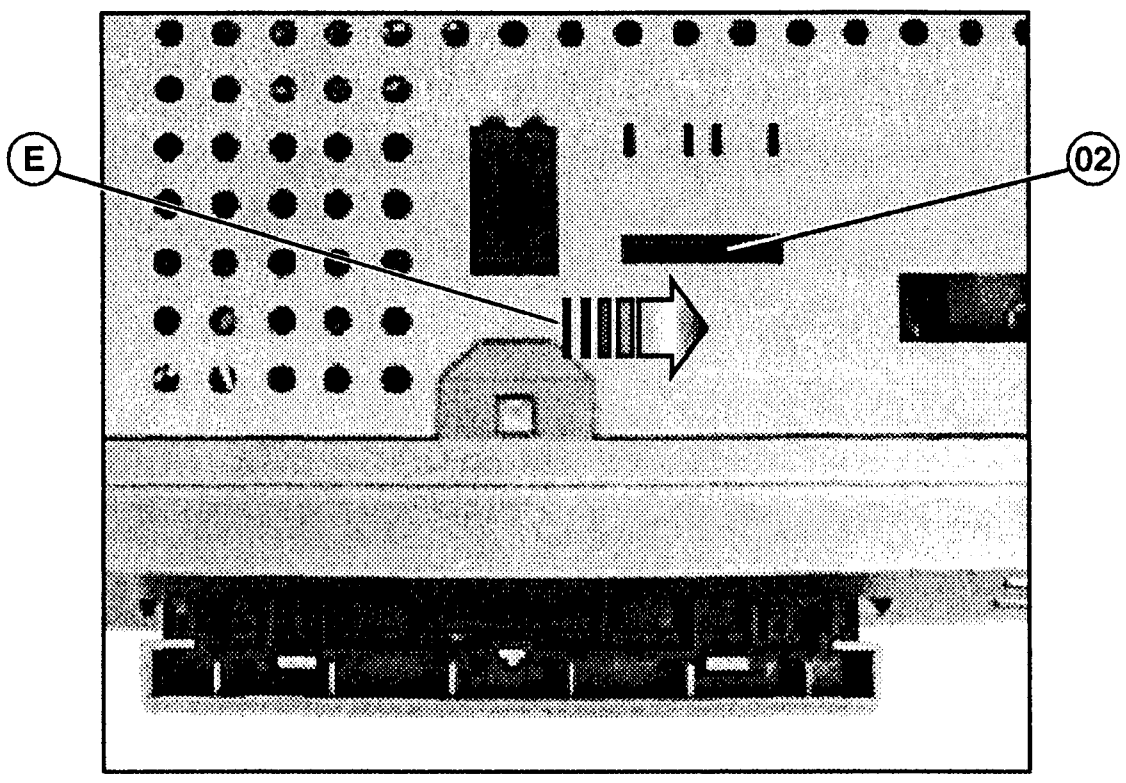

fig 2.2

2-3 Removing the front panel

1) Disengage the 3 clips located under the set and the 2 clips located on both sides of the front panel.
2) Remove connector BK225 between the main board and KDB1.
3) Dismount the Front panel.

2-4 Removing the tray

1) Remove two screws ③.
2) Disengage 4 clips ④.
3) Remove cover ⑤.
4) Open and pull the tray.

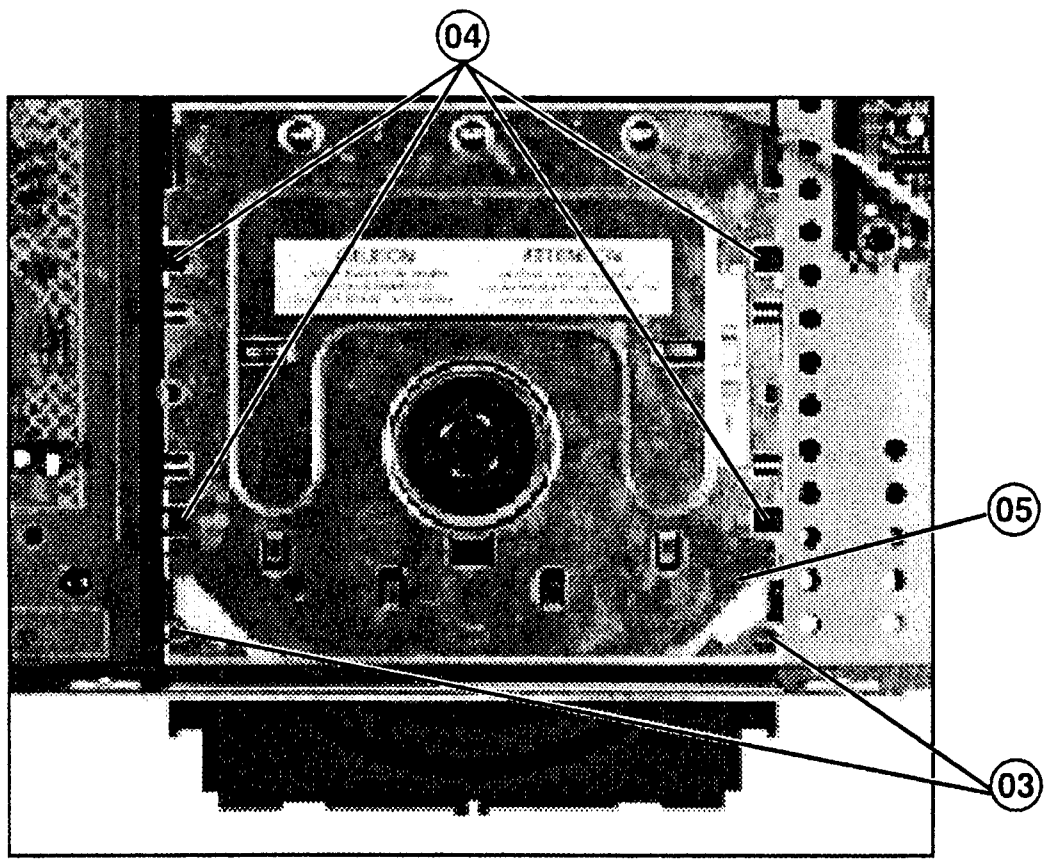

fig 2.4.1

2-5 Removing the mechanical assembly

1) Disconnect BU702 ⑥ and ground cable ⑦.

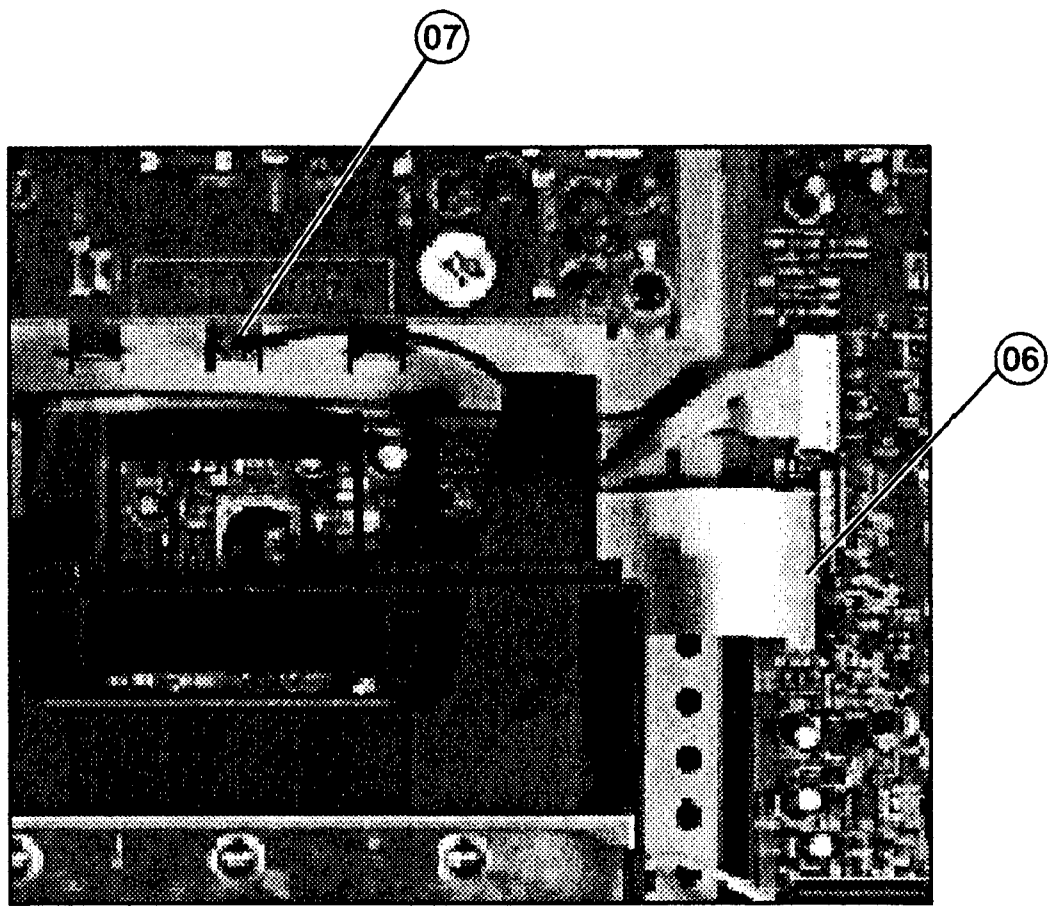

fig 2.5.1

2) Remove two screws ⑧.
3) Disengage clip ⑨.

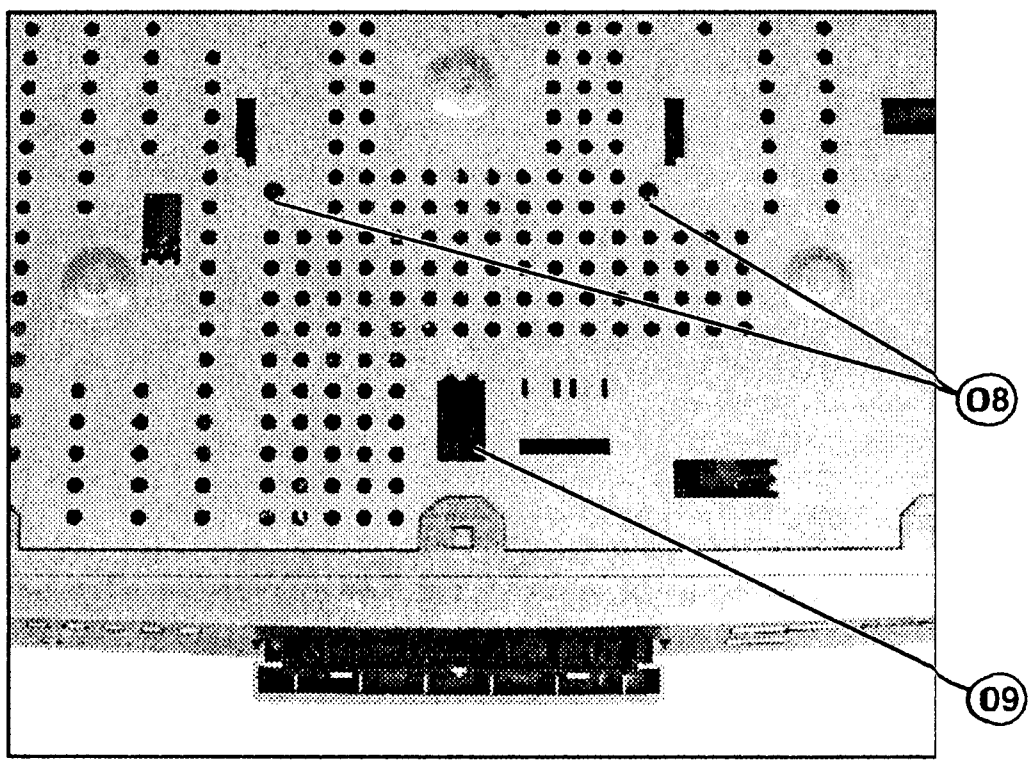

fig 2.5.2

4) Disengage 2 clips ⑩.

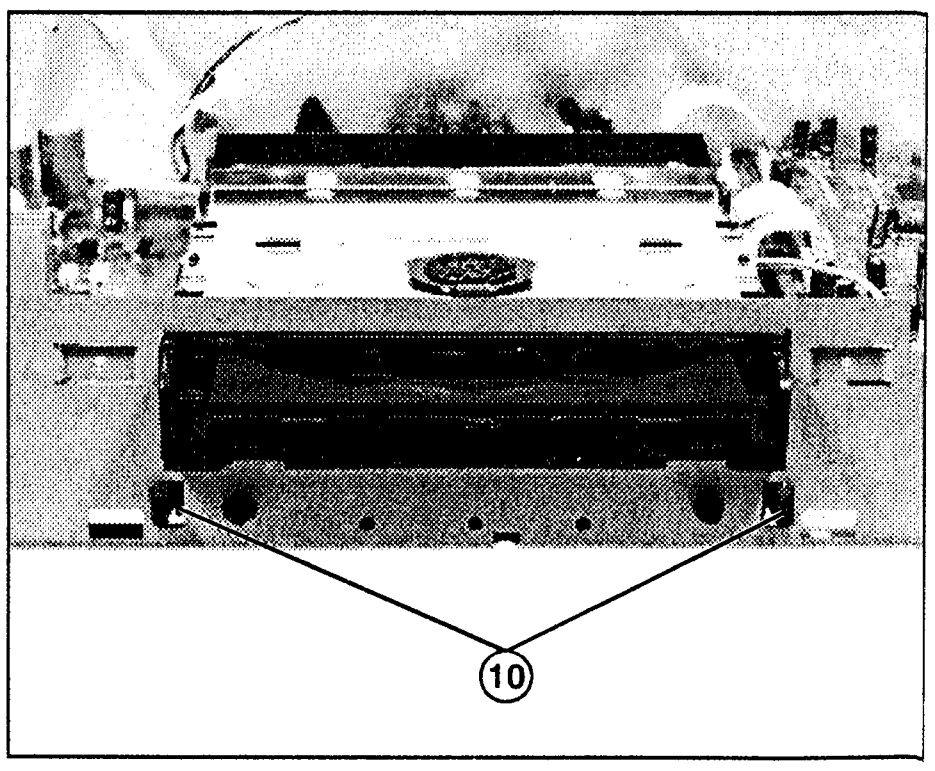

fig 2.5.3

5) Push the mechanical assembly backward and lift it up.

1) Connect BP301 to the mains (220Vac),
2) Connect HP305 (three wires cable with female connector from DVD power board) to HK002 (Three wires cable with male connector from KDB2 board) to supply 5V and GND to the KDB board (see diagram below),
3) To activate the DVD module as a standalone unit, press on the front keyboard, the three keys "MENU", "STOP" and "OK", simultaneously during at least 5 seconds. Then the DVD module can be controlled by the front keyboard or the RCU.

Note: the step 3 must be repeated each time the mains is switched off and switched on.

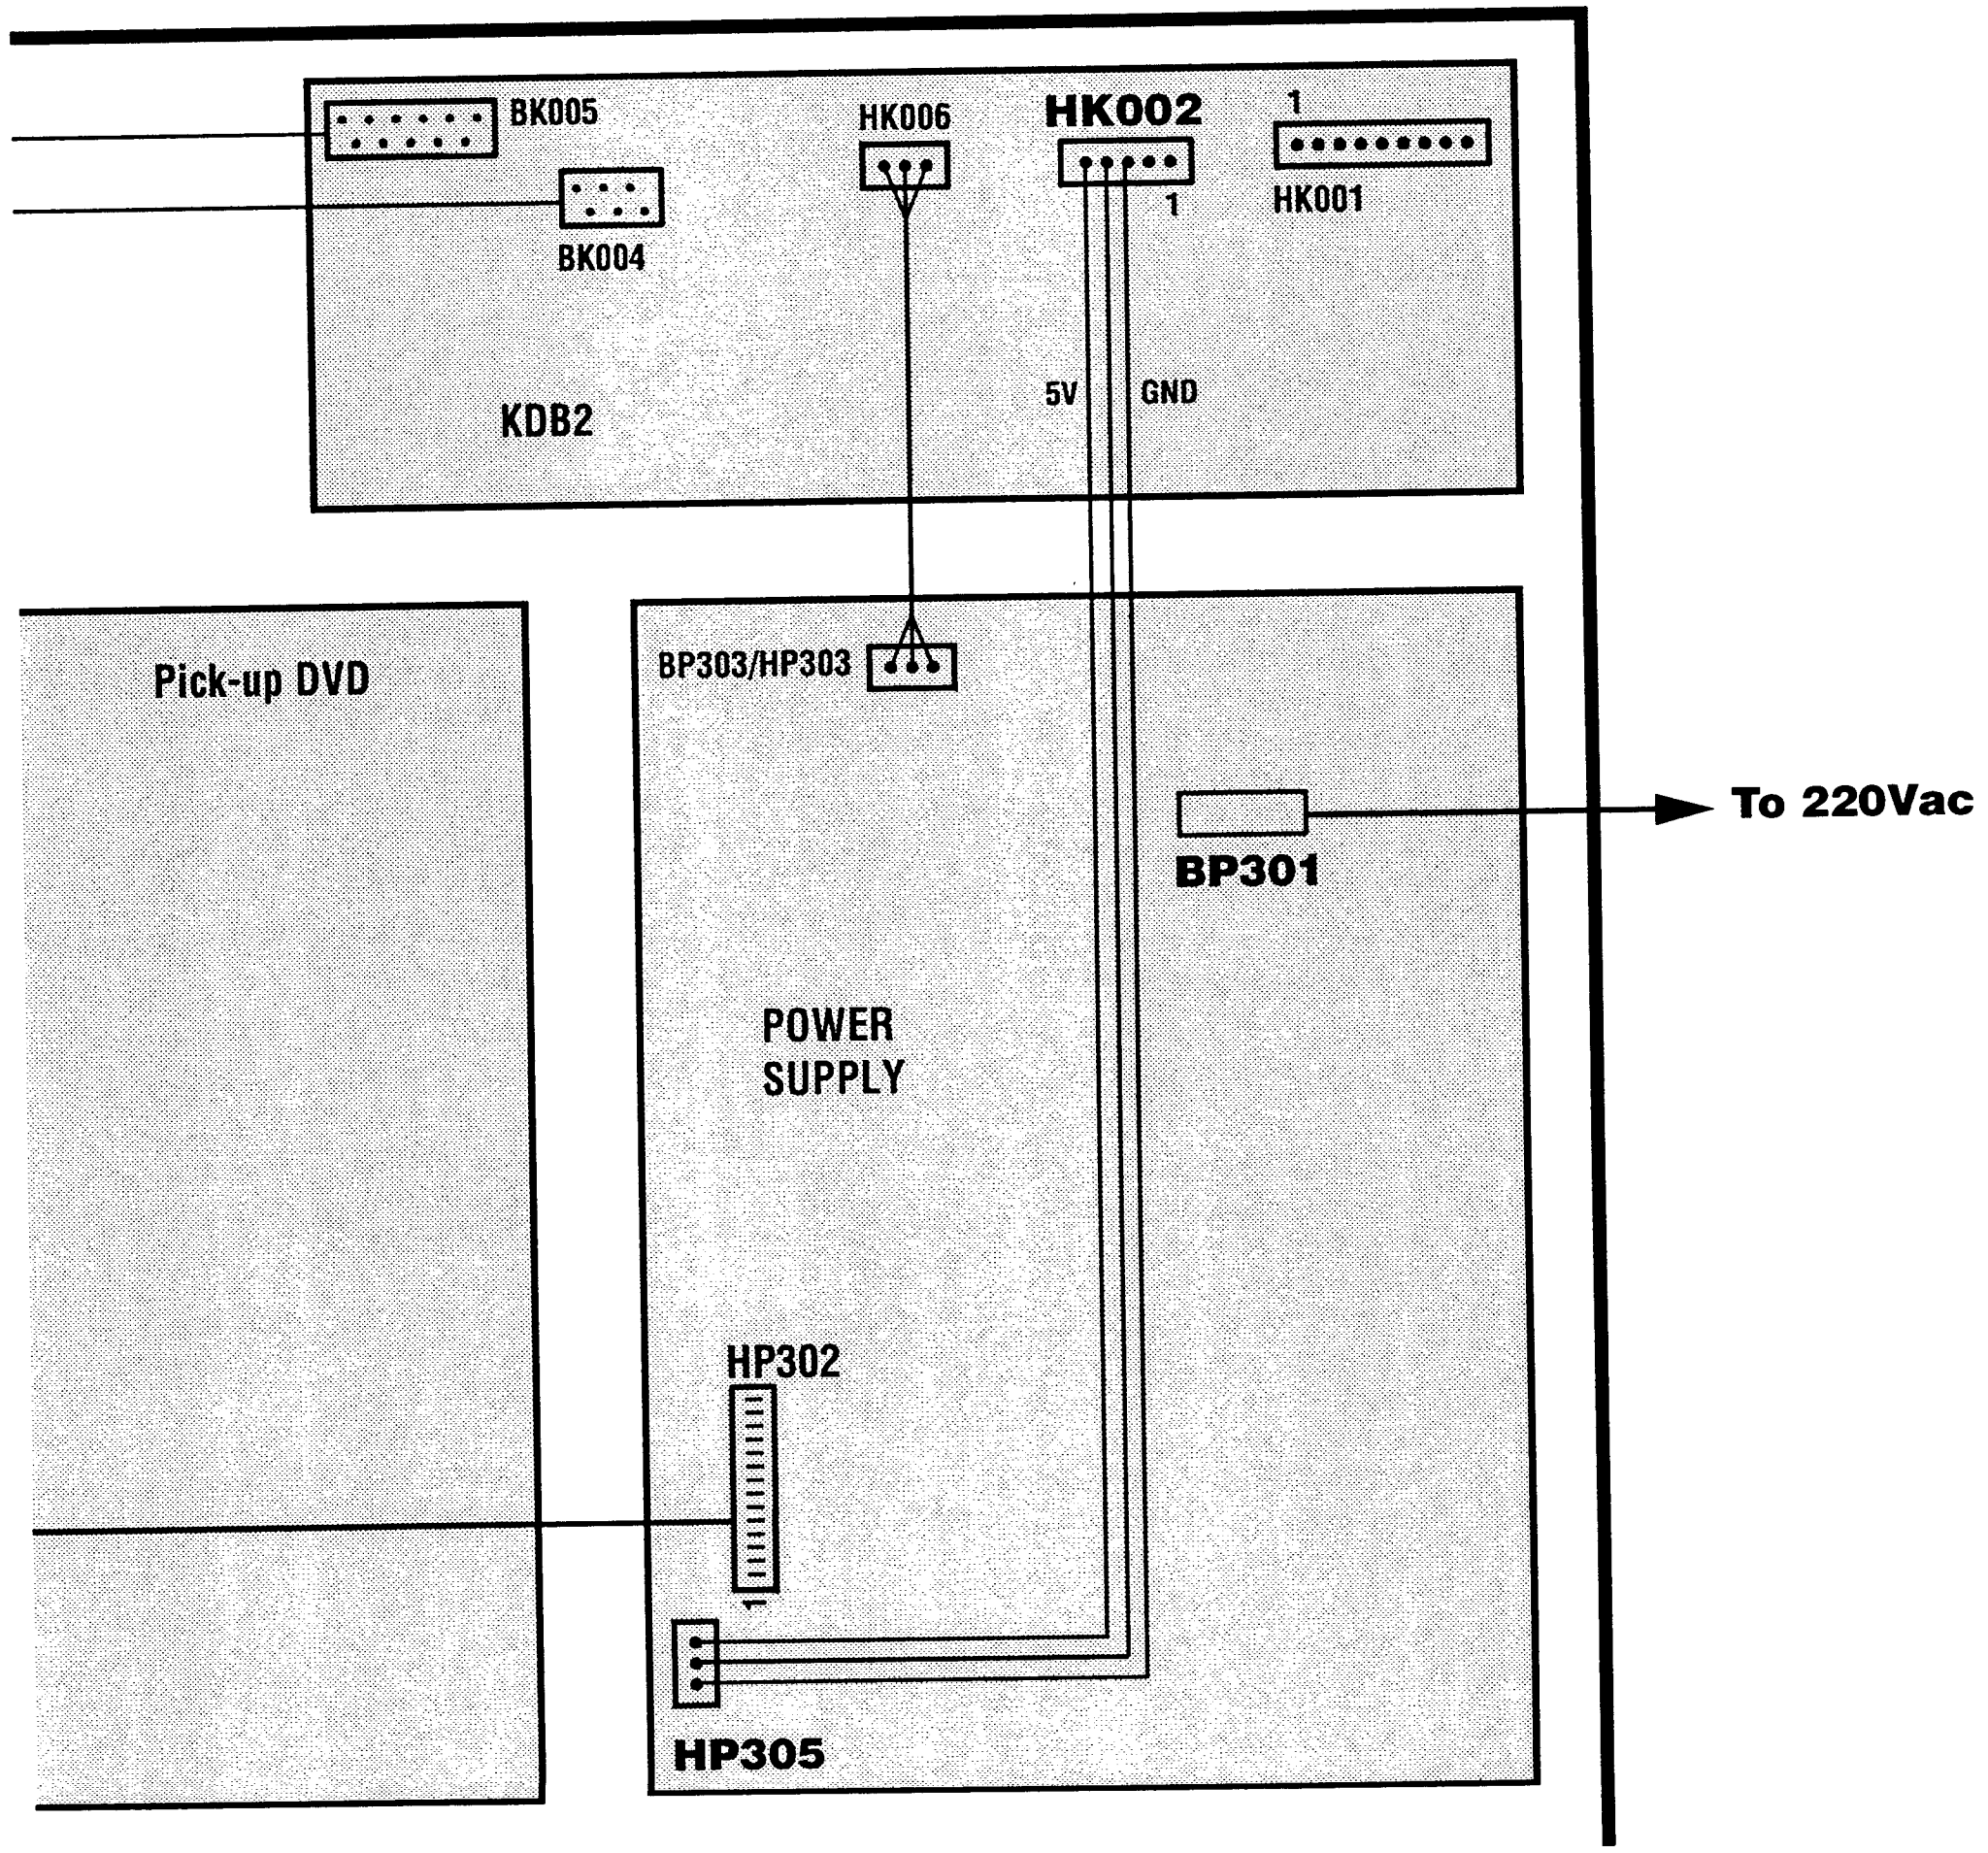
BK005
HK006
HK002
1
HK001
1
BK004
KDB2
5V
GND
Pick-up DVD
BP303/HP303
To 220Vac
BP301
POWER SUPPLY
HP302
HP305

RUNNING POWER SUPPLY IN STAND ALONE CONDITION

⚠ All of the following tests must be carried out with the MAINS switched OFF.

Any operations carried out with the MAINS switched ON may lead to components being destroyed.

With the following configuration it is possible to start the power supply in stand alone function.

- Disconnect mains.
- Remove connector BP005 and BL111.
- Make a connection between pin 18 (PO) of BP005 to GND .
- Connect pin 21 (CNT2_20V) of BP005 to cathode of DP120 (+20V).
- Connect a resistor 12R0/5W between +5V and GND.
- Connect a resistor 18R0/5W between +8V and GND.
- Connect a resistor 4k0/10W between USYS and GND.

ONLY NECESSARY IF NO CRT BOARD CONNECTED

↓

- Connect mains .
- Switch «ON».
- Remove connection between pin 18 (PO) of BP005 and GND.

↓

- Measure the following voltages :

Voltage	Value
Usyst (C / DP110) (G/7)*	185V +/-10V
+20V (C / DP120) (G/5)*	25.5V =/- 1V
+10V (C / DP140) (G/6)*	11.5V +/-0.6V
+8V (C / DP194) (H/1)*	8.15V +/-0.25V
+6V (C / DP150) (F/5)*	6.1V +/-0.2V
+5V (A / DP152) (H/3)*	5.1V +/-0.15V
+UA (C / DP130) (F/9)*	22V +/2V
-UA (A / DP135 (J/8)*	-20V+/-2V

(*) Components location reference

NOTE : Don't forget to remove all additionnal loads, the connection between pin 21 of BP005 and +20V and reconnect BP005, BL111 after stand alone function.

GENERAL INFORMATION

METHODOLOGY

1 - SWITCHING "ON" THE TV:

- Observe the behaviour of the two-coloured LED: note the various stages and compare them with the normal cycle of events.

By watching this, the point at which the problem arises and the part of the circuit which needs to be investigated cab be identified.

2 - TROUBLESHOOTING PROCEDURE : LED BEHAVIOUR :

In certain cases a flashing LED signifies the transmission of an error code message:

LED flashes : Message transmission.
- Count the flashes : coded into bursts separated by a pause of 0.7s and repeated several times. répétées plusieurs fois.

See the ***ERROR CODE TABLE***.

3 - FAULT FINDING :

The ICC20 chassis being equiped with two main boards it is necessary to identify in a first time the defective board and what security is available.

After the check of the ***GOOD CONNECTION BETWEEN THE TWO MAIN BOARDS***

- Operation stages 1 and 2:

a - The chassis set operates fully or partially:
- Use LED message observation fault finding methods 1 and 2.

see also the fault related to fault finding by "***Symptom*** ".

b **- The chassis set goes into permanent or cyclical security mode** :
b.1- **Observe LED behaviour** (flashing red, stable orange followed by flashing, etc...)
Select the relevant box in the column : " ***LED behavior fault finding*** ".

See the Error Code Table information.
For example :
Three attemps to switch on the power supply before standby :

- Error code 25 : +5V not available
- Error Code 35 : +5V and +8V not available.
- error Code 37 : No correct level on the NMI (POWER FAIL) line

indicate a problem of "***POWER / SCAN BOARD*** ".
Please Note :
These information give only an indication because, they don't display all the cases : since various fault generates the same error code or signale a secondary effect relative to the "***SMALL SIGNAL BOARD***" for example.

In the service mode, it is possible to consult a record of the latest error codes which have occured in the television set.

b.2- **LED stays off** :
Make beforehand the diagnosis of the "***POWER / SCAN BOARD*** ".

GENERAL INFORMATION - LED BEHAVIOUR

LED FLASHES

Message transmission.
The Error codes are signalled by the RED Standby LED.

Count number of flashes : error code is signalled in two burst separated by a 0.7 s pause and repeated several times.
There is 1.7 s between each code sequence .

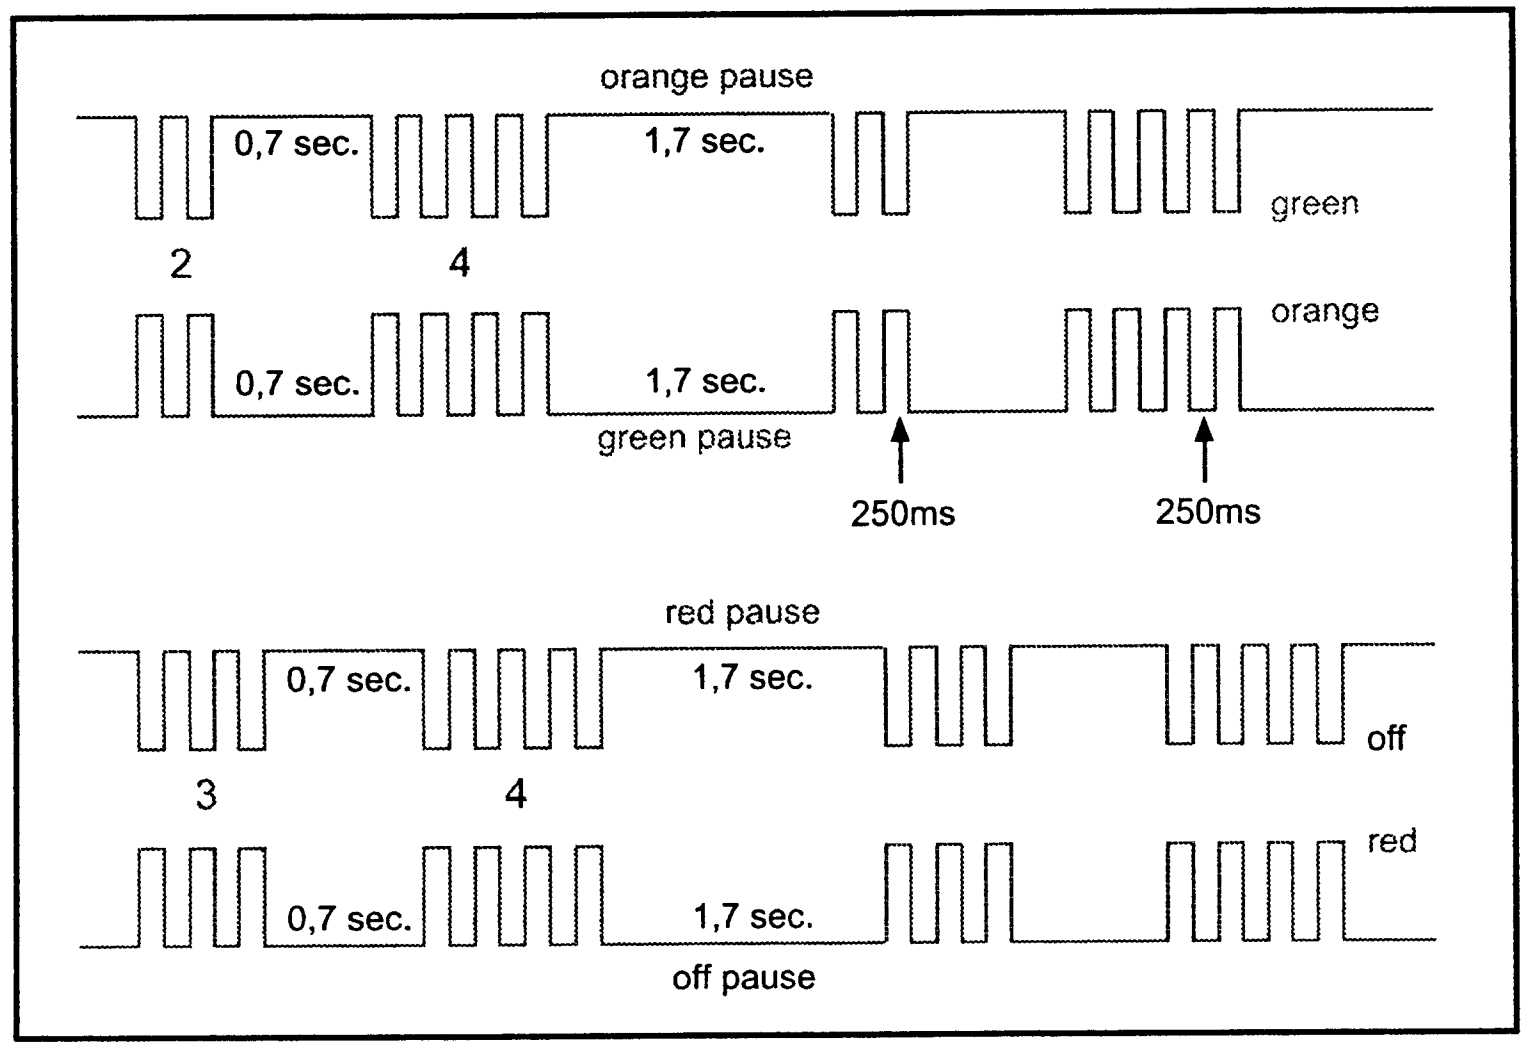

CODES	DEFAULT
10	Display effective child lock mode
11	Display timer mode
12	Audio-MSP doesn't answer anymore
13	Audio-Dpl doesn't answer anymore
14	TDA9330H doesn‘t answer anymore
15	TDA9321 doesn‘t answer anymore
16	DMU0 doesn't answer anymore
17	SAA4956 doesn't answer anymore
18	TDA9178 doesn't answer anymore
19	Tuner doesn't answer anymore
20	I2C Bus is loocked
21	I2C Bus data line held low
23	I2C Bus clock line held low
25	Switched 5V not available
26	Tube gets not warm in time
27	Deflection detects >3 times prot
28	Vertical deflection safety is effective
29	Horizontal deflection safety is effective
31	Call with pointer that was not allocated
32	A software-timer has been requested but isn't available yet
34	The NVM chip doesn't answer anymore
35	5V and 8V not available
36	Wrong address passed to the bus-handler
37	Unexpected level on NMI line found
38	Heap full - There is no RAM available for the requested operation
39	I2C Bus data line not recoverable
41	Power down detection TDA9178 (PSI)
42	Power on reset error TDA9320 (HIP)
43	Power on reset error TDA9330 (HOP)
44	NRF bit problem (only factory information)
45	FLS bit problem (only factory information)
46	NHF bit problem (only factory information)
47	NDF bit problem (only factory information)
48	XPR bit problem (only factory information)
49	Problem with bits SXA...D (factory information)

MAIN POWER SUPPLY CHECK

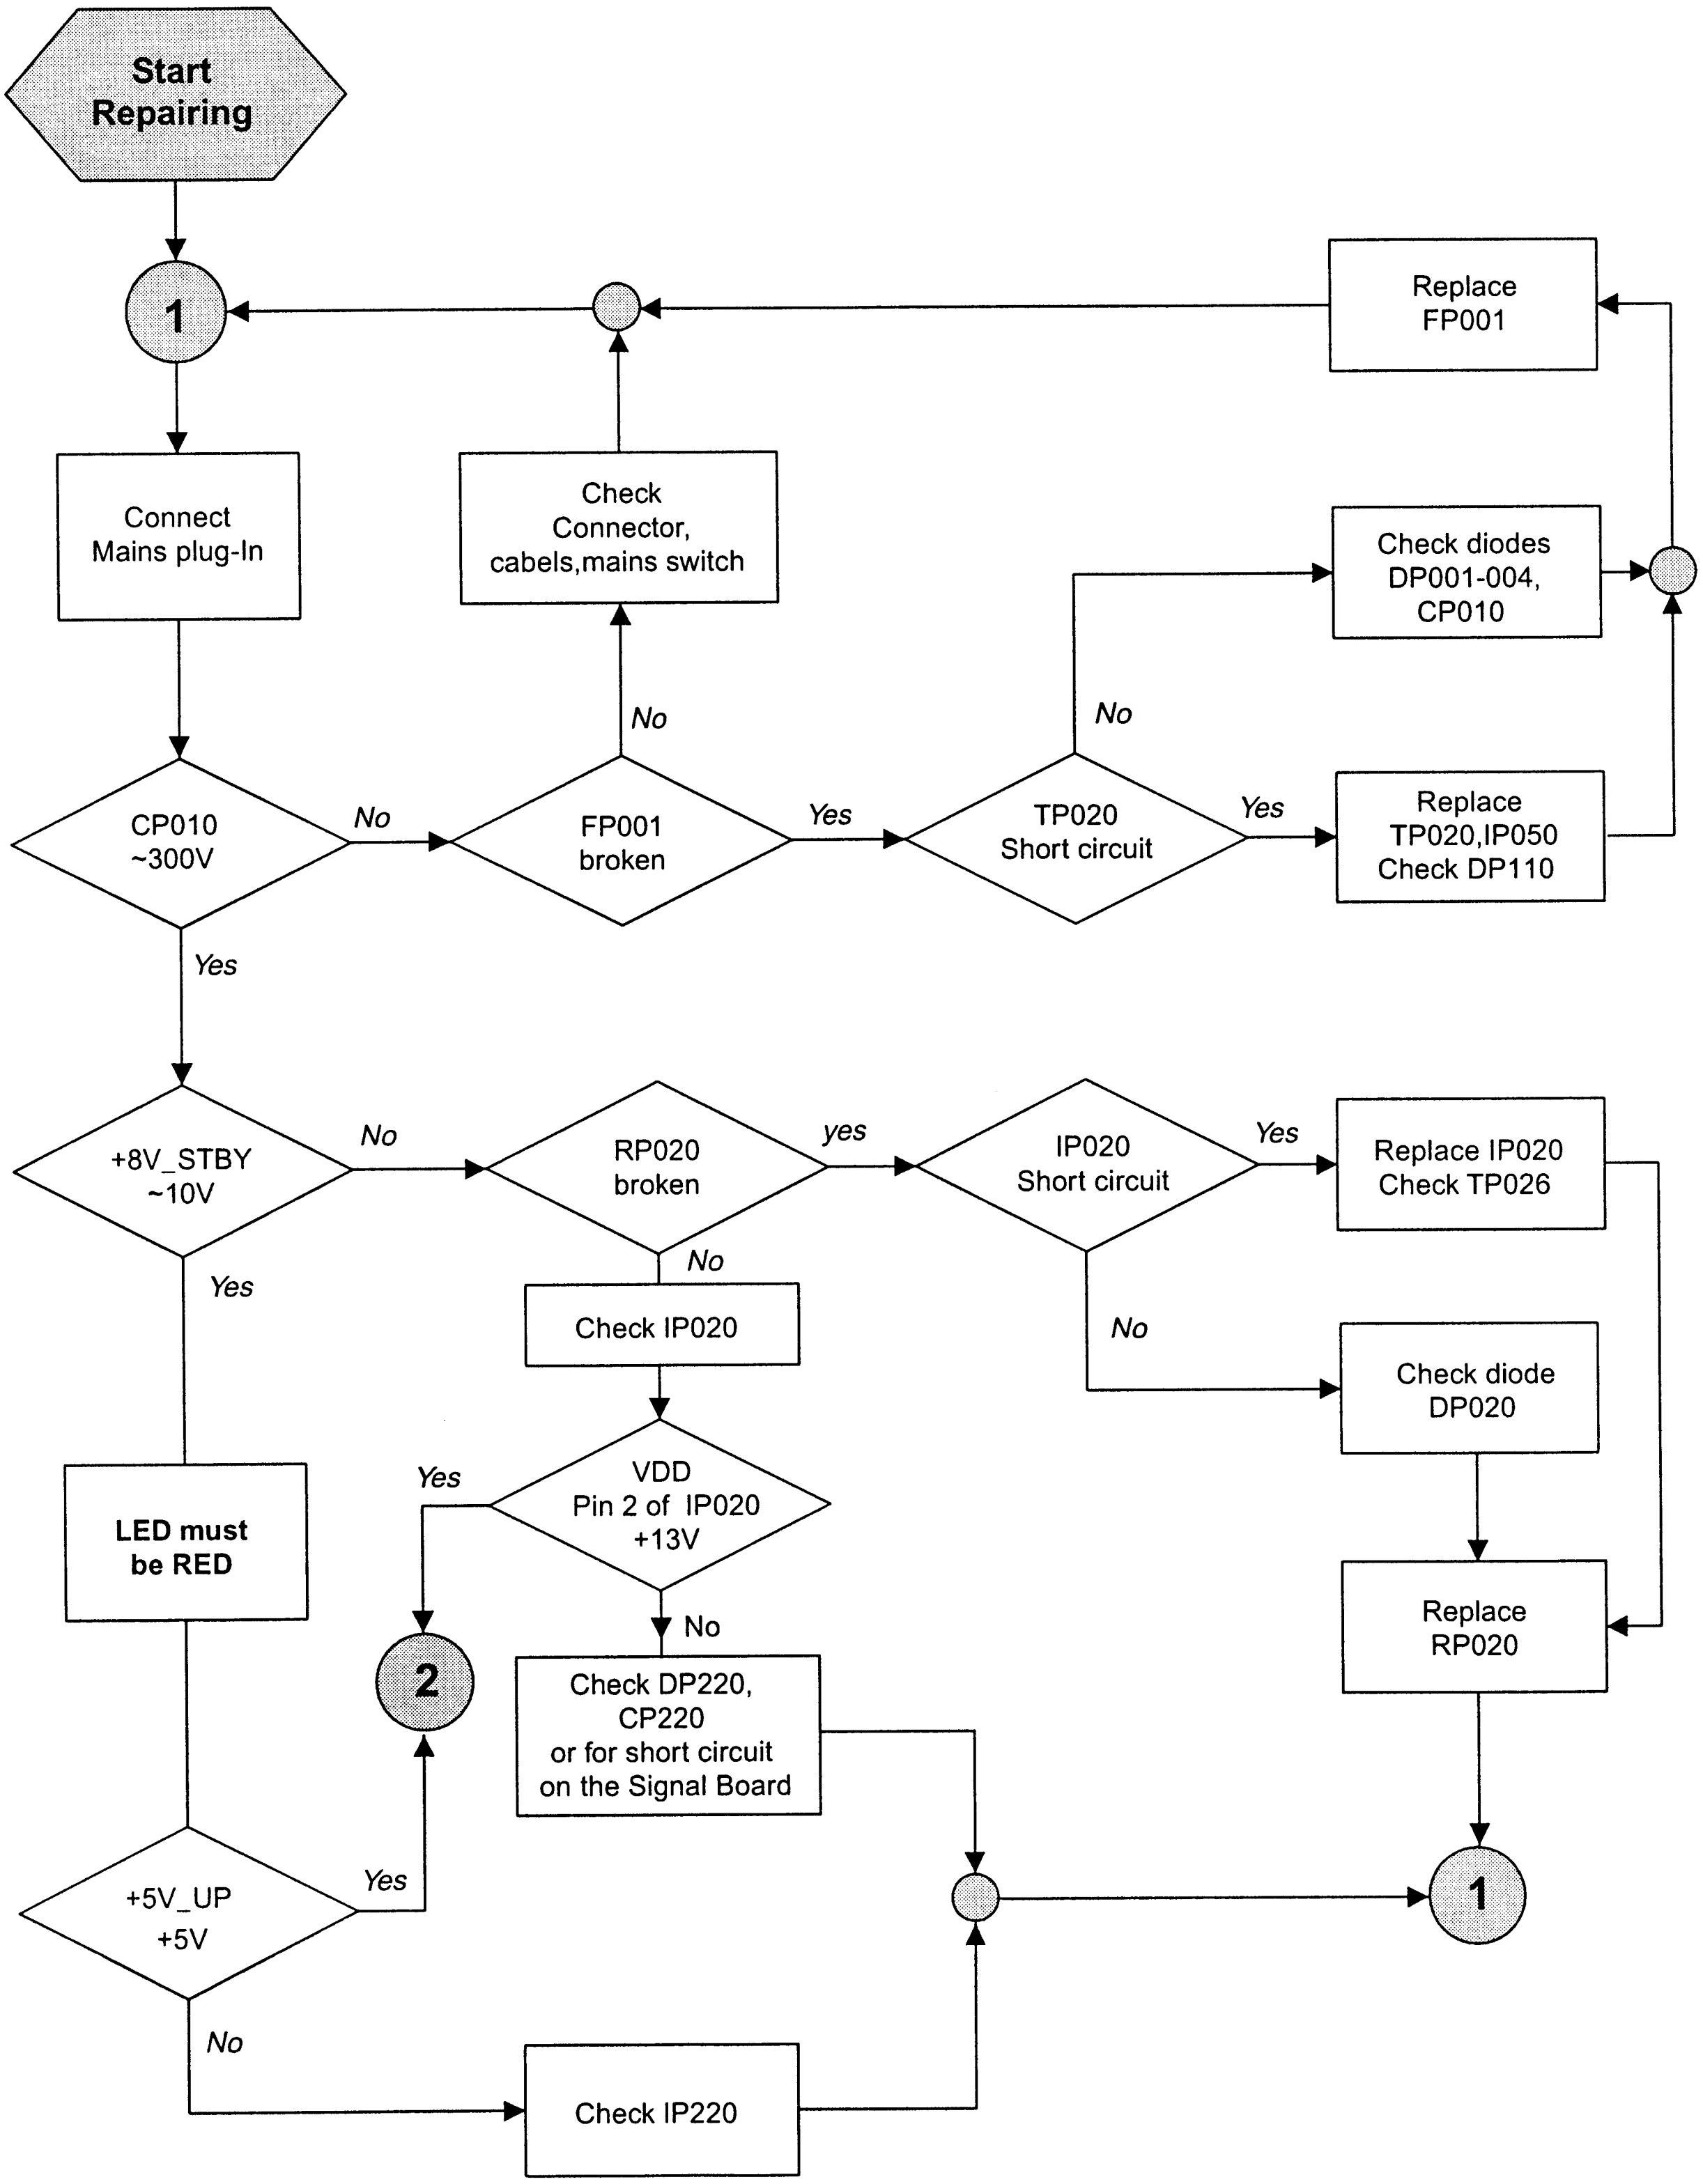
Start Repairing
1
Replace FP001
Connect Mains plug-In
Check Connector, cabels,mains switch
Check diodes DP001-004, CP010
No
No
CP010 ~300V
No
FP001 broken
Yes
TP020 Short circuit
Yes
Replace TP020,IP050 Check DP110
Yes
+8V_STBY ~10V
No
RP020 broken
yes
IP020 Short circuit
Yes
Replace IP020 Check TP026
Yes
No
Check IP020
No
Check diode DP020
Yes
VDD Pin 2 of IP020 +13V
LED must be RED
No
2
Replace RP020
Check DP220, CP220 or for short circuit on the Signal Board
Yes
+5V_UP +5V
1
No
Check IP220

MAIN POWER SUPPLY CHECK

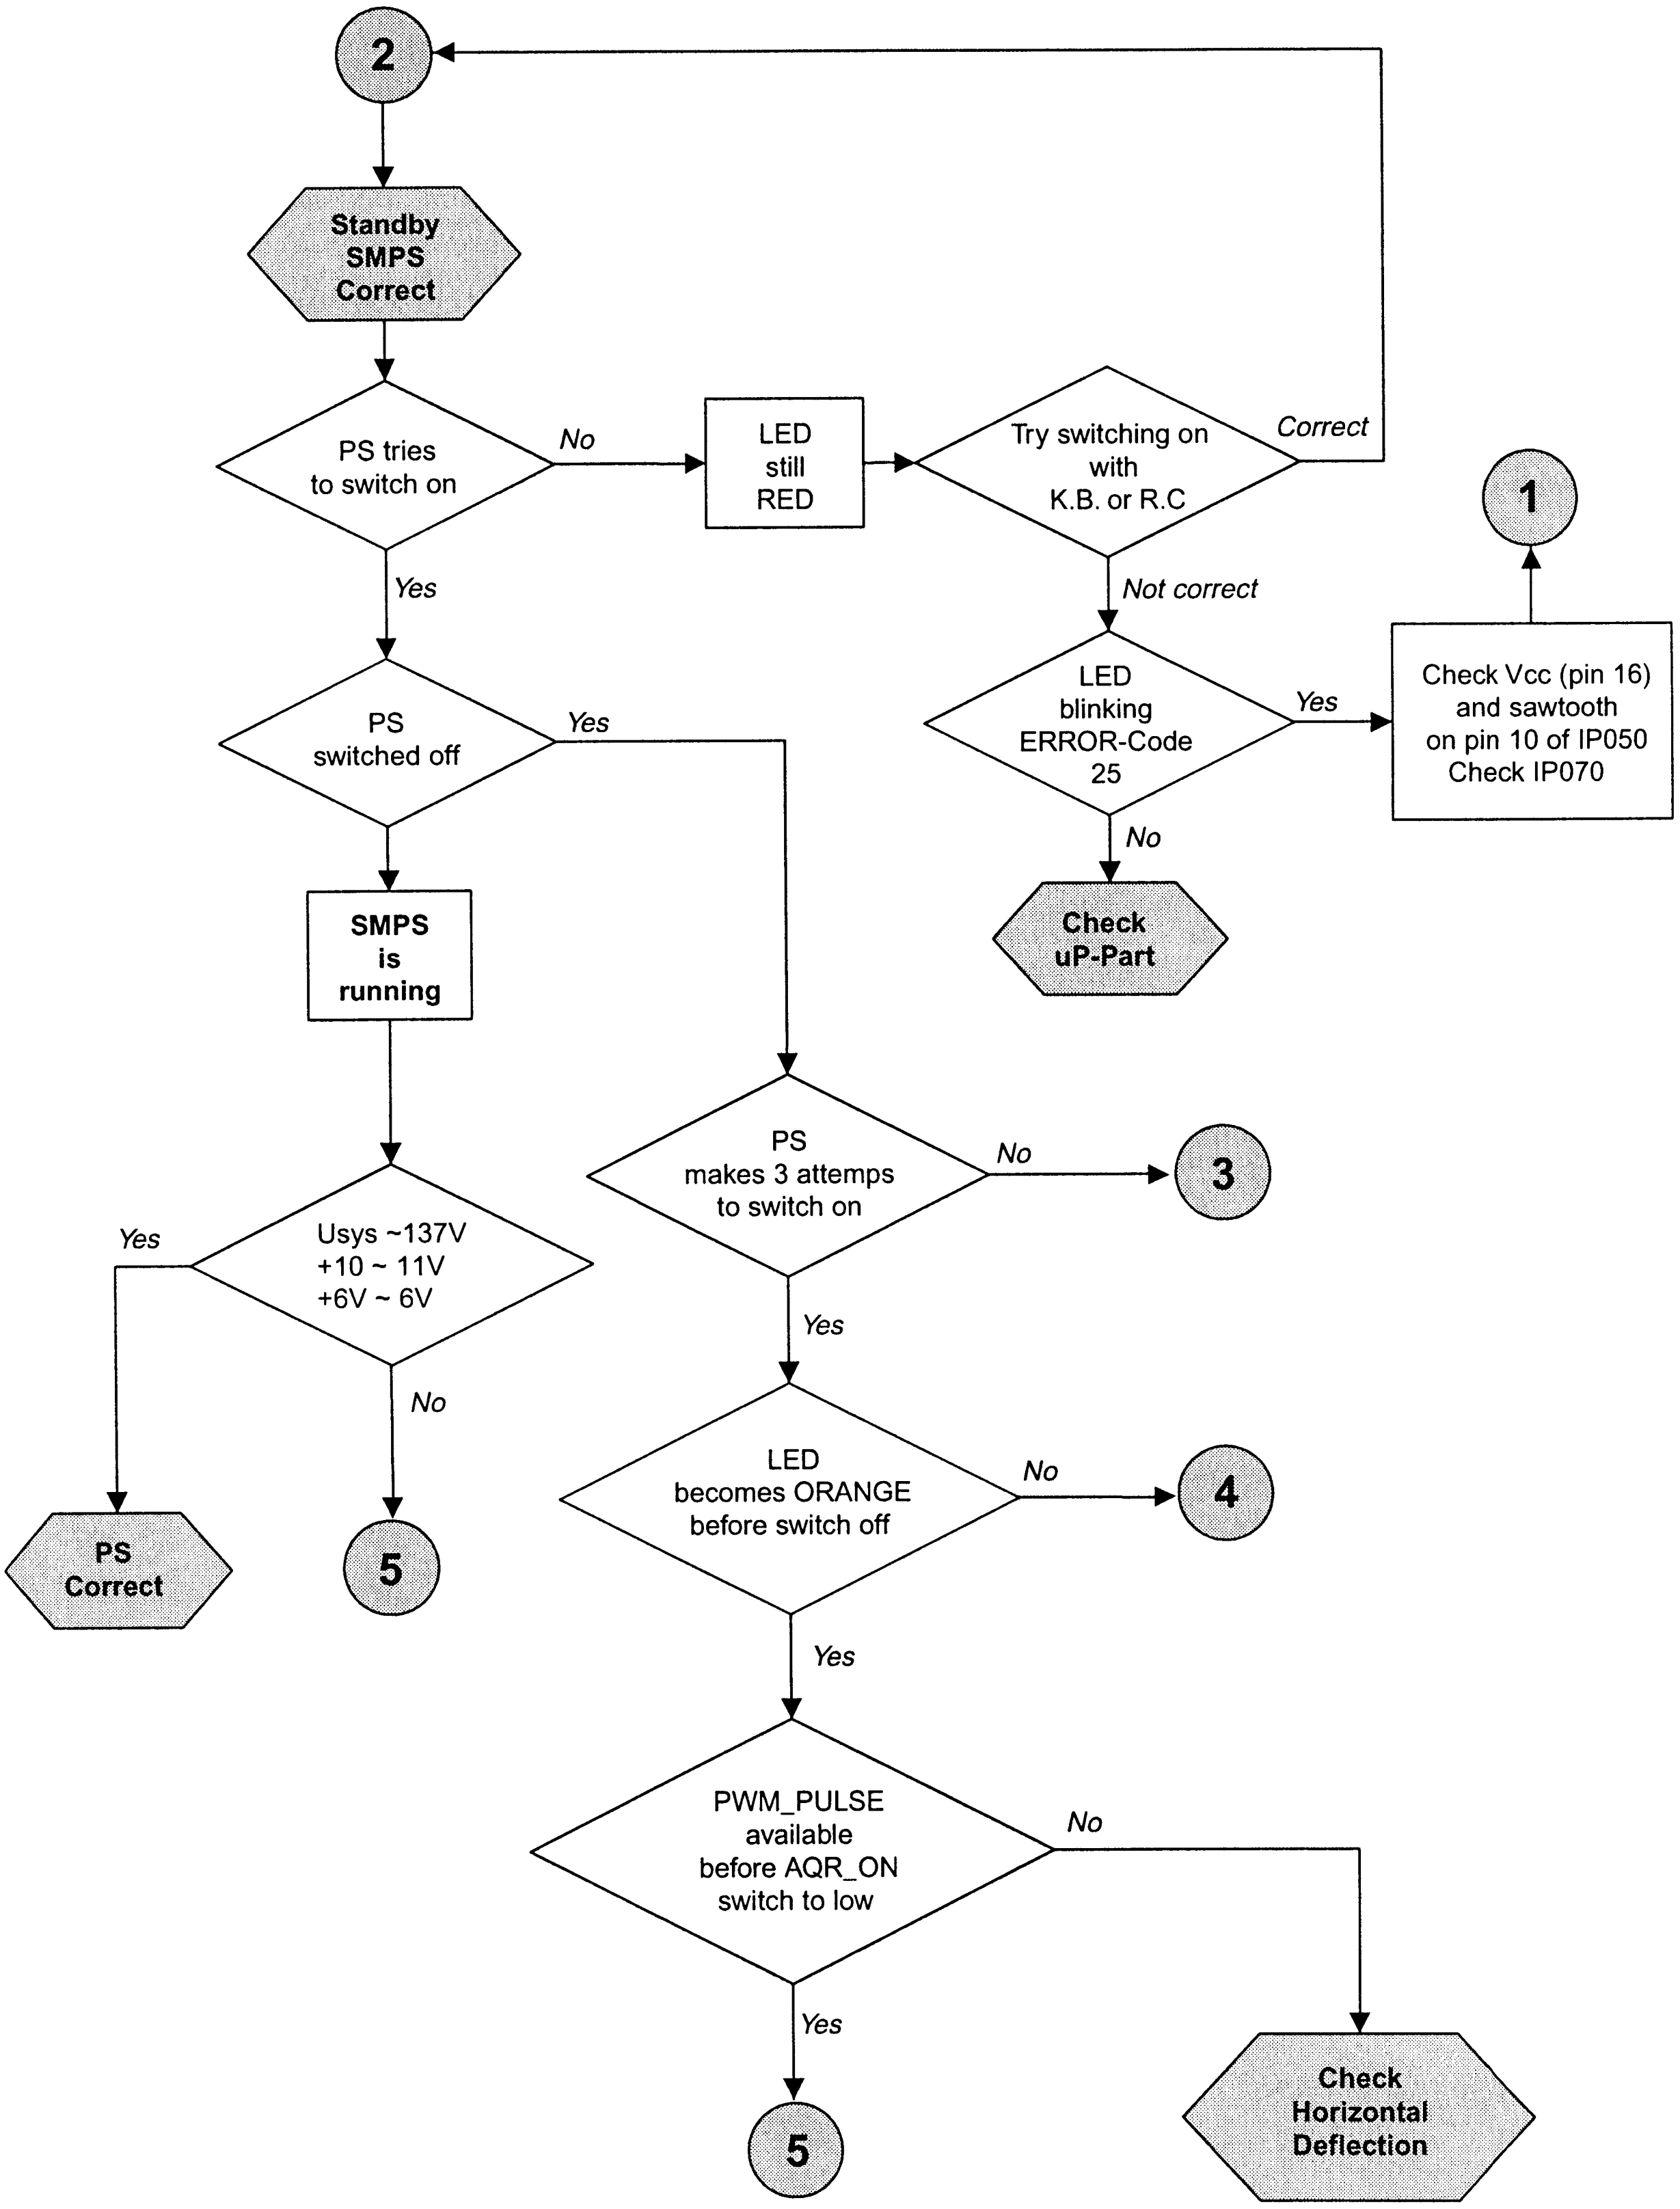
2
Standby SMPS Correct
PS tries to switch on
No
LED still RED
Try switching on with K.B. or R.C
Correct
1
Yes
Not correct
LED blinking ERROR-Code 25
Yes
Check Vcc (pin 16) and sawtooth on pin 10 of IP050 Check IP070
No
Check uP-Part
PS switched off
Yes
SMPS is running
PS makes 3 attemps to switch on
No
3
Yes
Usys ~137V +10 ~ 11V +6V ~ 6V
No
Yes
LED becomes ORANGE before switch off
No
4
PS Correct
5
Yes
PWM_PULSE available before AQR_ON switch to low
No
Yes
5
Check Horizontal Deflection

MAIN POWER SUPPLY CHECK

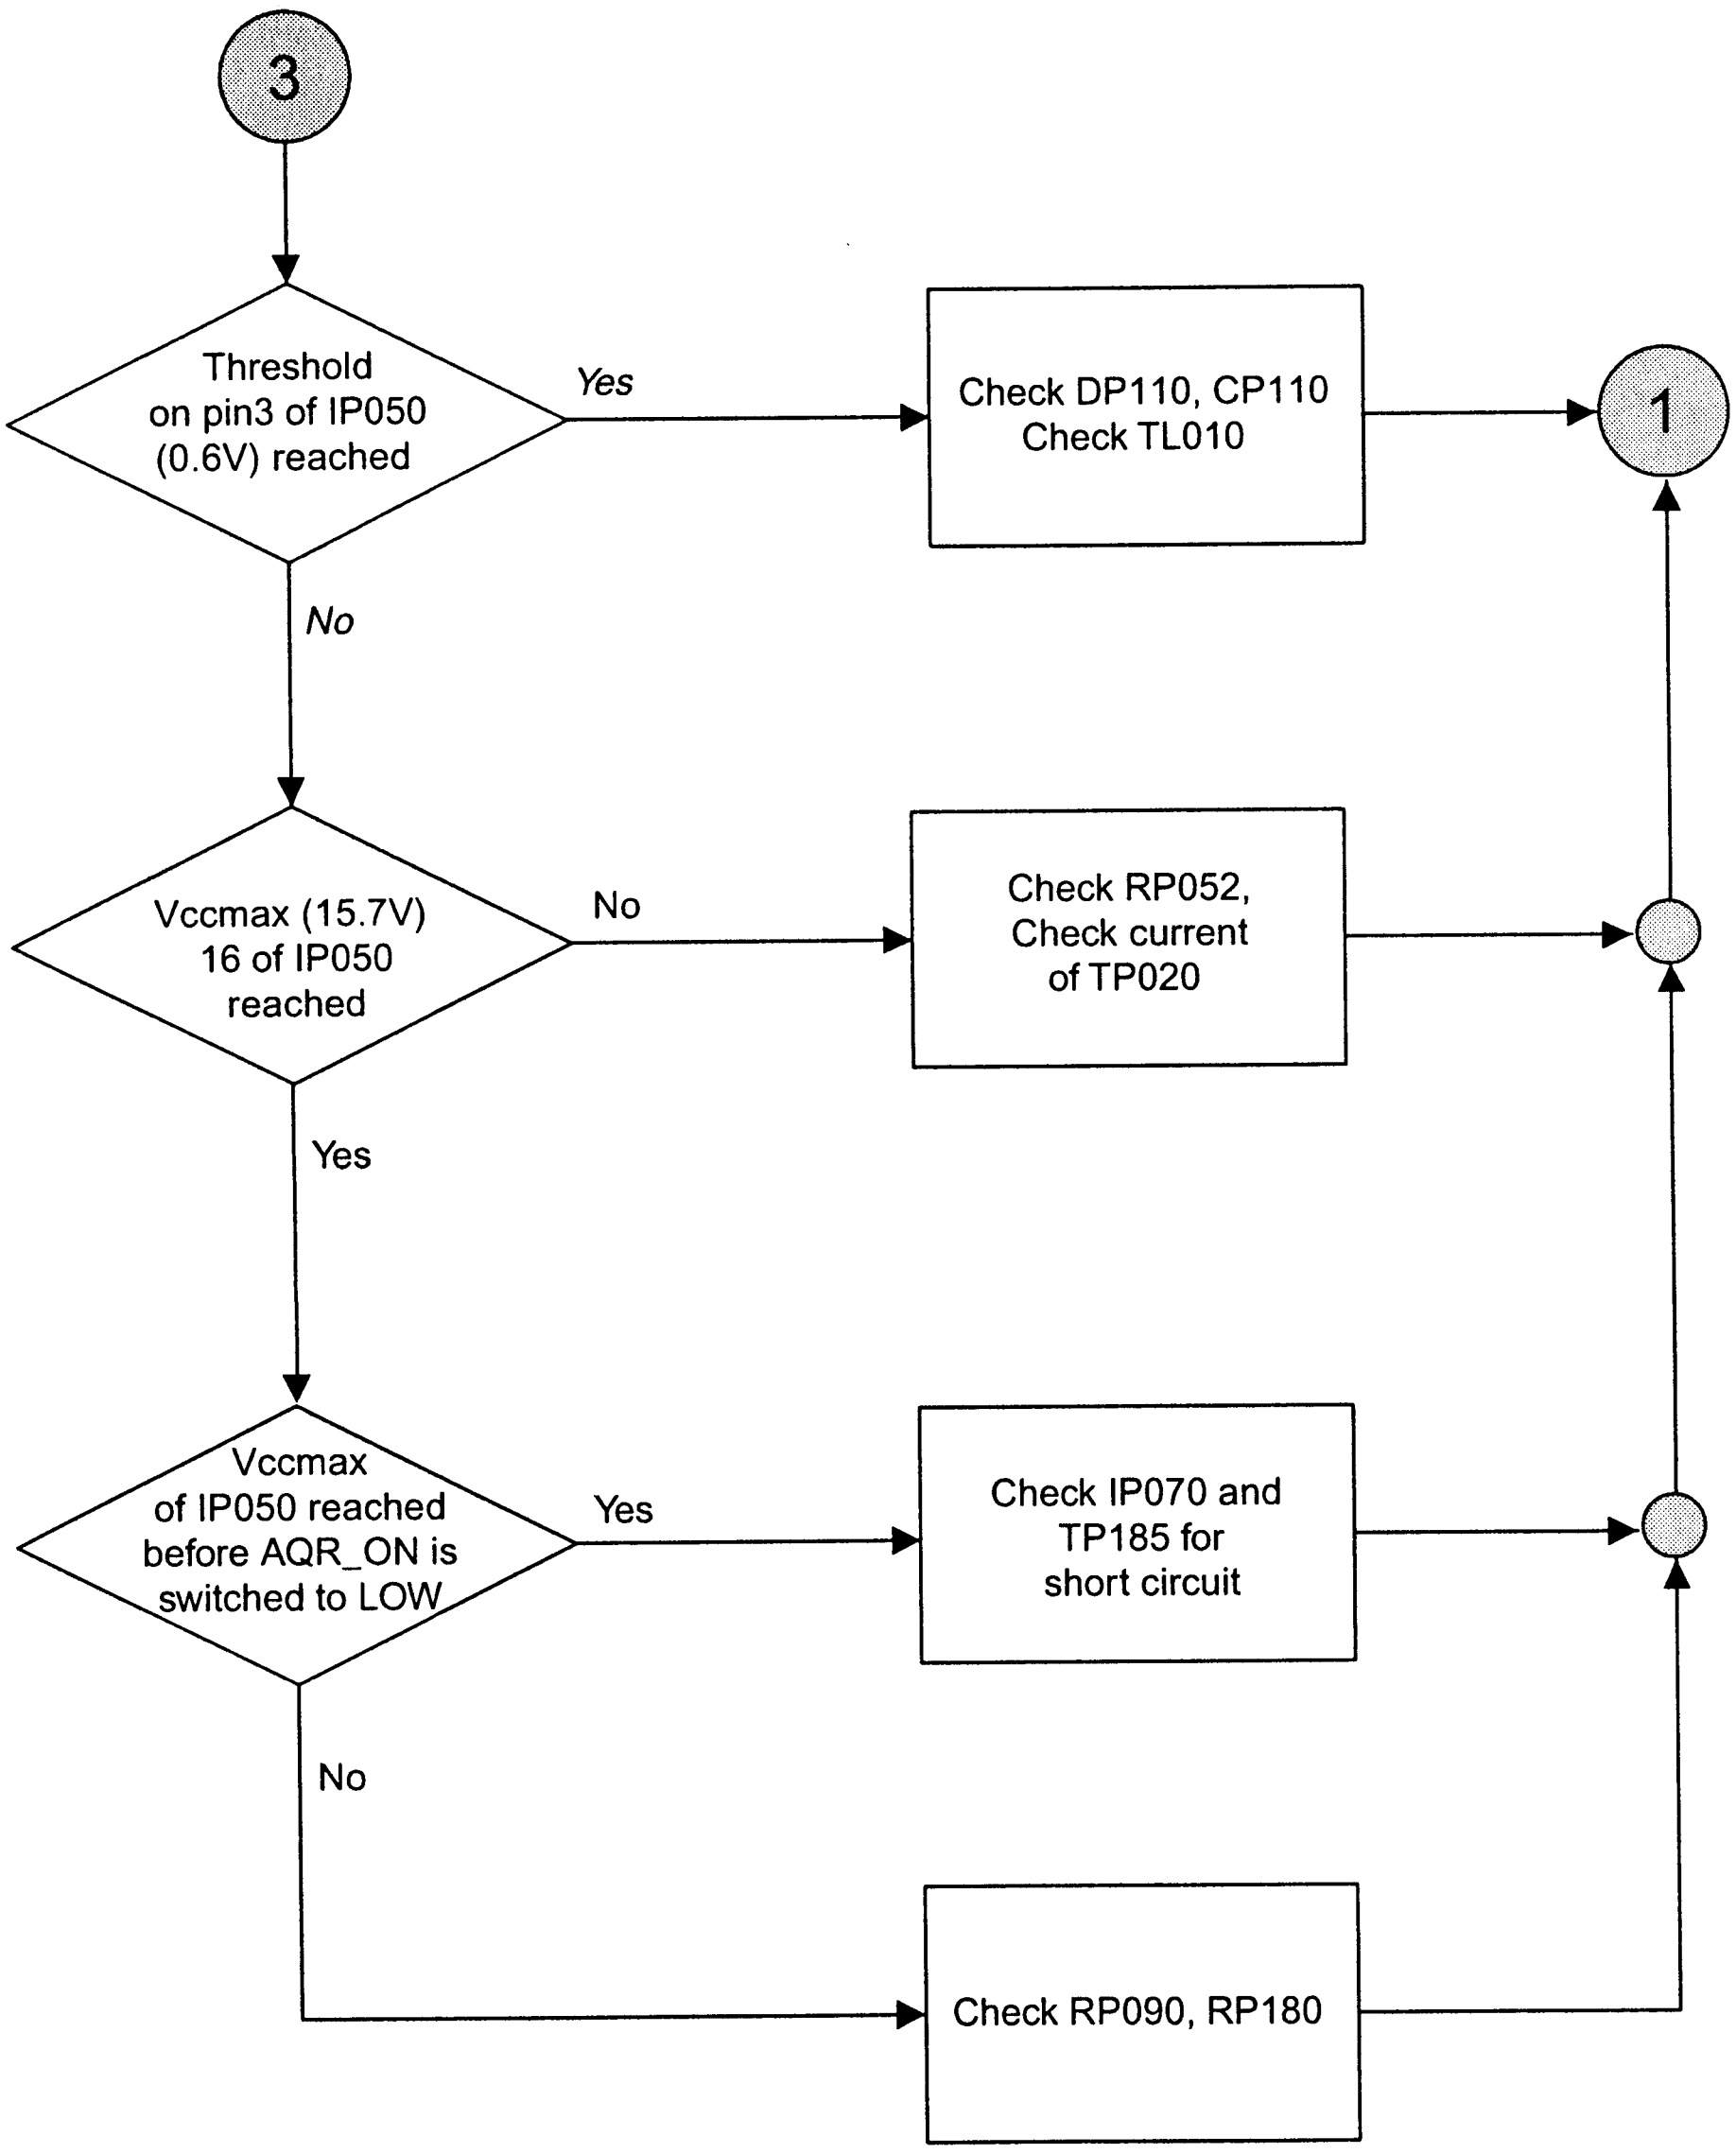
3
Threshold on pin3 of IP050 (0.6V) reached
Yes
Check DP110, CP110 Check TL010
1
No
Vccmax (15.7V) 16 of IP050 reached
No
Check RP052, Check current of TP020
Yes
Vccmax of IP050 reached before AQR_ON is switched to LOW
Yes
Check IP070 and TP185 for short circuit
No
Check RP090, RP180

MAIN POWER SUPPLY CHECK

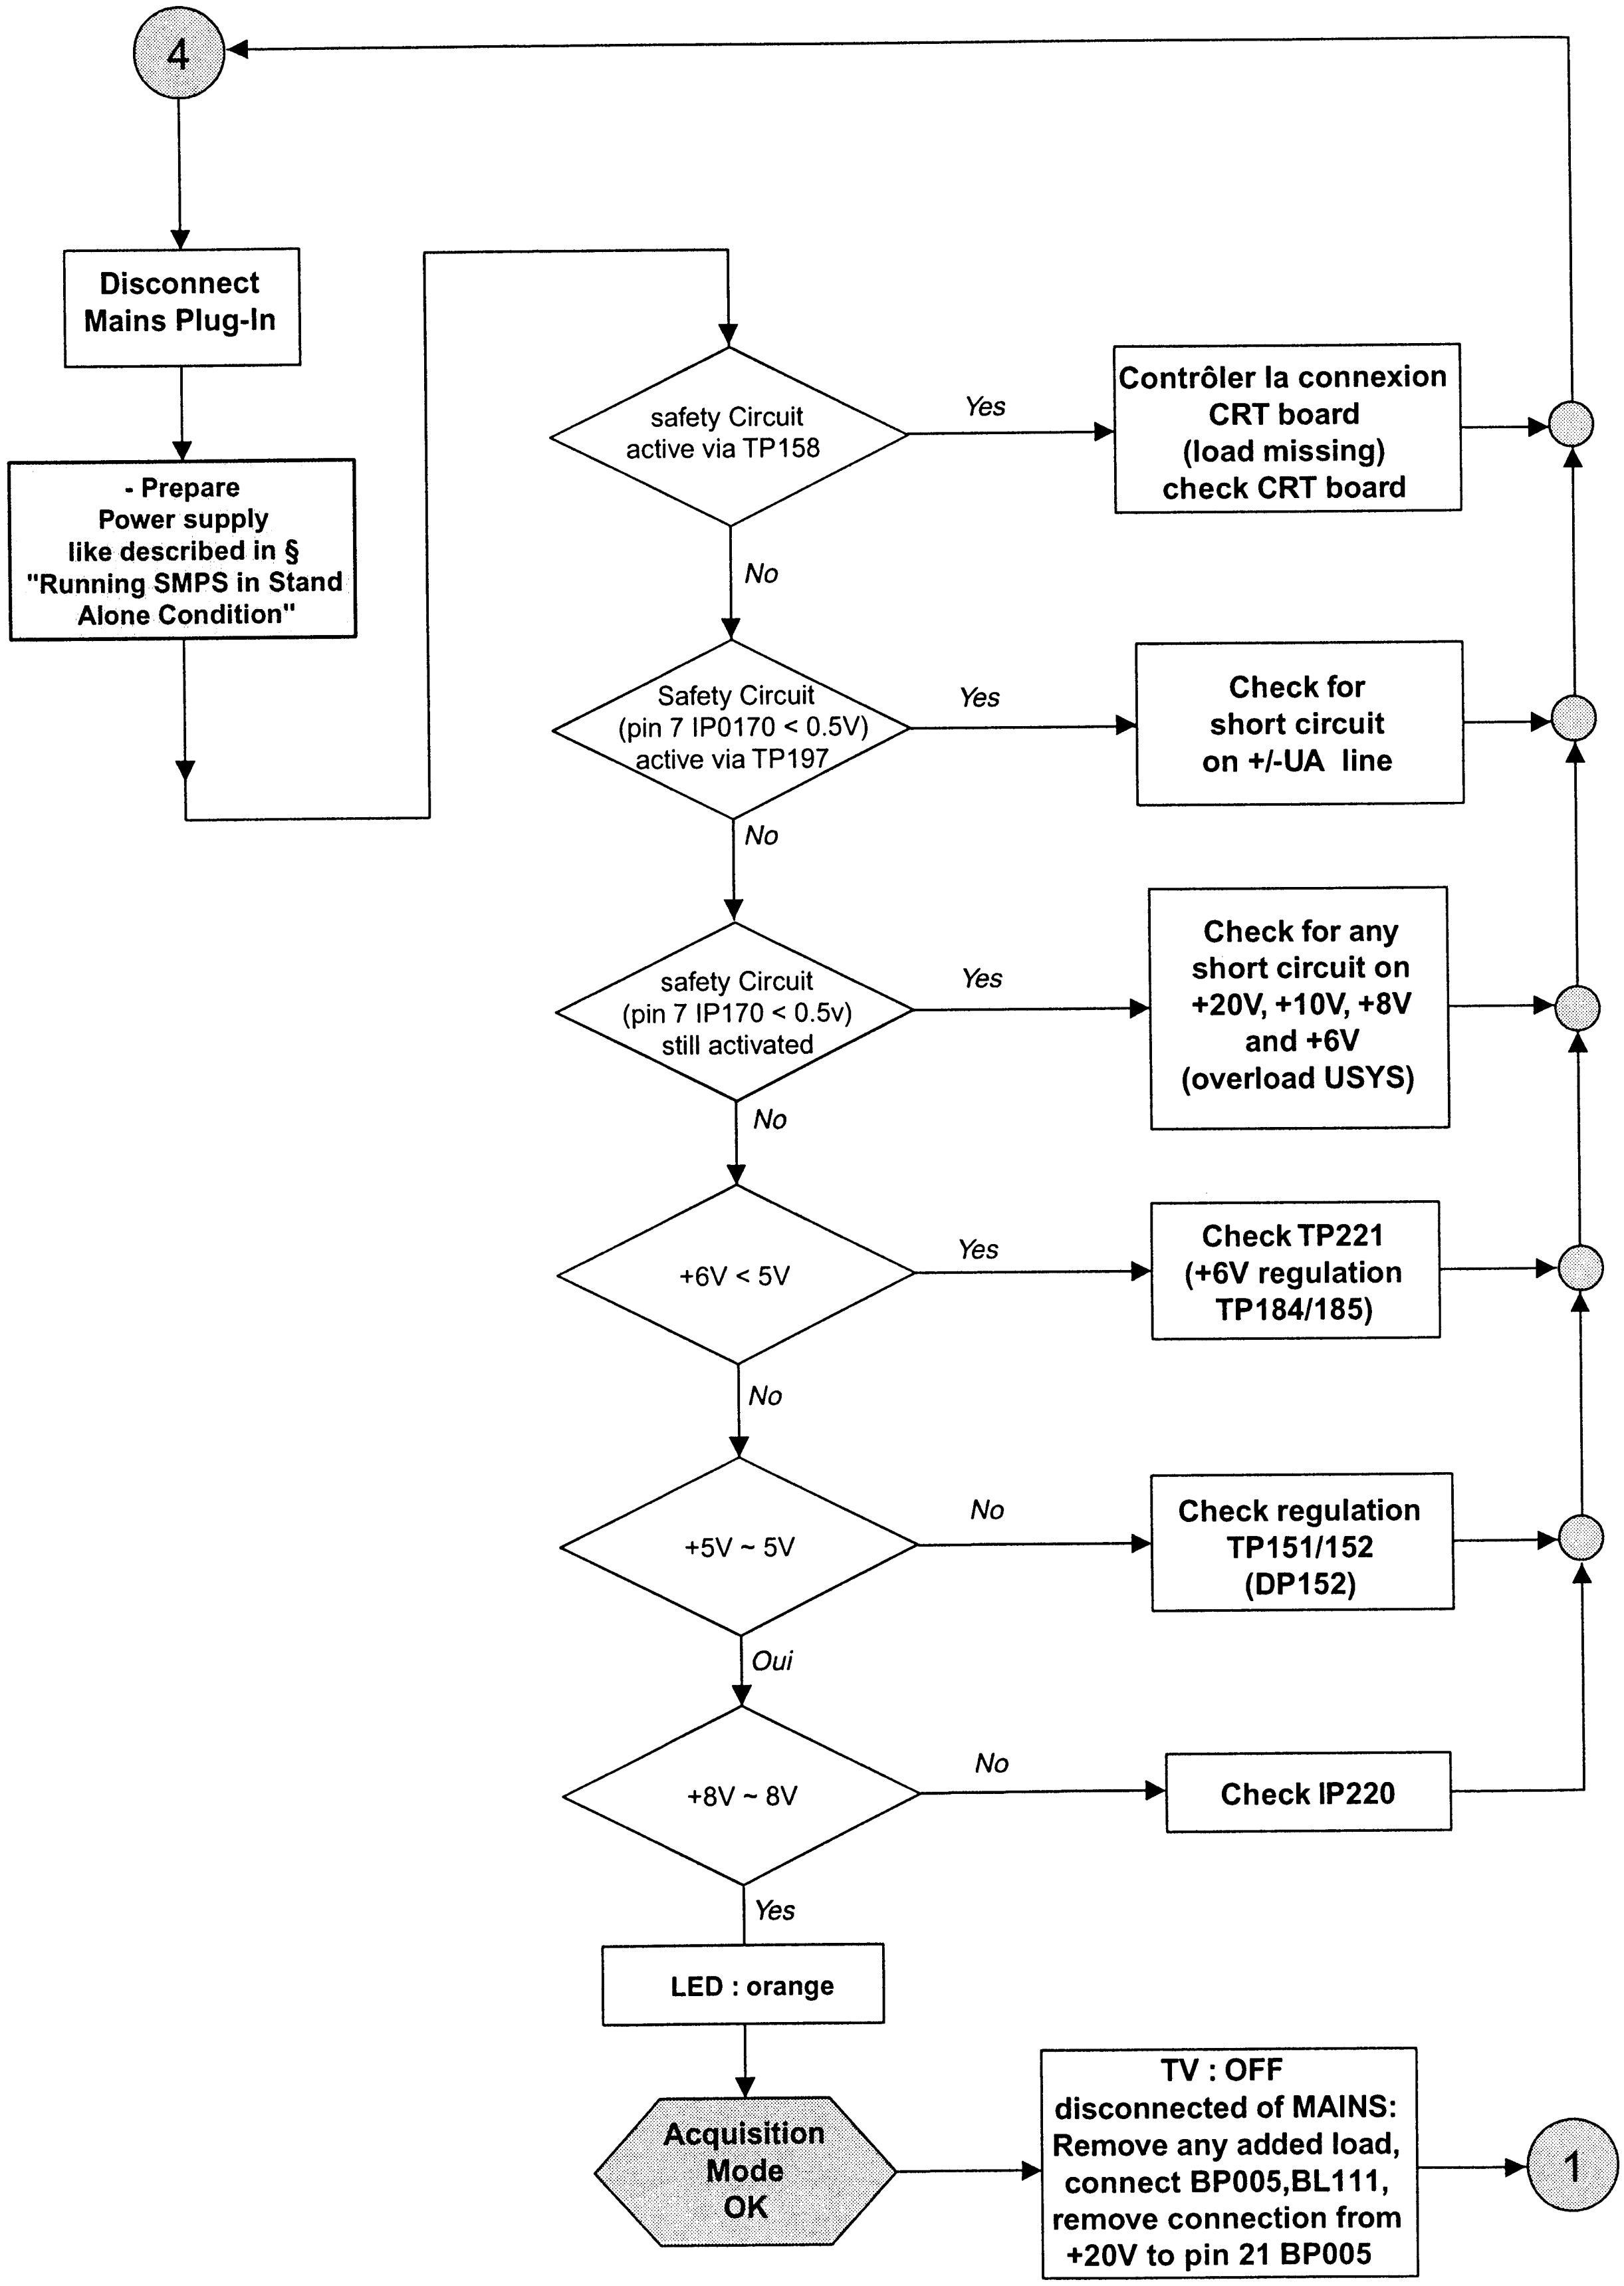
4
Disconnect Mains Plug-In
- Prepare Power supply like described in § "Running SMPS in Stand Alone Condition"
safety Circuit active via TP158
Yes
Contrôler la connexion CRT board (load missing) check CRT board
No
Safety Circuit (pin 7 IP0170 < 0.5V) active via TP197
Yes
Check for short circuit on +/-UA line
No
safety Circuit (pin 7 IP170 < 0.5v) still activated
Yes
Check for any short circuit on +20V, +10V, +8V and +6V (overload USYS)
No
+6V < 5V
Yes
Check TP221 (+6V regulation TP184/185)
No
+5V ~ 5V
No
Check regulation TP151/152 (DP152)
Oui
+8V ~ 8V
No
Check IP220
Yes
LED : orange
Acquisition Mode OK
TV : OFF disconnected of MAINS: Remove any added load, connect BP005,BL111, remove connection from +20V to pin 21 BP005
1

MAIN POWER SUPPLY CHECK

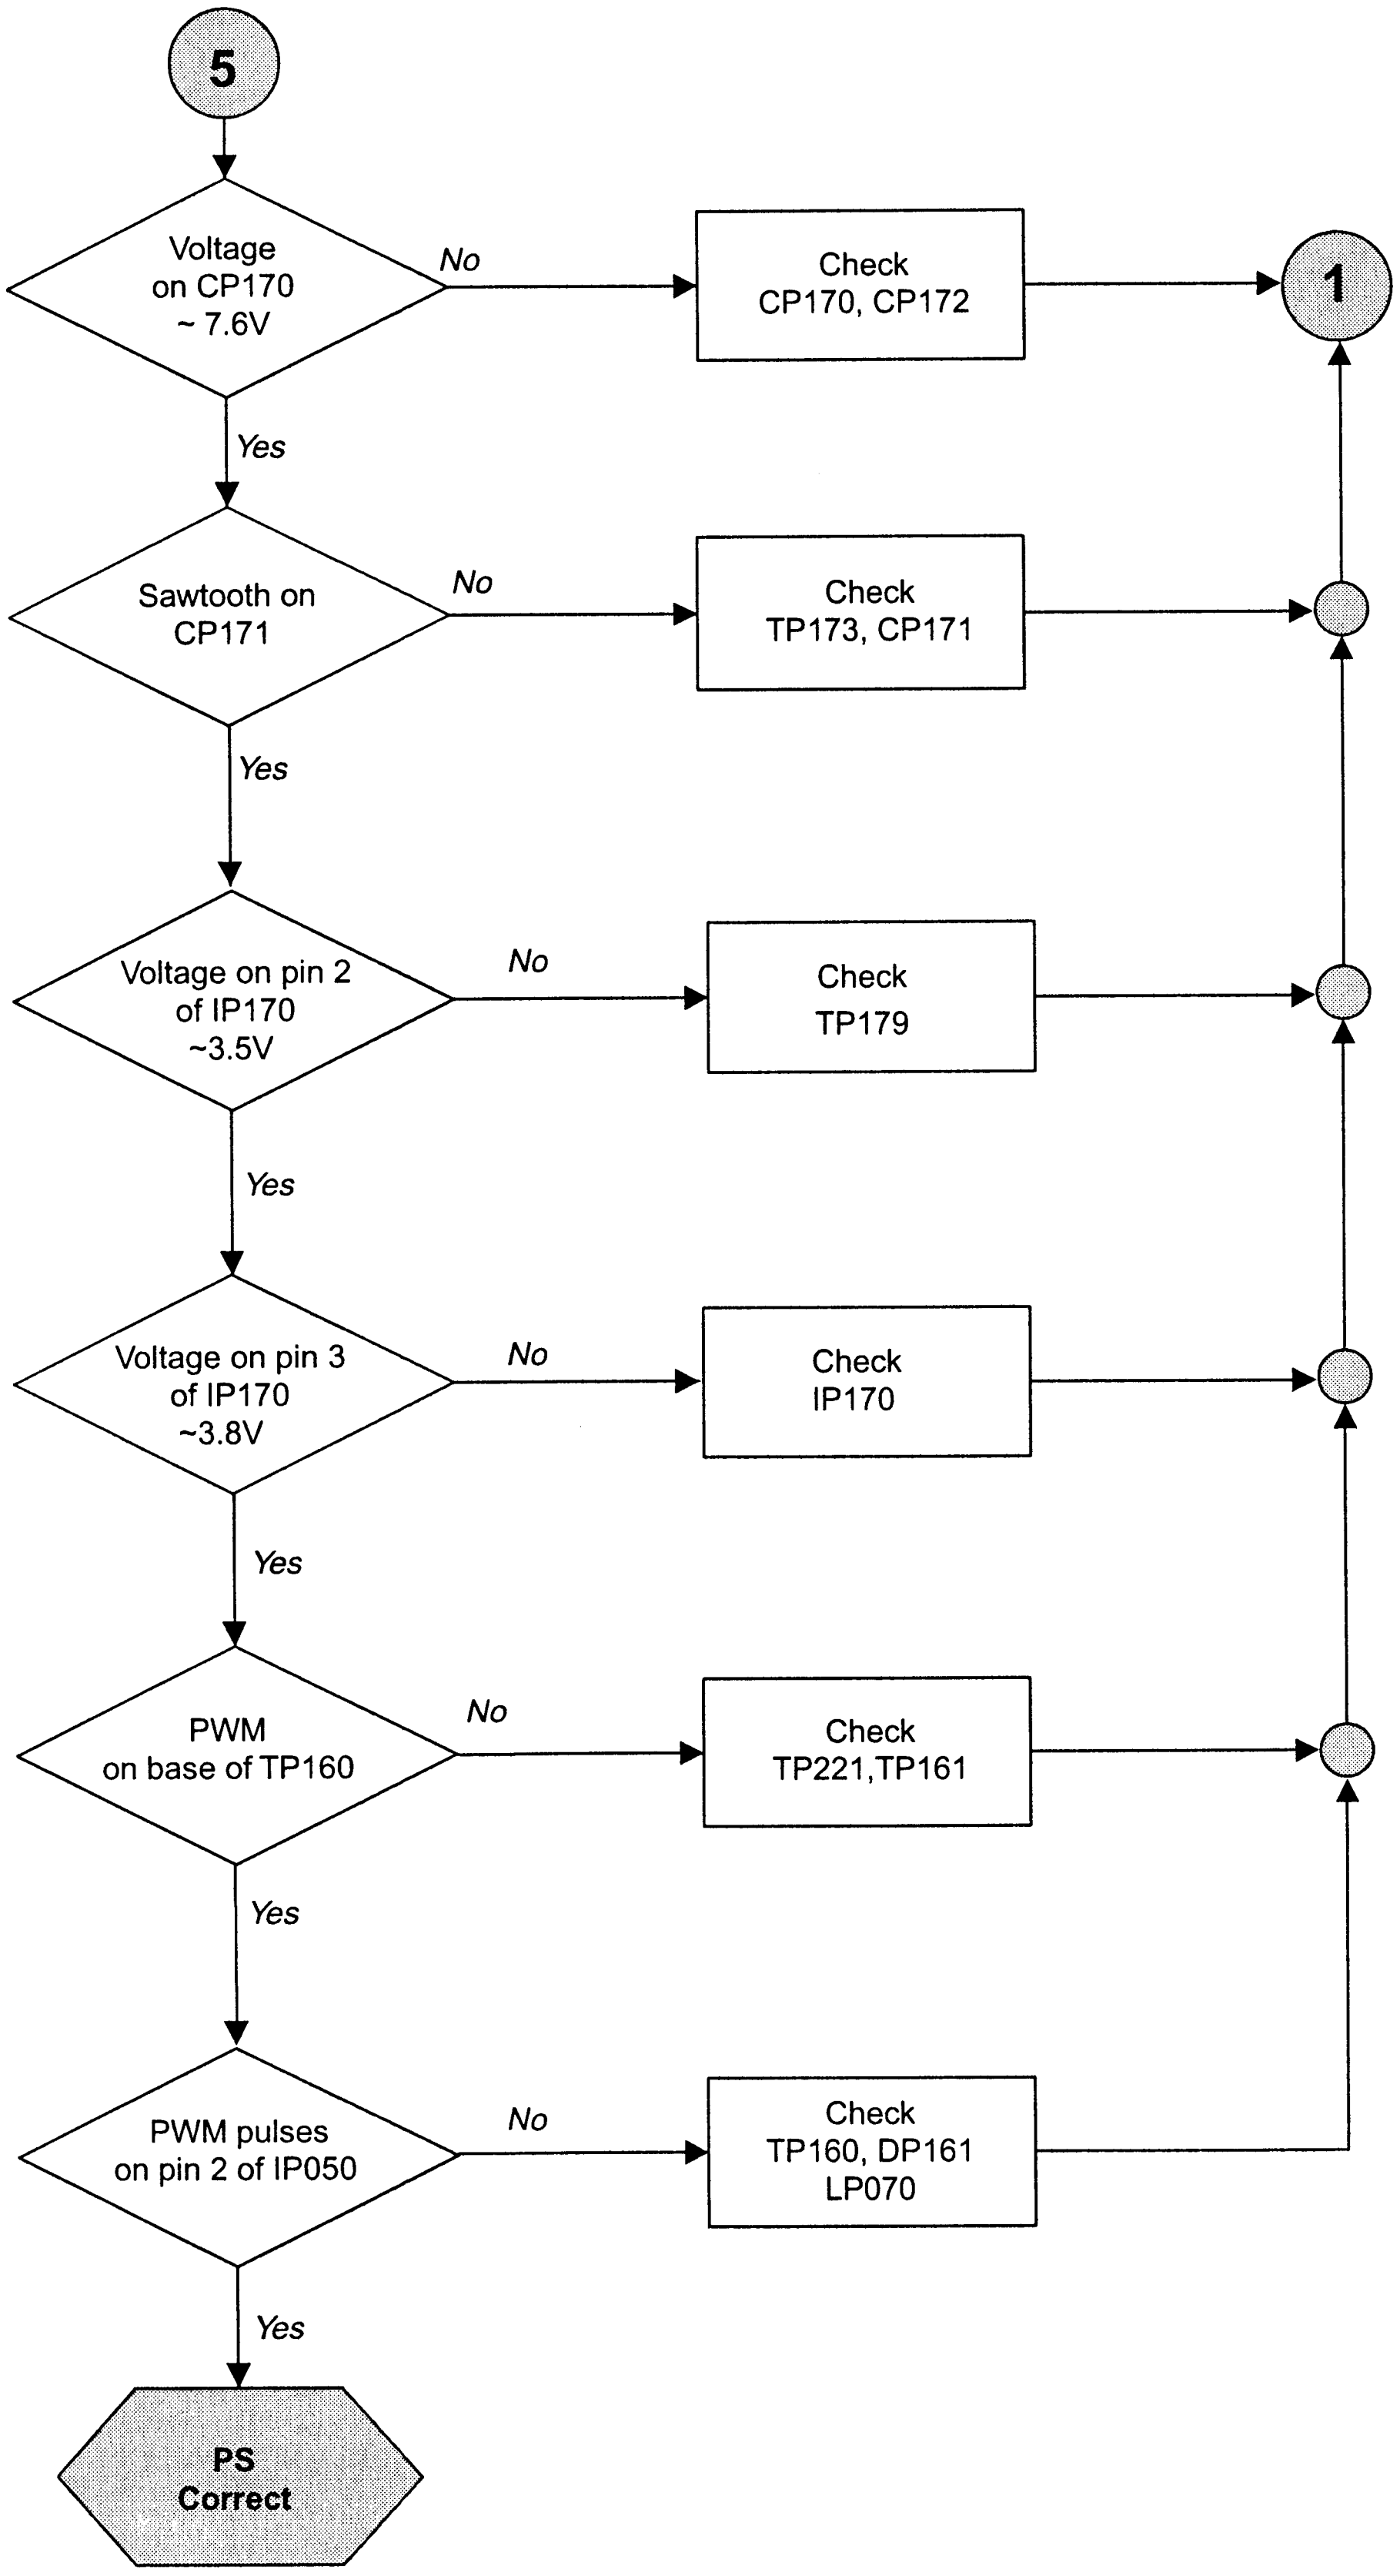
5
Voltage on CP170 ~ 7.6V
No
Check CP170, CP172
1
Yes
Sawtooth on CP171
No
Check TP173, CP171
Yes
Voltage on pin 2 of IP170 ~3.5V
No
Check TP179
Yes
Voltage on pin 3 of IP170 ~3.8V
No
Check IP170
Yes
PWM on base of TP160
No
Check TP221,TP161
Yes
PWM pulses on pin 2 of IP050
No
Check TP160, DP161 LP070
Yes
PS Correct

WIRING DIAGRAM - SCHEMA D'INTERCONNEXIONS - VERDRAHTUNGSPLAN - DIAGRAMMA DELLE INTERCONNESSIONI - ESQUEMA DE INTERCONEXIONES

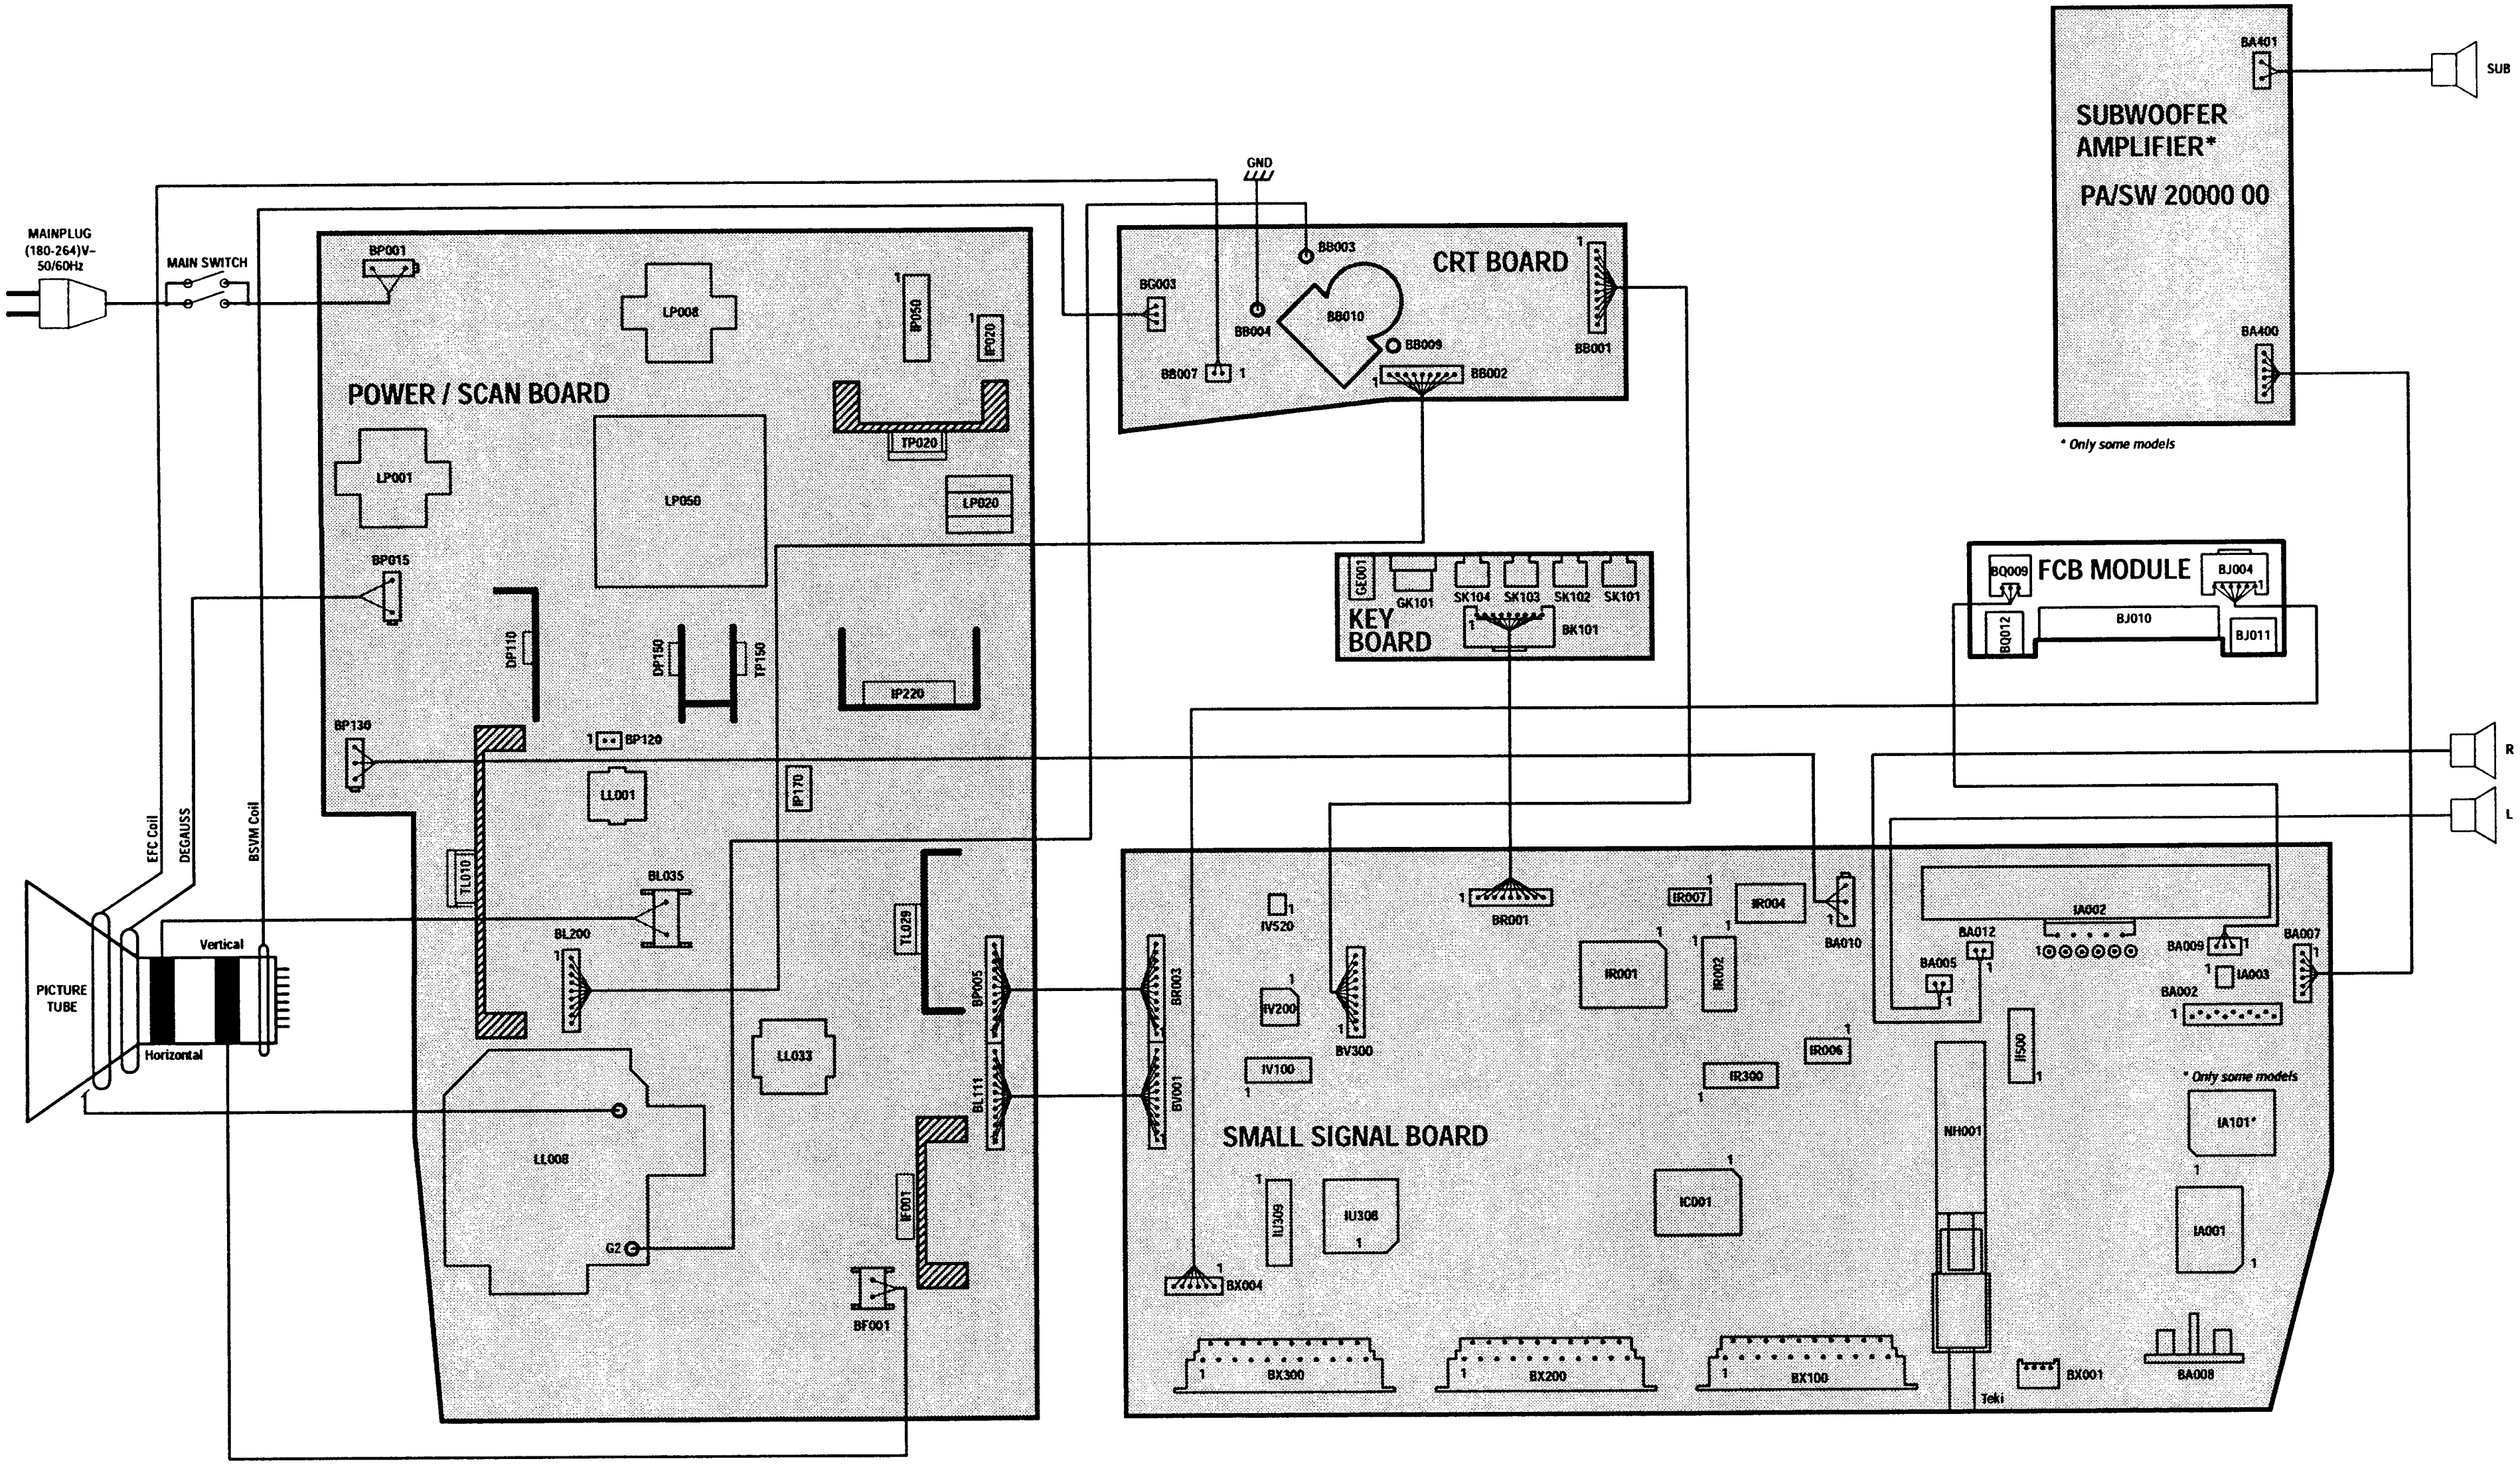
MAINPLUG
(180-264)V~
50/60Hz
MAIN SWITCH
POWER / SCAN BOARD
BP001
LP008
IP050
IP020
TP020
LP001
LP050
LP020
BP015
DP110
DP150
TP150
IP220
BP130
BP120
LL001
IP170
TL010
BL035
BL200
TL020
BP005
BL111
LL033
LL008
G2
IF001
BF001
EFC Coil
DEGAUSS
BSVM Coil
Vertical
Horizontal
PICTURE TUBE
GND
CRT BOARD
BG003
BB003
BB004
BB010
BB009
BB007
BB002
BB001
KEY BOARD
GE001
GK101
SK104
SK103
SK102
SK101
BK101
SUBWOOFER AMPLIFIER*
PA/SW 20000 00
BA401
BA400
SUB
* Only some models
FCB MODULE
BQ009
BJ004
BQ012
BJ010
BJ011
R
L
SMALL SIGNAL BOARD
IV520
BR001
IR007
IR004
BA010
IA002
BA012
BA005
BA009
BA007
IA003
BA002
BR003
IV200
BV300
IR001
IR002
IR006
IR500
IV100
BV001
IR300
* Only some models
IA101*
NH001
IU309
IU308
IC001
IA001
BX004
BX300
BX200
BX100
BX001
BA008
Teki

GENERAL BLOCK DIAGRAM - SYNOPTIQUE GÉNÉRAL - BLOCKSCHALTBILD ALLGEMEIN - SCHEMA A BLOCCHI GENERALE - ESQUEMA DE BLOQUES GENERAL

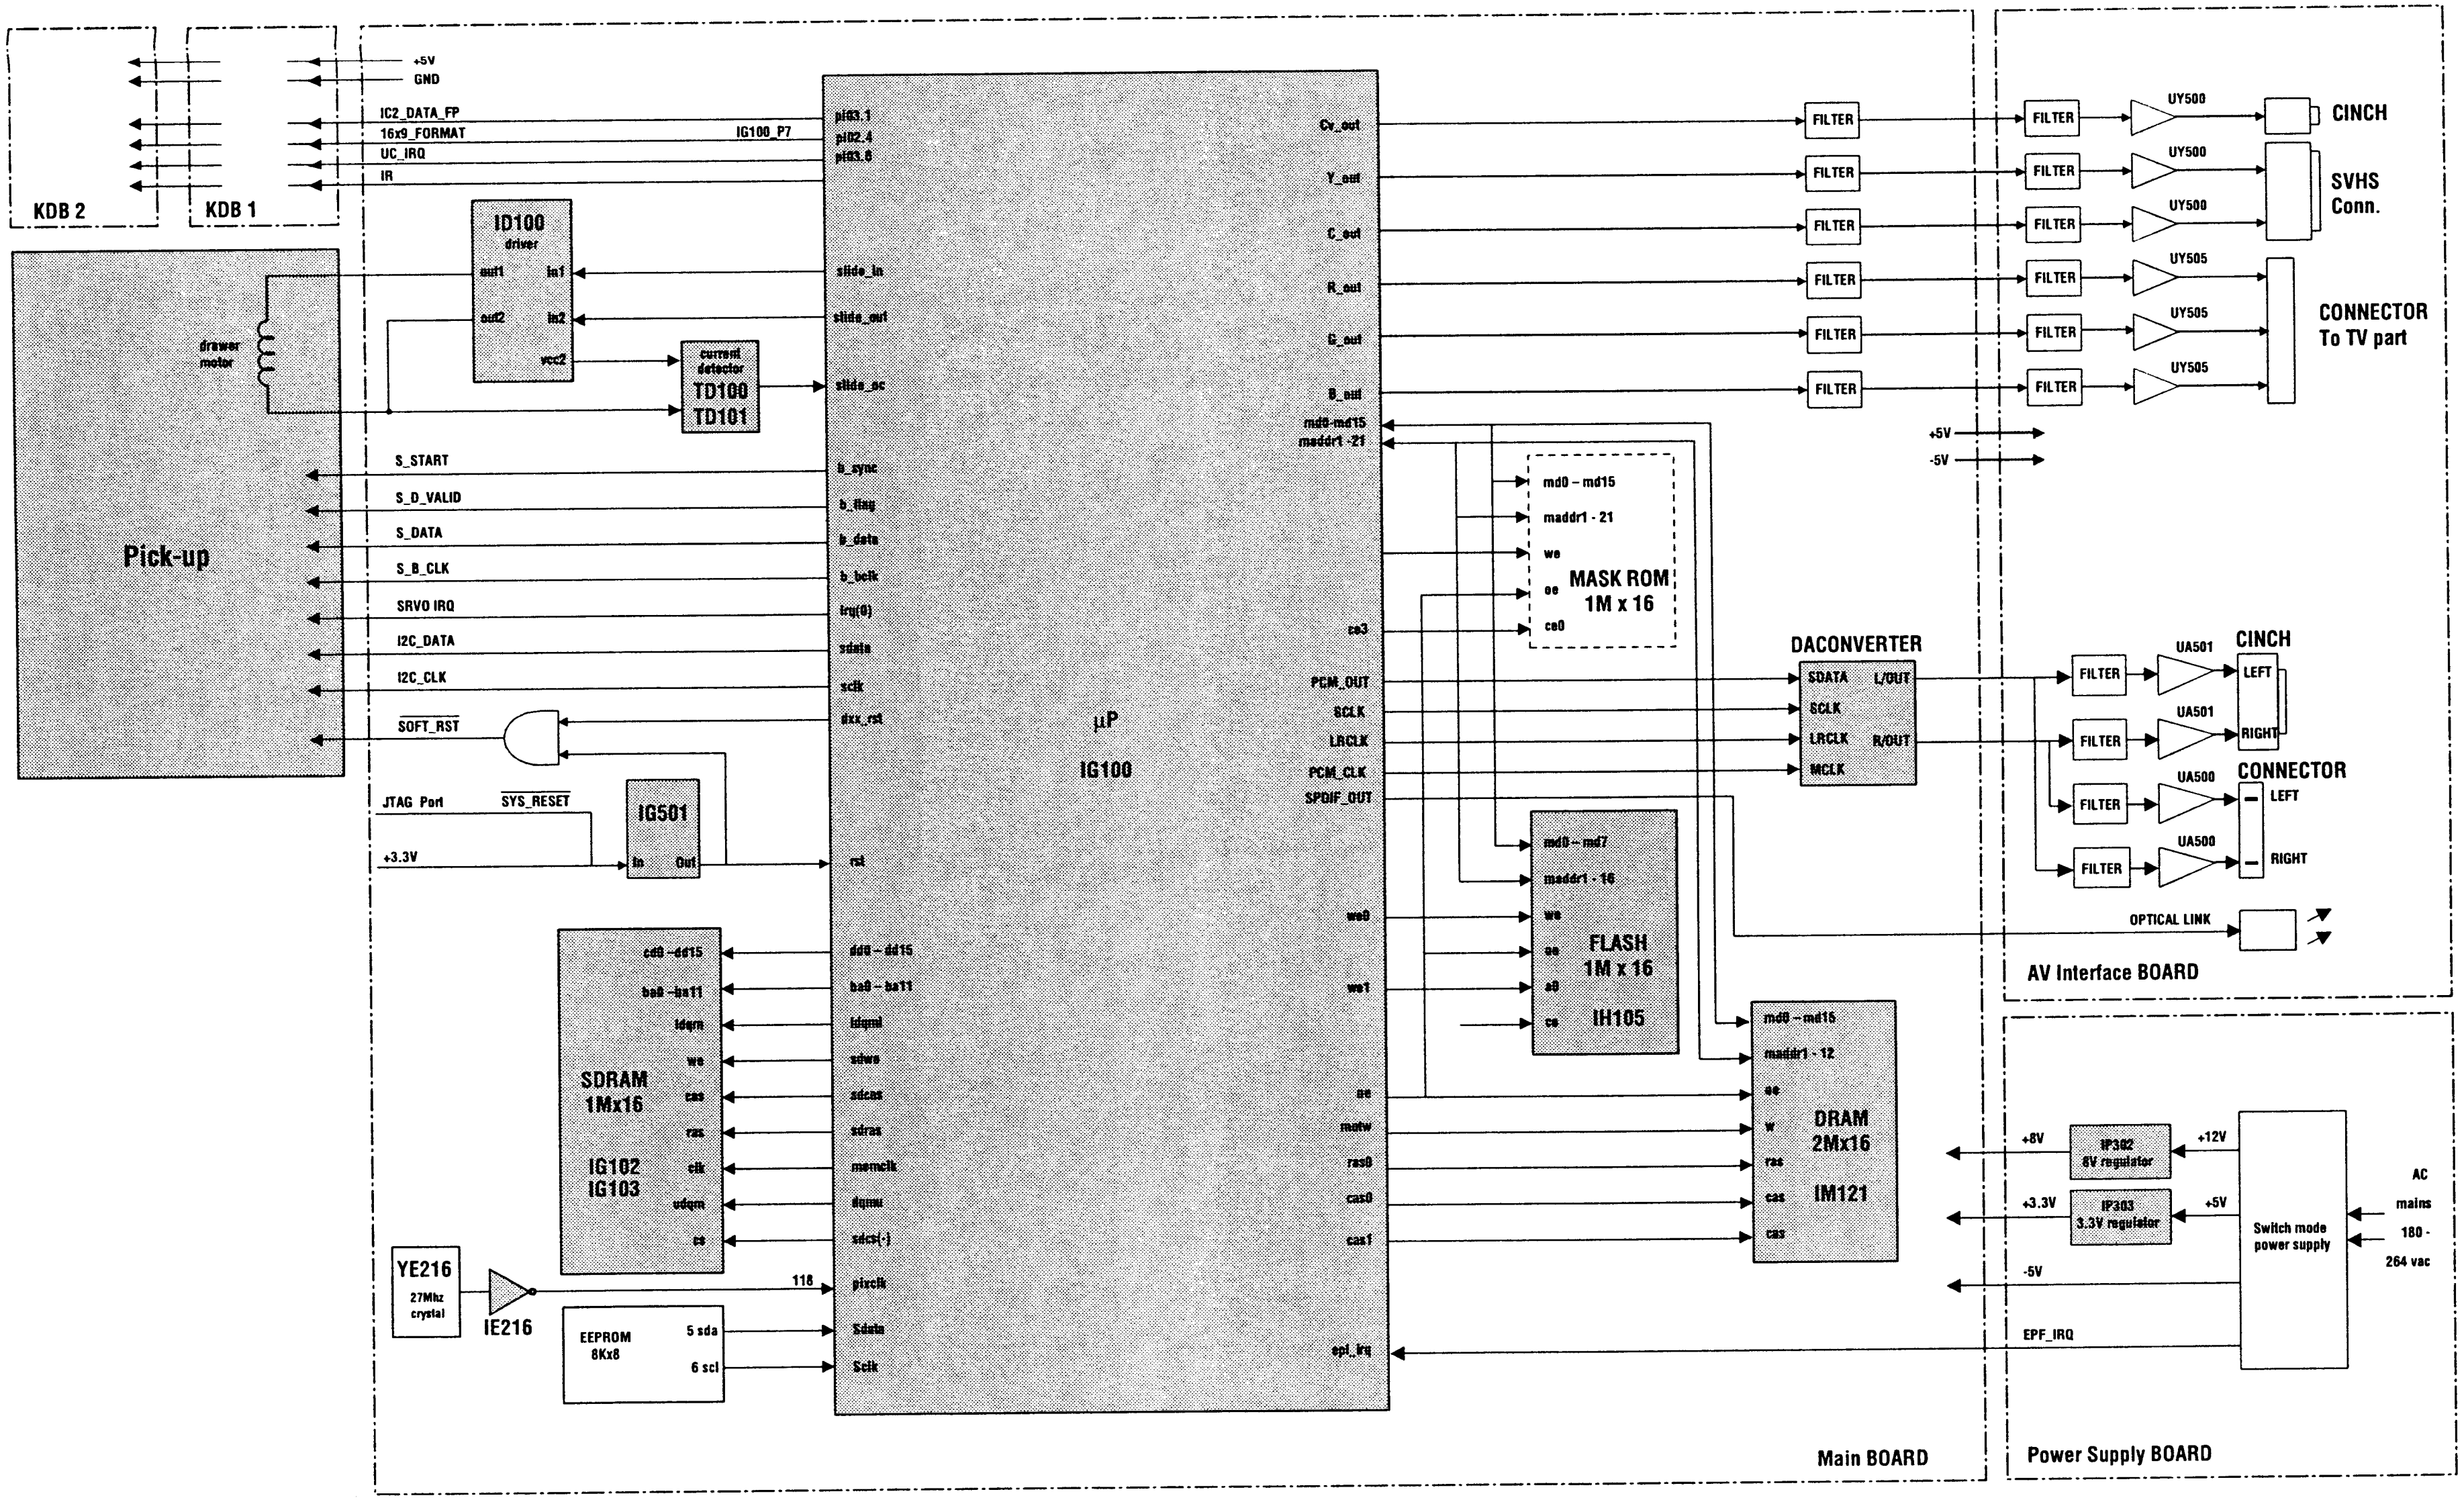
KDB 2
KDB 1
+5V
GND
IC2_DATA_FP
16x9_FORMAT
UC_IRQ
IR
IG100_P7
pi03.1
pi02.4
pi03.8
ID100
driver
out1
in1
out2
in2
vcc2
drawer motor
current detector
TD100
TD101
slide_in
slide_out
slide_oc
Pick-up
S_START
S_D_VALID
S_DATA
S_B_CLK
SRVO IRQ
I2C_DATA
I2C_CLK
SOFT_RST
b_sync
b_flag
b_data
b_bclk
irq(0)
sdata
sclk
dxx_rst
JTAG Port
SYS_RESET
+3.3V
IG501
In
Out
rst
µP
IG100
SDRAM
1Mx16
IG102
IG103
cd0 –dd15
ba0 –ba11
ldqm
we
cas
ras
clk
udqm
cs
dd0 – dd15
ba0 – ba11
ldqml
sdwe
sdcas
sdras
memclk
dqmu
sdcs(-)
YE216
27Mhz crystal
IE216
118
pixclk
EEPROM
8Kx8
5 sda
6 scl
Sdata
Sclk
Cv_out
Y_out
C_out
R_out
G_out
B_out
md0-md15
maddr1 -21
ce3
PCM_OUT
SCLK
LRCLK
PCM_CLK
SPDIF_OUT
we0
we1
oe
motw
ras0
cas0
cas1
epl_irq
md0 – md15
maddr1 - 21
we
oe
ce0
MASK ROM
1M x 16
md0 – md7
maddr1 - 16
we
oe
a0
ce
FLASH
1M x 16
IH105
md0 – md15
maddr1 - 12
oe
w
ras
cas
cas
DRAM
2Mx16
IM121
DACONVERTER
SDATA
SCLK
LRCLK
MCLK
L/OUT
R/OUT
FILTER
FILTER
FILTER
FILTER
FILTER
FILTER
+5V
-5V
Main BOARD
FILTER
UY500
CINCH
FILTER
UY500
SVHS Conn.
FILTER
UY500
FILTER
UY505
FILTER
UY505
CONNECTOR To TV part
FILTER
UY505
FILTER
UA501
CINCH
LEFT
FILTER
UA501
RIGHT
FILTER
UA500
CONNECTOR
LEFT
FILTER
UA500
RIGHT
OPTICAL LINK
AV Interface BOARD
+8V
IP302
8V regulator
+12V
+3.3V
IP303
3.3V regulator
+5V
-5V
EPF_IRQ
Switch mode power supply
AC mains 180 - 264 vac
Power Supply BOARD

WIRING DIAGRAM - SCHEMA D'INTERCONNEXIONS - VERDRAHTUNGSPLAN - DIAGRAMMA DELLE INTERCONNESSIONI - ESQUEMA DE INTERCONEXIONES

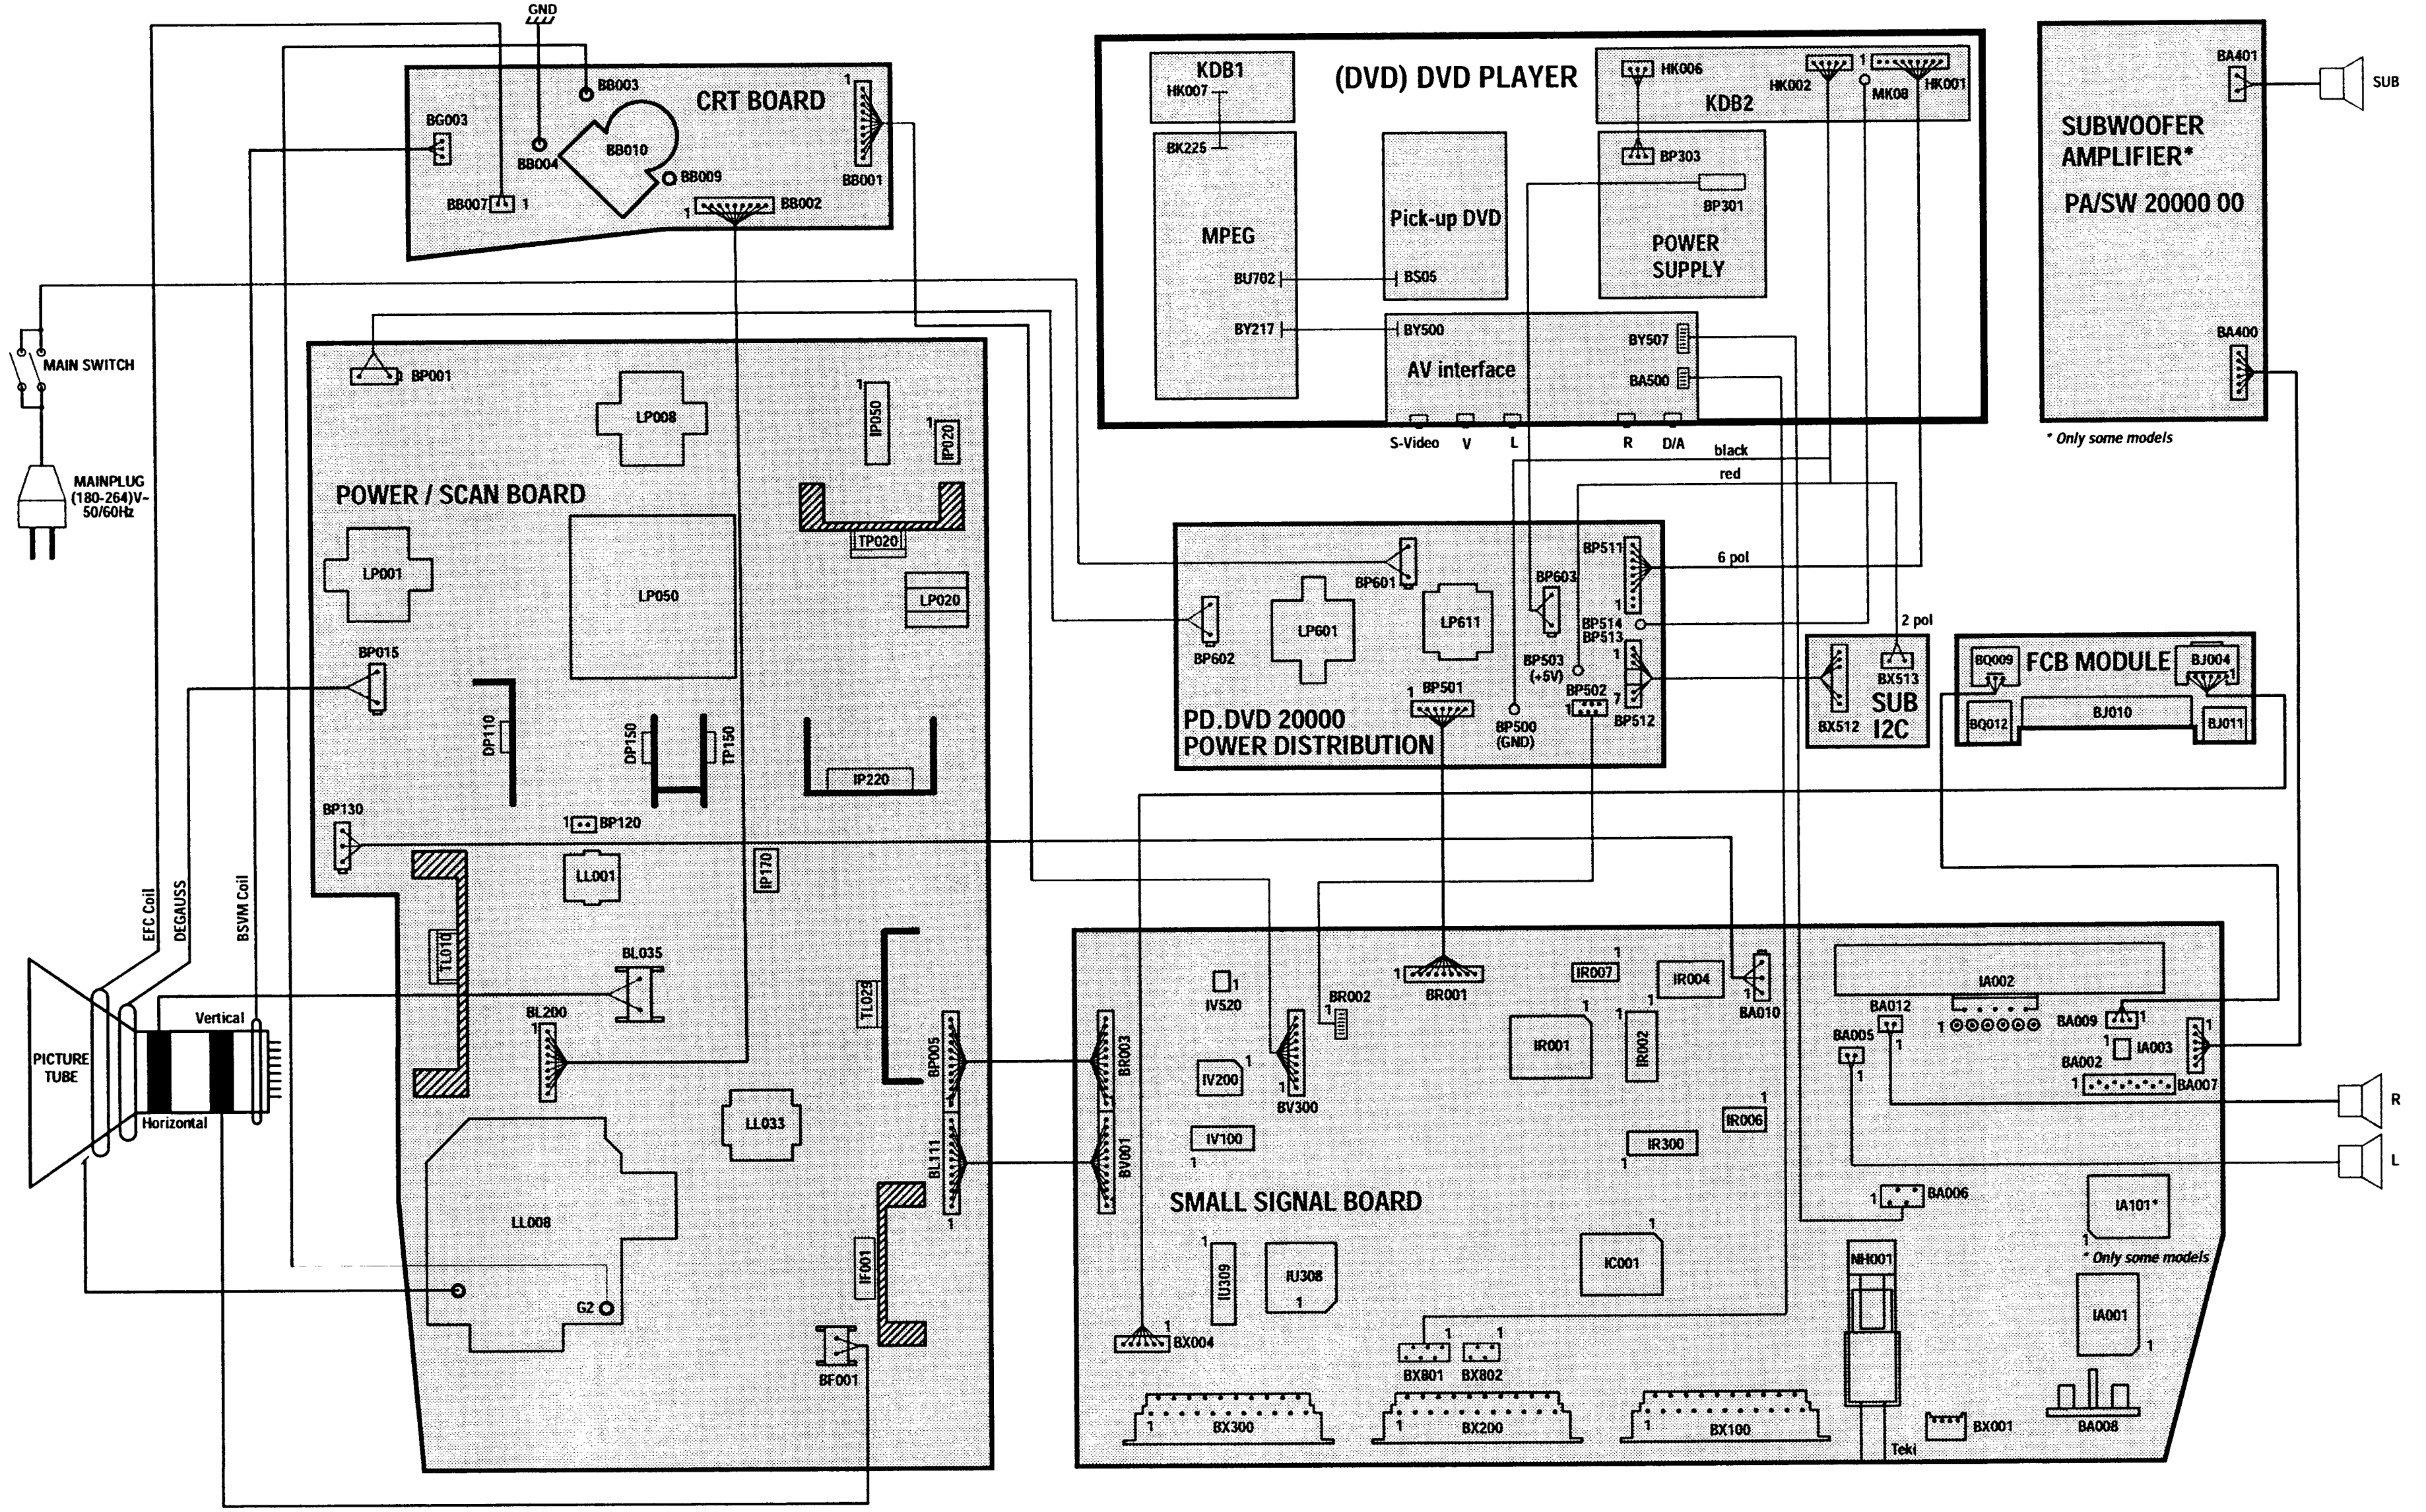
GND
CRT BOARD
BB003
BG003
BB004
BB010
BB009
BB007
1
BB002
BB001
MAIN SWITCH
MAINPLUG
(180-264)V~
50/60Hz
POWER / SCAN BOARD
BP001
LP008
BP050
IP020
TP020
LP001
LP050
LP020
BP015
DP110
DP150
TP150
IP220
BP130
BP120
LL001
IP170
EFC Coil
DEGAUSS
BSVM Coil
TL010
BL035
BL200
TL029
BP005
BL111
PICTURE
TUBE
Vertical
Horizontal
LL033
LL008
G2
IF001
BF001
KDB1
HK007
BK225
(DVD) DVD PLAYER
MPEG
BU702
BY217
Pick-up DVD
BS05
BY500
AV interface
BY507
BA500
S-Video
V
L
R
D/A
HK006
HK002
MK08
HK001
KDB2
BP303
BP301
POWER
SUPPLY
black
red
6 pol
2 pol
SUBWOOFER
AMPLIFIER*
PA/SW 20000 00
BA401
SUB
BA400
* Only some models
PD.DVD 20000
POWER DISTRIBUTION
BP601
BP602
LP601
LP611
BP603
BP511
BP514
BP513
BP503
(+5V)
BP501
BP500
(GND)
BP502
BP512
BX513
SUB
I2C
BX512
FCB MODULE
BQ009
BJ004
BQ012
BJ010
BJ011
SMALL SIGNAL BOARD
BR003
BV001
IV520
BR002
BR001
IR007
IR004
BA010
IA002
BA012
BA005
BA009
IA003
BA002
BA007
R
L
IV200
BV300
IR001
IR002
IV100
IR006
IR300
BA006
IA101*
* Only some models
IU309
IU308
IC001
NH001
IA001
BX004
BX801
BX802
BX300
BX200
BX100
Teki
BX001
BA008

WIRING DIAGRAM - SCHÉMA D'INTERCONNEXIONS - VERDRAHTUNGSPLAN - DIAGRAMMA DELLE INTERCONNESSIONI - ESQUEMA DE INTERCONEXIONES

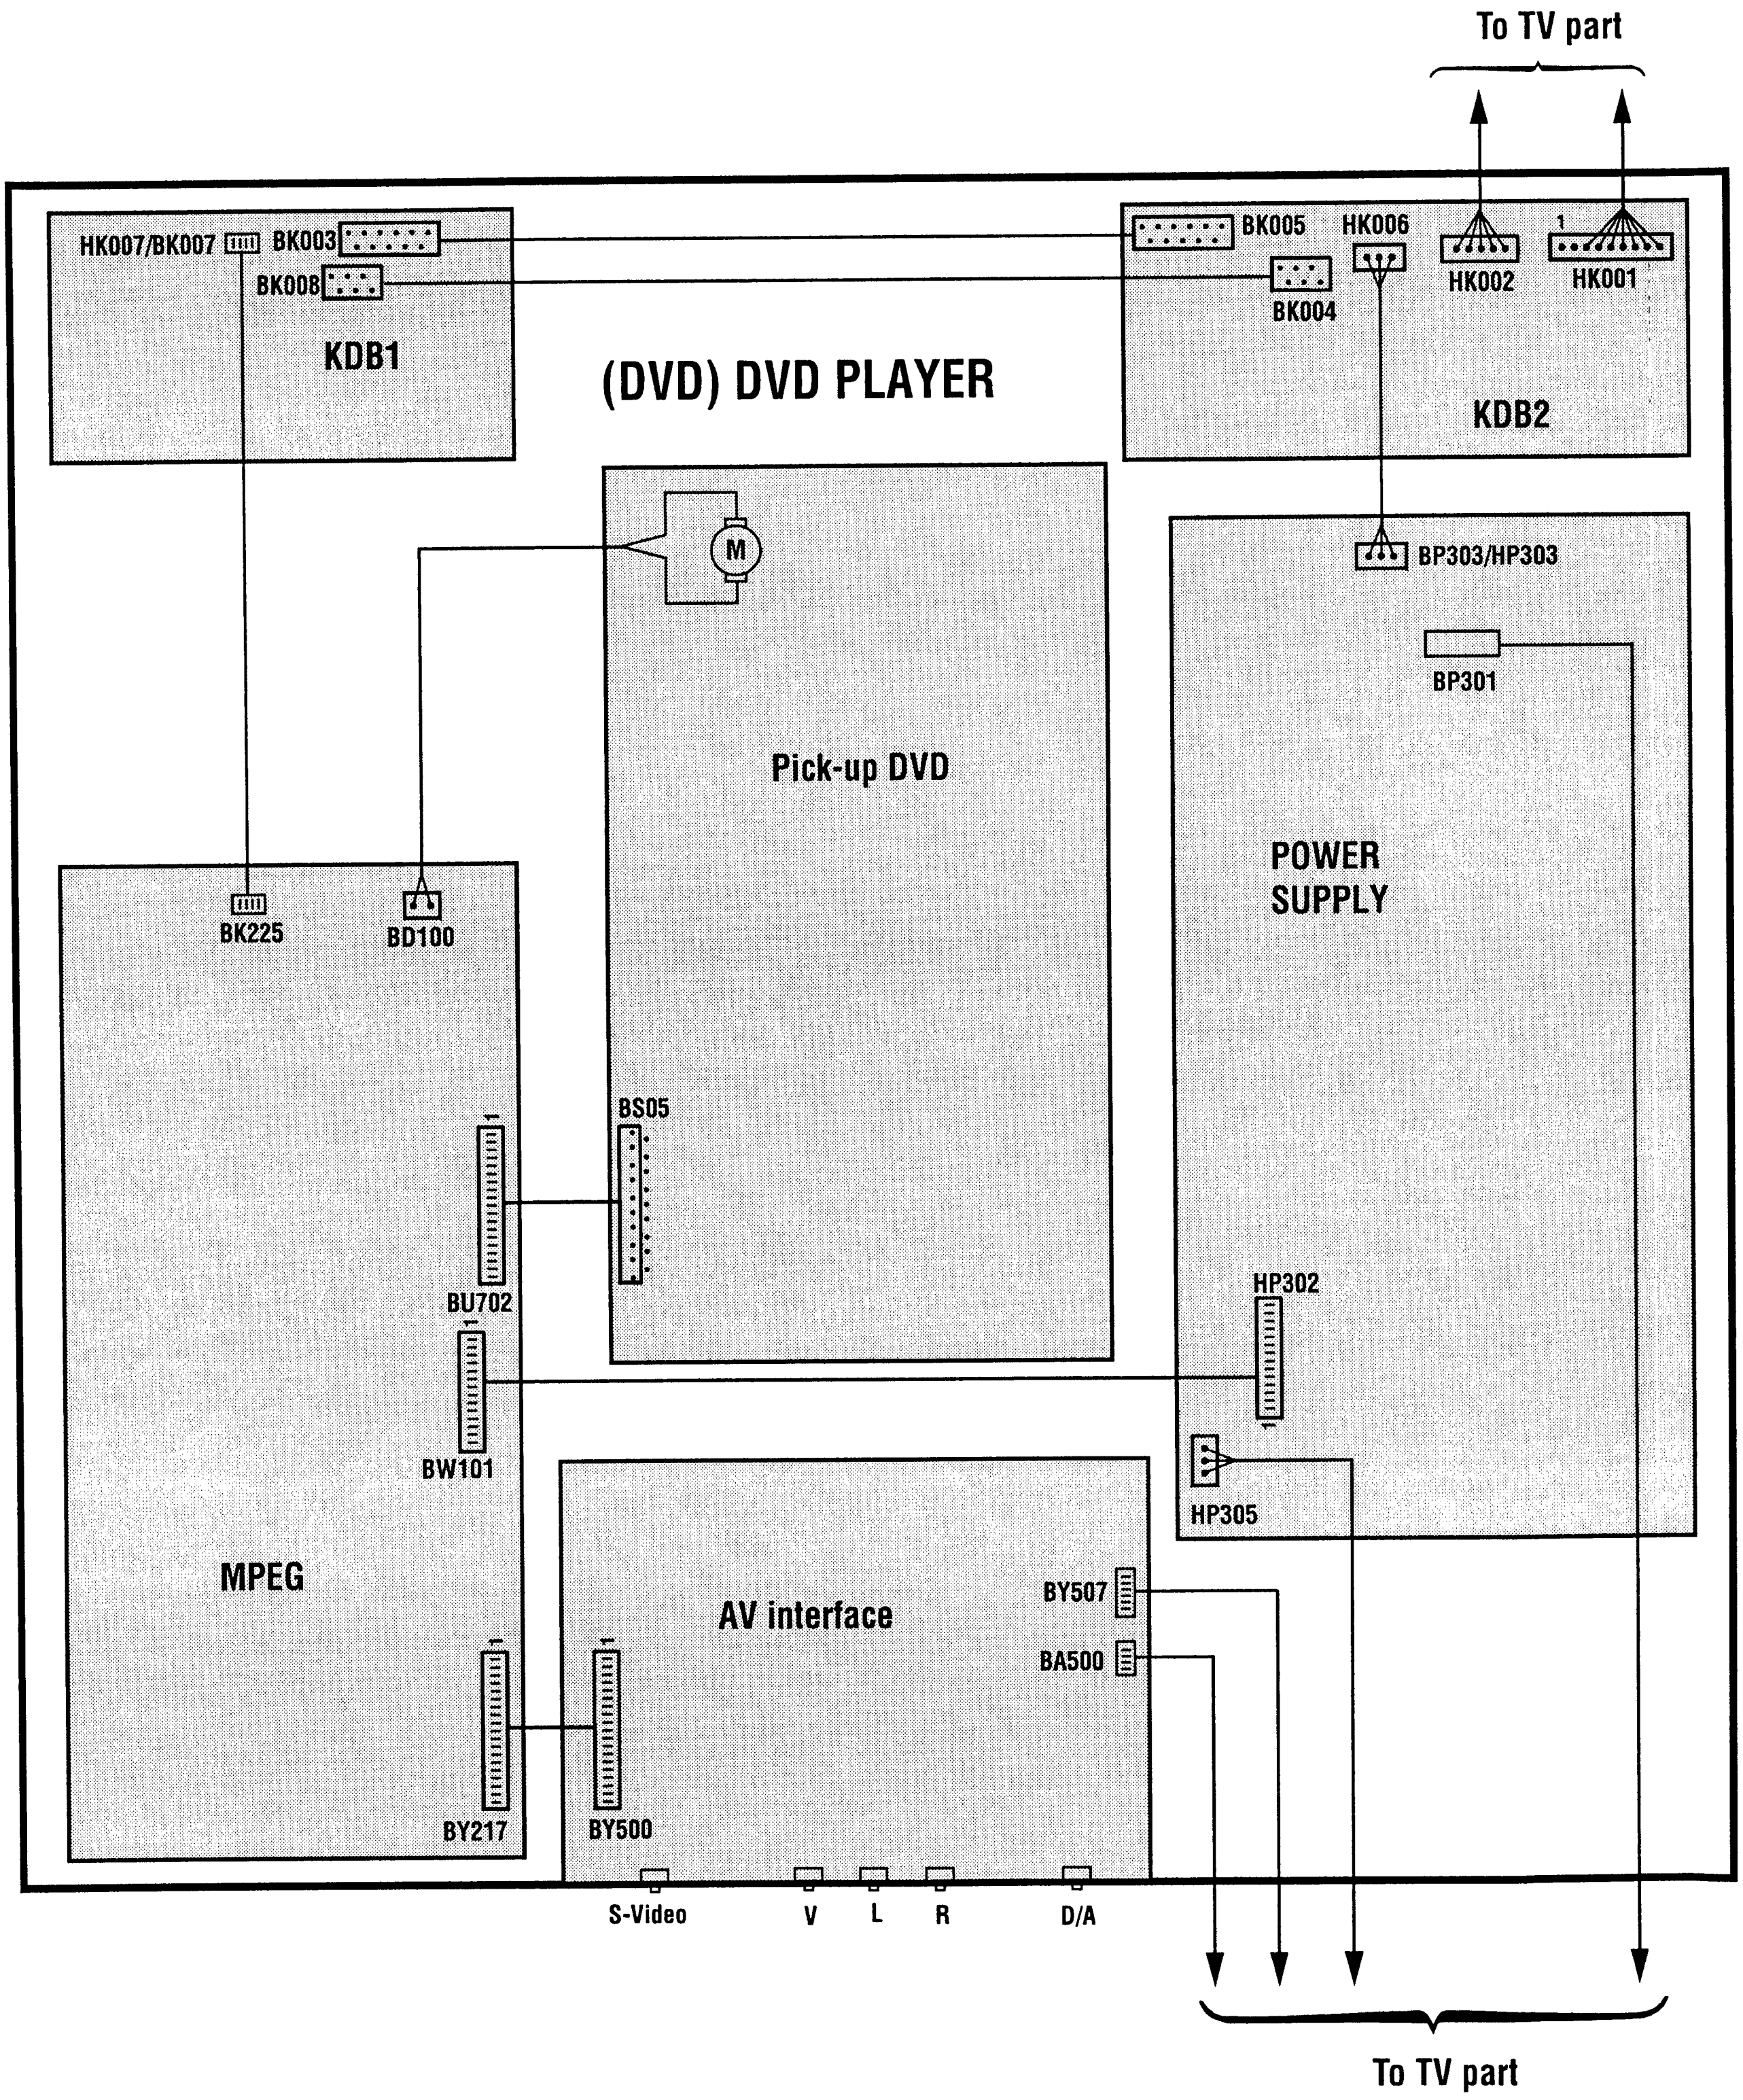
To TV part
HK007/BK007
BK003
BK008
KDB1
(DVD) DVD PLAYER
BK005
HK006
BK004
HK002
1
HK001
KDB2
M
BP303/HP303
BP301
Pick-up DVD
POWER SUPPLY
BK225
BD100
BS05
BU702
BW101
HP302
HP305
MPEG
AV interface
BY507
BA500
BY217
BY500
S-Video
V
L
R
D/A
To TV part

LIST OF ABBREVIATIONS - LISTE DES ABREVIATIONS - ABKÜRZUNGEN
LISTA DELLE ABBREVIAZIONI - LISTA DE ABREVIACIONES

ABL	AVERAGE BEAM CURRENT LIMITING
AQR_ON	DISABLE AQUISITION MODE REGUL. ENABLE PWM PULSE
AV1_8	PIN_8 DETECTOR
AV_LINK	AV_LINK DATAS VCR/TV
AV_R_ OUT	AUDIO RIGHT-OUT
AV_L_ OUT	AUDIO LEFT-OUT
AV_R_ IN	AUDIO RIGHT-IN
AV_L_ IN	AUDIO LEFT-IN
AV_B	BLUE SIGNAL FROM AV
AV_G	GREEN SIGNAL FROM AV
AV_R	RED SIGNAL FROM AV
AV_C_ IN	CHROMA-IN
AV_FB	FAST BLANK SIGNAL FROM AV SCART
AV_Y_ IN	VIDEO-IN
BEAM_INFO	BEAM CURRENT INFORMATION
BLKCURR	CUT OFF CURRENT
B_TXT	BLUE SIGNAL OUTPUT (TEXT)
B_OUT	BLUE SIGNAL TO VIDEO AMPLIFIER
BREATHING	COMPENSATE BREATHING PICTURE SIGNAL
BSVM	BEAM SCAN VELOCITY MODULATION
CNT1_20V	SAFETY SIGNAL TO INSURE A GOOD CONNECTION BETWEEN SIGNAL BOARD AND POWER BOARD (BV001- BL111)
CNT2_20V	SAFETY SIGNAL TO INSURE A GOOD CONNECTION BETWEEN SIGNAL BOARD AND POWER BOARD (BR003- BP005)
CRT	CATHODE RAY TUBE
CVBS	VIDEO
CVBS_LB_DET	LETTERBOX VIDEO DETECTION
DEFL_SAFETY	SAFETY INFORMATION FROM DEFLECTION
DEGAUSS	DEGAUSS SIGNAL
DPC	DYNAMIC PHASE COMPENSATION SIGNAL
EFC	EARTH FIELD CORRECTION
EHT	EXTREMELY HIGH TENSION
E.W_DRIVE	EAST - WEST DRIVE SIGNAL
EW_PROT	SAFETY SIGNAL FROM DIODE MODULATOR
FB DETEC	FAST BLANKING DETECT
FB_TXT	FAST BLANKING (TEXT)
FW ADJ.	FULL WHITE ADJUSTMENT
G_OUT	GREEN SIGNAL TO VIDEO AMPLIFIER
G_TXT	GREEN SIGNAL OUTPUT (TEXT)
H_DRIVE	DRIVE SIGNAL FOR HORIZONTAL DEFLECTION
HEATER	HEATER OUTPUT FROM THE DST TO CRT
H DEFL. PROT.	HORIZONTAL DEFLECTION PROTECTION
IIC-CL-1	I2C CLOCK BUS 1
IIC-CL-2	I2C CLOCK BUS 2
INF_POW_FAIL	POWER FAIL INFORMATION
IR	INFRARED RECEIVER
LDR	LED DISPLAY
MUTE	MUTES AUDIO AMPLFIERS
NMI	NON MASKABLE INTERRUPT
PAN_SWITCH	SIGNAL FOR PANORAMA CIRCUIT
PHI2_REF	PHI2 REFERENCE SIGNAL
PIF	PICTURE IF SIGNAL
PKS	PEAK SENSING
PO	POWER ON
PWM	PULSE WIDTH MODULATION
RES_MSP	MSP RESET
RESET	RESET TO MICROPROCESSOR
ROTATION	OUTPUT OF EARTH FIELD CORRECTION STAGE
R_OUT	RED SIGNAL TO VIDEO AMPLIFIER
R_TXT	RED SIGNAL OUTPUT (TEXT)
PIF	PICTURE IF SIGNAL
SIF	SOUND IF SIGNAL
SSC	SUPER SAND CASTLE
SSC_V_GUARD	SAFETY DATA GENERATED BY THE VERTICAL AMPLIFIER TDA8177F
TRAP_INFO	BG/L,L',D/K K' I SWITCH
+USYS	SYSTEM VOLTAGE
+/- UA	SOUND VOLTAGE
+UVERT	POSITIVE SUPPLY VERTICAL VOLTAGE
-UVERT	NEGATIVE SUPPLY VERTICAL VOLTAGE
+UVFB	POSITIVE SUPPLY VOLTAGE FOR VERTICAL POWER STAGE
+UVIDEO	VIDEO VOLTAGE FOR THE CRT BOARD
U_IN	U FROM CHROMA DECODER
V_IN	V FROM CHROMA DECODER
V_DRIVE	VERTICAL DEFLECTION DRIVE SIGNAL
Y_IN	Y FROM CHROMA DECODER
5 V	5V POWER SUPPLY SIGNAL BOARD
6 V	6V POWER SUPPLY
5V_UP	MICROPROCESSOR SUPPLY VOLTAGE
10 V	10V POWER SUPPLY
8 V	8V SUPPLY SIGNAL BOARD
8V_STBY	8V STANDBY
40V	SUPPLY VOLTAGE TUNER
20V	SUPPLY VOLTAGE HORIZONTAL DRIVER AND BSVM CRT

INTEGRATED CIRCUITS AND TRANSISTORS OUTLINE - CIRCUITS INTEGRES ET TRANSISTORS
INTEGRIERTE SCHALTUNGEN UND TRANSISTOREN - CIRCUITI INTEGRATI TRANSISTOR
CIRCUITOS INTEGRADOS Y TRANSISTORES



TDA 8139
TDA6111Q
TEA5101B



TDA 8177



TDA7269



4N25TV



K324PG
M24C32BNI
MC7805CT
MC7812CT
MC33076/P1
ST24C04-B1
TDA4605
X24164



TL084C



STV2145



TEA6415C



TDA9811

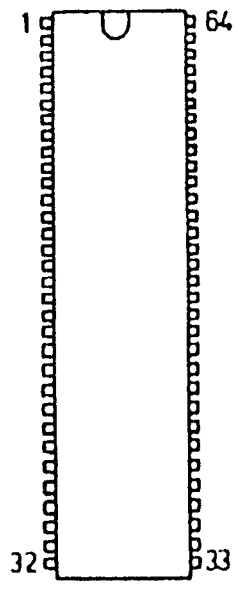

MPS3400
MPS3410

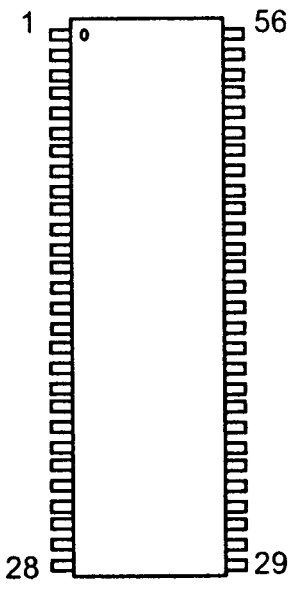

STV2040
STV2162

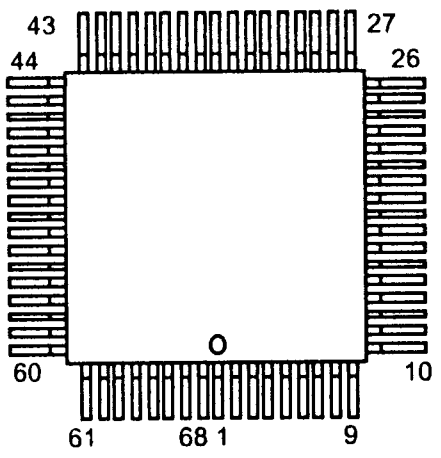
43
27
44
26
60
10
61
68 1
9

MS3400C-PS
MSP3410D-PS
ST90R92

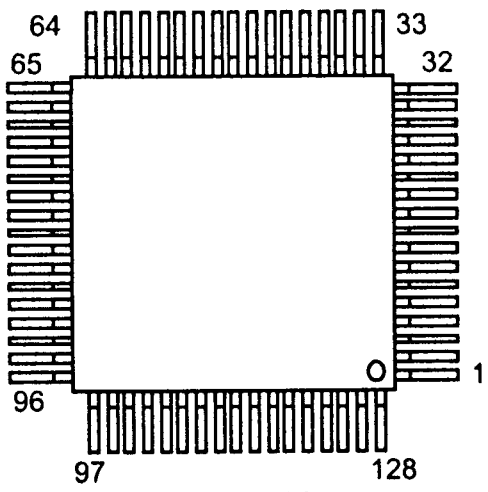
64
33
65
32
1
96
97
128

IC-QP128

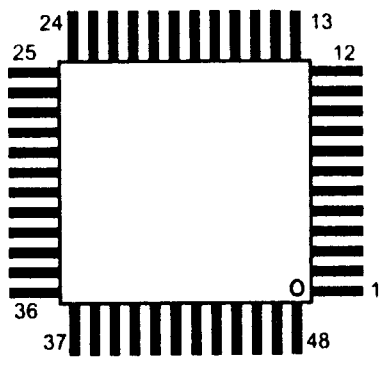
24
13
25
12
36
1
37
48

MC141627



BCR141- BC846B
BC 847B-BC856B
BC857B-BF 799
BC 848 A/B/C



BC368
BC639
BF421
BF 422
BF423



BC327
BC 337
BC547B
BC557B
BC 548B
BC 558B



2SA1837
2SC4793
2SC3675
BD 241
TIP122



BUL810TH
BUV48CFITH16
BW93CFI
BW94CFI
ON4977



7805
7812
L7912CV



BT806 -600C



STP6 NA60F1
STP22NE03L
2SK1460



TR03-400T

INTEGRATED CIRCUITS BLOCK DIAGRAMS - SYNOPTIQUES INTERNES DES CIRCUITS INTEGRES - INTEGRIERTE SCHALTUNGEN BLOCKSCHALTBILDER SCHEMA A BLOCCHI DEL CIRCUITI INTEGRATI - VISTA INTERNA DE LOS CIRCUITOS INTEGRADOS

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE -NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

IP020 - VIPER20DIP

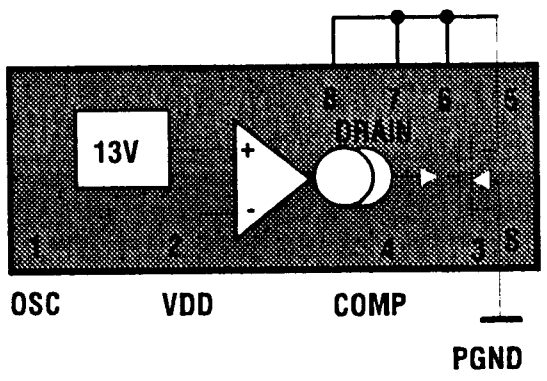
13V
+
-
DRAIN
8
7
6
5
1
2
4
3
S
OSC
VDD
COMP
PGND

IF001 - TDA8177F

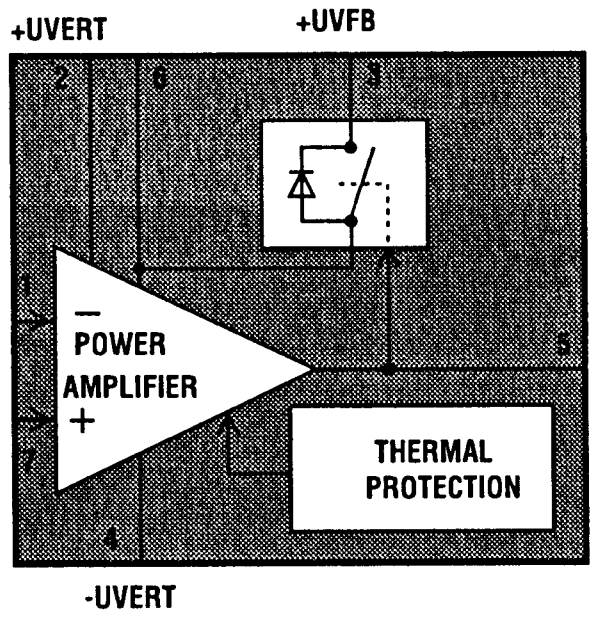
+UVERT
+UVFB
2
6
3
1
−
POWER
AMPLIFIER
+
7
5
THERMAL
PROTECTION
4
-UVERT

IP050 - TEA2262

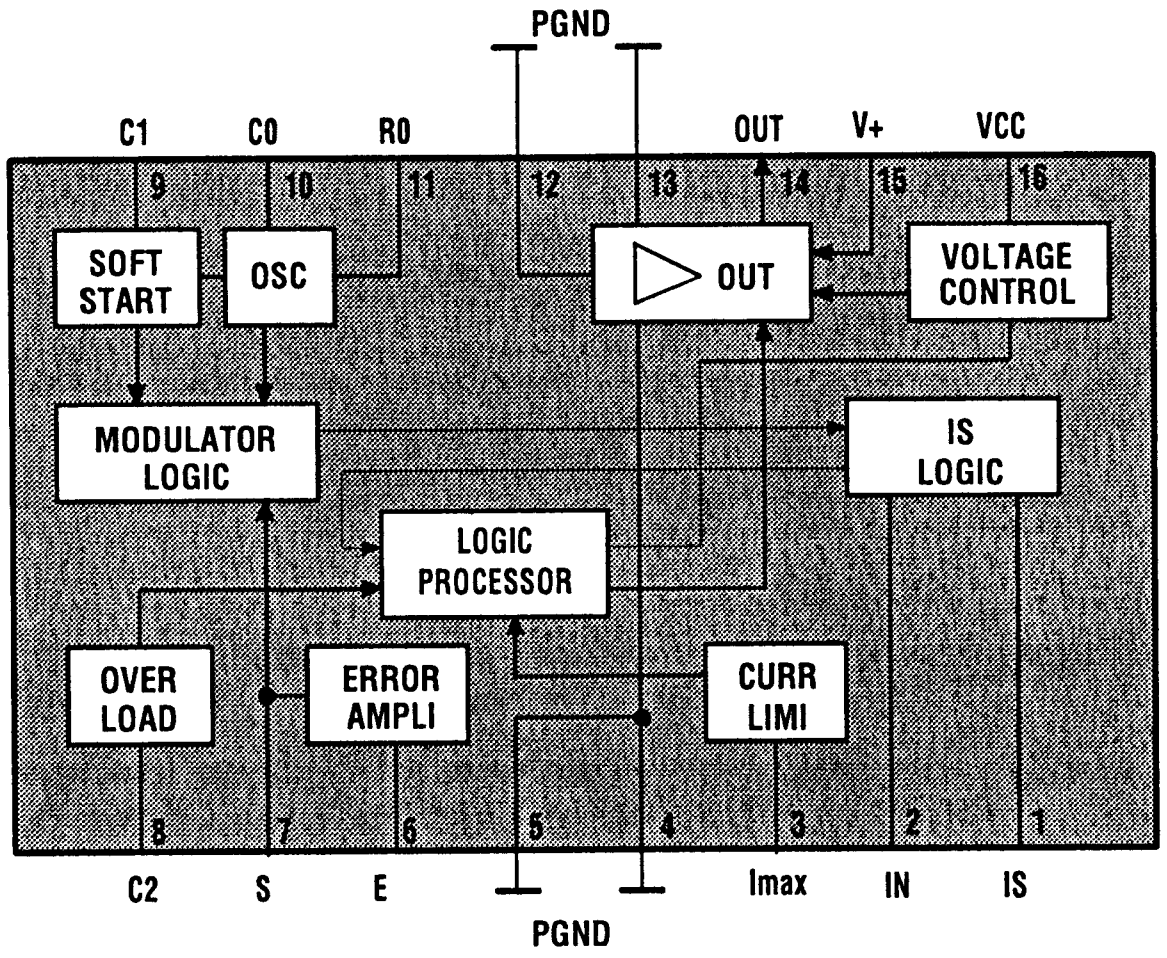
PGND
C1
C0
R0
OUT
V+
VCC
9
10
11
12
13
14
15
16
SOFT
START
OSC
OUT
VOLTAGE
CONTROL
MODULATOR
LOGIC
IS
LOGIC
LOGIC
PROCESSOR
OVER
LOAD
ERROR
AMPLI
CURR
LIMI
8
7
6
5
4
3
2
1
C2
S
E
Imax
IN
IS
PGND

IP220 - TDA8139

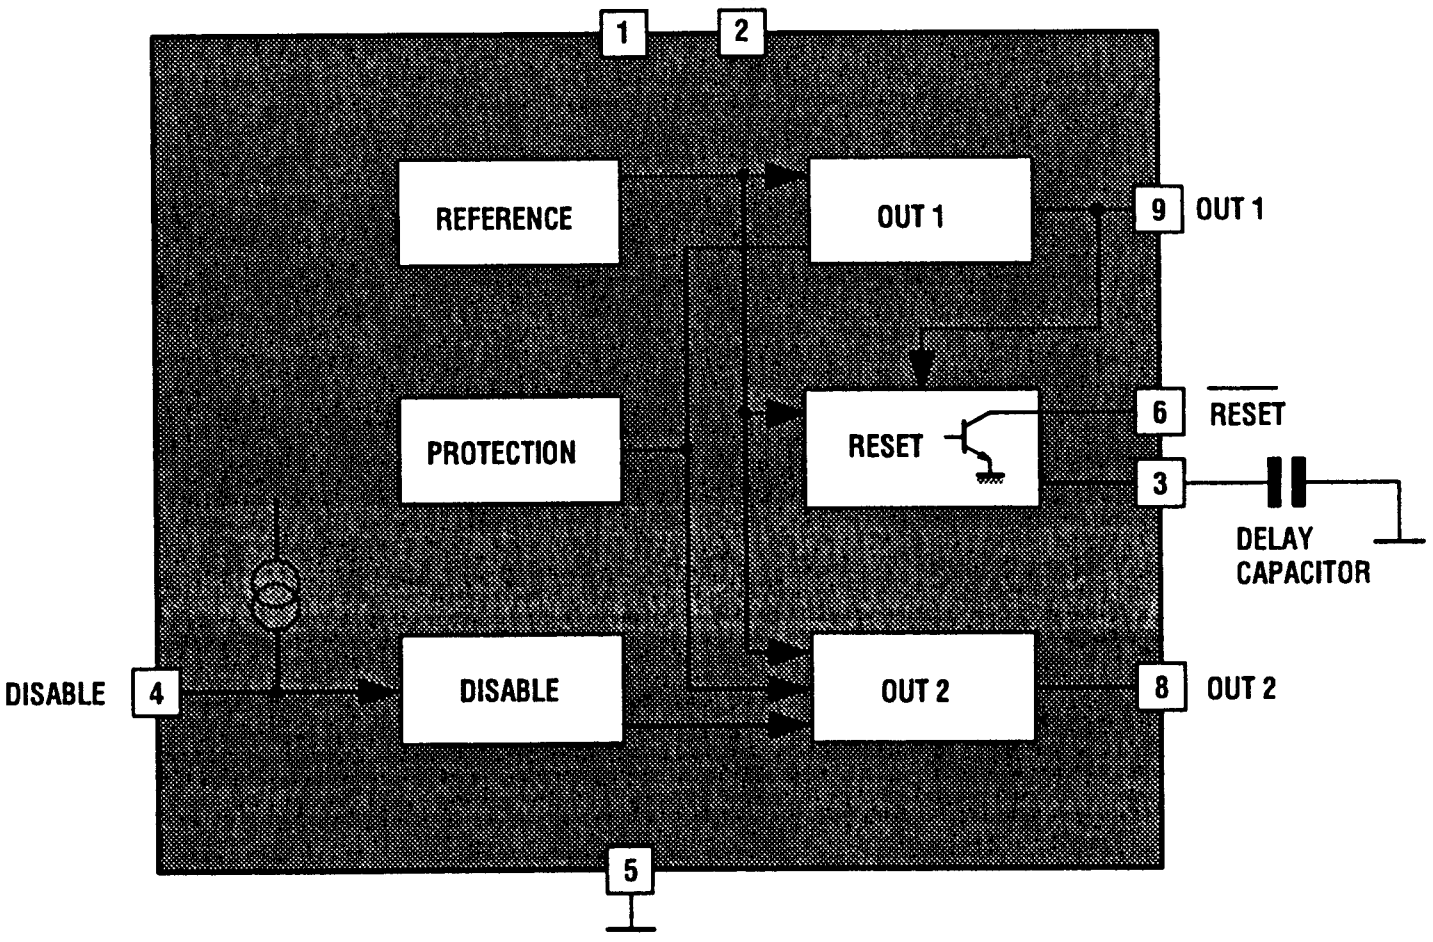
IN1
IN2
1
2
REFERENCE
OUT 1
9
OUT 1
PROTECTION
RESET
6
RESET
3
DELAY
CAPACITOR
DISABLE
4
DISABLE
OUT 2
8
OUT 2
5

INTEGRATED CIRCUITS BLOCK DIAGRAMS - SYNOPTIQUES INTERNES DES CIRCUITS INTEGRES - INTEGRIERTE SCHALTUNGEN BLOCKSCHALTBILDER
SCHEMA A BLOCCHI DEL CIRCUITI INTEGRATI - VISTA INTERNA DE LOS CIRCUITOS INTEGRADOS

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL

IC001 - TDA9321H

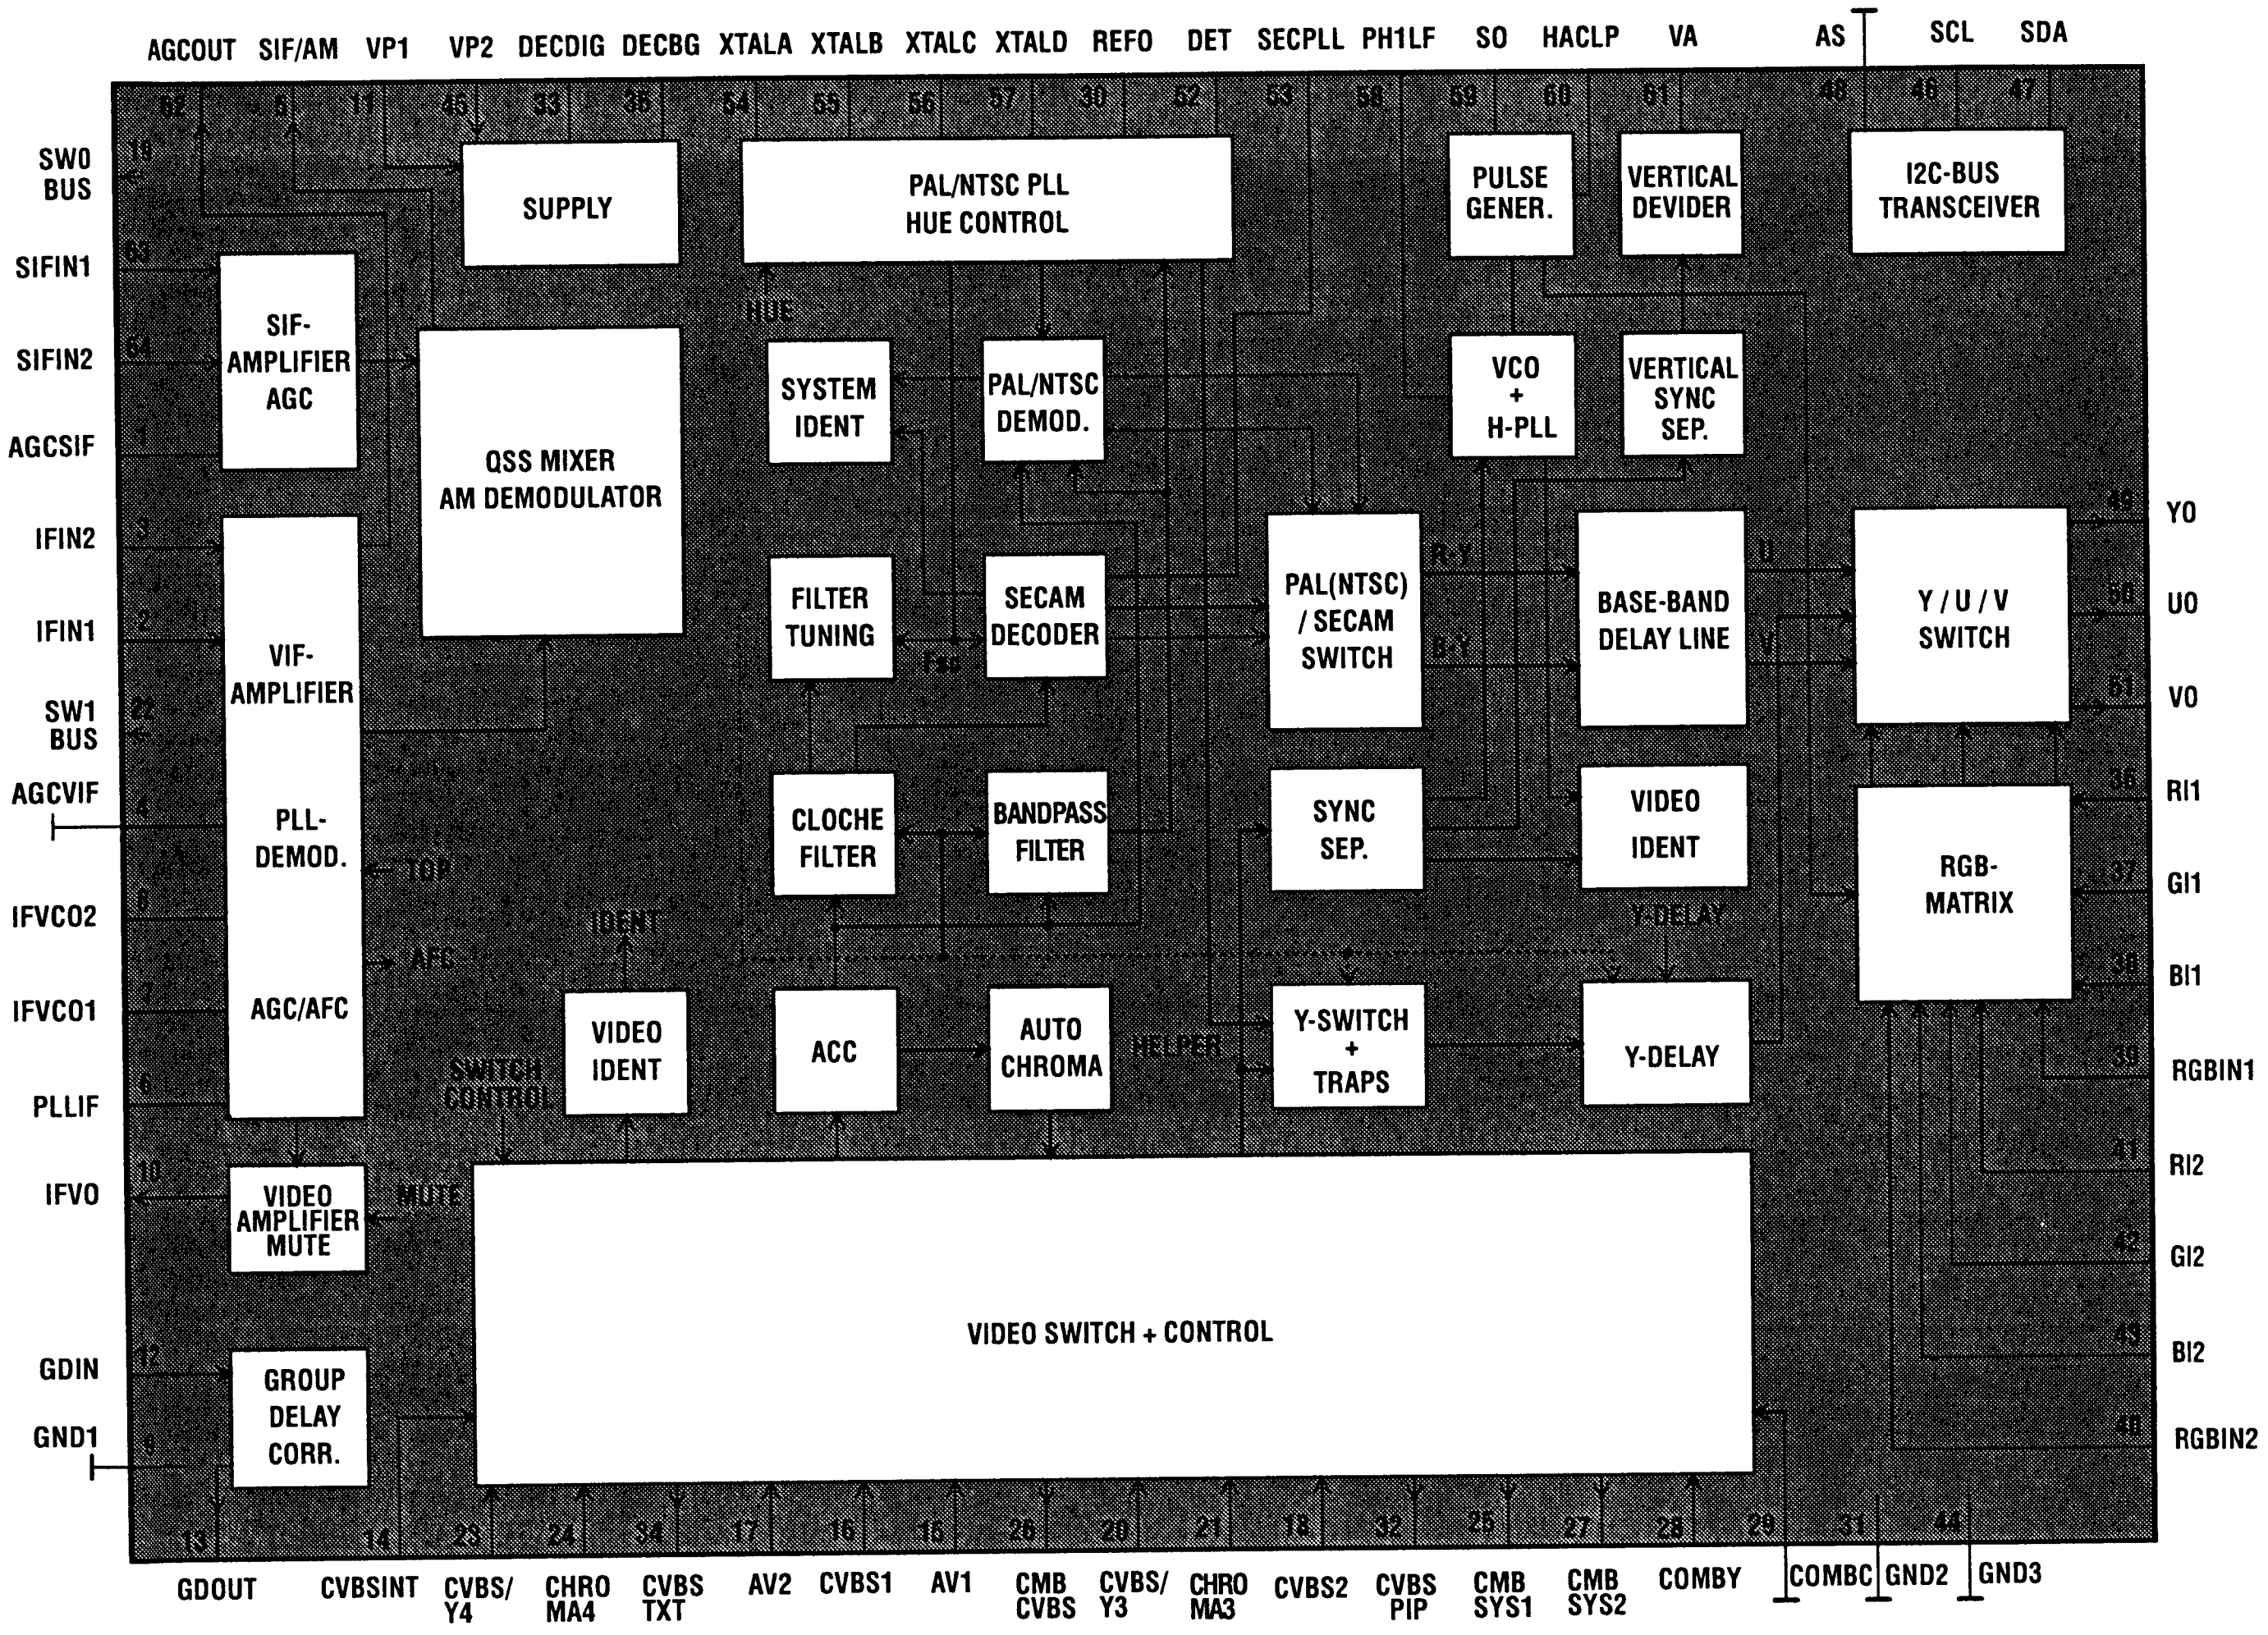
AGCOUT
SIF/AM
VP1
VP2
DECDIG
DECBG
XTALA
XTALB
XTALC
XTALD
REFO
DET
SECPLL
PH1LF
SO
HACLP
VA
AS
SCL
SDA
SW0 BUS
SIFIN1
SIFIN2
AGCSIF
IFIN2
IFIN1
SW1 BUS
AGCVIF
IFVCO2
IFVCO1
PLLIF
IFVO
GDIN
GND1
SUPPLY
PAL/NTSC PLL HUE CONTROL
PULSE GENER.
VERTICAL DEVIDER
I2C-BUS TRANSCEIVER
SIF-AMPLIFIER AGC
QSS MIXER AM DEMODULATOR
HUE
SYSTEM IDENT
PAL/NTSC DEMOD.
VCO + H-PLL
VERTICAL SYNC SEP.
VIF-AMPLIFIER
PLL-DEMOD.
AGC/AFC
FILTER TUNING
SECAM DECODER
Fsc
PAL(NTSC) / SECAM SWITCH
R-Y
B-Y
U
V
BASE-BAND DELAY LINE
Y / U / V SWITCH
CLOCHE FILTER
BANDPASS FILTER
SYNC SEP.
VIDEO IDENT
RGB-MATRIX
TOP
AFC
IDENT
Y-DELAY
VIDEO IDENT
ACC
AUTO CHROMA
HELPER
Y-SWITCH + TRAPS
Y-DELAY
SWITCH CONTROL
VIDEO AMPLIFIER MUTE
MUTE
VIDEO SWITCH + CONTROL
GROUP DELAY CORR.
Y0
U0
V0
RI1
GI1
BI1
RGBIN1
RI2
GI2
BI2
RGBIN2
GDOUT
CVBSINT
CVBS/ Y4
CHRO MA4
CVBS TXT
AV2
CVBS1
AV1
CMB CVBS
CVBS/ Y3
CHRO MA3
CVBS2
CVBS PIP
CMB SYS1
CMB SYS2
COMBY
COMBC
GND2
GND3

IU308 - DMU0

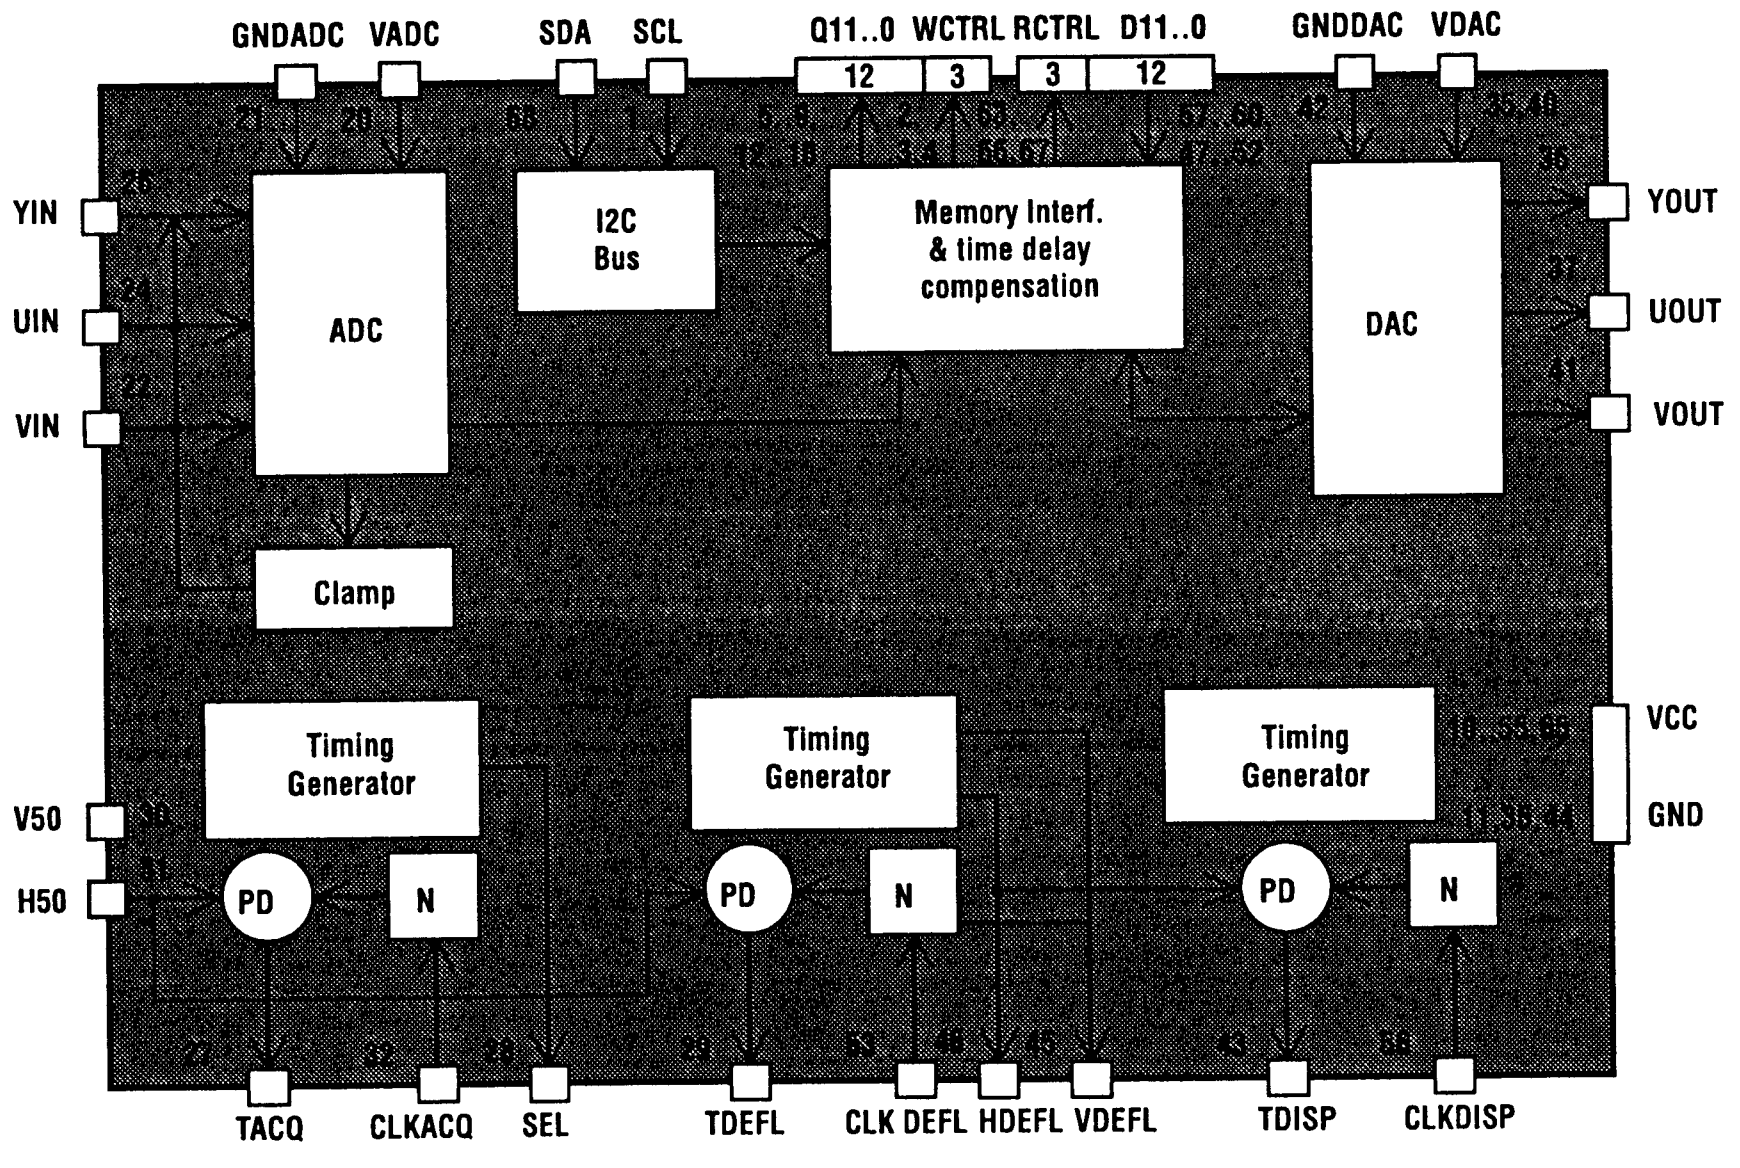
GNDADC
VADC
SDA
SCL
Q11..0
WCTRL
RCTRL
D11..0
GNDDAC
VDAC
12
3
3
12
YIN
UIN
VIN
ADC
I2C Bus
Memory Interf. & time delay compensation
DAC
YOUT
UOUT
VOUT
Clamp
Timing Generator
Timing Generator
Timing Generator
VCC
GND
V50
H50
PD
N
PD
N
PD
N
TACQ
CLKACQ
SEL
TDEFL
CLK DEFL
HDEFL
VDEFL
TDISP
CLKDISP

INTEGRATED CIRCUITS BLOCK DIAGRAMS - SYNOPTIQUES INTERNES DES CIRCUITS INTEGRES - INTEGRIERTE SCHALTUNGEN BLOCKSCHALTBILDER SCHEMA A BLOCCHI DEL CIRCUITI INTEGRATI - VISTA INTERNA DE LOS CIRCUITOS INTEGRADOS

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL

IV200 - TDA9330H

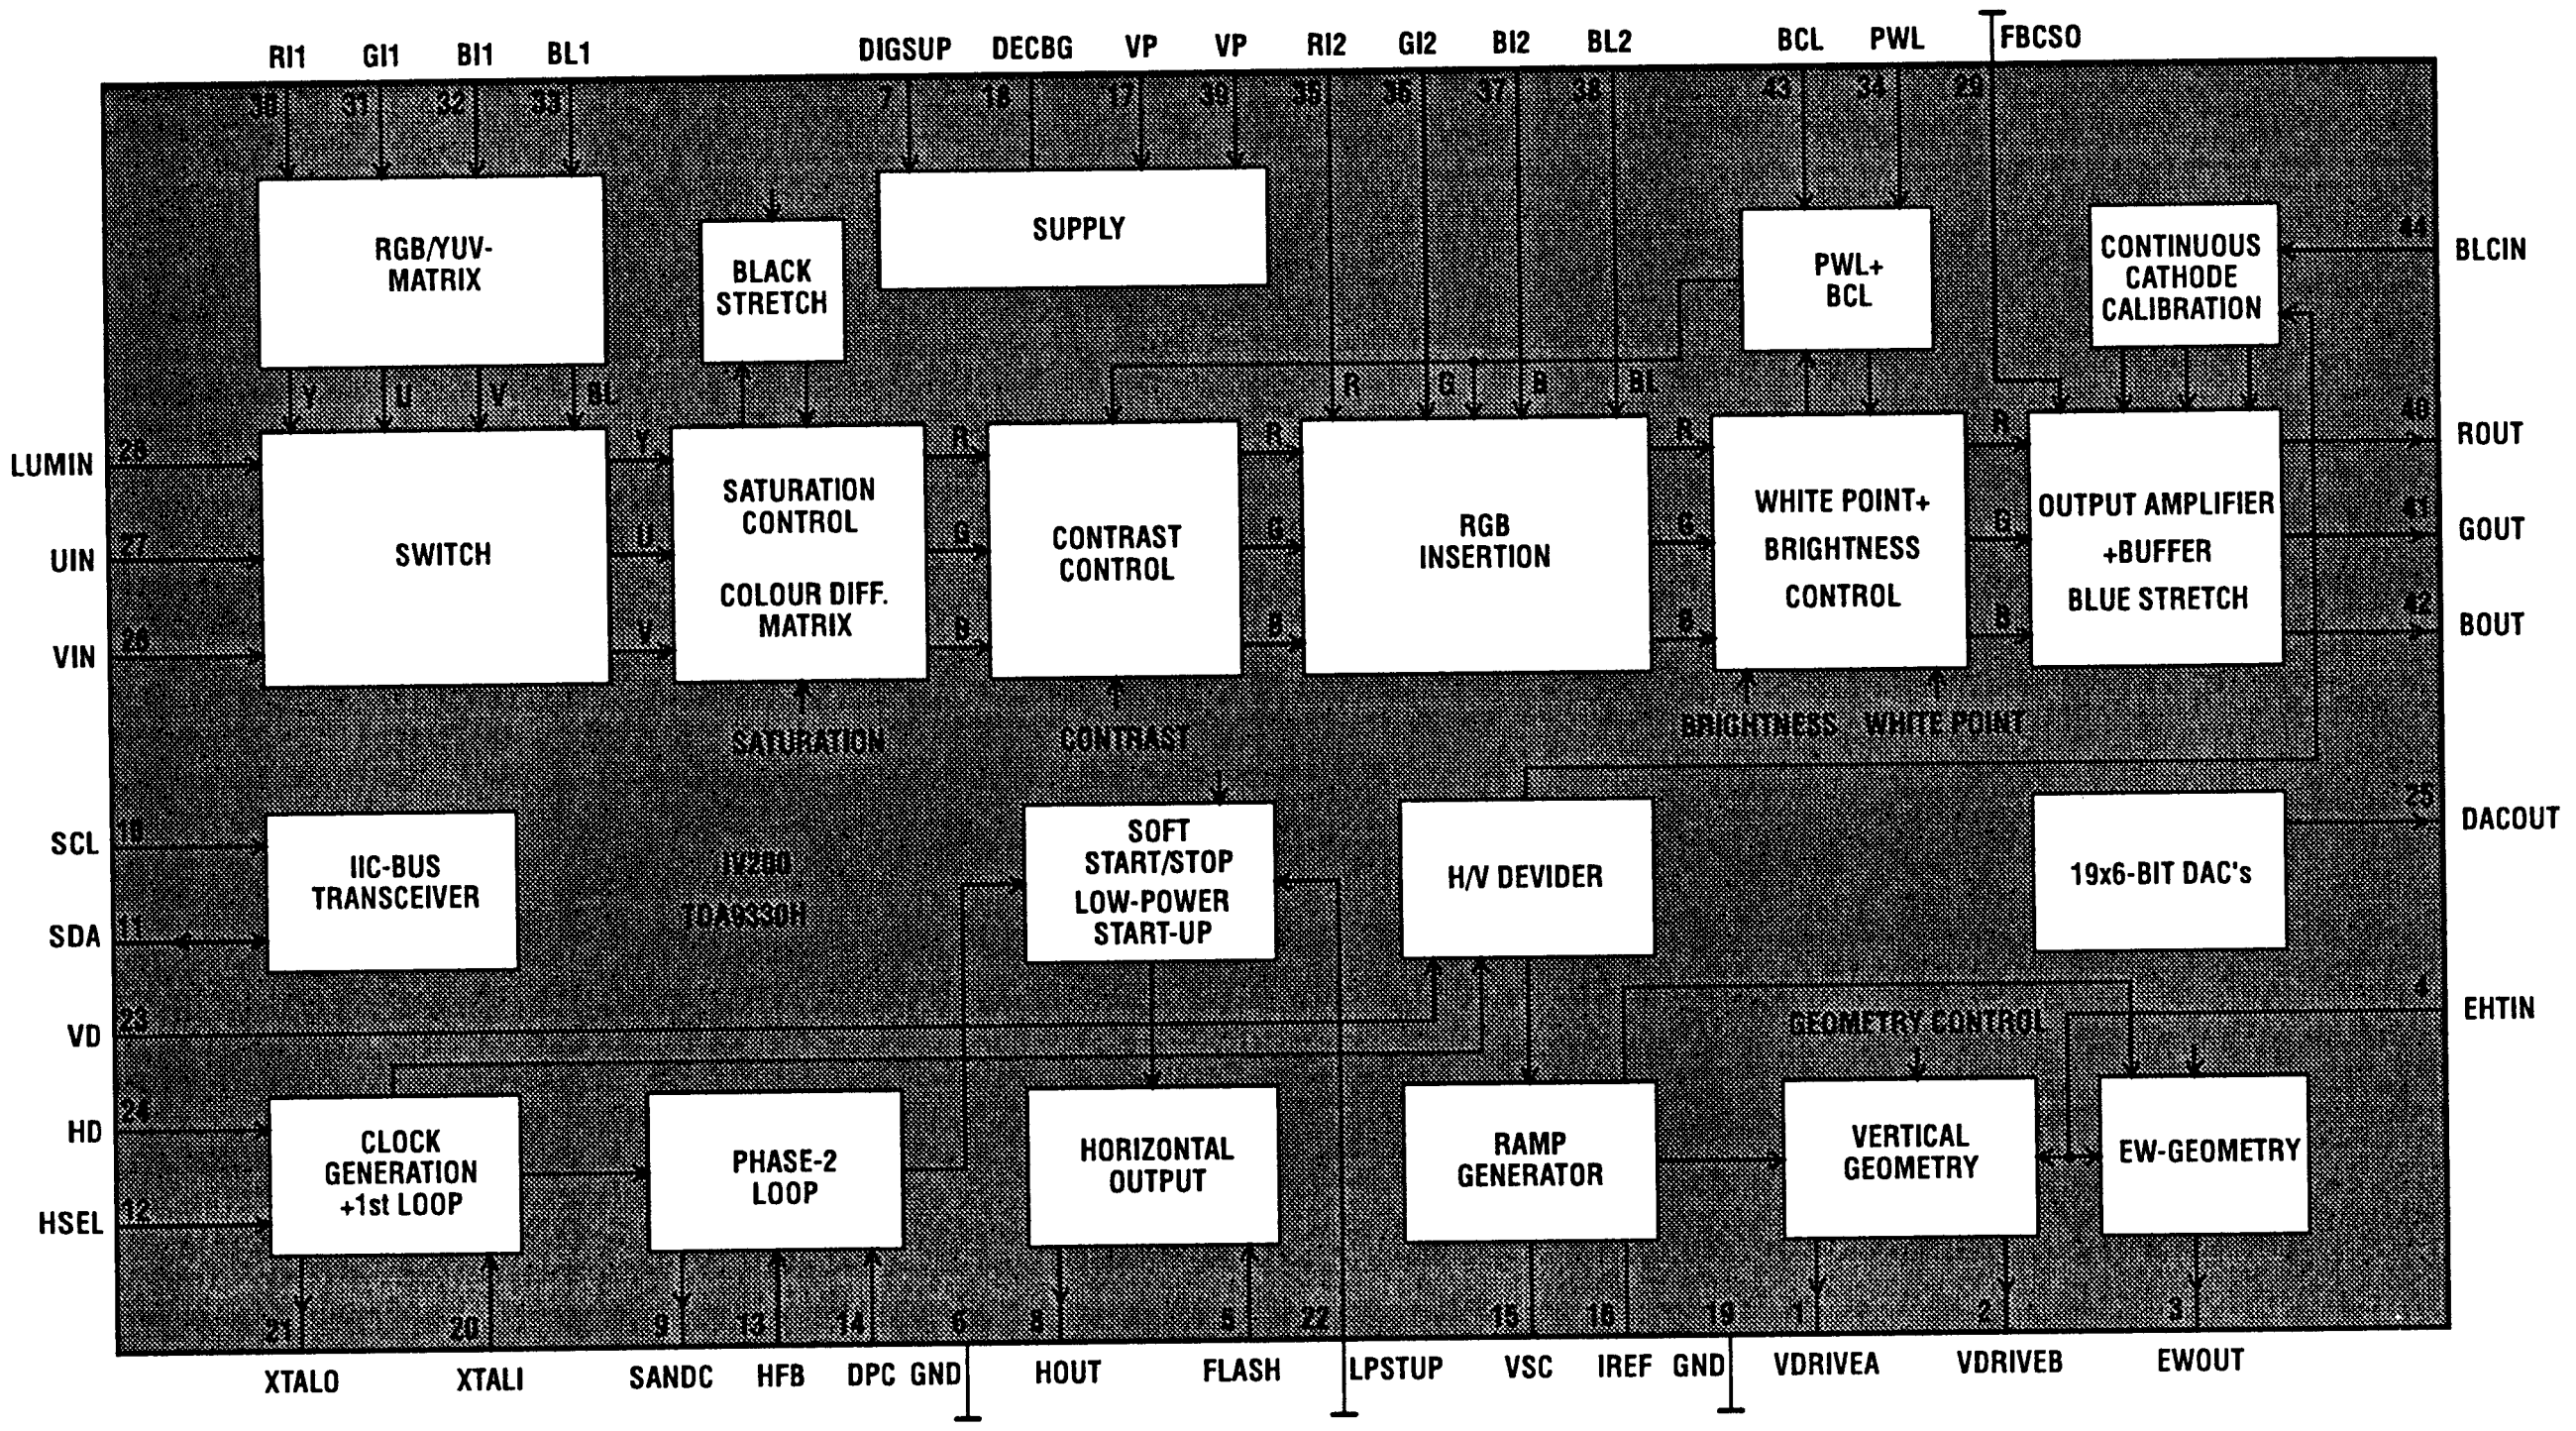
RI1
GI1
BI1
BL1
DIGSUP
DECBG
VP
VP
RI2
GI2
BI2
BL2
BCL
PWL
FBCSO
30
31
32
33
7
18
17
39
35
36
37
38
43
34
29
RGB/YUV-MATRIX
BLACK STRETCH
SUPPLY
PWL+ BCL
CONTINUOUS CATHODE CALIBRATION
44
BLCIN
Y
U
V
BL
LUMIN
28
UIN
27
VIN
26
SWITCH
SATURATION CONTROL
COLOUR DIFF. MATRIX
CONTRAST CONTROL
RGB INSERTION
WHITE POINT+ BRIGHTNESS CONTROL
OUTPUT AMPLIFIER +BUFFER BLUE STRETCH
R
G
B
40
ROUT
41
GOUT
42
BOUT
SATURATION
CONTRAST
BRIGHTNESS
WHITE POINT
SCL
10
SDA
11
IIC-BUS TRANSCEIVER
IV200
TDA9330H
SOFT START/STOP LOW-POWER START-UP
H/V DEVIDER
19x6-BIT DAC's
25
DACOUT
VD
23
GEOMETRY CONTROL
4
EHTIN
HD
24
HSEL
12
CLOCK GENERATION +1st LOOP
PHASE-2 LOOP
HORIZONTAL OUTPUT
RAMP GENERATOR
VERTICAL GEOMETRY
EW-GEOMETRY
21
20
9
13
14
6
8
5
22
15
16
19
1
2
3
XTALO
XTALI
SANDC
HFB
DPC
GND
HOUT
FLASH
LPSTUP
VSC
IREF
GND
VDRIVEA
VDRIVEB
EWOUT

IV100 - TDA9178

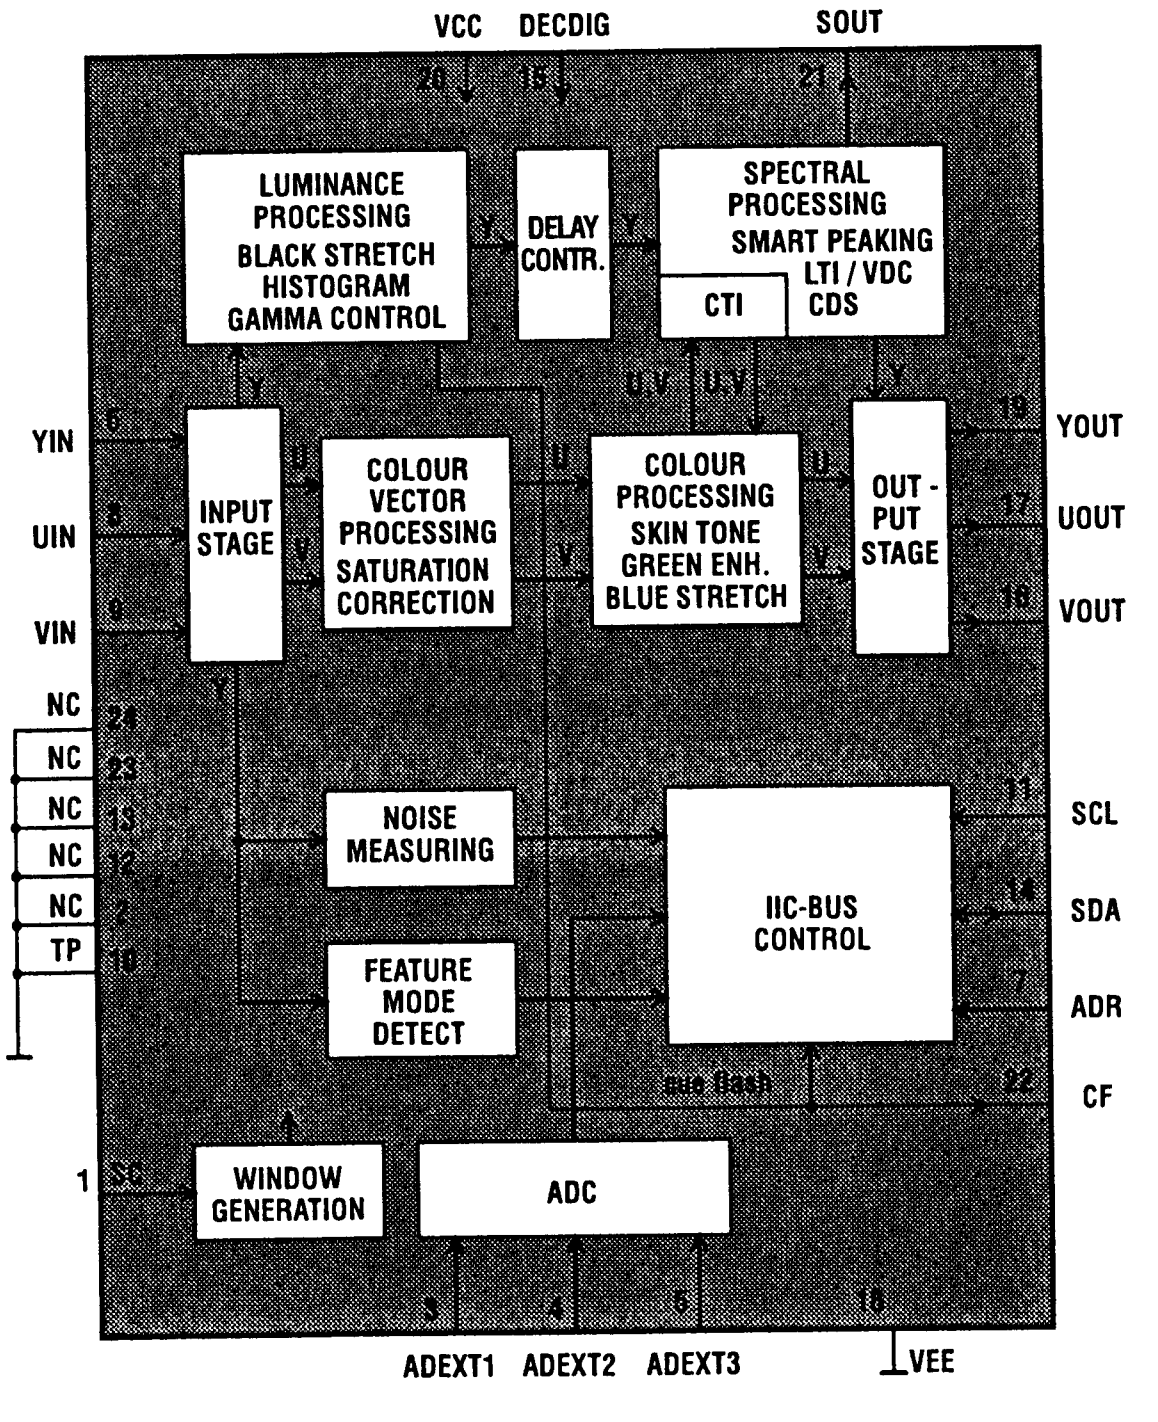
VCC
DECDIG
SOUT
20
15
21
LUMINANCE PROCESSING BLACK STRETCH HISTOGRAM GAMMA CONTROL
DELAY CONTR.
SPECTRAL PROCESSING SMART PEAKING LTI / VDC CDS
CTI
Y
U,V
YIN
6
UIN
8
VIN
9
INPUT STAGE
COLOUR VECTOR PROCESSING SATURATION CORRECTION
COLOUR PROCESSING SKIN TONE GREEN ENH. BLUE STRETCH
OUT-PUT STAGE
19
YOUT
17
UOUT
16
VOUT
NC
24
NC
23
NC
13
NC
12
NC
2
TP
10
NOISE MEASURING
FEATURE MODE DETECT
IIC-BUS CONTROL
11
SCL
14
SDA
7
ADR
22
CF
1
SC
WINDOW GENERATION
ADC
3
4
5
18
ADEXT1
ADEXT2
ADEXT3
VEE

INTEGRATED CIRCUITS BLOCK DIAGRAMS - SYNOPTIQUES INTERNES DES CIRCUITS INTEGRES - INTEGRIERTE SCHALTUNGEN BLOCKSCHALTBILDER SCHEMA A BLOCCHI DEL CIRCUITI INTEGRATI - VISTA INTERNA DE LOS CIRCUITOS INTEGRADOS

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL

IA001 - MSP 34X0G

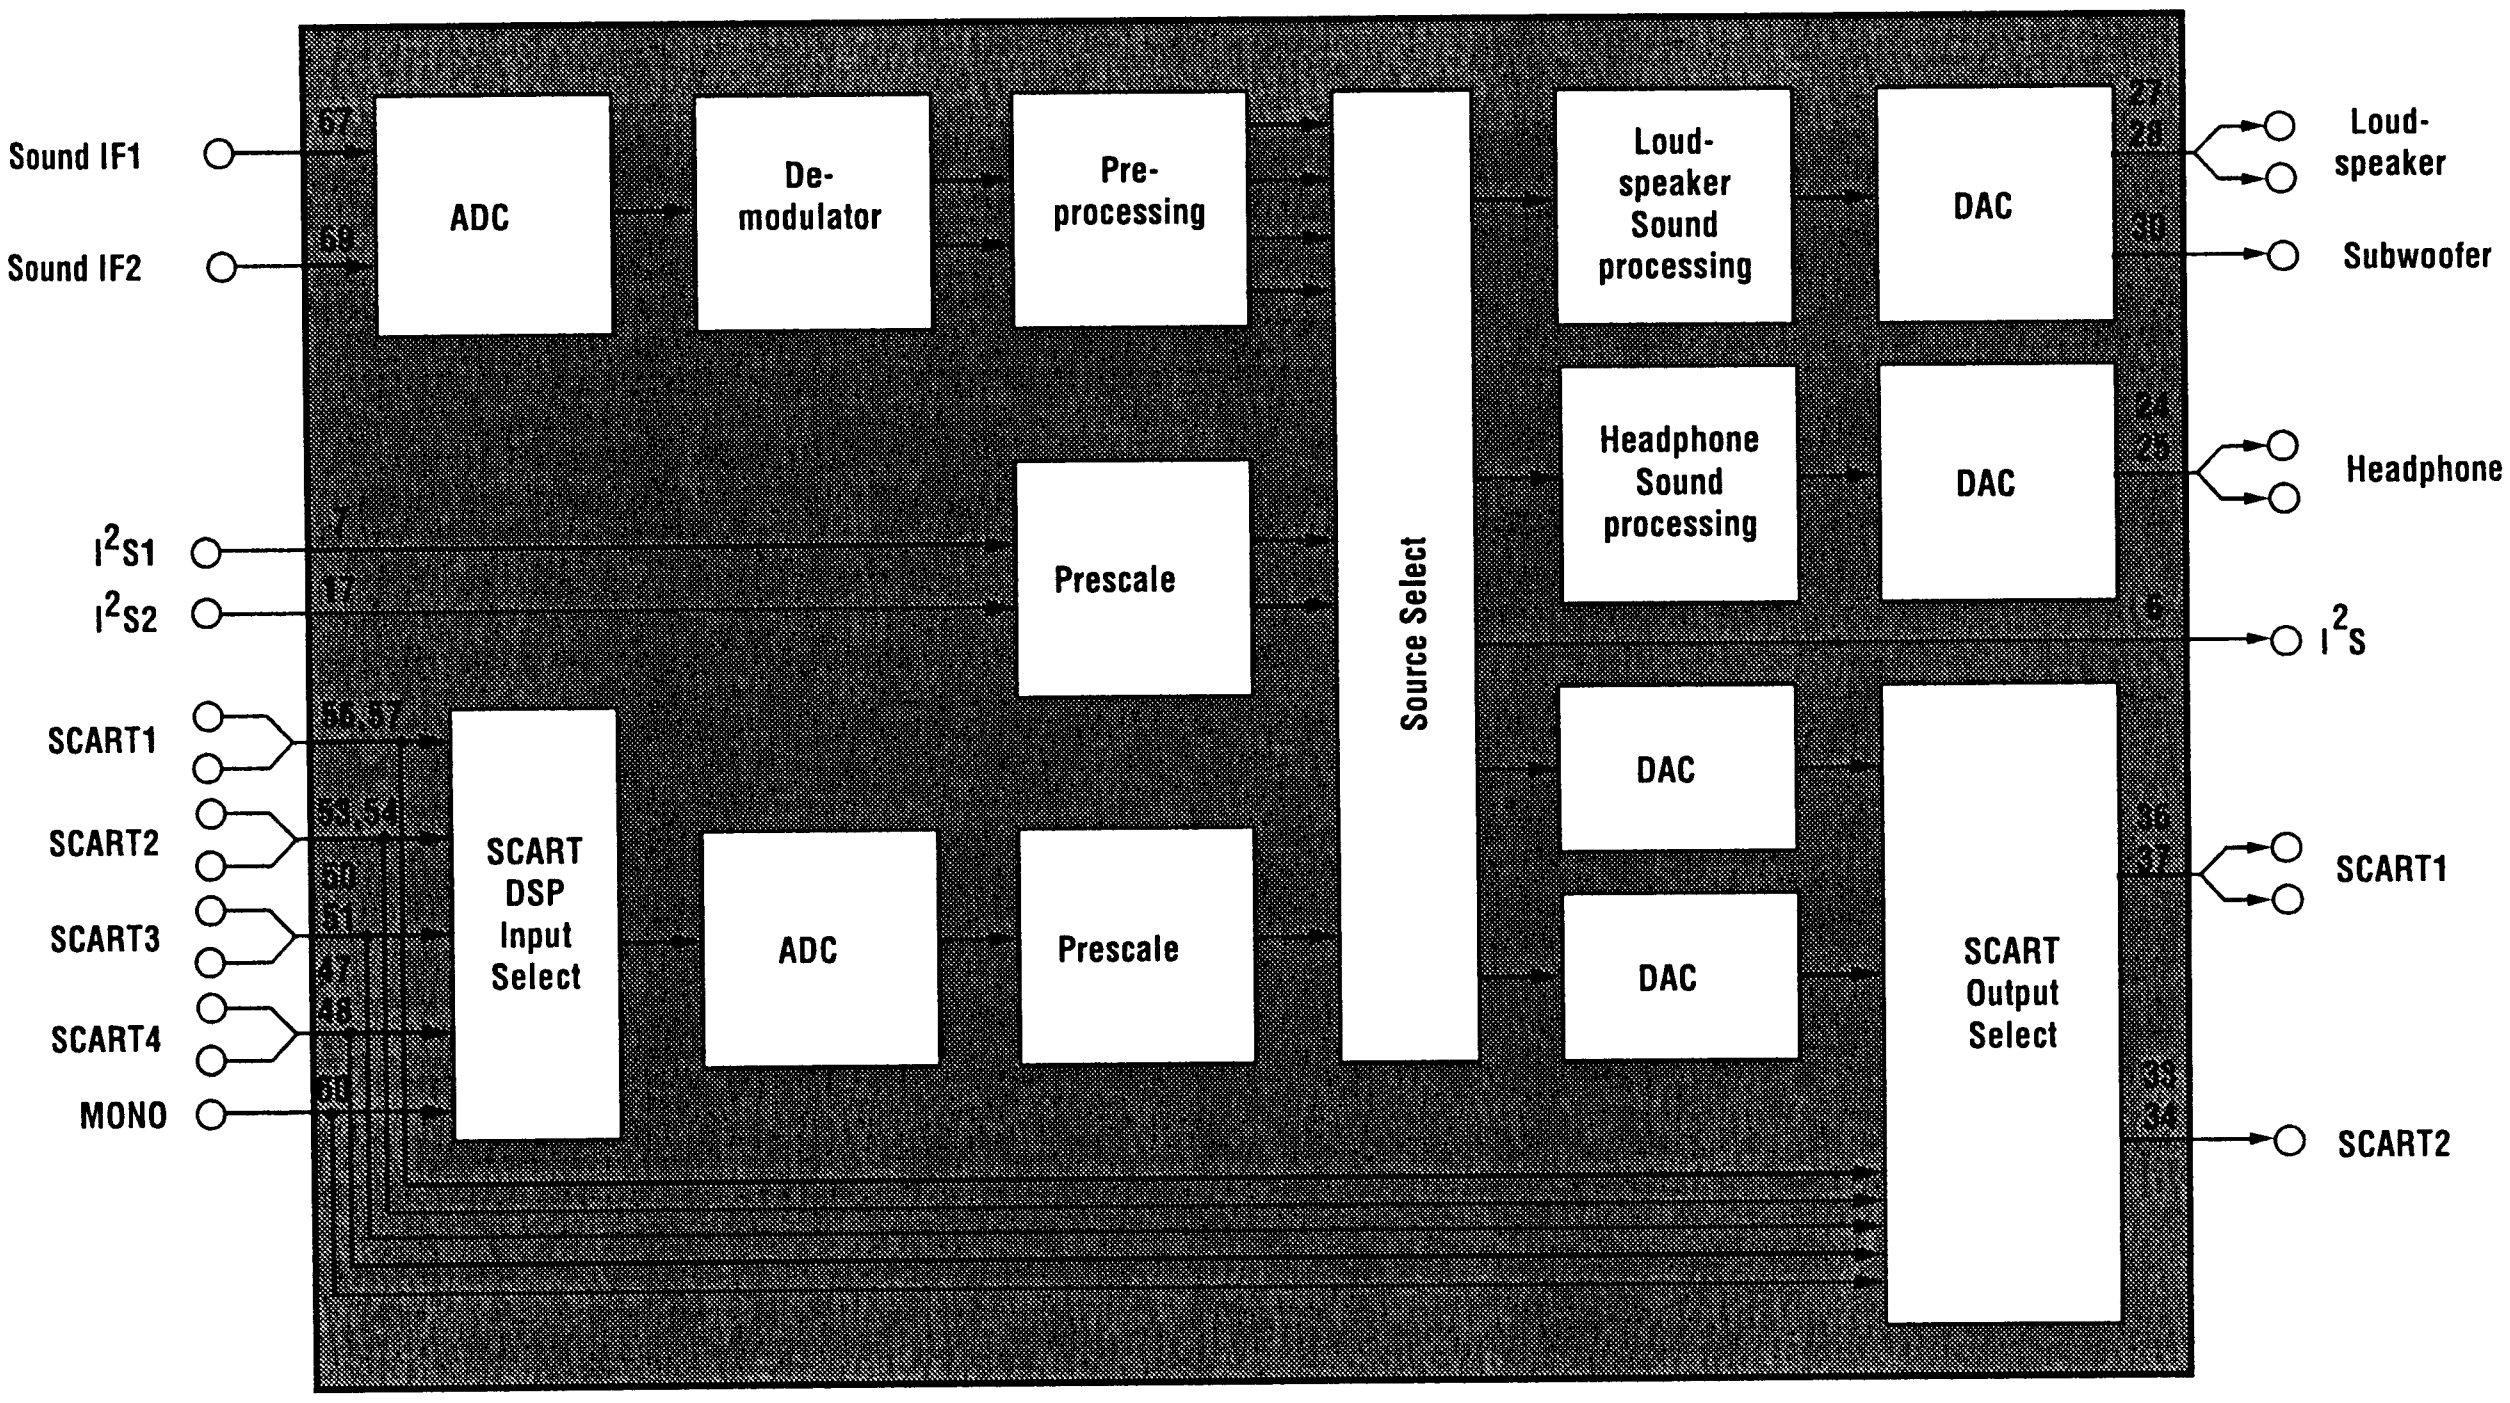
Sound IF1
Sound IF2
67
69
ADC
De-modulator
Pre-processing
I^2S1
I^2S2
7
17
Prescale
SCART1
SCART2
SCART3
SCART4
MONO
56,57
53,54
50
51
47
48
60
SCART DSP Input Select
ADC
Prescale
Source Select
Loud-speaker Sound processing
Headphone Sound processing
DAC
DAC
DAC
DAC
SCART Output Select
27
28
30
24
25
6
36
37
33
34
Loud-speaker
Subwoofer
Headphone
I^2S
SCART1
SCART2

VIDEO PART - PARTIE VIDEO - VIDEO-SIGNALVERARBEITUNG - ELABORAZIONE VIDEO - TRATAMENTO VIDEO

IB001 - TDA6108JF

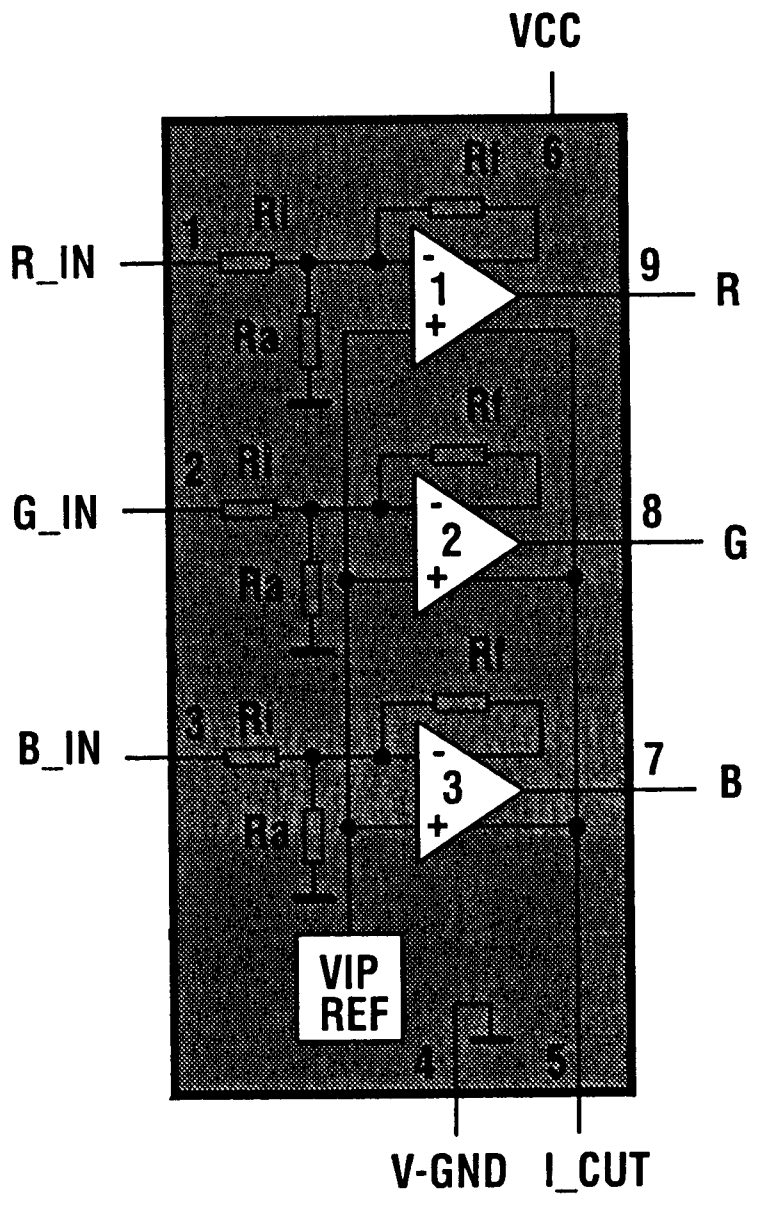
VCC
6
Rf
Ri
Ra
R_IN
1
9
R
G_IN
2
8
G
B_IN
3
7
B
1
2
3
VIP REF
4
5
V-GND
I_CUT

KEYBOARD CIRCUIT BOARDS - CIRCUITS IMPRIMES PLATINES COMMANDES - LEITERPLATTE BEDIENTEIL - PIASTRE TASTIERA - PLATINAS MANDOS

COMPONENT SIDE - COTÉ COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

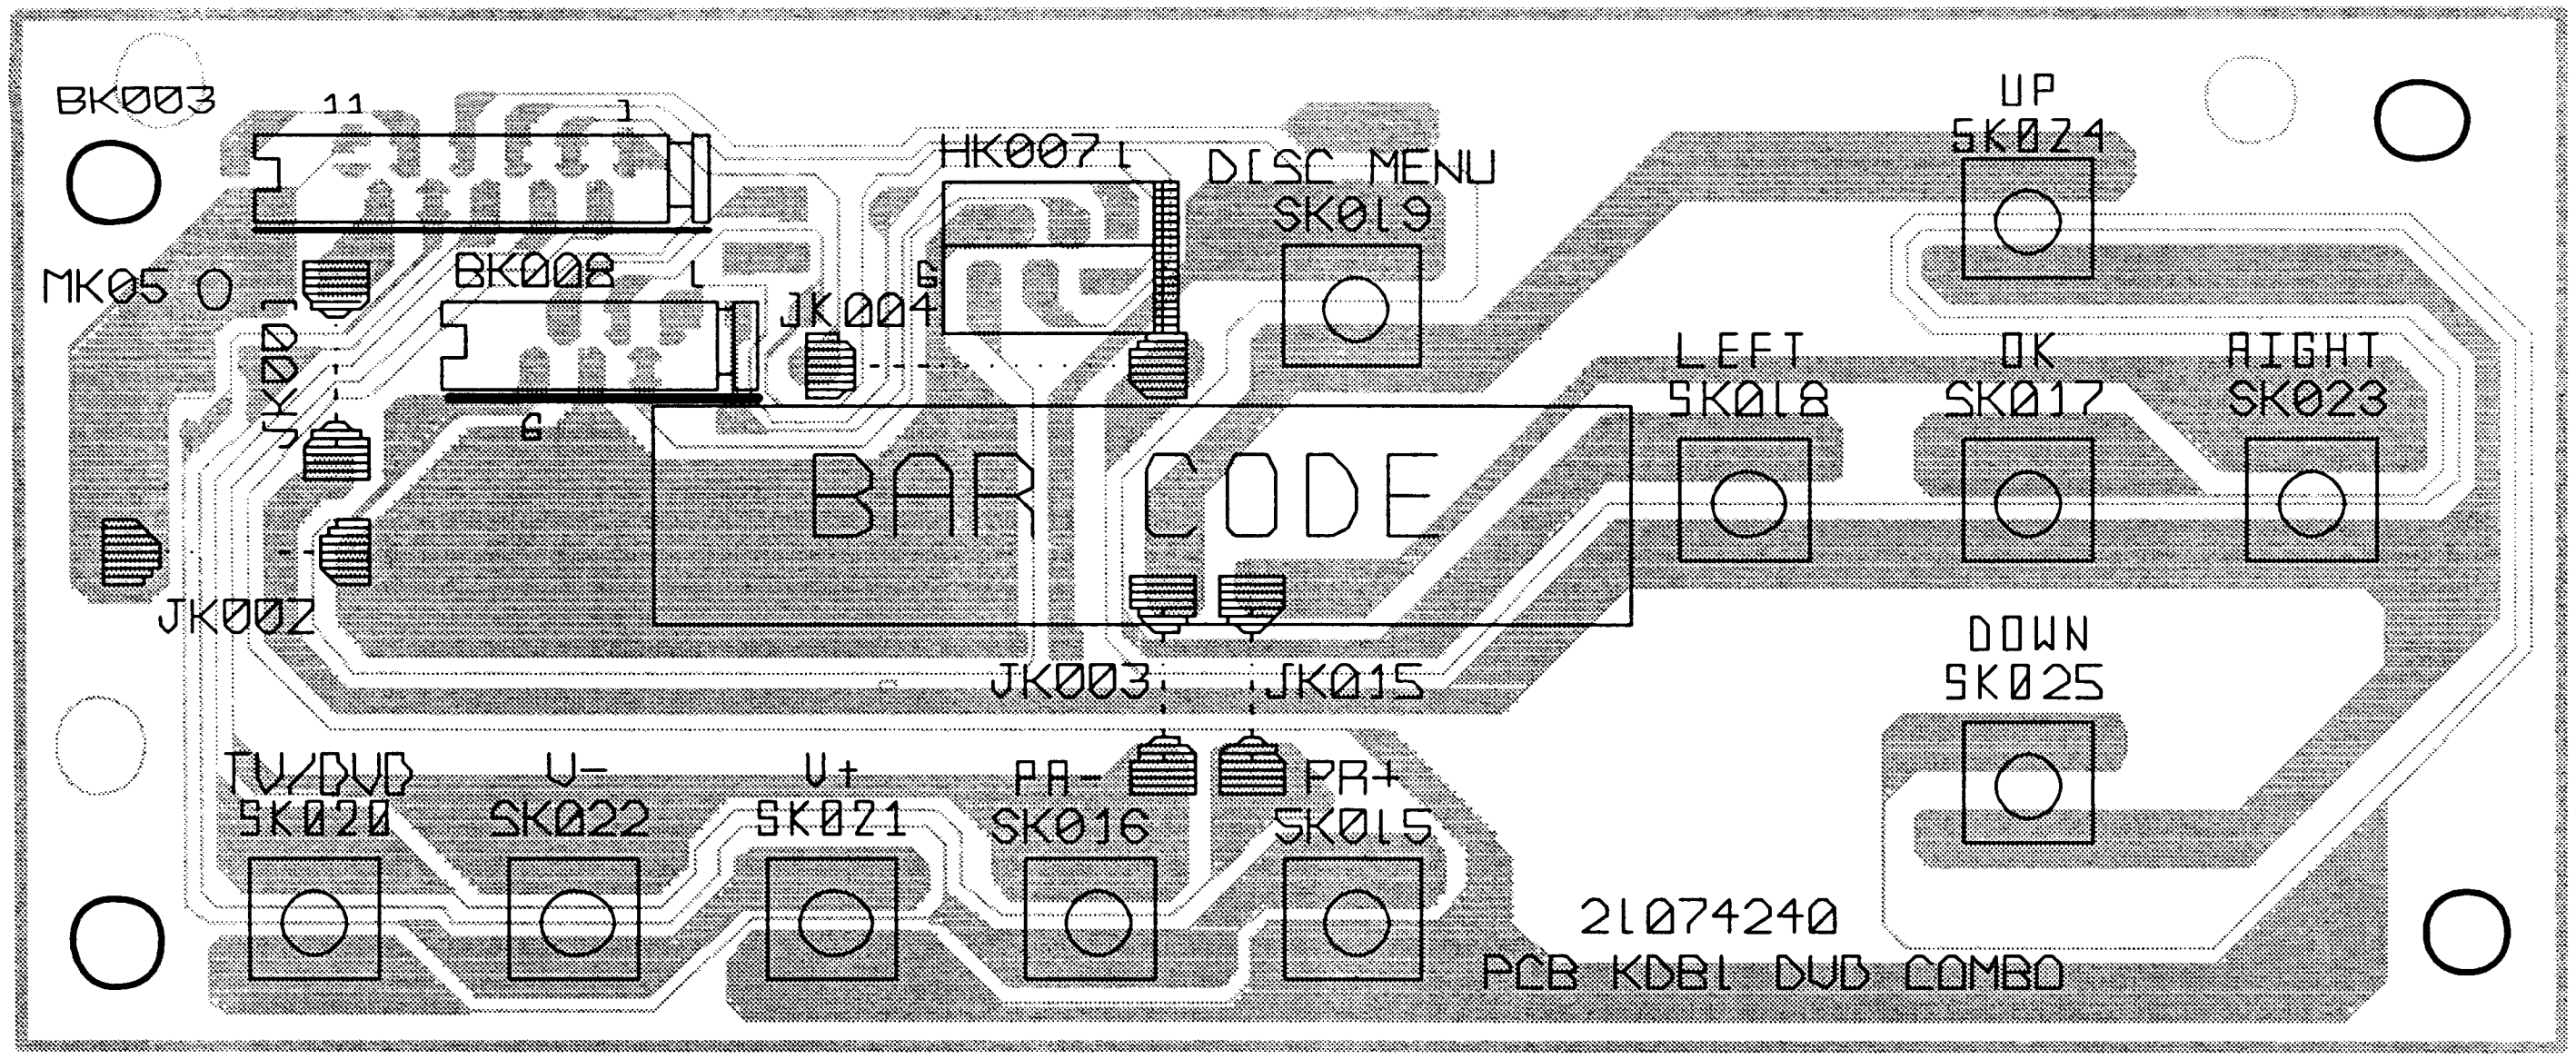
BK003
11
1
HK007
DISC MENU
SK019
UP
SK024
MK05
BK008
JK004
JK001
JK002
BAR CODE
LEFT
SK018
OK
SK017
RIGHT
SK023
DOWN
SK025
JK003
JK015
TV/DVD
SK020
V-
SK022
V+
SK021
PR-
SK016
PR+
SK015
21074240
PCB KDB1 DVD COMBO

SOLDER SIDE - COTÉ CUIVRE - LÖTSEITE - LATO SALDATURE - LADO DEL COBRE

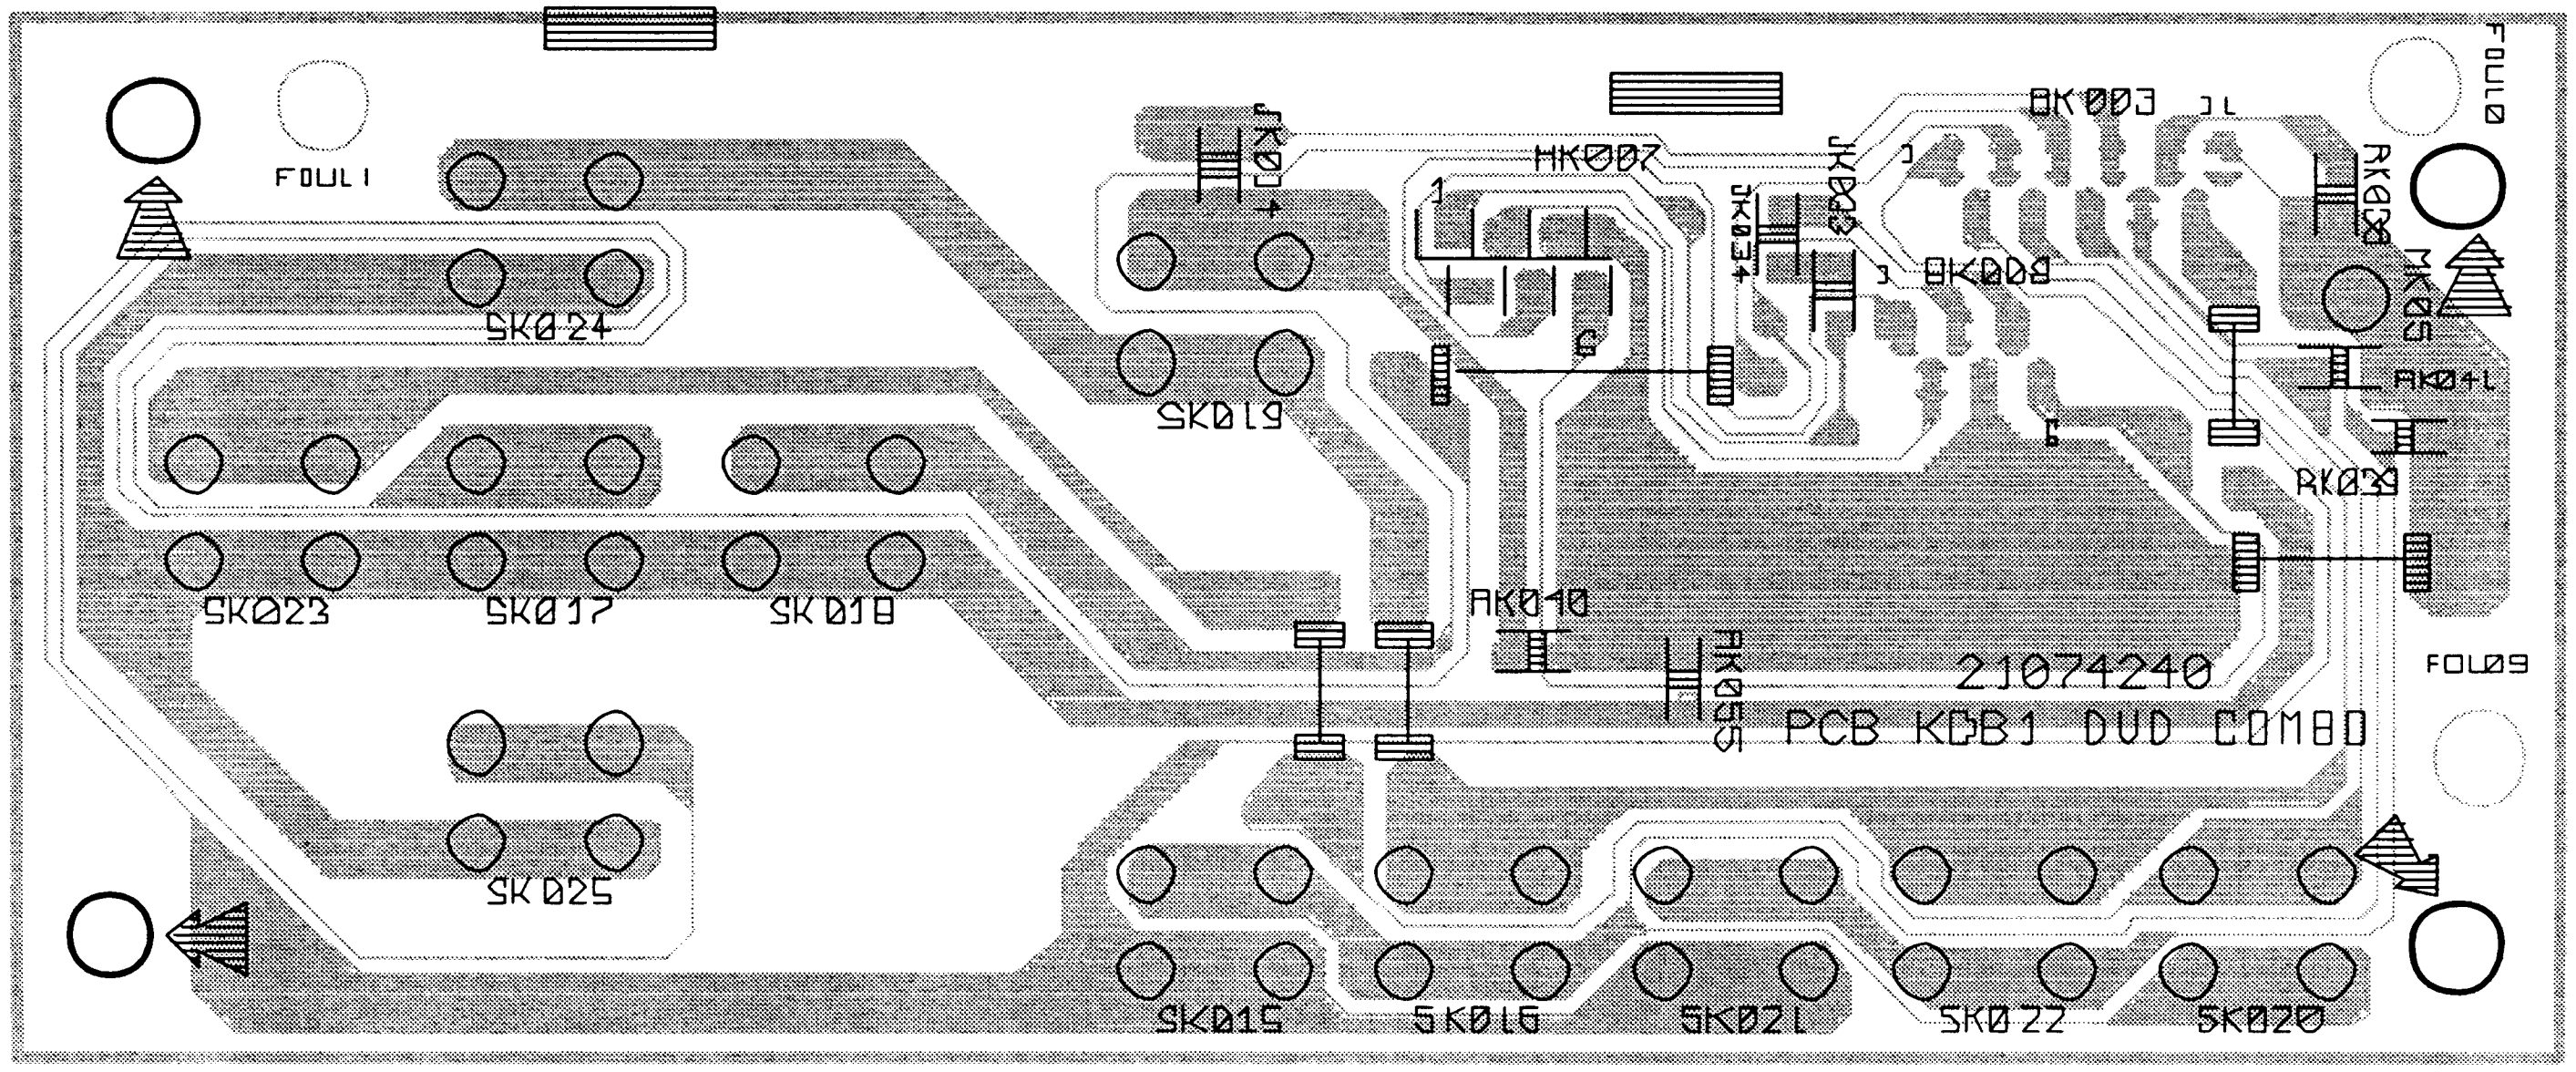
FOUL1
SK024
JK001
HK007
JK003
JK034
BK003
BK008
FOUL0
AK038
MK05
AK041
AK039
SK019
SK023
SK017
SK018
AK040
AK055
21074240
PCB KDB1 DVD COMBO
FOL09
SK025
SK015
SK016
SK021
SK022
SK020

KEYBOARD CIRCUIT BOARDS - CIRCUITS IMPRIMES PLATINES COMMANDES - LEITERPLATTE BEDIENTEIL - PIASTRE TASTIERA - PLATINAS MANDOS

COMPONENT SIDE - COTÉ COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

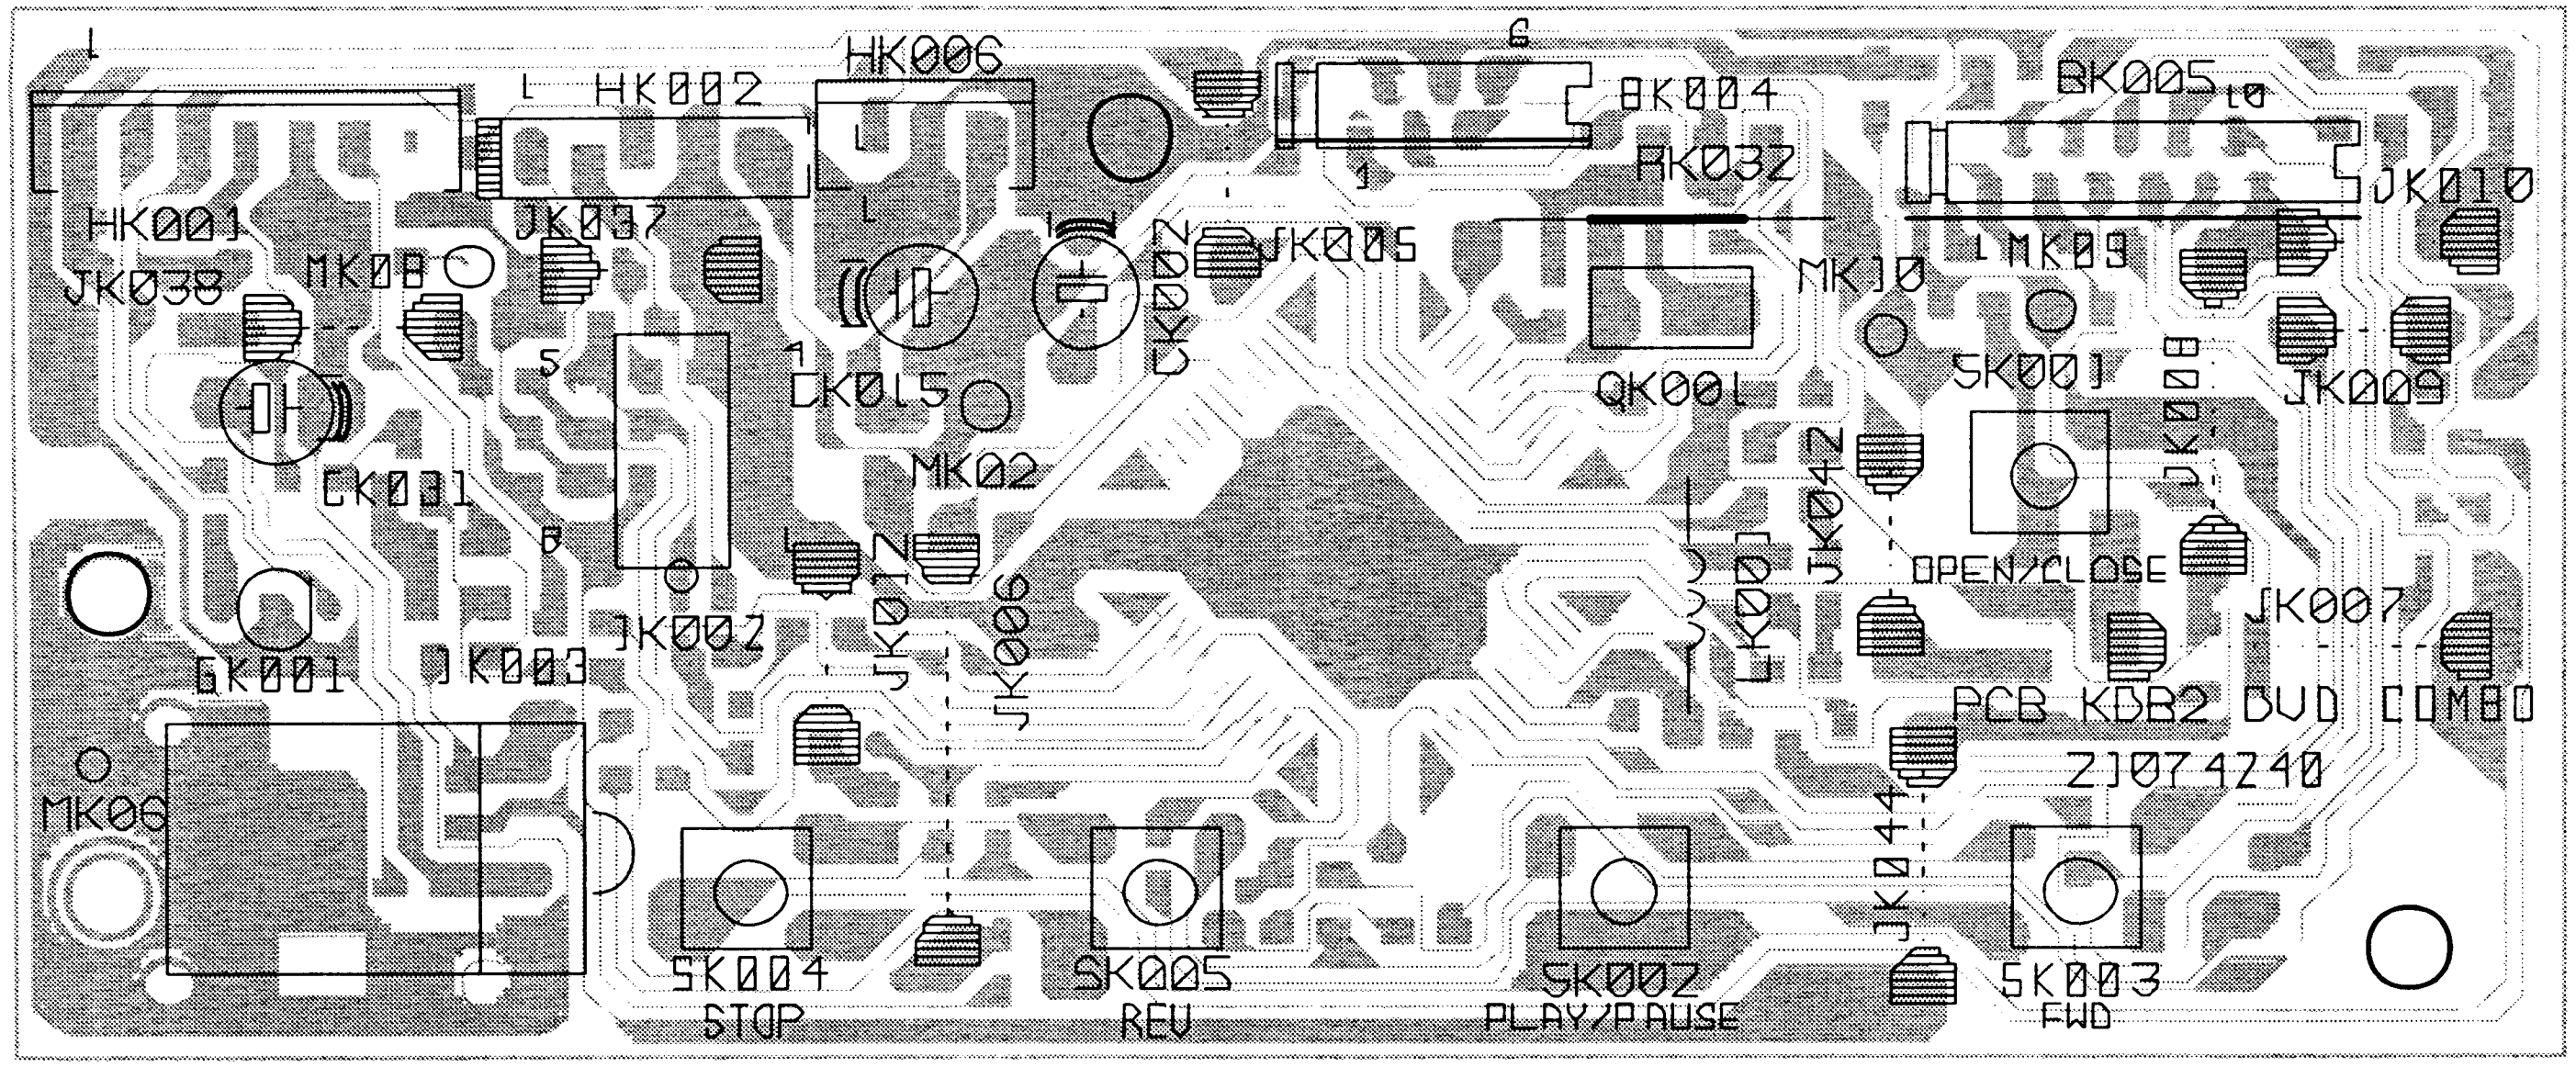
HK002
HK006
BK004
BK005
AK032
HK001
JK037
JK038
MK08
JK005
MK10
MK09
JK010
CK015
CK002
QK001
SK001
JK009
JK008
CK031
MK02
JK042
LK001
OPEN/CLOSE
JK002
JK011
JK006
JK007
GK001
JK003
PCB KDB2 DVD COMBO
ZJ074240
MK06
JK044
SK004
STOP
SK005
REV
SK002
PLAY/PAUSE
SK003
FWD

SOLDER SIDE - COTÉ CUIVRE - LÖTSEITE - LATO SALDATURE - LADO DEL COBRE

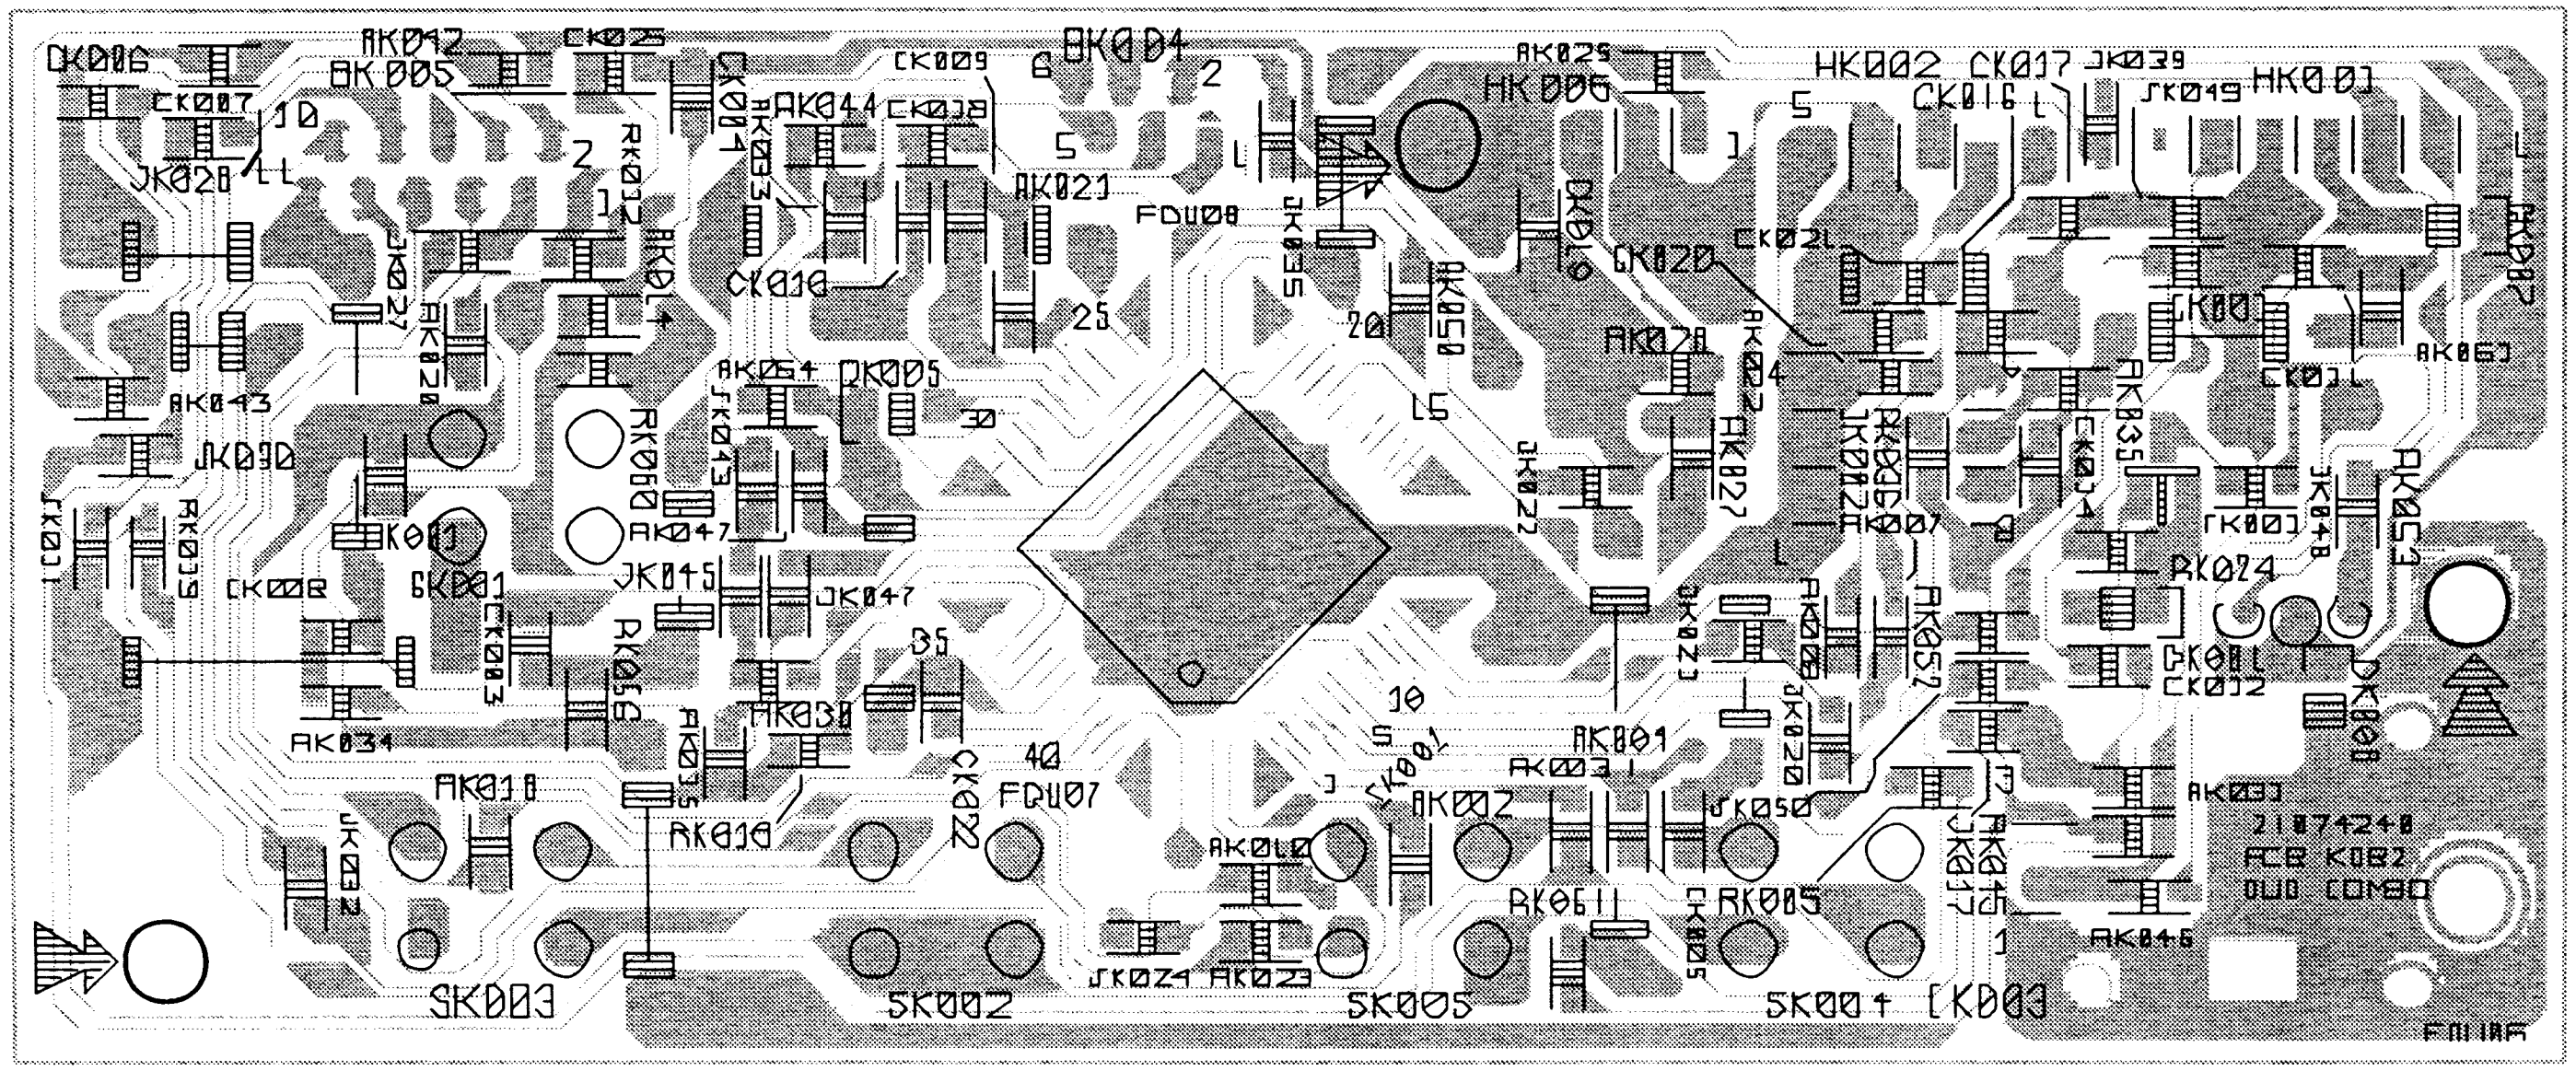
DK006
AK012
BK005
CK025
CK009
BK004
AK025
HK002
CK017
JK039
HK001
CK007
CK004
AK044
CK018
HK006
CK016
JK028
AK021
FDU08
CK020
CK021
AK087
CK010
AK026
CK001
AK061
AK043
AK054
DK005
JK030
AK027
AK035
AK053
AK047
JK045
JK047
AK024
CK008
GK001
AK016
CK012
AK034
MK030
DK008
AK018
CK022
FDU07
AK001
AK031
AK002
AK003
JK050
AK010
AK023
JK024
AK061
AK085
AK046
SK003
SK002
SK005
SK004
CK003
ZJ074240
PCB KDB2
DVD COMBO

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

COMPONENT SIDE - COTE COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

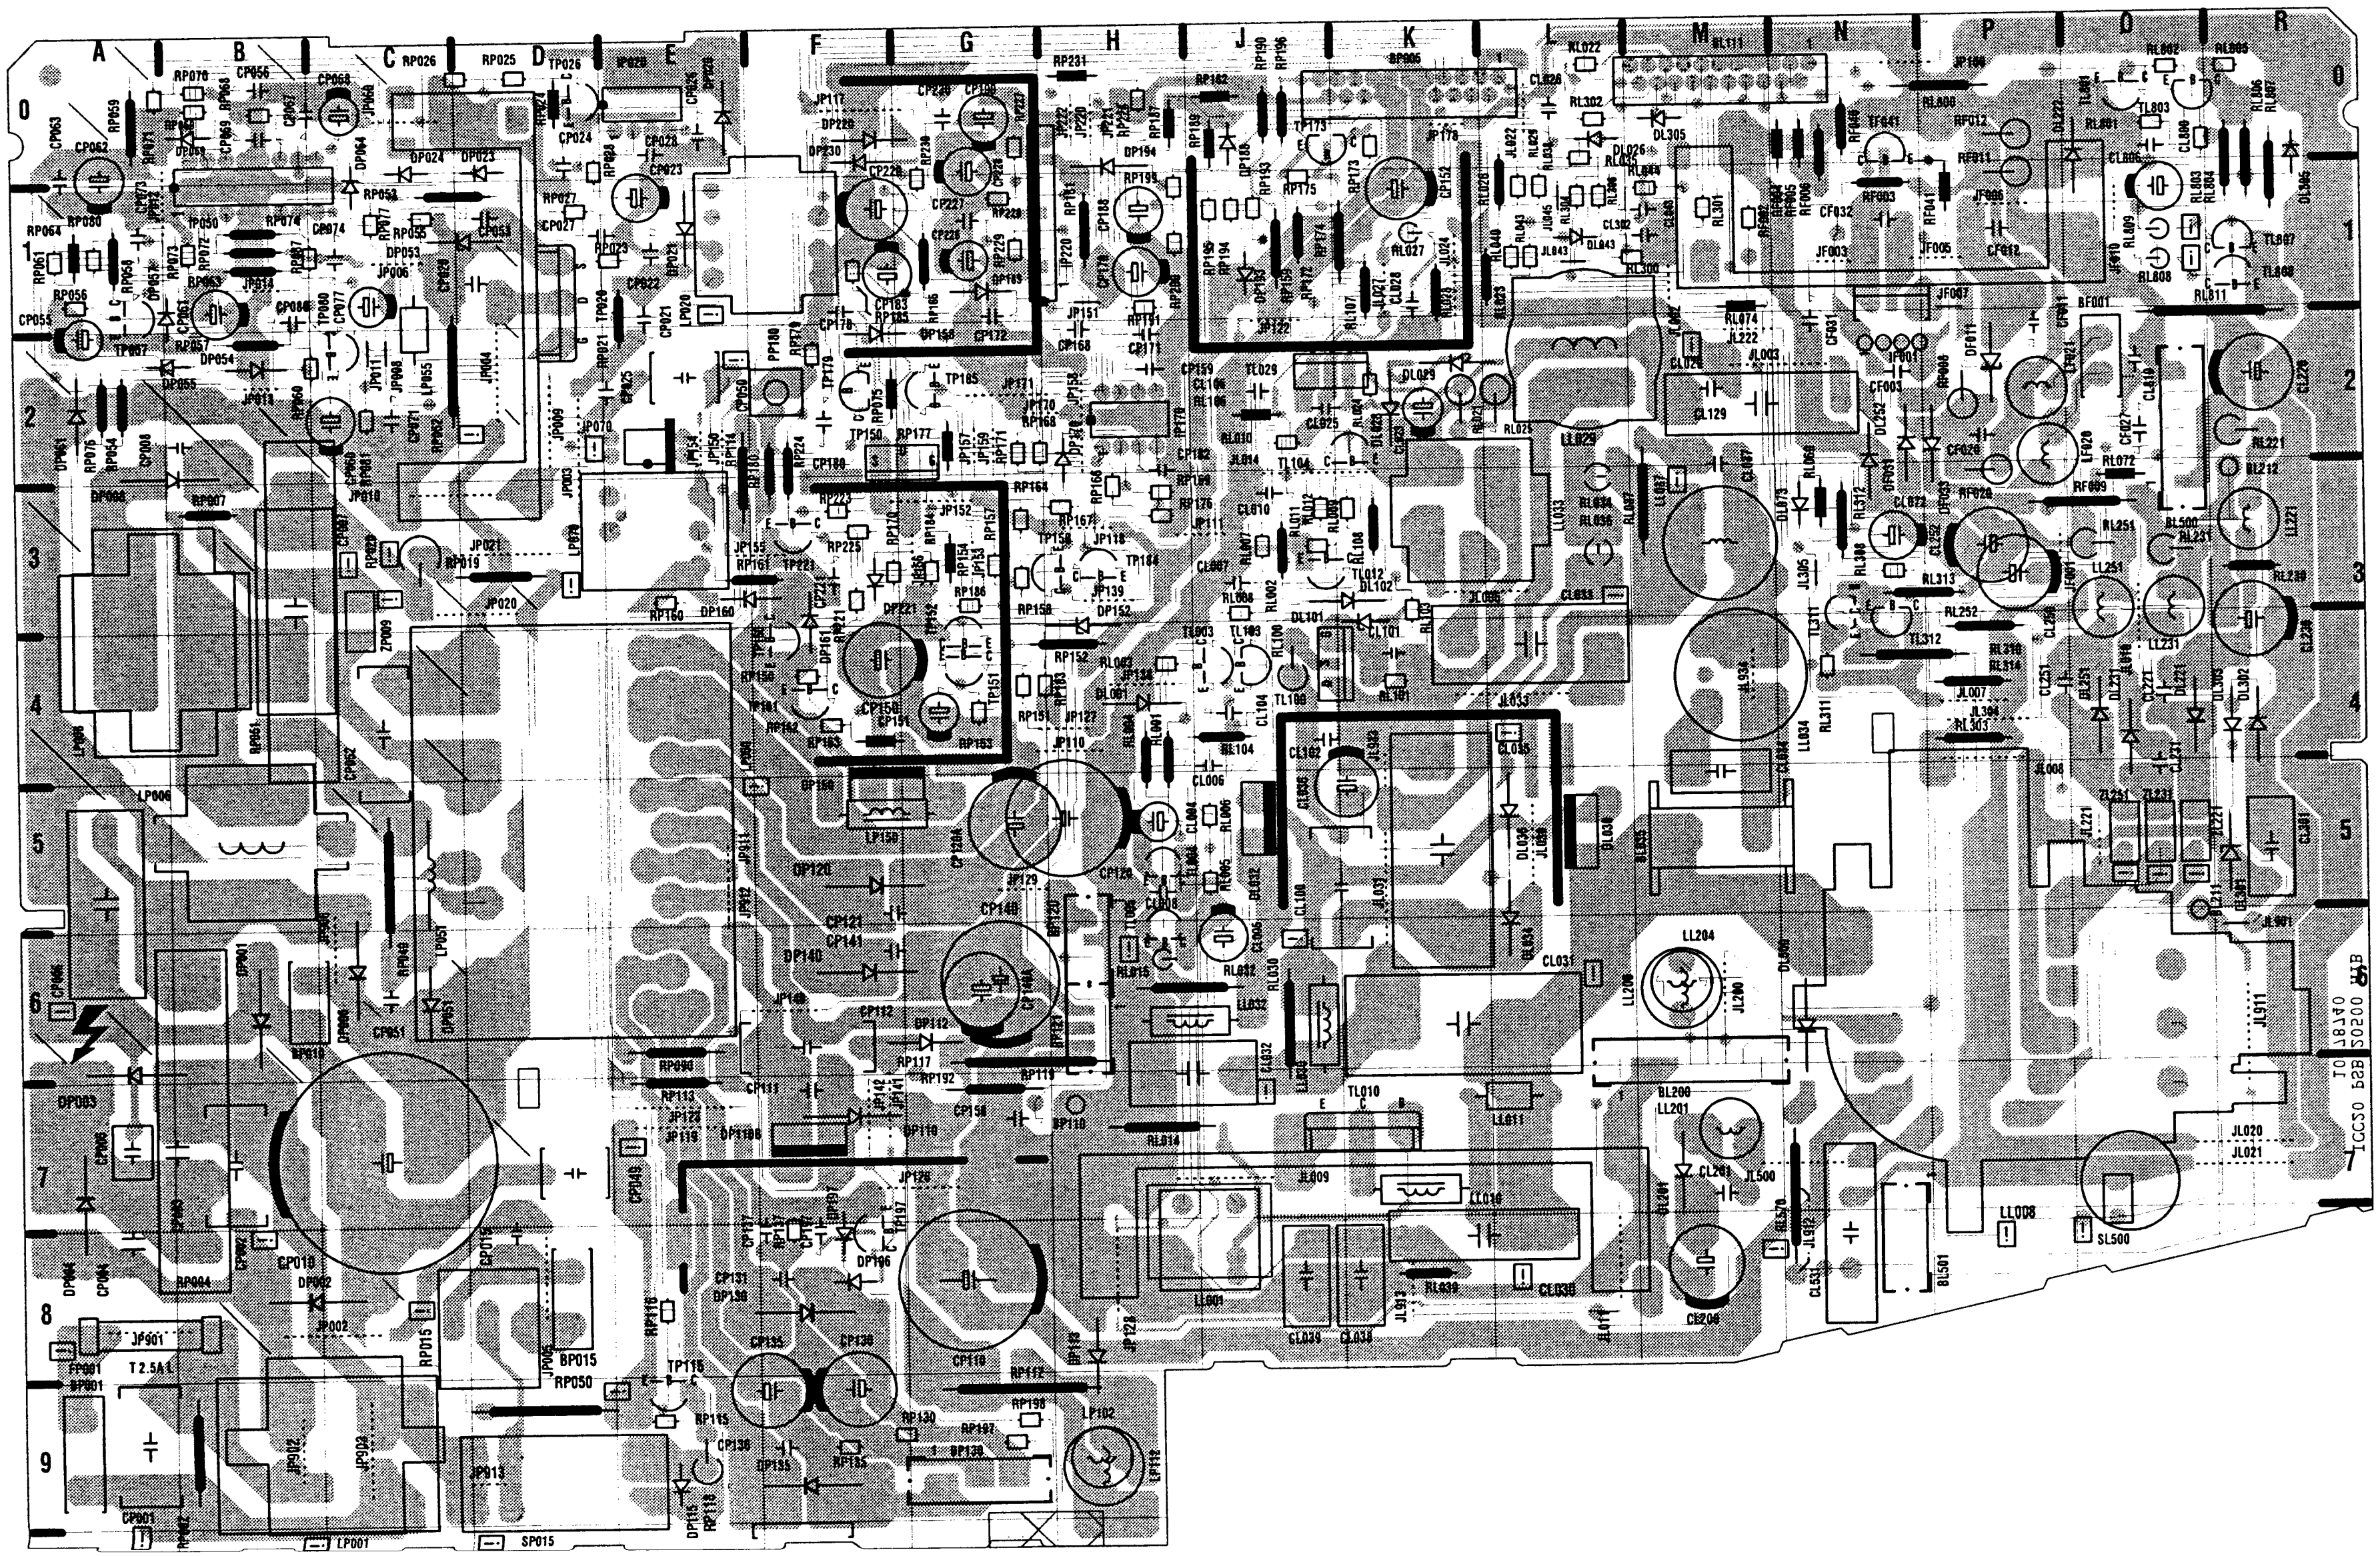
A
B
C
D
E
F
G
H
J
K
L
M
N
P
Q
R
0
1
2
3
4
5
6
7
8
9

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PI

COMPONENT•SIDE•-•COTE•COMPOSANTS•-•BESTÜCKUNGSSEITE•-•LATO•COMPONENTI•-•LADO•COMPONENTES

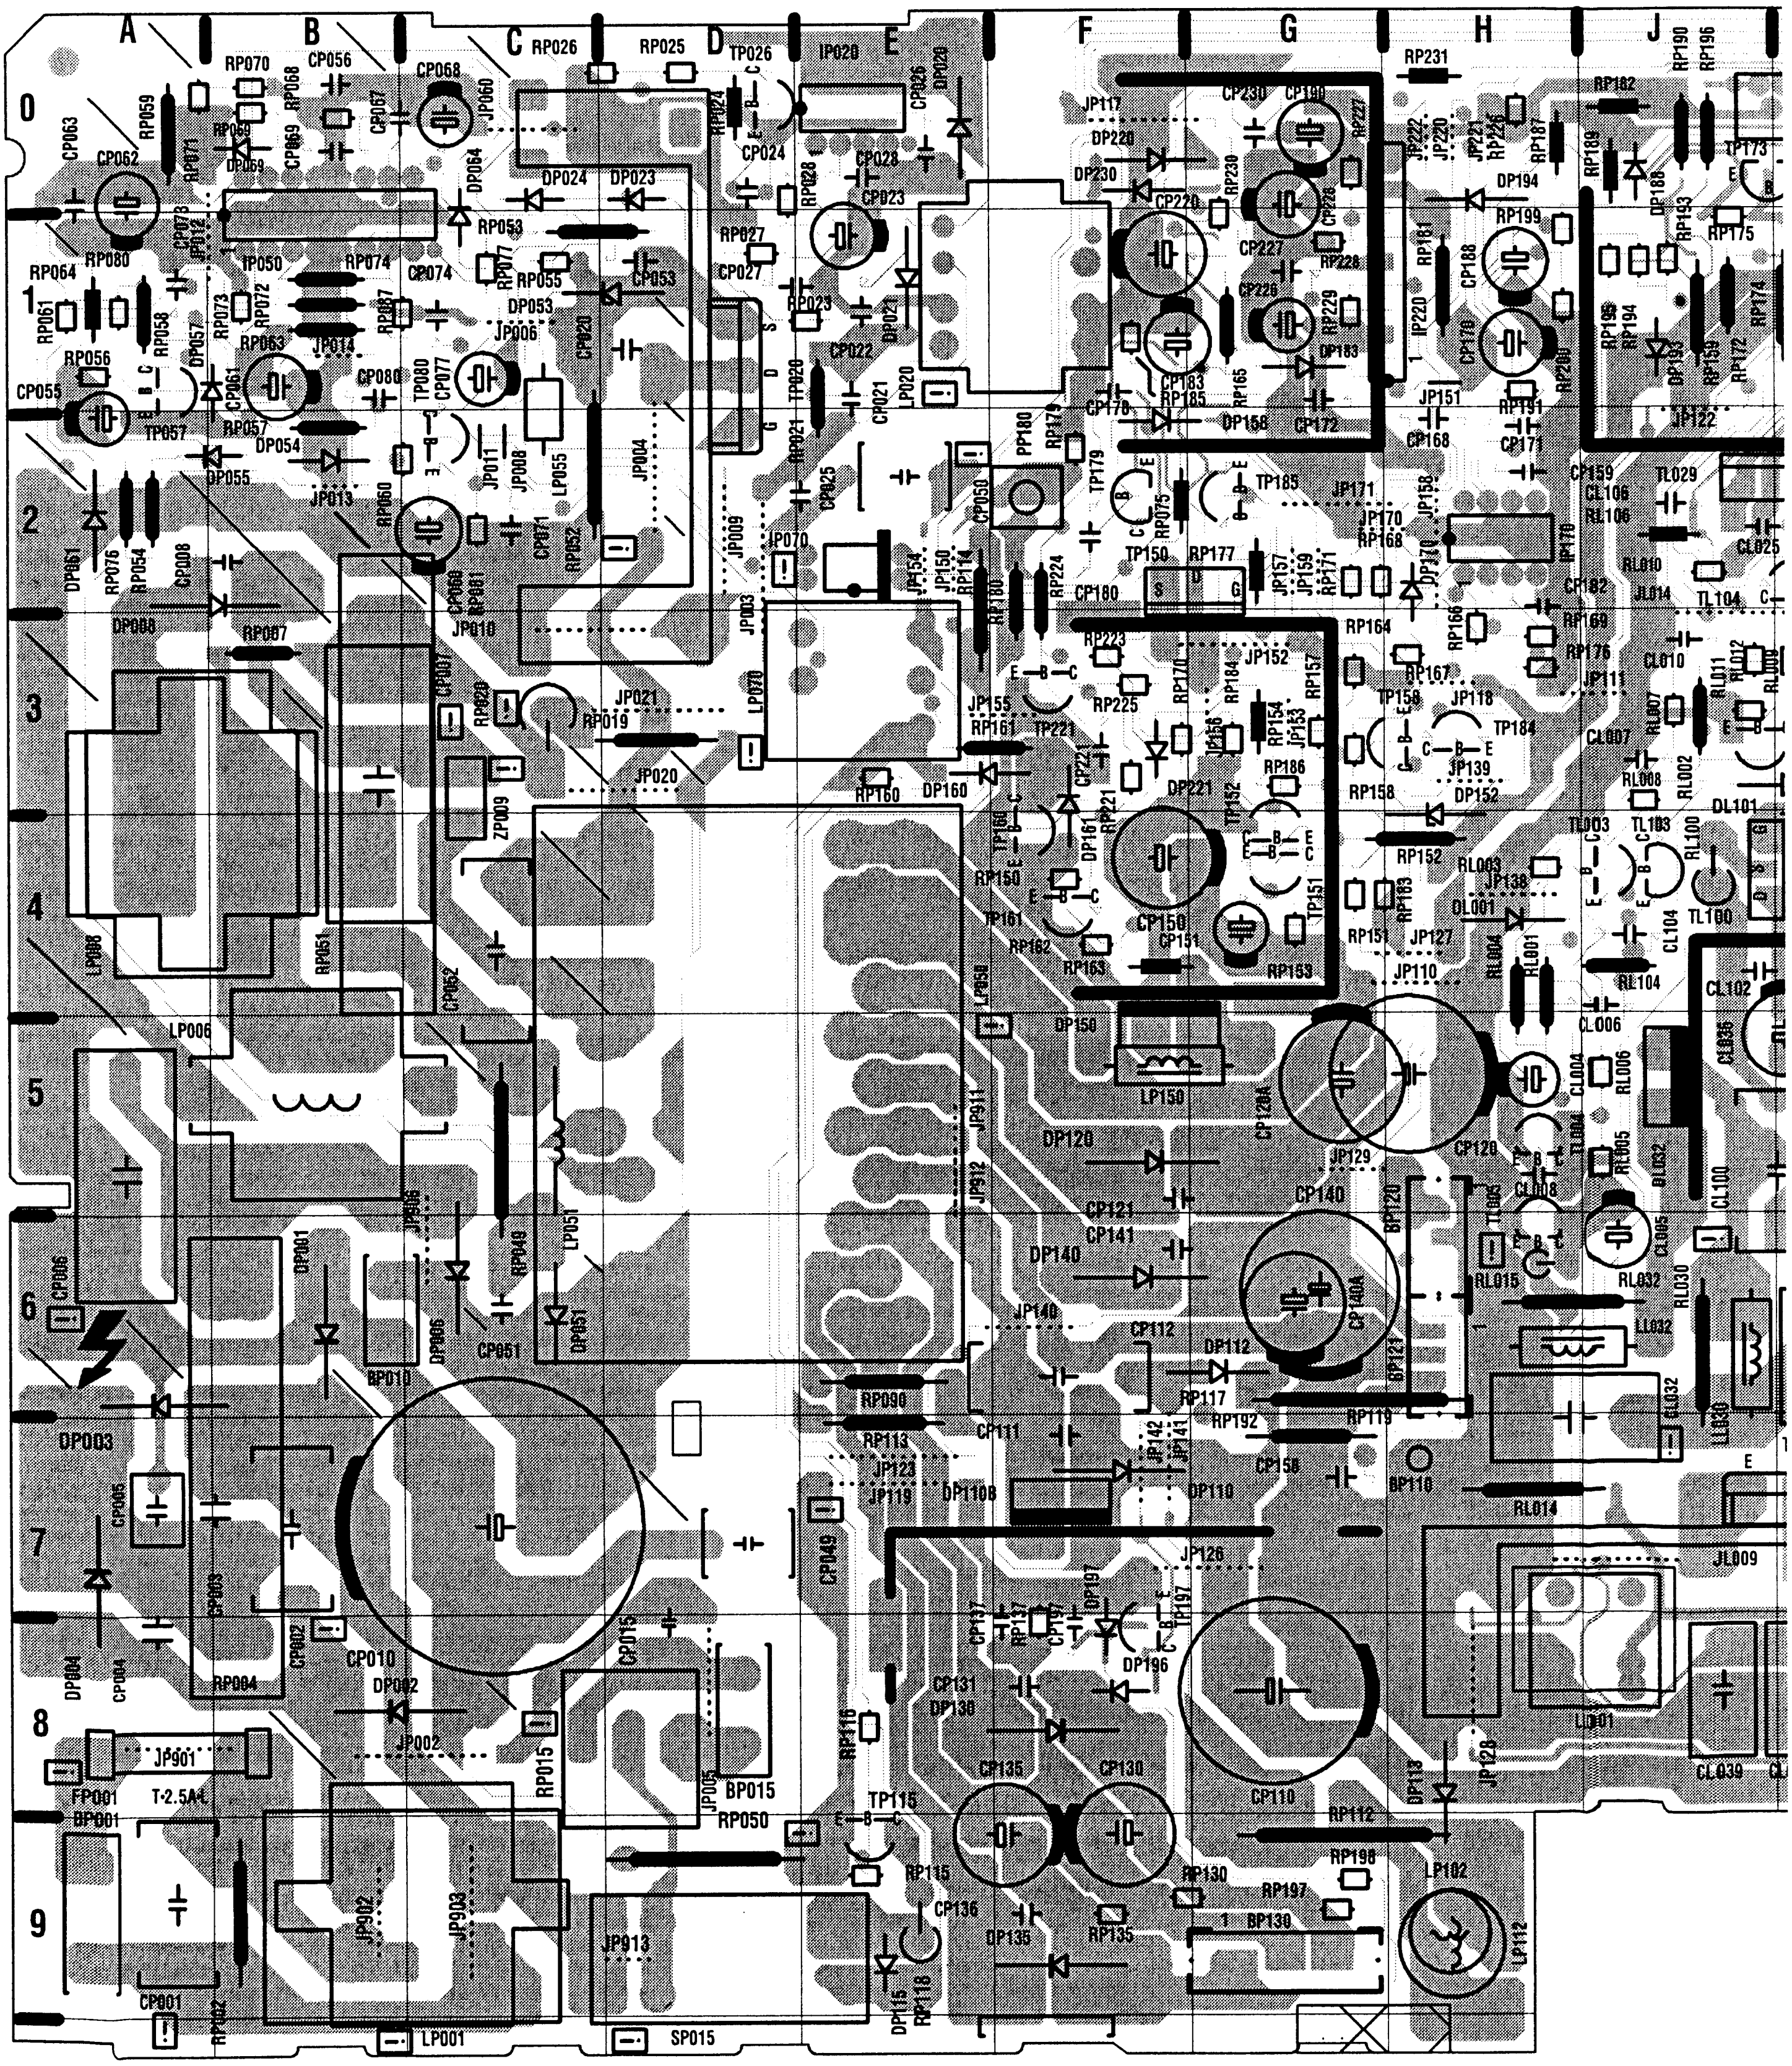
A
B
C
D
E
F
G
H
J
0
1
2
3
4
5
6
7
8
9
RP070
CP056
CP068
RP026
RP025
TP026
IP020
RP231
RP182
CP063
RP059
CP062
RP064
RP080
TP050
RP074
CP074
DP053
DP024
DP023
RP053
RP055
CP053
CP055
TP057
DP054
DP055
JP013
DP061
RP076
RP054
CP008
DP008
RP007
LP008
LP006
CP006
DP003
CP005
DP004
CP004
RP004
CP010
DP002
JP002
JP901
FP001
T-2.5AL
BP001
CP001
RP002
JP902
JP903
LP001
JP913
SP015
RP015
JP005
BP015
RP050
TP115
RP115
RP118
DP115
CP136
DP135
RP135
CP135
CP130
DP130
CP131
RP116
CP110
RP112
RP130
RP196
RP197
BP130
LP102
LP112
DP118
JP128
CP049
CP015
DP001
CP003
CP002
RP051
CP007
CP062
RP048
LP051
DP051
CP051
DP006
BP010
JP006
ZP009
JP020
JP021
RP019
RP020
JP010
RP060
CP060
RP081
RP052
JP004
LP055
JP008
JP011
TP080
CP077
CP080
DP064
JP060
CP067
RP068
CP069
DP059
RP071
CP073
JP012
RP058
DP057
CP061
RP057
RP063
JP014
RP072
RP073
RP061
RP056
RP087
RP077
JP006
CP020
RP028
CP024
RP027
CP027
CP023
CP028
CP026
DP020
RP023
CP022
TP020
CP021
DP021
JP020
RP021
CP025
JP009
JP070
JP003
LP070
RP160
DP160
JP150
JP154
RP180
RP114
CP050
PP180
RP179
TP179
JP117
DP220
DP230
CP230
CP190
RP227
CP220
RP230
CP228
CP227
RP228
CP226
RP229
DP183
CP183
RP185
RP165
DP158
CP172
CP178
RP075
TP185
TP150
RP177
RP224
CP180
JP157
JP159
RP171
JP171
JP170
RP168
JP158
JP170
JP152
RP184
RP170
RP157
RP154
JP153
RP223
RP225
JP155
RP161
TP221
CP221
RP221
DP221
RP186
TP152
RP150
TP161
RP162
RP163
CP150
CP151
RP153
TP151
DP150
LP150
DP120
CP121
CP141
DP140
JP140
CP112
DP112
RP117
RP192
RP119
CP111
RP090
RP113
JP123
JP119
DP110B
JP142
JP141
DP110
CP158
BP110
JP126
CP137
RP137
CP197
DP197
TR197
DP196
CP120A
CP120
JP129
CP140
CP140A
BP120
BP121
RL015
RL014
JL009
LL001
CL039
RP181
IP220
CP188
CP170
RP199
RP200
RP195
RP194
RP193
RP172
RP174
JP122
DP194
RP187
RP221
RP189
JP151
CP168
RP191
CP171
RP176
TP158
JP118
TP184
JP139
RP158
DP152
RP152
RP183
RP151
JP127
JP110
RL003
JP138
OL001
RL004
RL001
RL002
RL008
CL007
JP111
TL003
TL103
RL100
TL100
CL104
RL104
CL006
CL004
CL005
TL004
RL005
RL006
CL008
TL005
RL032
RL030
LL032
CL032
LL030
CL100
CL102
CL036
RL010
RL014
TL104
CP159
CL106
RL106
TL029
CL025
CP182
JL014
RP169
CL010
RL011
RL007
DL101
RP166
RP164
RP167
RP190
TP173
RP175
DP153
DP188

S

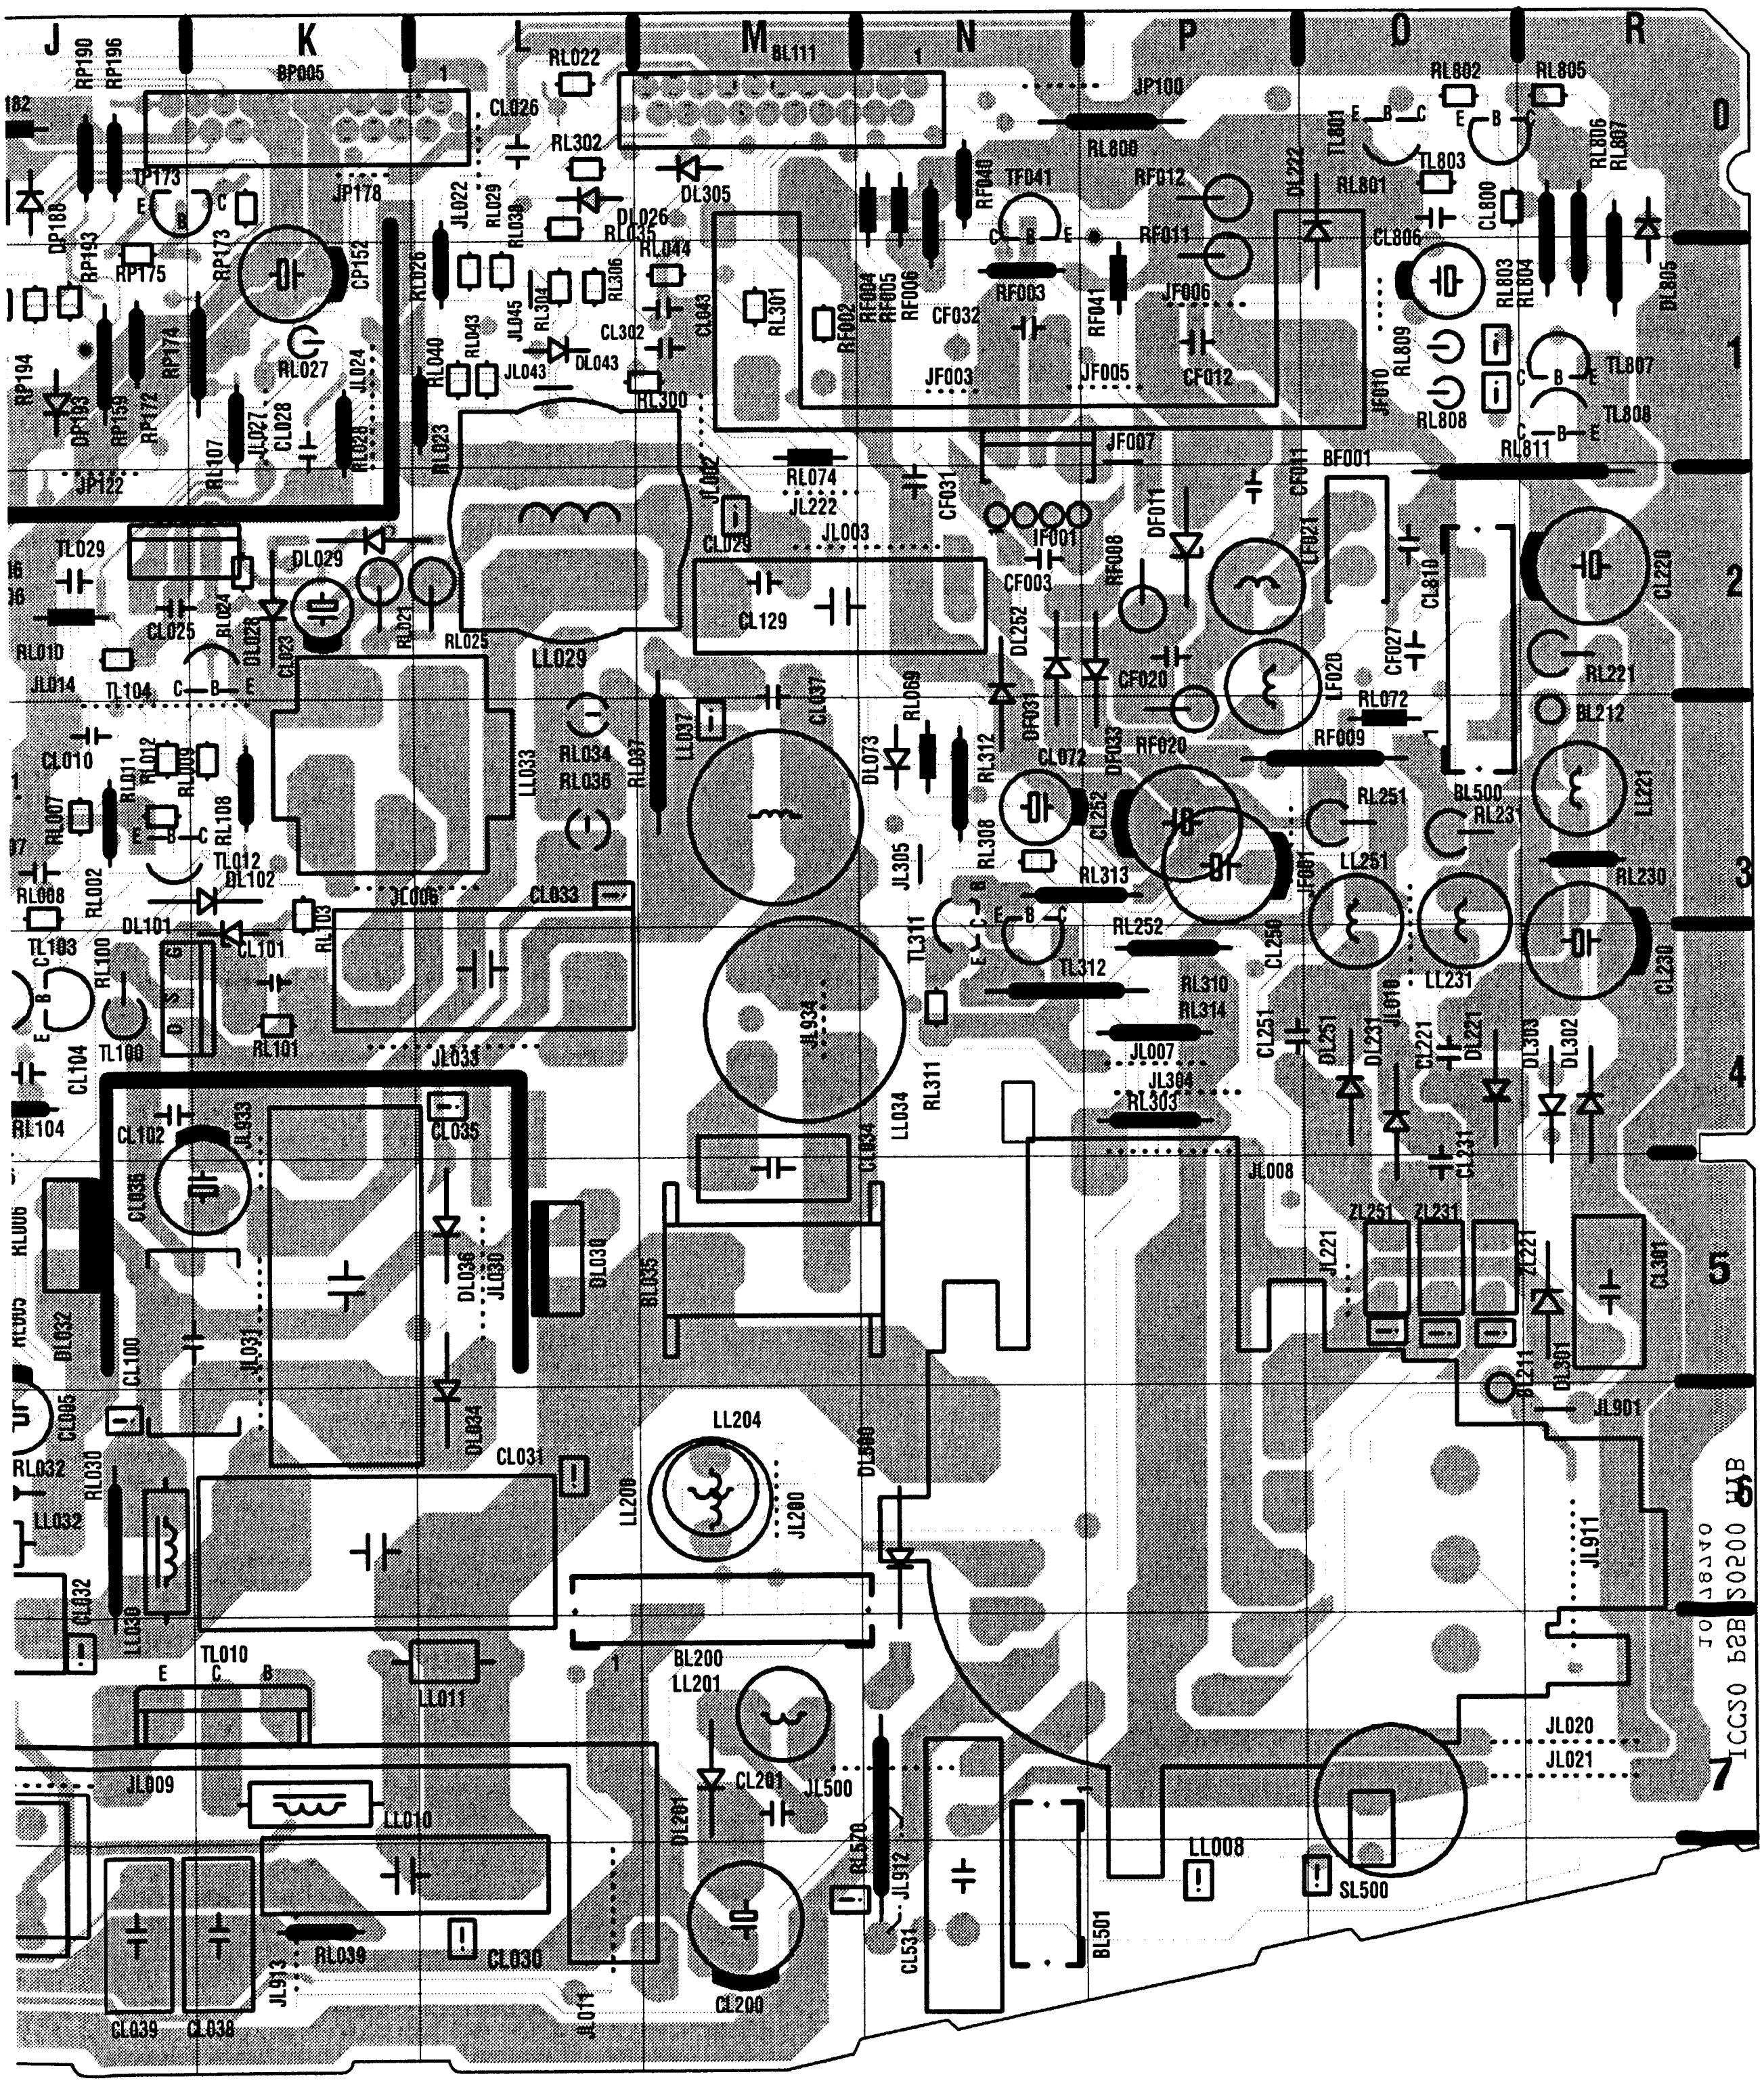
J
K
L
M
N
P
Q
R
0
1
2
3
4
5
6
7
BP005
BL111
RL022
CL026
RL302
DL305
JP100
RL800
RL802
RL805
TL801
RL803
RL801
CL800
CL806
RL806
RL807
DL805
RL809
RL808
TL807
TL808
RL811
JF010
TF041
RF012
RF011
RF003
RF041
JF006
CF012
CF032
JF003
JF005
RL301
RF002
RF004
RF005
RF006
RF040
CP152
RP173
RP174
RP159
RP172
JP122
JP178
TP173
RP175
RP193
RP194
RP190
RP196
DP193
DP188
RL027
RL107
JL027
CL028
JL024
RL028
RL026
RL040
RL023
JL043
DL043
CL302
RL300
CL043
JL022
RL029
RL038
RL043
JL045
RL304
RL306
RL044
DL026
RL035
LL029
JL002
CL029
CL129
RL074
JL222
JL003
CF031
JF007
JF001
CF003
RF008
DF011
DL252
DF031
CF020
RF020
LF020
LF021
CF011
BF001
CL810
CF027
RL072
RF009
CL220
RL221
BL212
LL221
BL500
RL231
RL230
LL231
CL230
RL251
LL251
JF001
CL252
CL072
DF033
RL313
RL252
TL312
RL310
RL314
CL250
JL007
JL304
RL303
CL251
DL251
DL231
CL221
DL221
DL303
DL302
CL231
JL008
ZL251
ZL231
ZL221
JL221
CL301
DL301
RL211
JL901
JL911
JL020
JL021
SL500
LL008
BL501
CL531
JL912
RL520
JL500
CL201
LL201
BL200
DL201
CL200
JL011
LL200
JL200
LL204
DL500
LL034
RL311
TL311
JL305
RL308
RL312
DL073
RL069
CL037
LL037
RL037
RL034
RL036
LL033
JL934
CL034
BL035
CL033
JL006
TL029
CL025
RL024
DL028
CL023
DL029
RL021
RL025
RL010
JL014
TL104
CL010
RL011
RL012
RL009
RL007
RL108
TL012
DL102
RL008
RL002
DL101
CL101
RL103
TL103
RL100
TL100
CL104
RL101
RL104
JL033
CL102
JL933
CL035
CL036
DL036
JL030
DL030
DL032
CL100
JL031
DL034
CL005
RL032
RL030
LL032
CL032
LL030
CL031
TL010
E
C
B
LL011
JL009
LL010
JL913
RL039
CL030
CL039
CL038
ICC20 PSB S0200 H1B

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

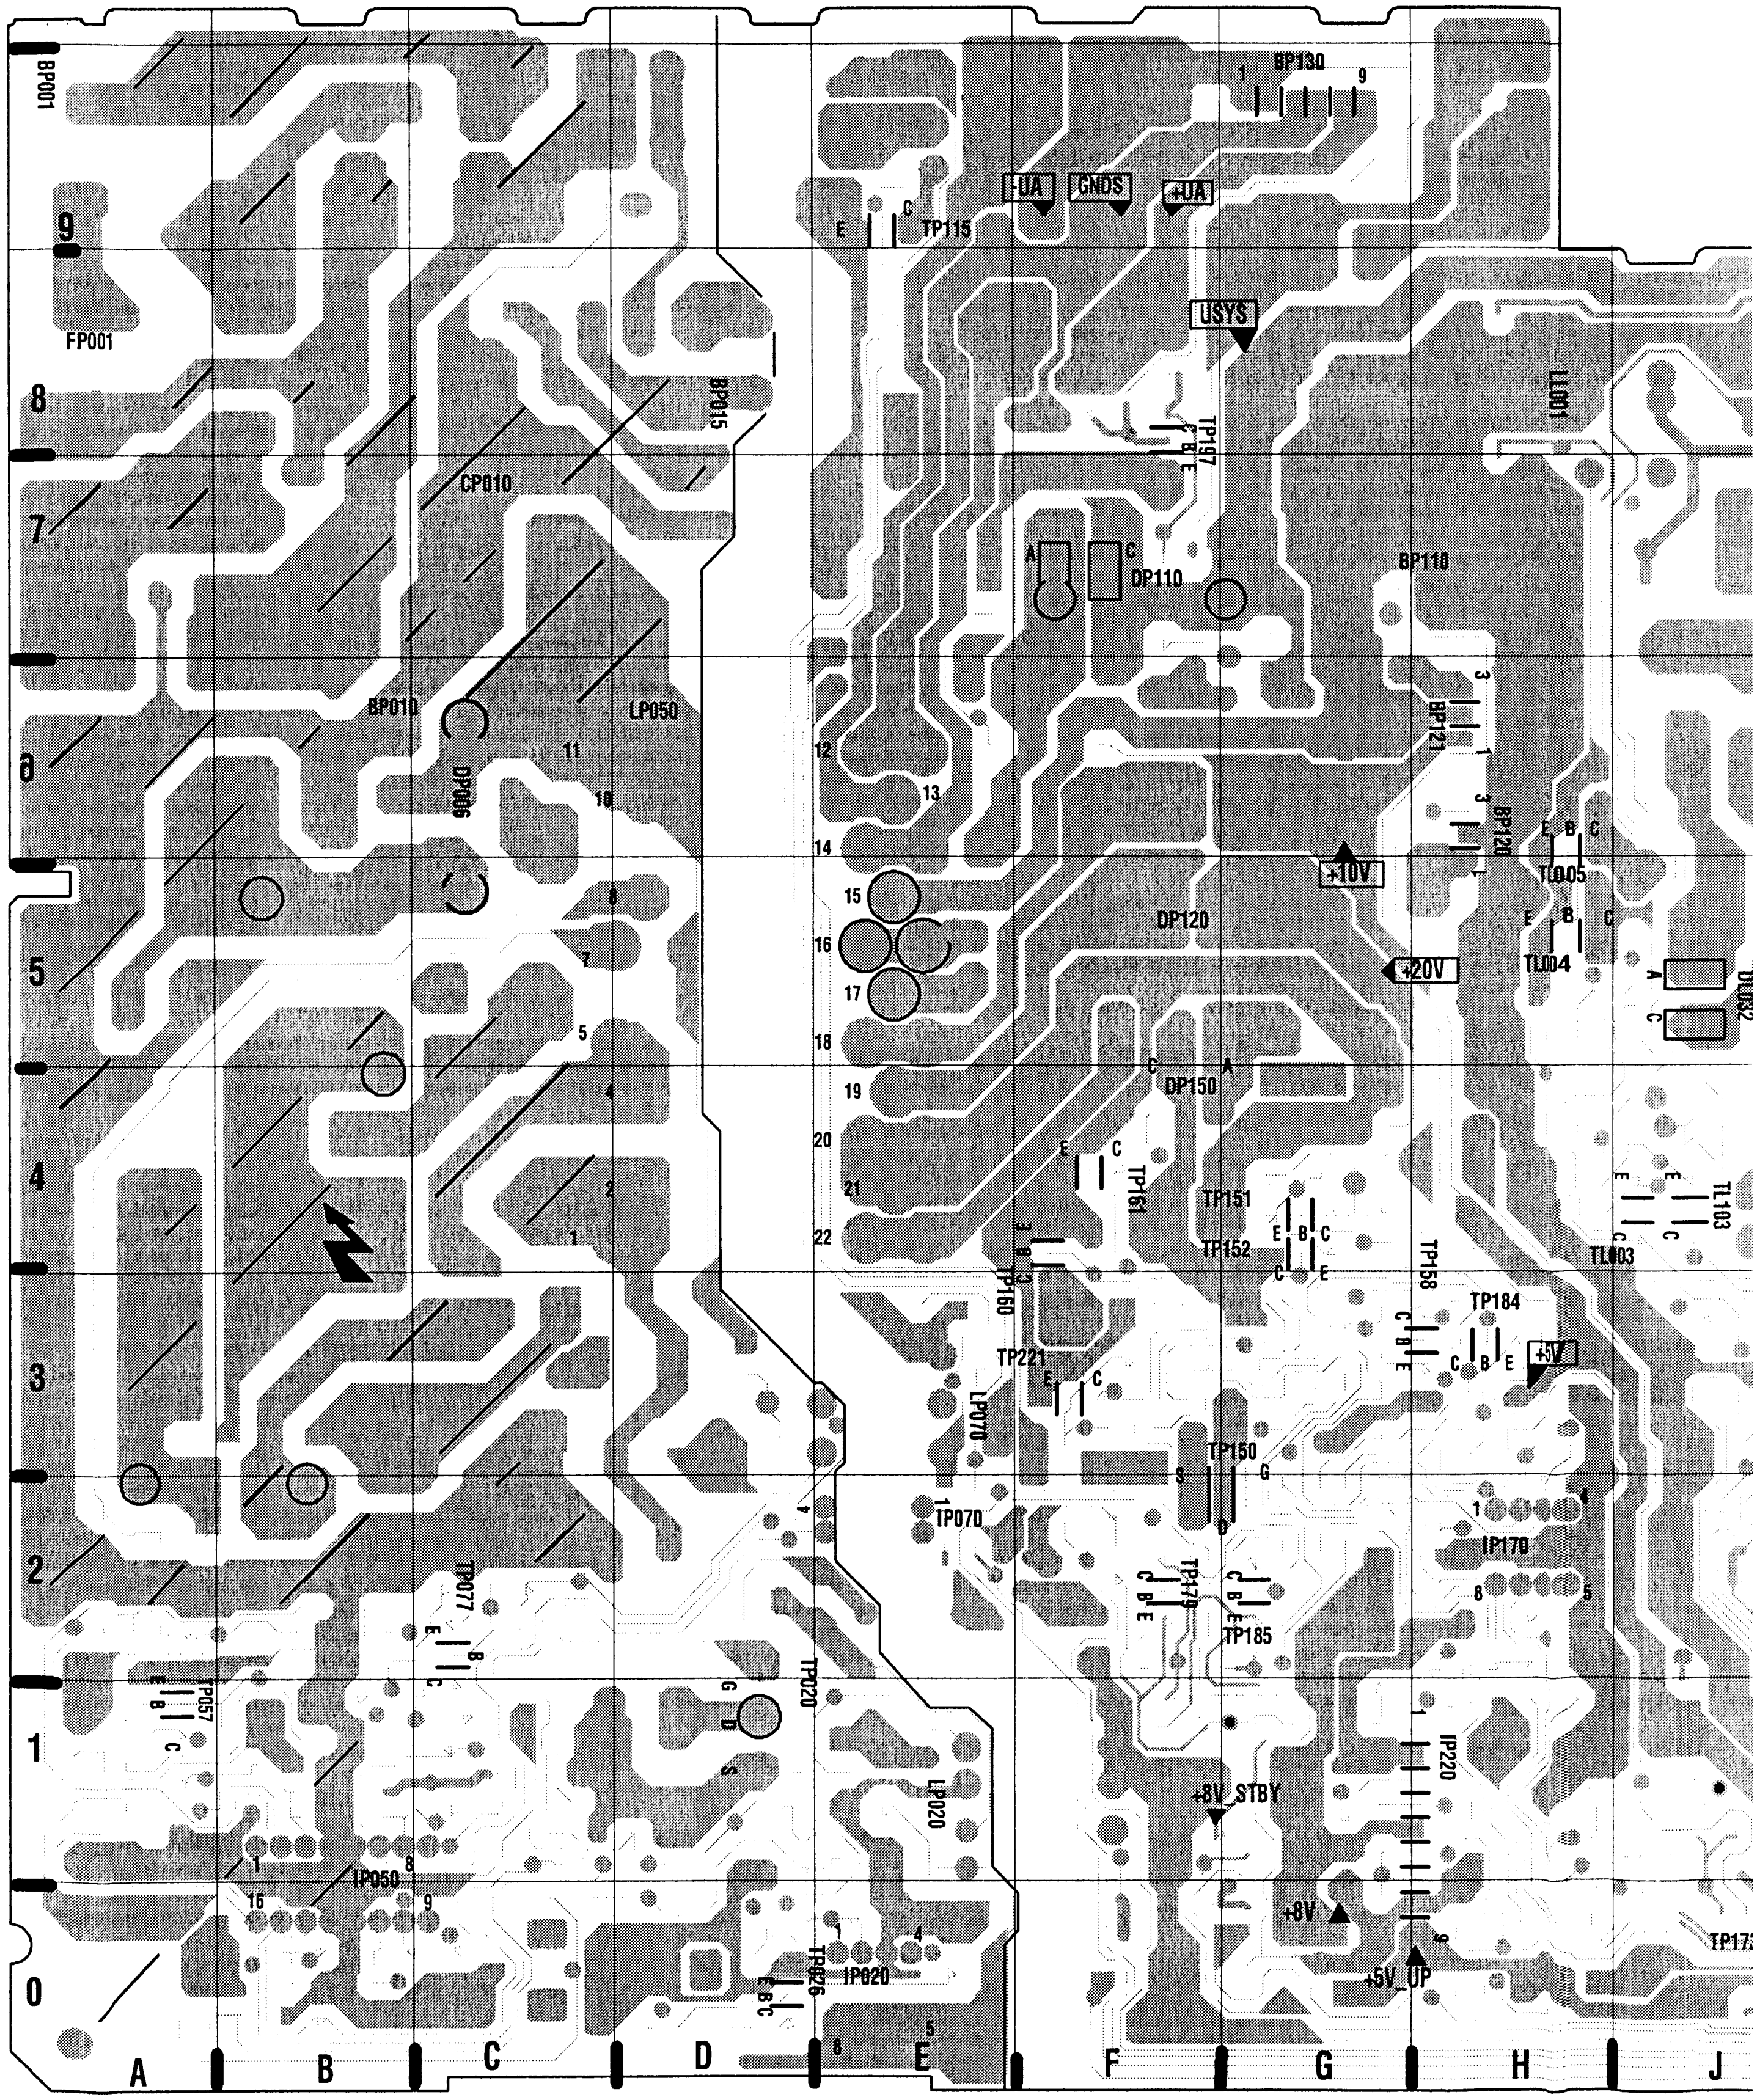
BP001
FP001
BP015
CP010
BP010
DP006
LP050
TP115
-UA
GNDS
+UA
BP130
USYS
TP197
LL001
DP110
BP110
BP121
BP120
TL005
TL004
+10V
+20V
DP120
DP150
TP161
TP151
TP152
TP160
TP158
TP184
+5V
TL103
TL003
DL032
TP221
LP070
TP150
TP070
IP170
TP179
TP185
TP077
TP057
TP020
LP020
IP220
+8V_STBY
+8V
+5V_UP
IP050
TP026
IP020
TP17
A
B
C
D
E
F
G
H
J
0
1
2
3
4
5
6
7
8
9

LATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

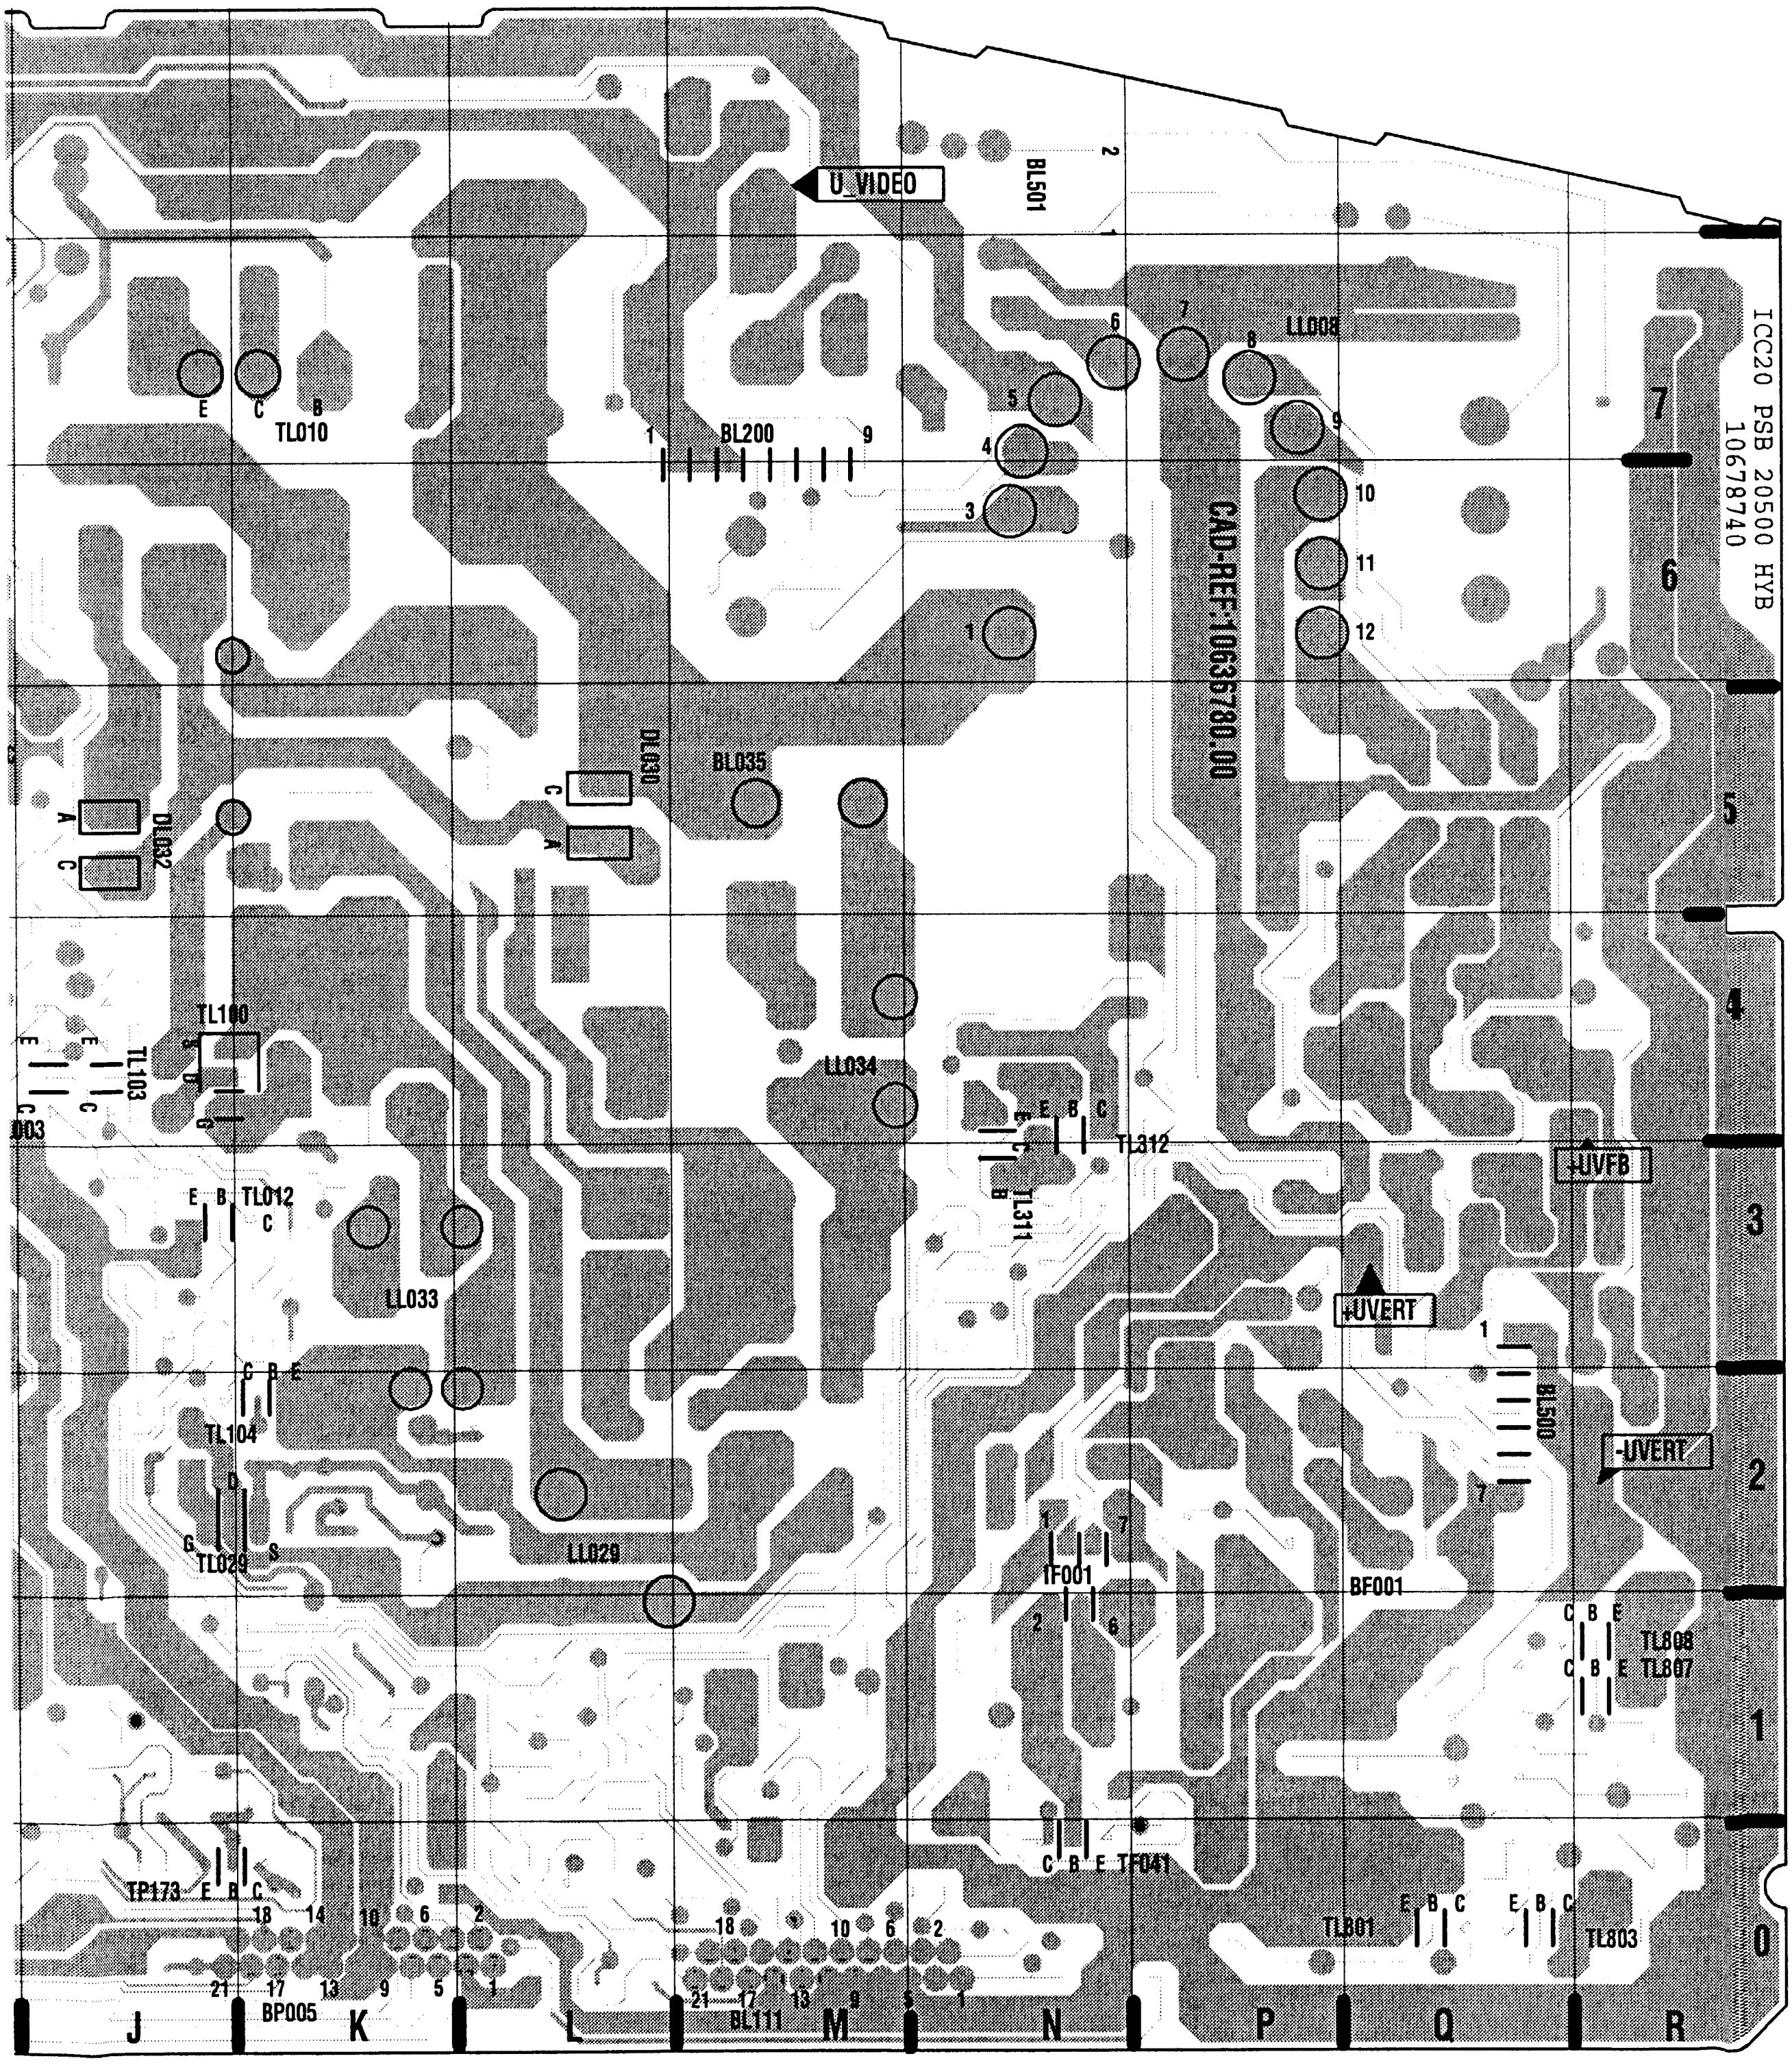
U_VIDEO
BL501
LL008
TL010
BL200
CAD-REF:10635780.00
ICC20 PSB 20500 HYB 10678740
DL030
BL035
DL032
TL100
TL103
LL034
TL312
TL311
TL012
LL033
+UVFB
+UVERT
-UVERT
BL500
TL104
TL029
LL029
TF001
BF001
TL808
TL807
TF041
TP173
BP005
BL111
TL801
TL803
J
K
L
M
N
P
Q
R
0
1
2
3
4
5
6
7

POWER SUPPLY CIRCUIT BOARD - CIRCUIT IMPRIME DE L'ALIMENTATION - LEITERPLATTE NETZTEIL - PIASTRA DEI CIRCUITI DI ALIMENTAZIONE - PLATINA ALIMENTACIÓN

COMPONENT SIDE - COTÉ COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

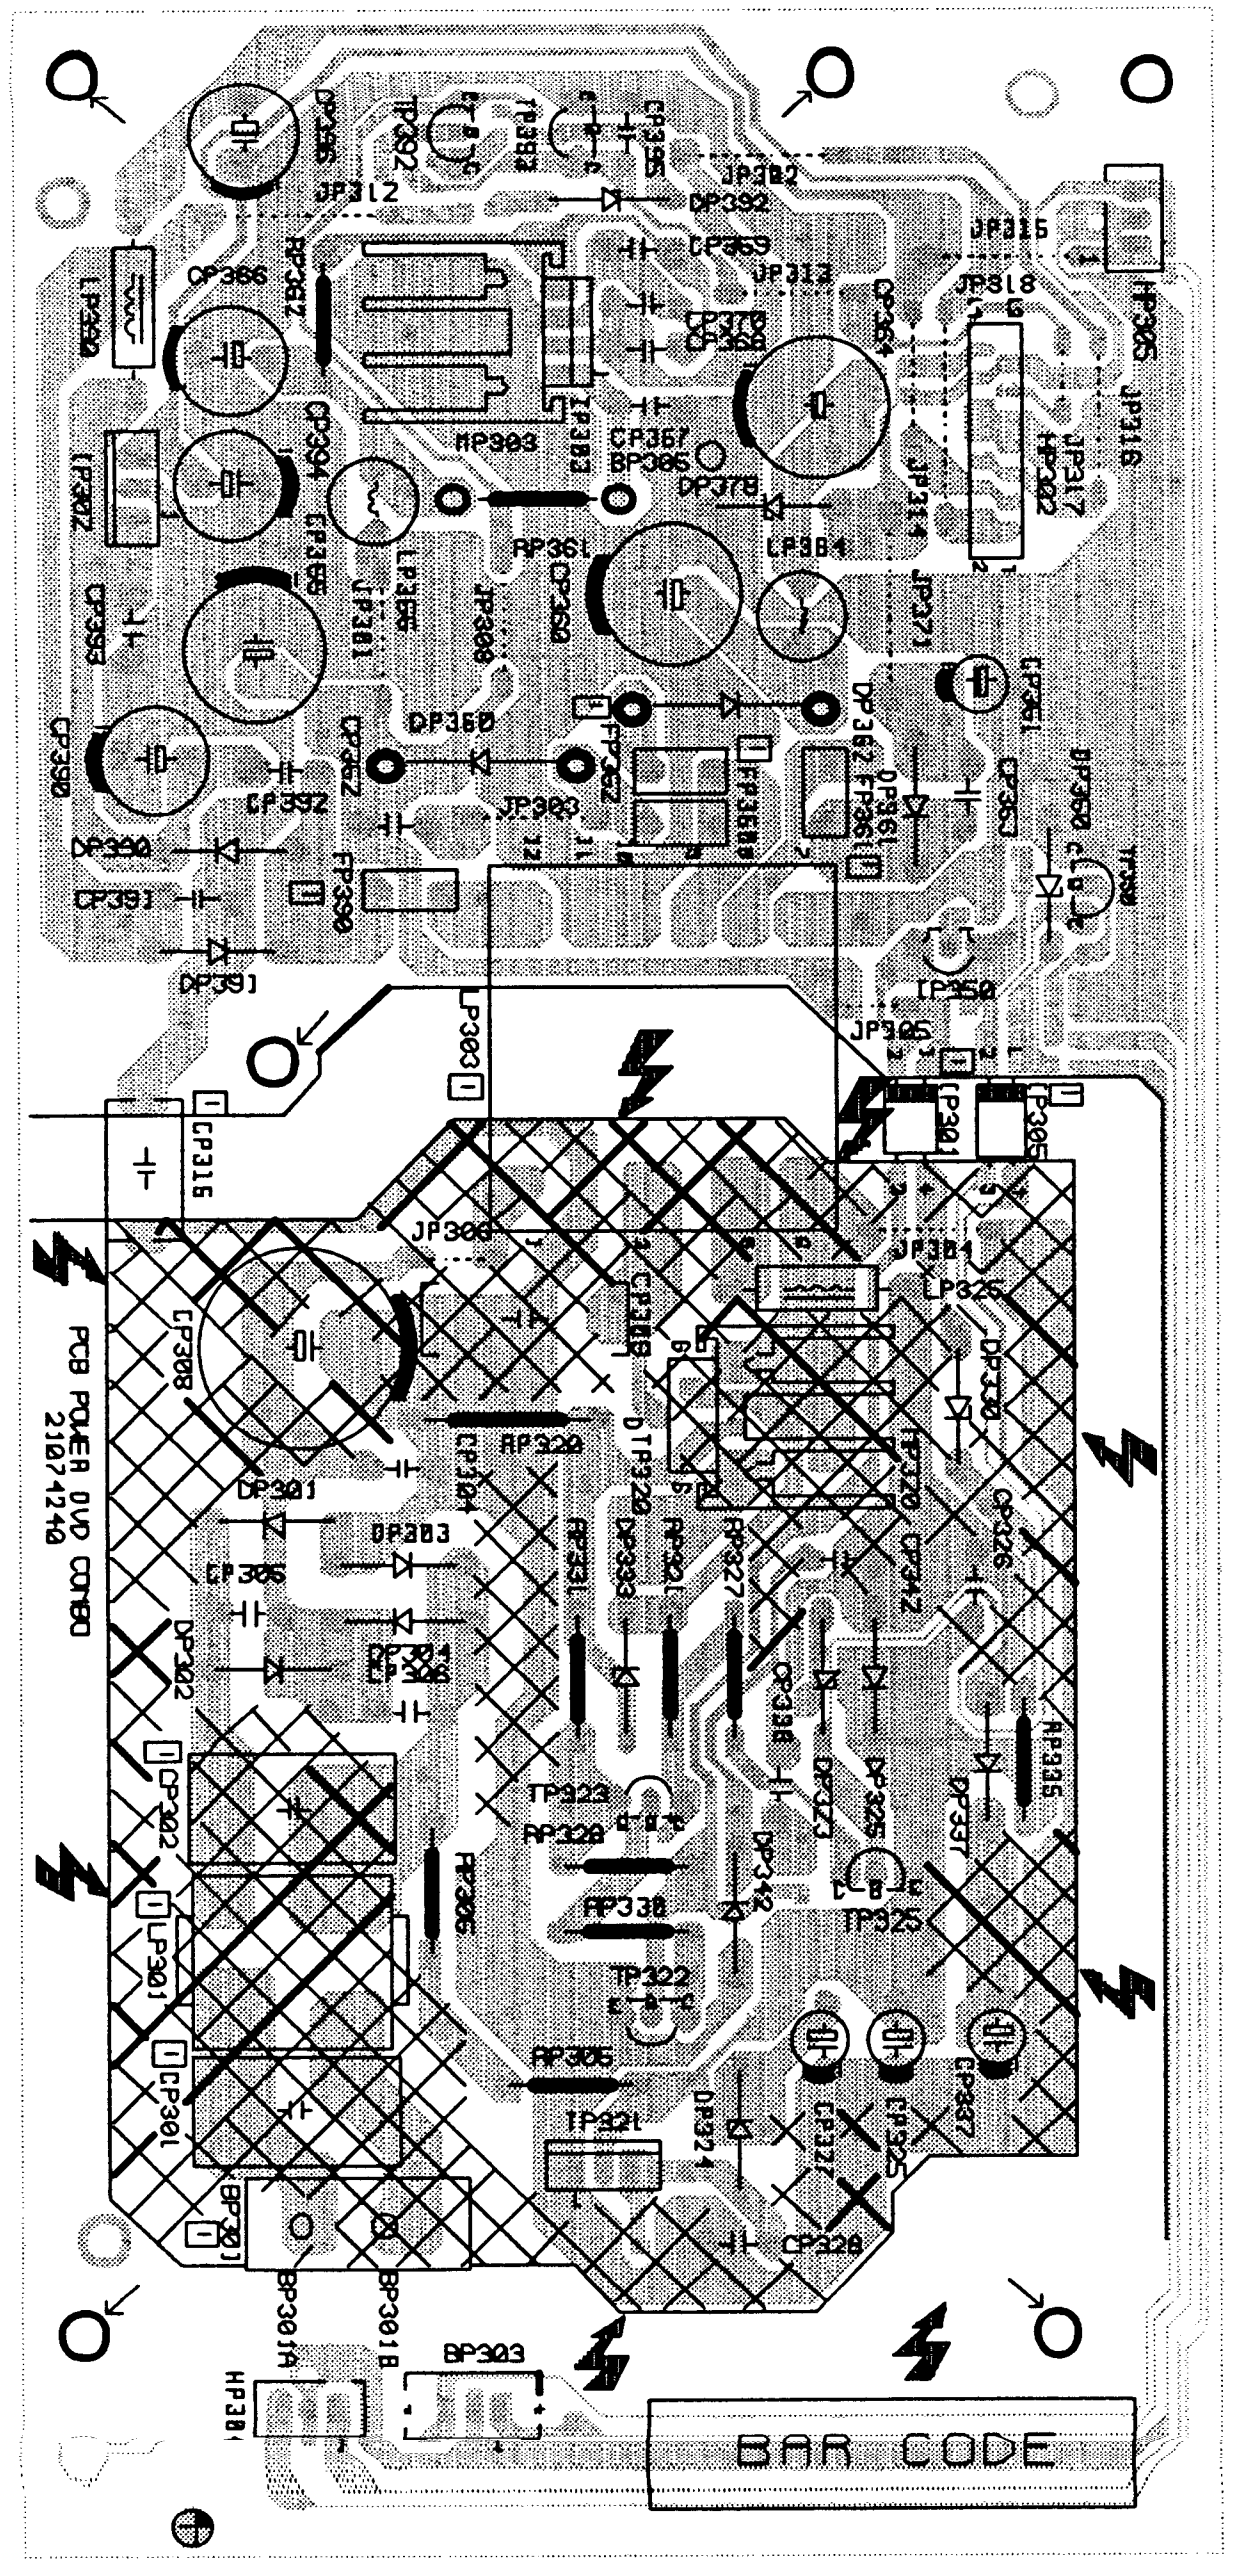
PCB POWER DVD COMBO
21074240
BAR CODE
BP303
HP301
BP301A
BP301B
TP321
TP322
TP323
TP325
CP308
JP306
JP305
TP350
DP391
CP391
DP390
CP390
CP393
CP386
LP390
LP302

SOLDER SIDE - COTÉ CUIVRE - LÖTSEITE - LATO SALDATURE - LADO DEL COBRE

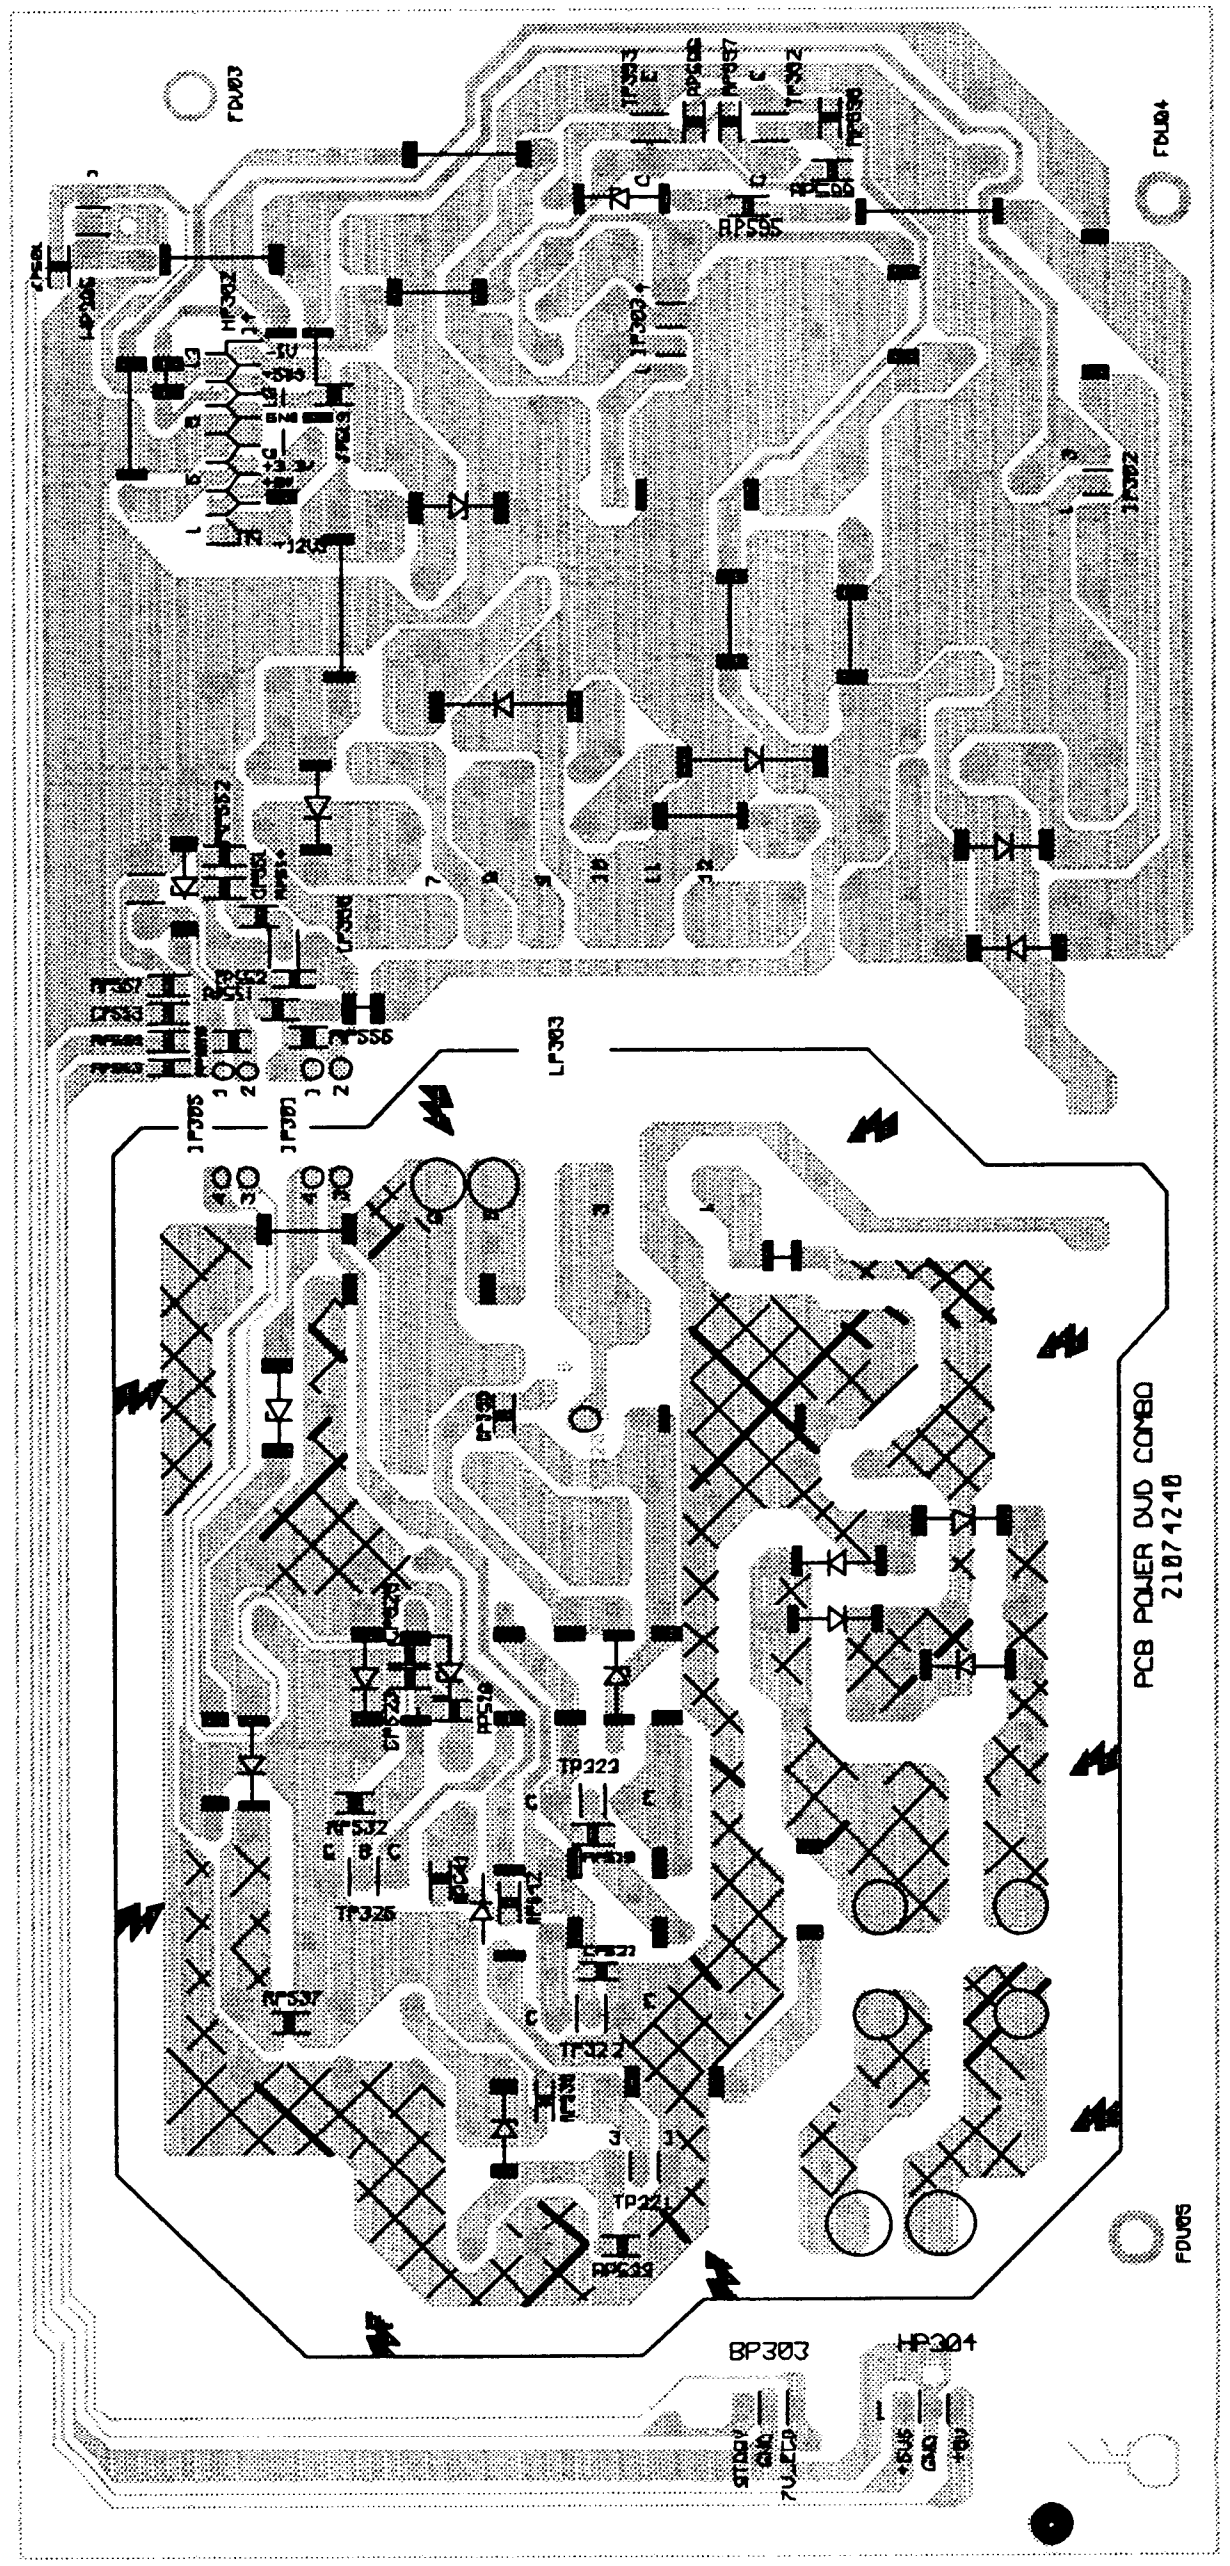
PCB POWER DVD COMBO
21074240
BP303
HP304
LP303
TP323
TP322
TP326
TP321

POWER DISTRIBUTION BOARD - INTERFACE SECTEUR - LEITERPLATTE SPANNUNGSVERTEILUNG
PIASTRA DISTRIBUZIONE ALIMENTAZIONI - PLACA DE DISTRIBUCION DE LA ALIMENTACION

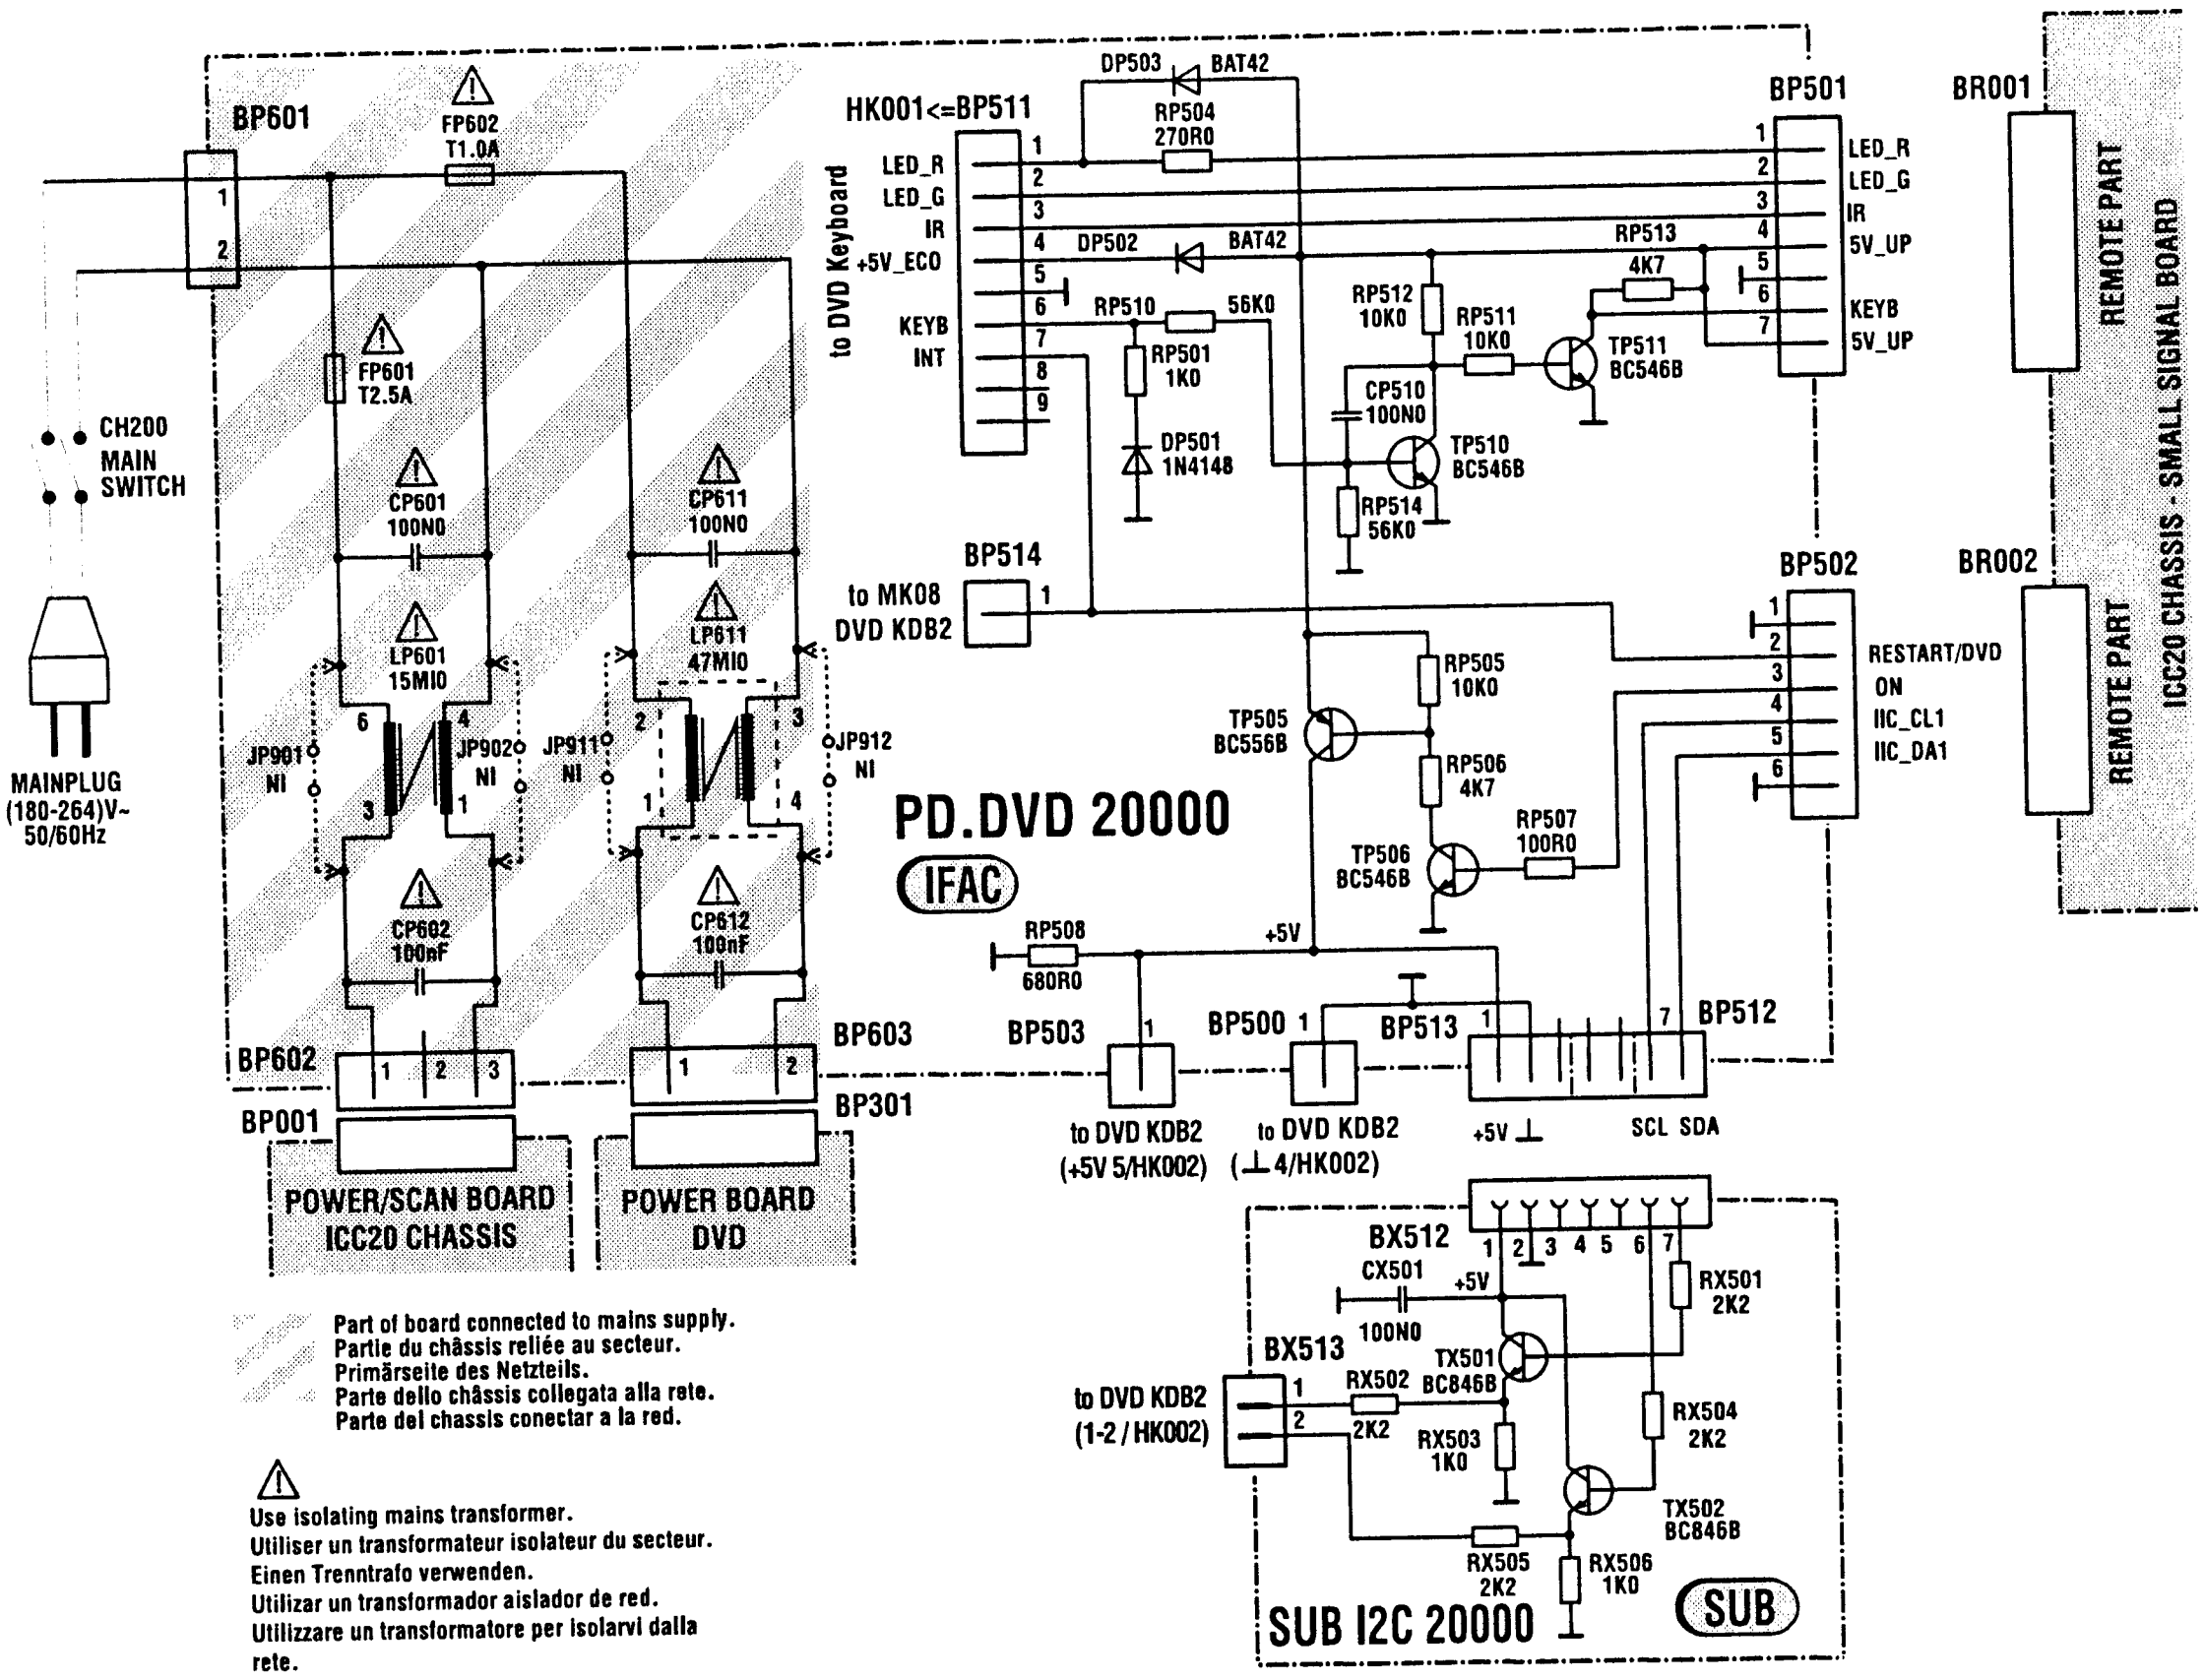
BP601
FP602 T1.0A
FP601 T2.5A
CP601 100N0
CP611 100N0
LP601 15MI0
LP611 47MI0
JP901 NI
JP902 NI
JP911 NI
JP912 NI
CP602 100nF
CP612 100nF
BP602
BP603
BP001
BP301
POWER/SCAN BOARD ICC20 CHASSIS
POWER BOARD DVD
CH200 MAIN SWITCH
MAINPLUG (180-264)V~ 50/60Hz
HK001<=BP511
to DVD Keyboard
LED_R
LED_G
IR
+5V_ECO
KEYB
INT
DP503 BAT42
RP504 270R0
DP502 BAT42
RP510 56K0
RP501 1K0
DP501 1N4148
RP512 10K0
RP511 10K0
RP513 4K7
TP511 BC546B
CP510 100N0
TP510 BC546B
RP514 56K0
BP501
LED_R
LED_G
IR
5V_UP
KEYB
5V_UP
BR001
REMOTE PART
ICC20 CHASSIS - SMALL SIGNAL BOARD
BP514
to MK08 DVD KDB2
BP502
RESTART/DVD
ON
IIC_CL1
IIC_DA1
BR002
REMOTE PART
RP505 10K0
TP505 BC556B
RP506 4K7
RP507 100R0
TP506 BC546B
PD.DVD 20000
IFAC
RP508 680R0
+5V
BP503
BP500
BP513
BP512
to DVD KDB2 (+5V 5/HK002)
to DVD KDB2 (⊥4/HK002)
+5V ⊥
SCL SDA
BX512
CX501 100N0
+5V
RX501 2K2
BX513
to DVD KDB2 (1-2 / HK002)
RX502 2K2
TX501 BC846B
RX503 1K0
RX504 2K2
TX502 BC846B
RX505 2K2
RX506 1K0
SUB I2C 20000
SUB

Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte dello châssis collegata alla rete.
Parte del chassis conectar a la red.

⚠
Use isolating mains transformer.
Utiliser un transformateur isolateur du secteur.
Einen Trenntrafo verwenden.
Utilizar un transformador aislador de red.
Utilizzare un transformatore per isolarvi dalla rete.

COMPONENT SIDE - COTE COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

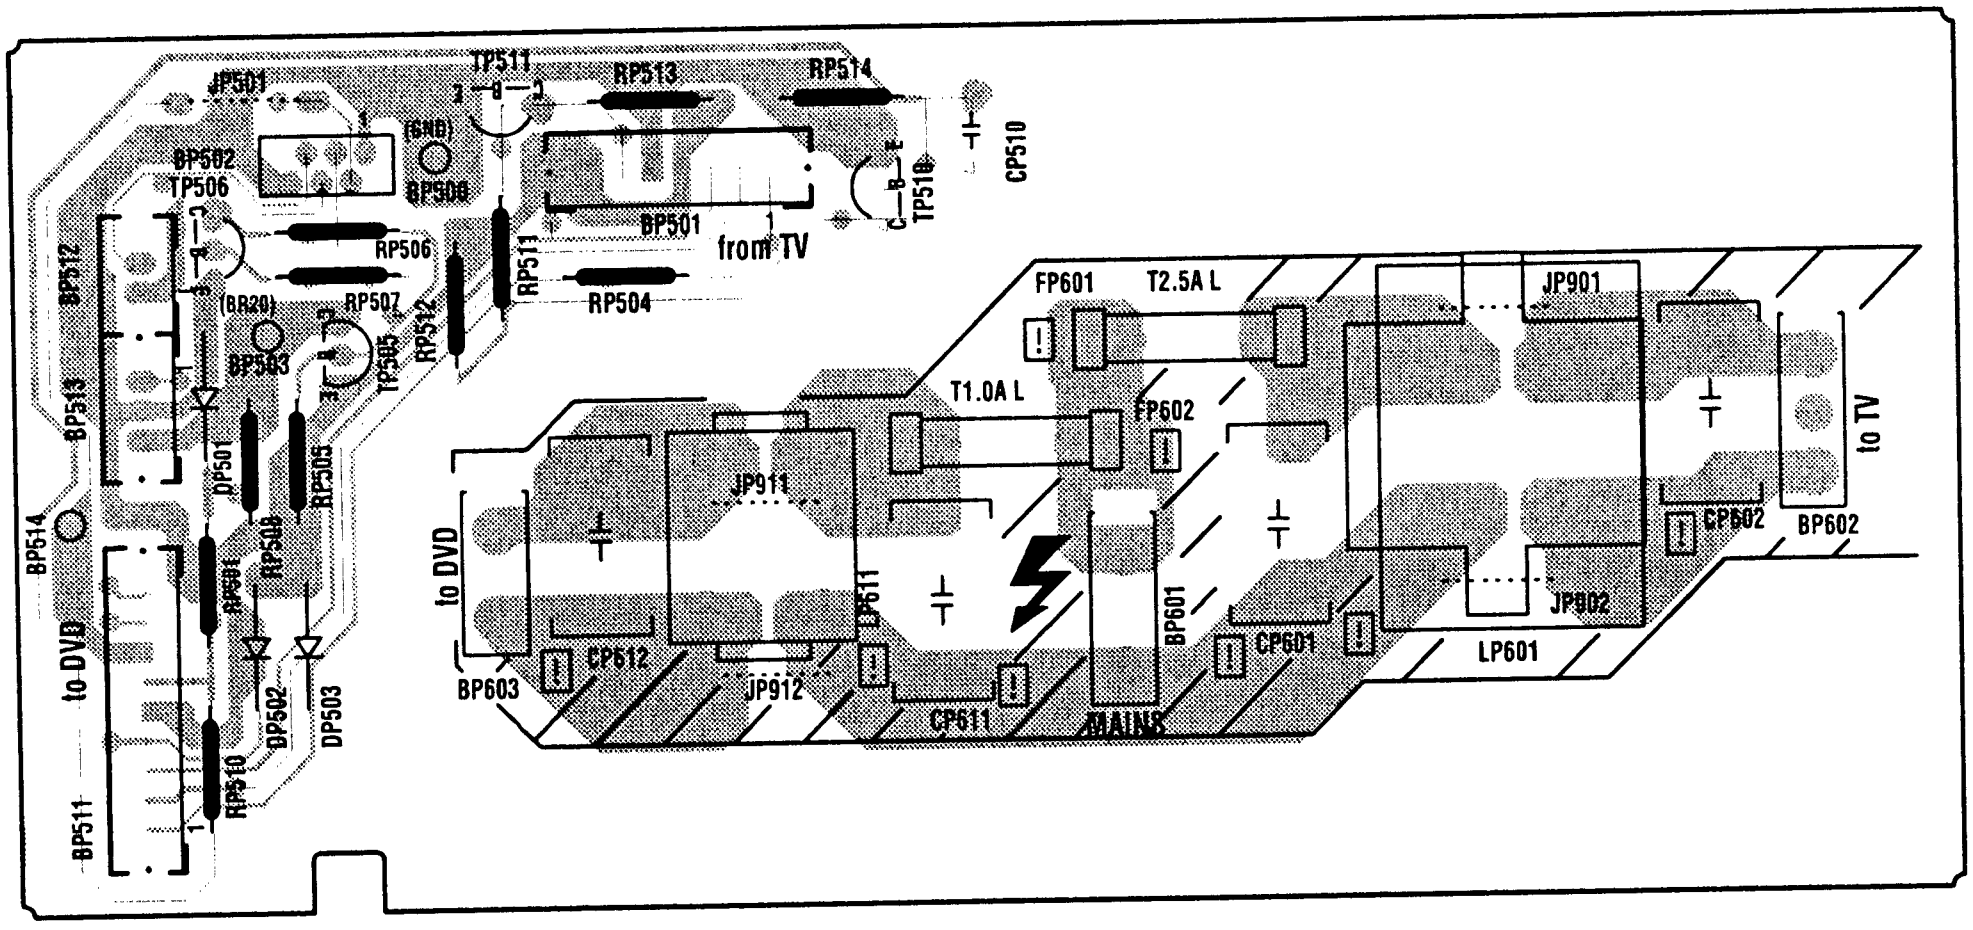
JP501
TP511
RP513
RP514
CP510
BP502
TP506
(GND)
BP508
TP510
BP512
RP506
BP501
from TV
(BR20)
RP507
RP511
RP504
BP503
TP505
RP512
BP513
FP601
T2.5A L
JP901
T1.0A L
FP602
BP514
DP501
RP508
RP505
to DVD
JP911
to TV
CP602
BP602
RP501
JP902
BP601
CP601
LP601
BP603
CP612
JP912
CP611
MAINS
DP502
DP503
BP511
RP510

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

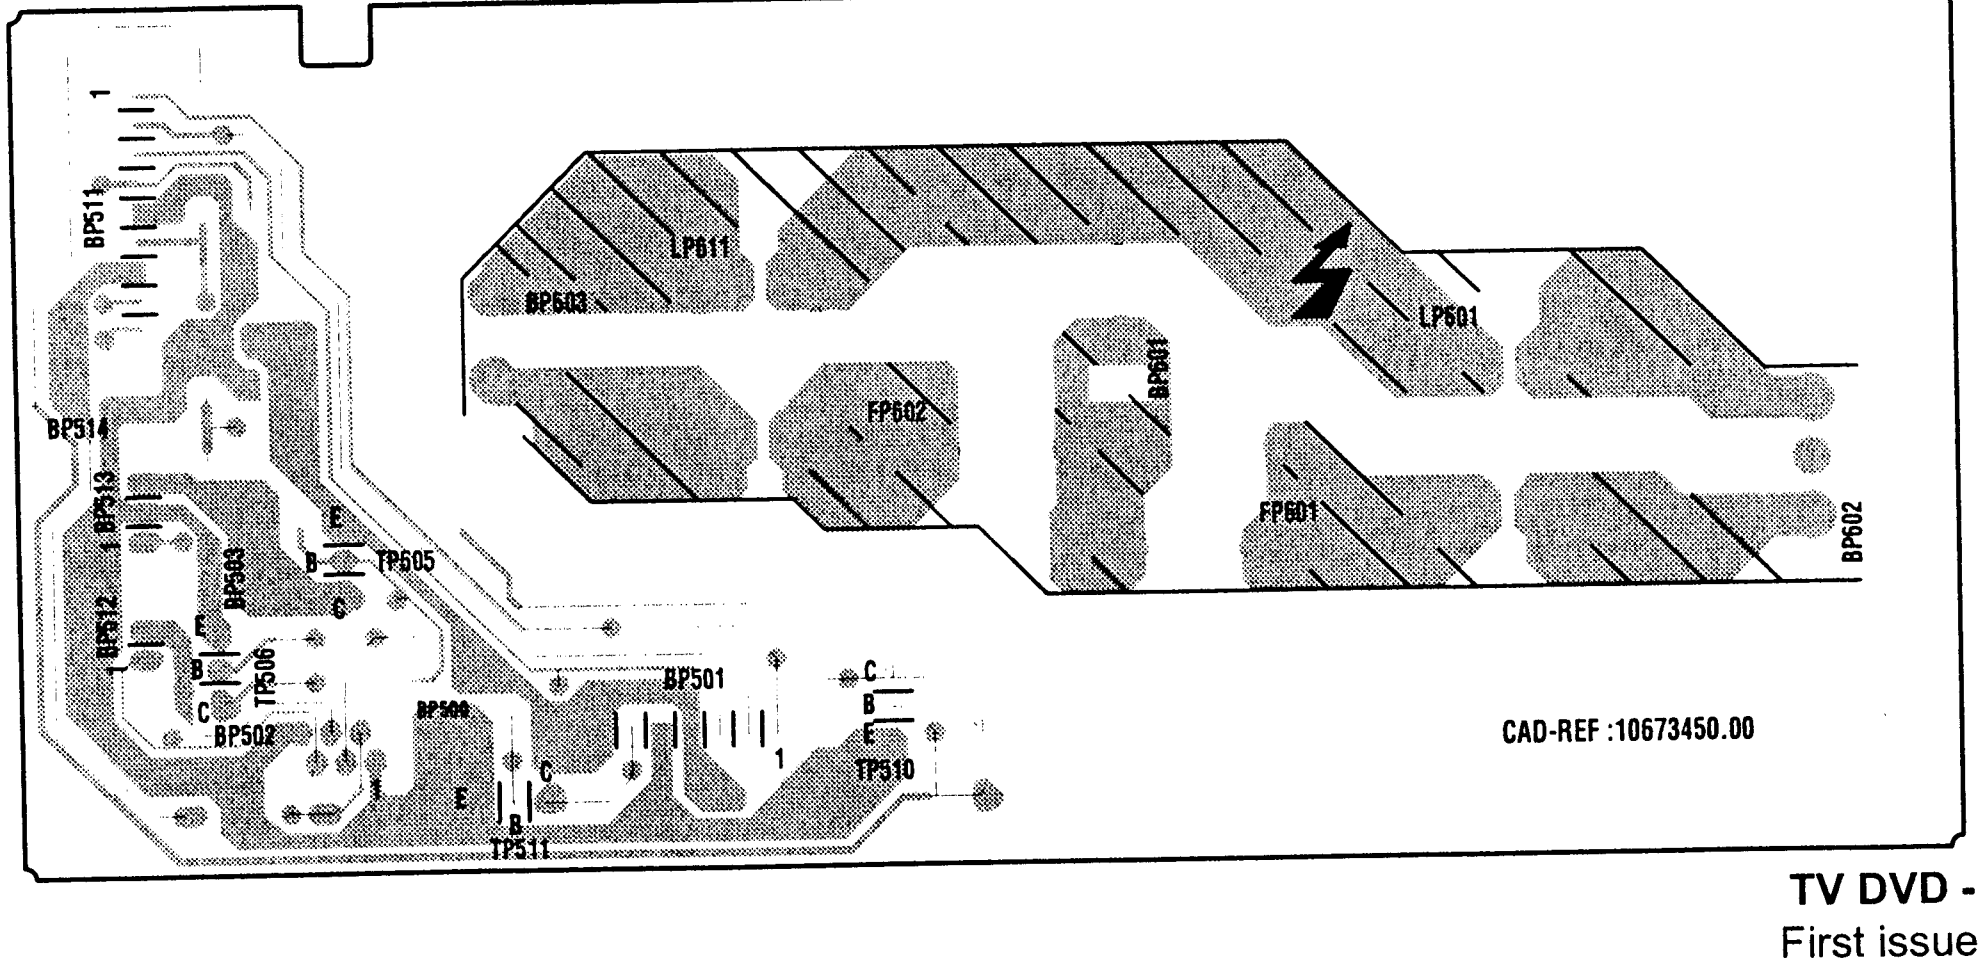
BP511
LP611
BP603
LP601
BP514
FP602
BP601
FP601
BP602
BP513
TP505
BP503
BP512
TP506
BP502
BP500
BP501
TP510
TP511
CAD-REF :10673450.00

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

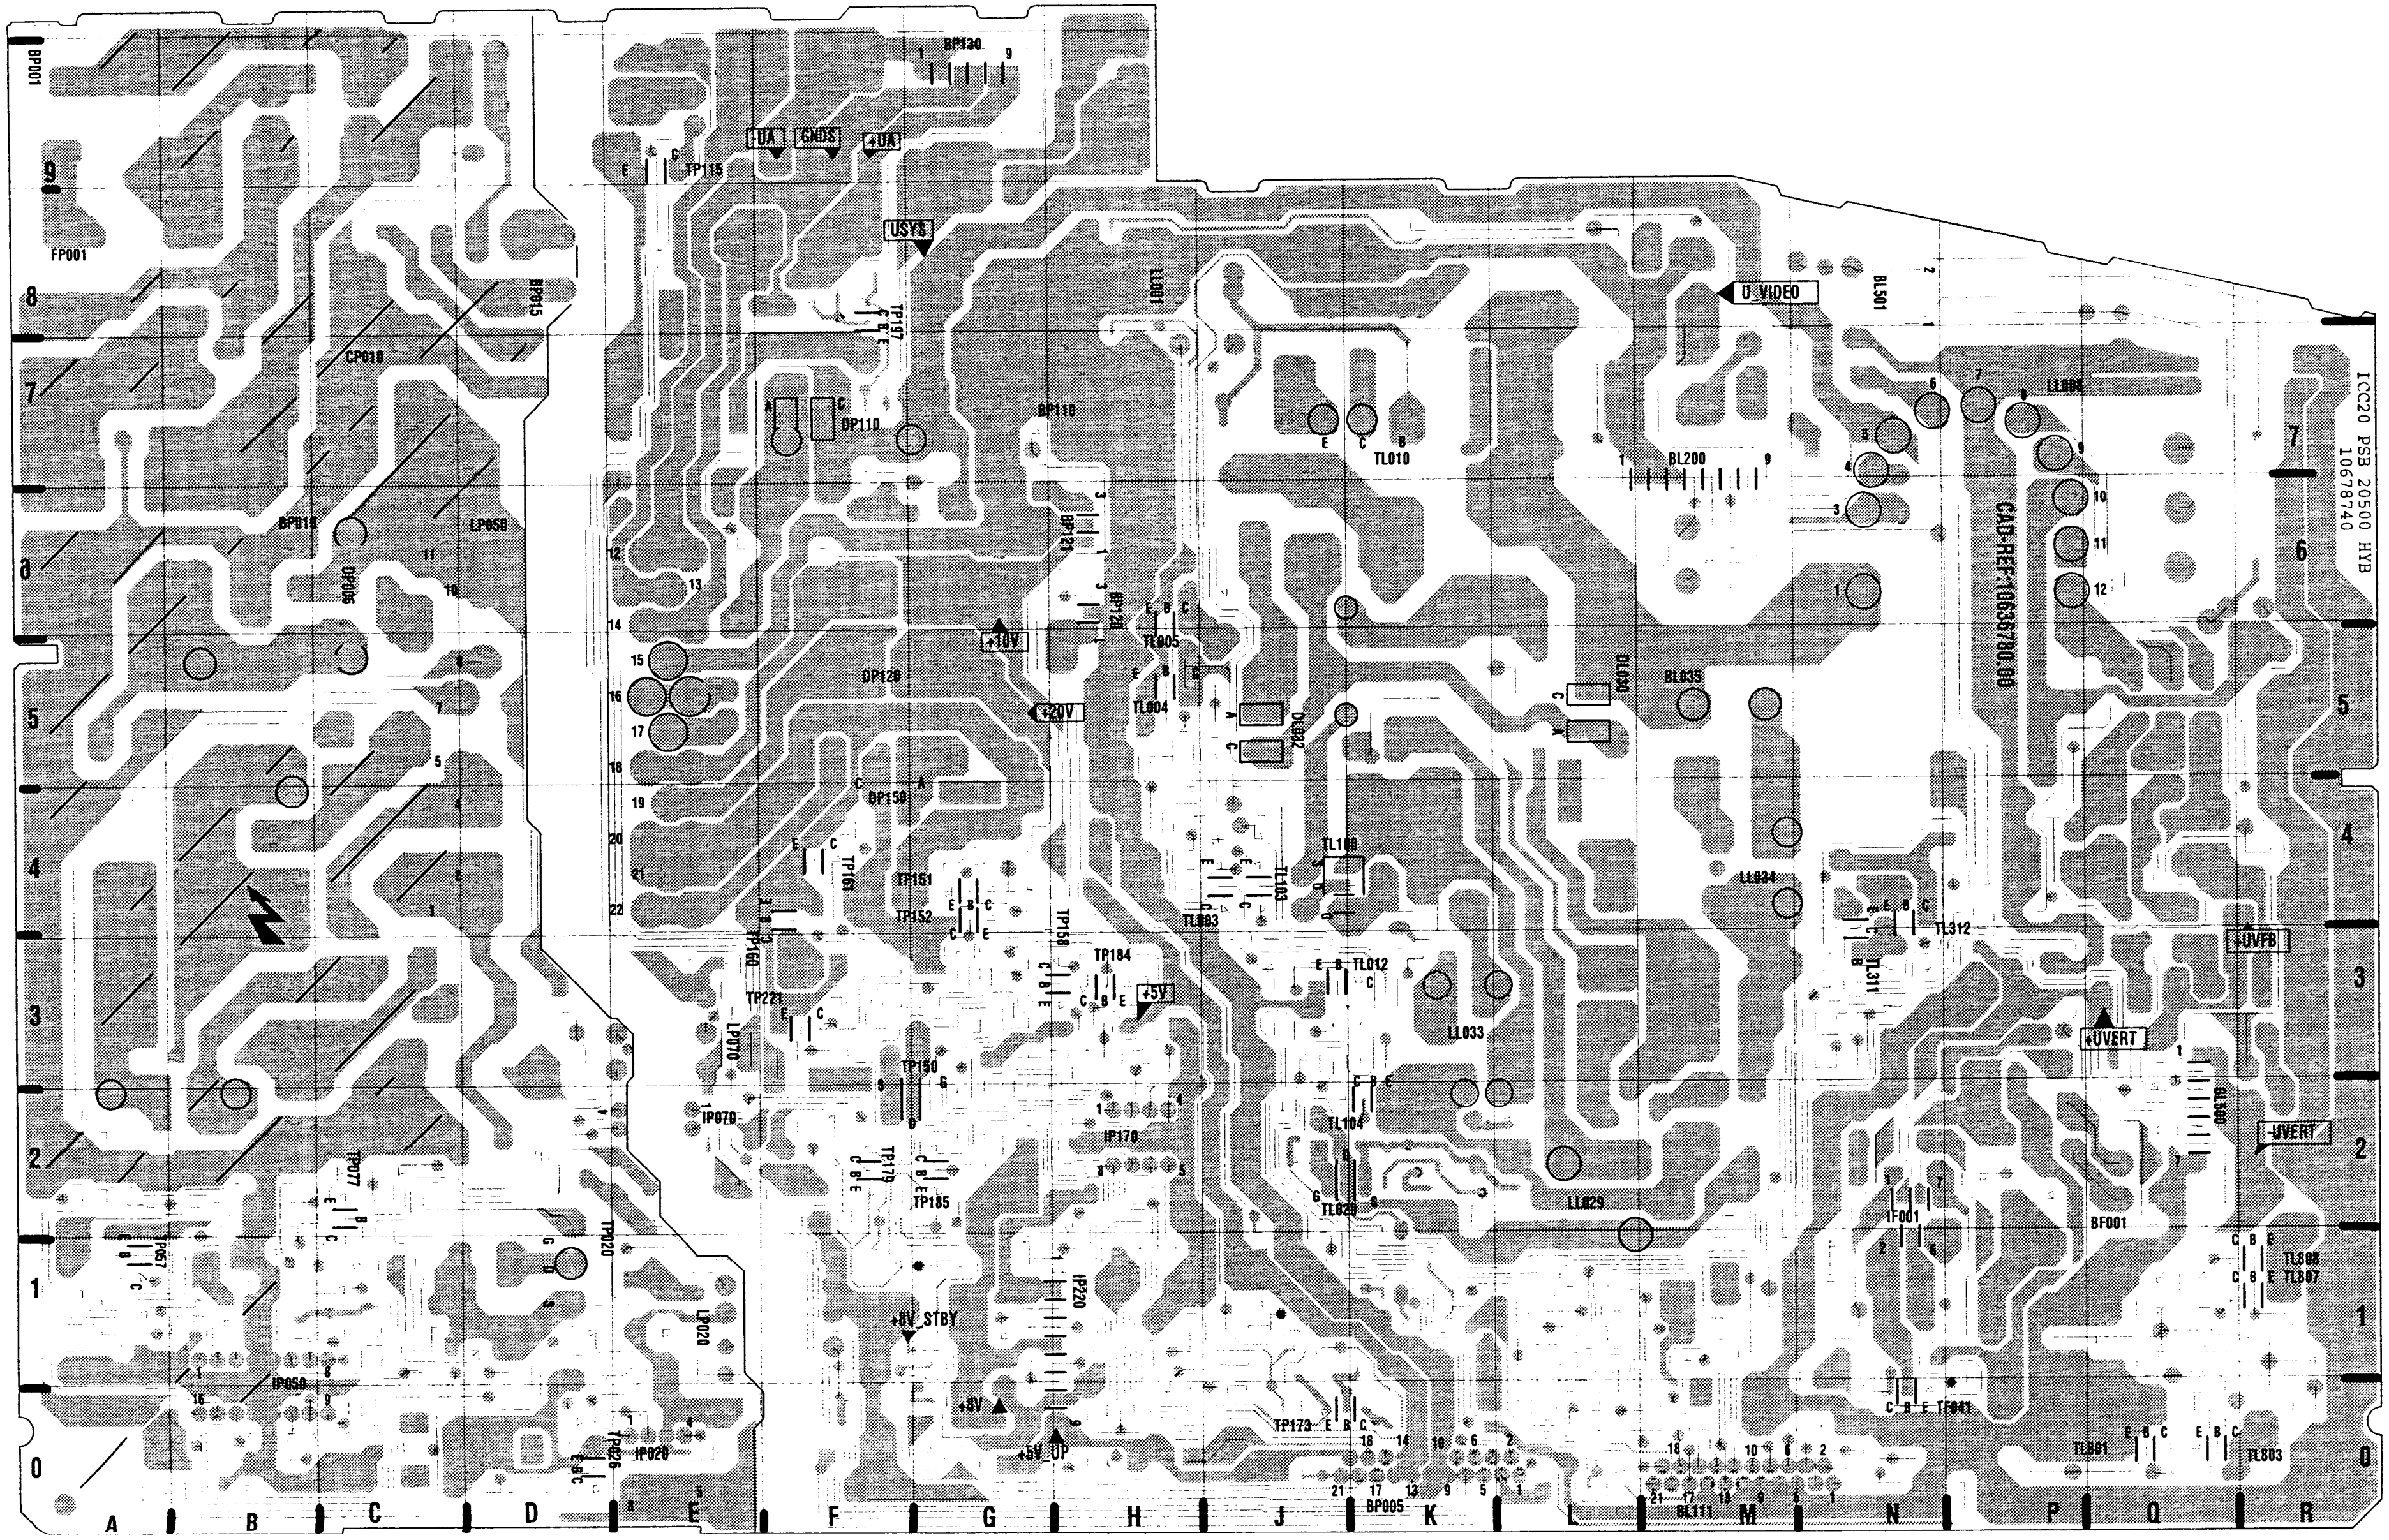
BP001
FP001
BP015
CP010
BP010
LP050
DP006
BP130
+UA
GNDS
+UA
TP115
USYS
TP197
DP110
BP110
DP121
BP120
+10V
DP120
+20V
DP150
TP161
TP151
TP152
TP158
TP184
+5V
TP160
TP221
LP070
TP150
IP070
TP179
TP185
IP170
TP077
TP020
LP020
IP050
IP020
TP026
+8V_STBY
+5V
+5V_UP
IP220
TP173
BP005
LL001
TL010
TL005
TL004
DL032
TL100
TL103
TL003
TL012
LL033
TL104
TL020
LL029
BL200
DL030
BL035
LL034
BL501
U_VIDEO
LL004
CAD-REF:10635780.00
ICC20 PSB 20500 HYB
10678740
TL312
TL311
+UVFB
+UVERT
BL500
-UVERT
IF001
BF001
TL808
TL807
TF041
TL801
TL803
BL111
A
B
C
D
E
F
G
H
J
K
L
M
N
P
Q
R
0
1
2
3
4
5
6
7
8
9

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

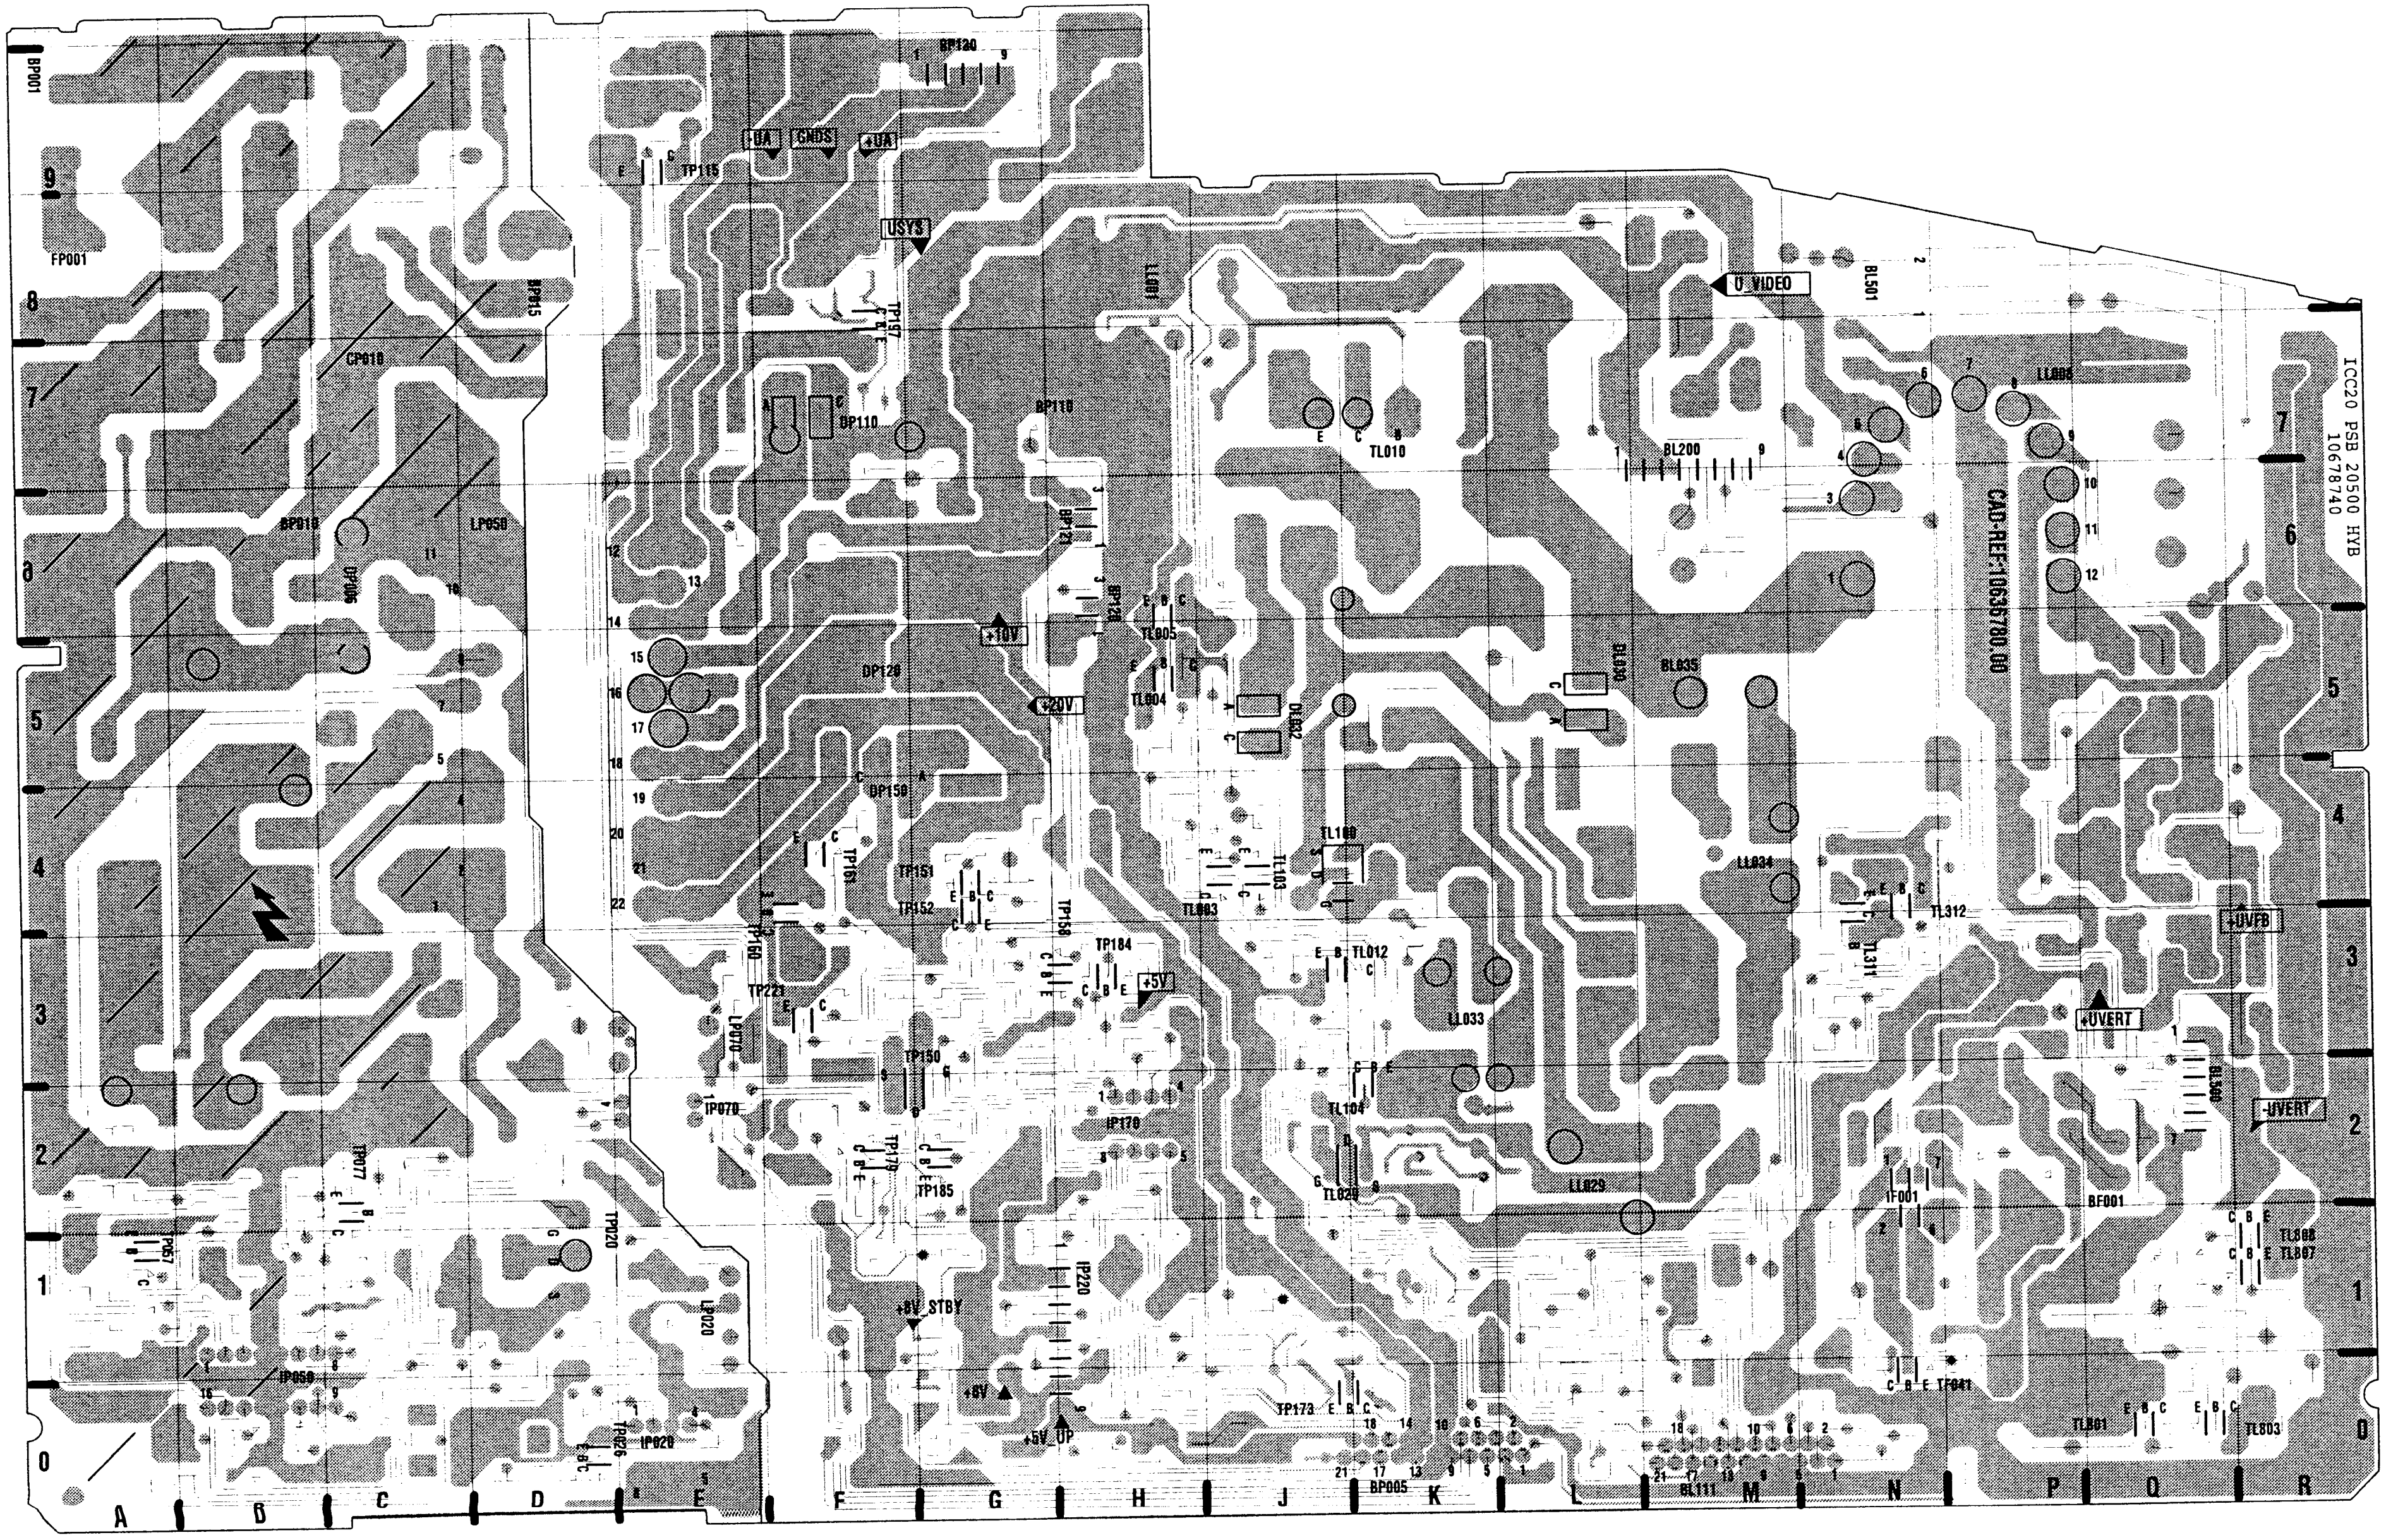
BP001
FP001
BP015
CP018
BP018
LP050
DP006
BP120
TP115
+UA
GNDS
+UA
USYS
TP191
DP110
BP110
BP121
BP130
+10V
DP120
+20V
DP150
TP161
TP151
TP152
TP158
TP184
+5V
TP160
TP221
LP070
TP150
IP070
TP179
TP185
IP170
TP077
TP087
TP020
LP020
IP050
TP026
IP029
+5V_STBY
+5V
+5V_UP
IP220
TP173
BP005
LL081
TL005
TL004
DL032
TL010
TL180
TL103
TL003
TL012
LL033
TL104
TL020
LL029
BL030
BL035
LL034
U_VIDEO
BL501
BL200
LL008
CAD-REF:10636780.00
ICC20 PSB 20500 HYB
10678740
TL312
TL311
+UVFB
+UVERT
-UVERT
BL500
IF001
BF001
TL808
TL807
TF041
TL801
TL803
BL111
A
B
C
D
E
F
G
H
J
K
L
M
N
P
Q
R
0
1
2
3
4
5
6
7
8
9

ICC20
First issue 05 / 00

VIDEO AMPLIFIER BOARD - PLATINE AMPLIFICATEURS VIDEO - VIDEOVERSTÄRKERPLATTE - PIASTRA AMPLIFICATORE VIDEO - PLATINA AMPLIFICADOR VIDEO

COMPONENT SIDE - COTE COMPOSANTS - BESTÜCKUNGSSEITE -
LATO COMPONENTI - LADO COMPONENTES

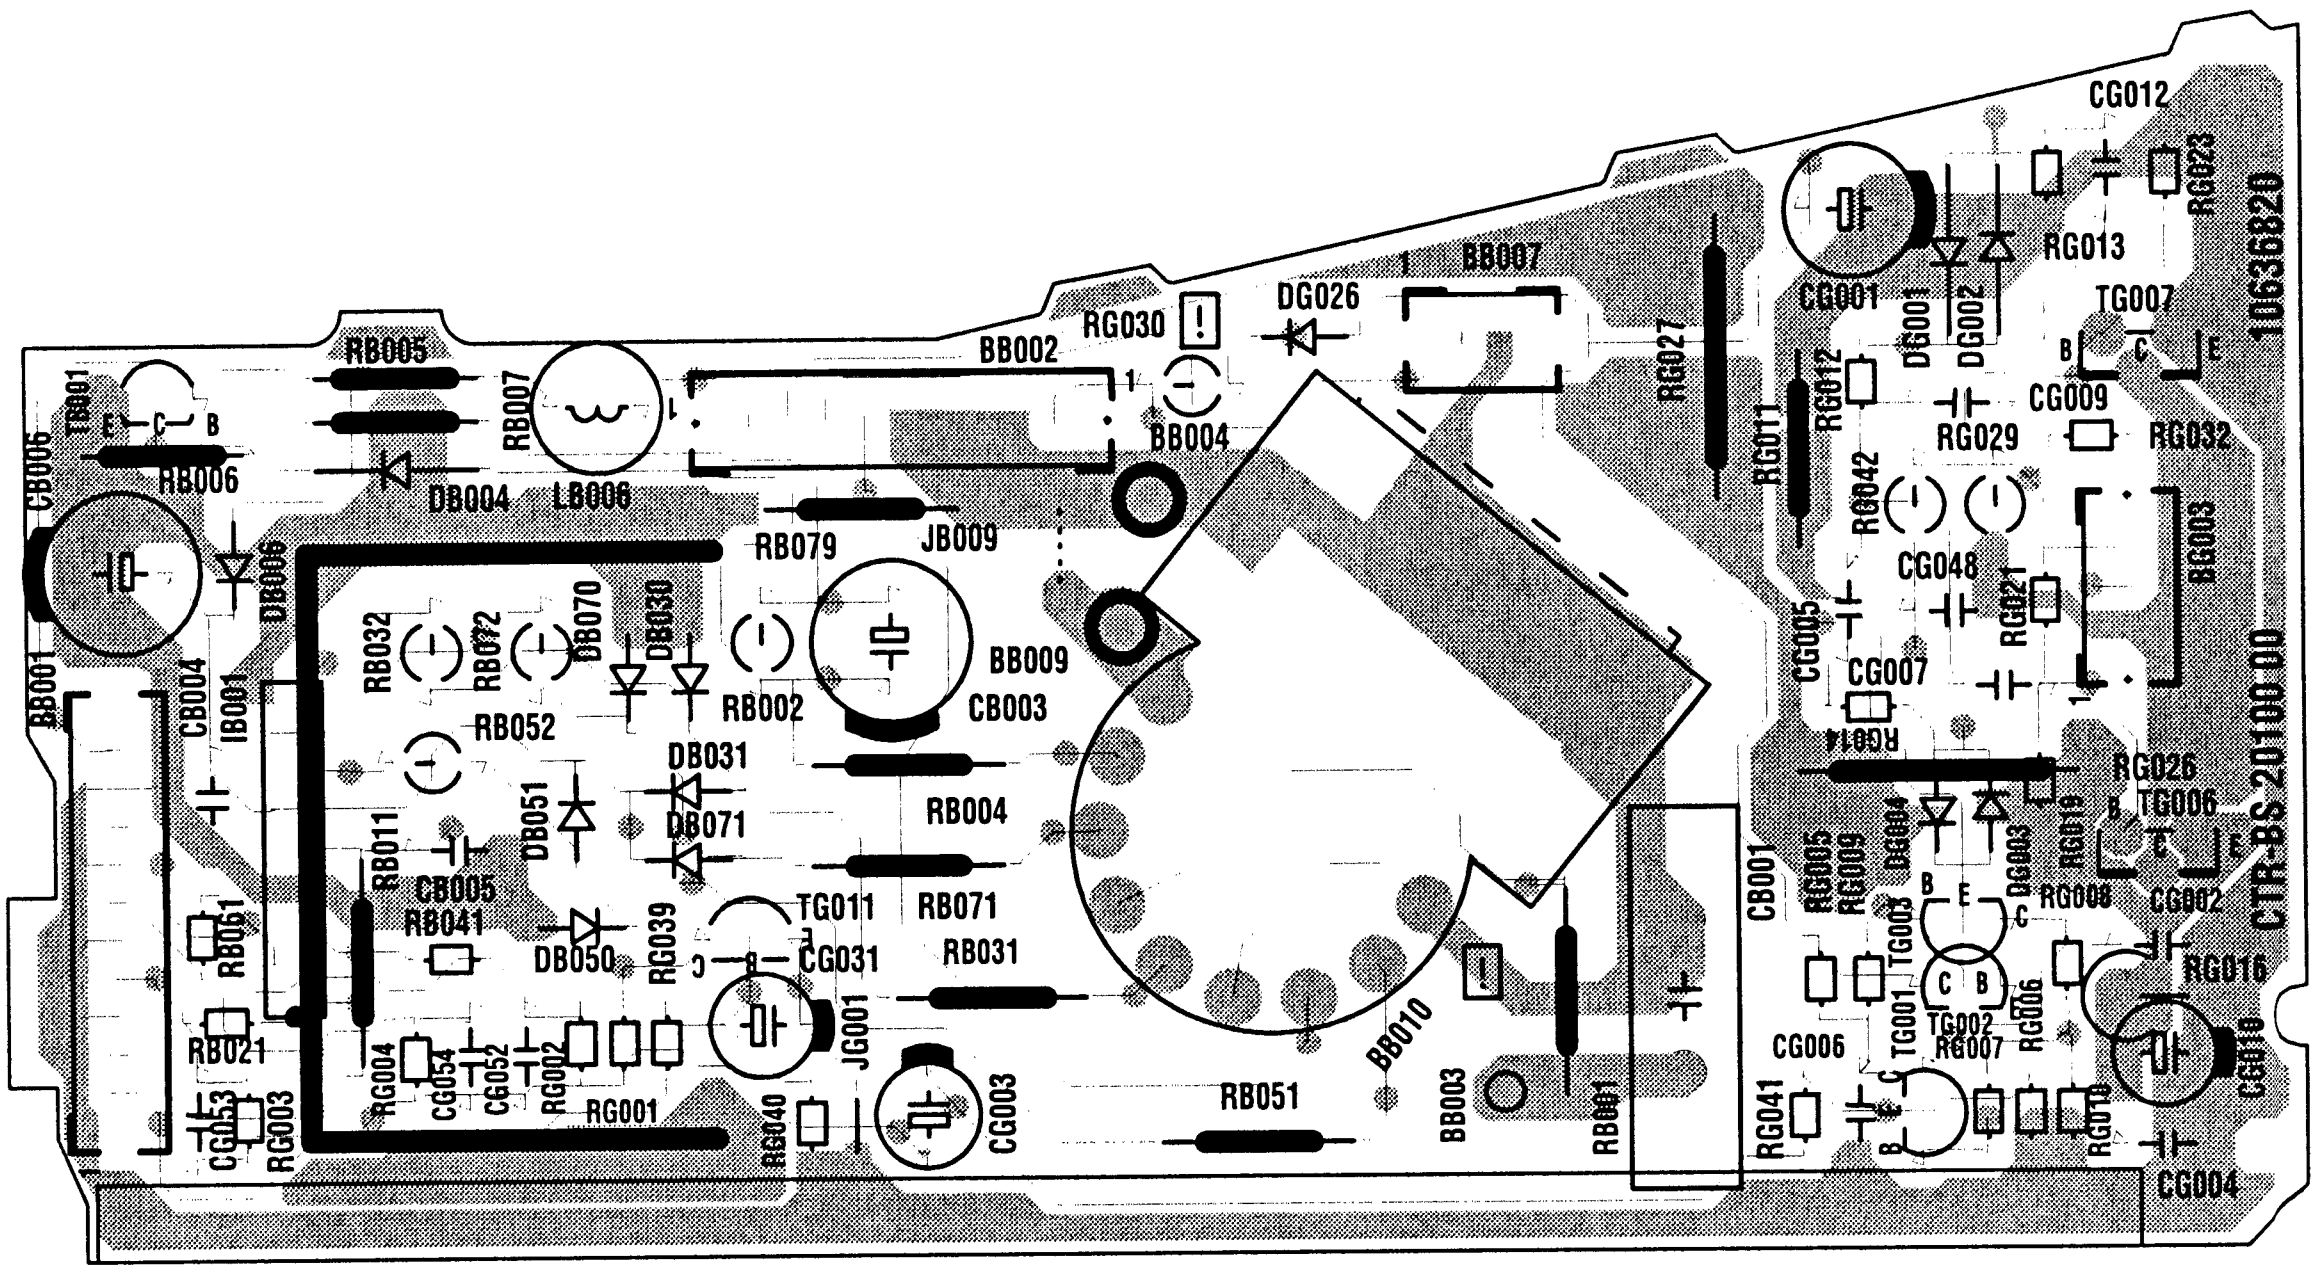

CG012
RG023
10636820
BB007
RG030
DG026
BB002
RB005
RB007
TB001
RB006
CB006
DB004
LB006
BB004
RG027
CG001
DG001
DG002
RG013
TG007
RG012
RG011
CG009
RG029
RG032
RG042
BG003
CG048
CG005
CG007
RG021
RB079
JB009
BB001
CB004
IB001
DB006
RB032
RB072
DB070
DB030
RB002
BB009
CB003
RB052
DB031
DB071
DB051
RB004
RB011
CB005
RB041
DB050
RB039
TG011
CG031
RB071
RB031
RB061
RB021
RG004
CG054
CG052
RG002
RG001
JG001
RG040
CG003
CG053
RG003
RB051
BB010
BB003
RB001
CB001
RG005
RG009
DG004
DG003
RG014
RG026
TG006
RG019
RG008
CG002
RG016
CG006
TG001
TG002
RG006
RG007
RG041
CG010
CG004
CTR-BS 20100.00

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

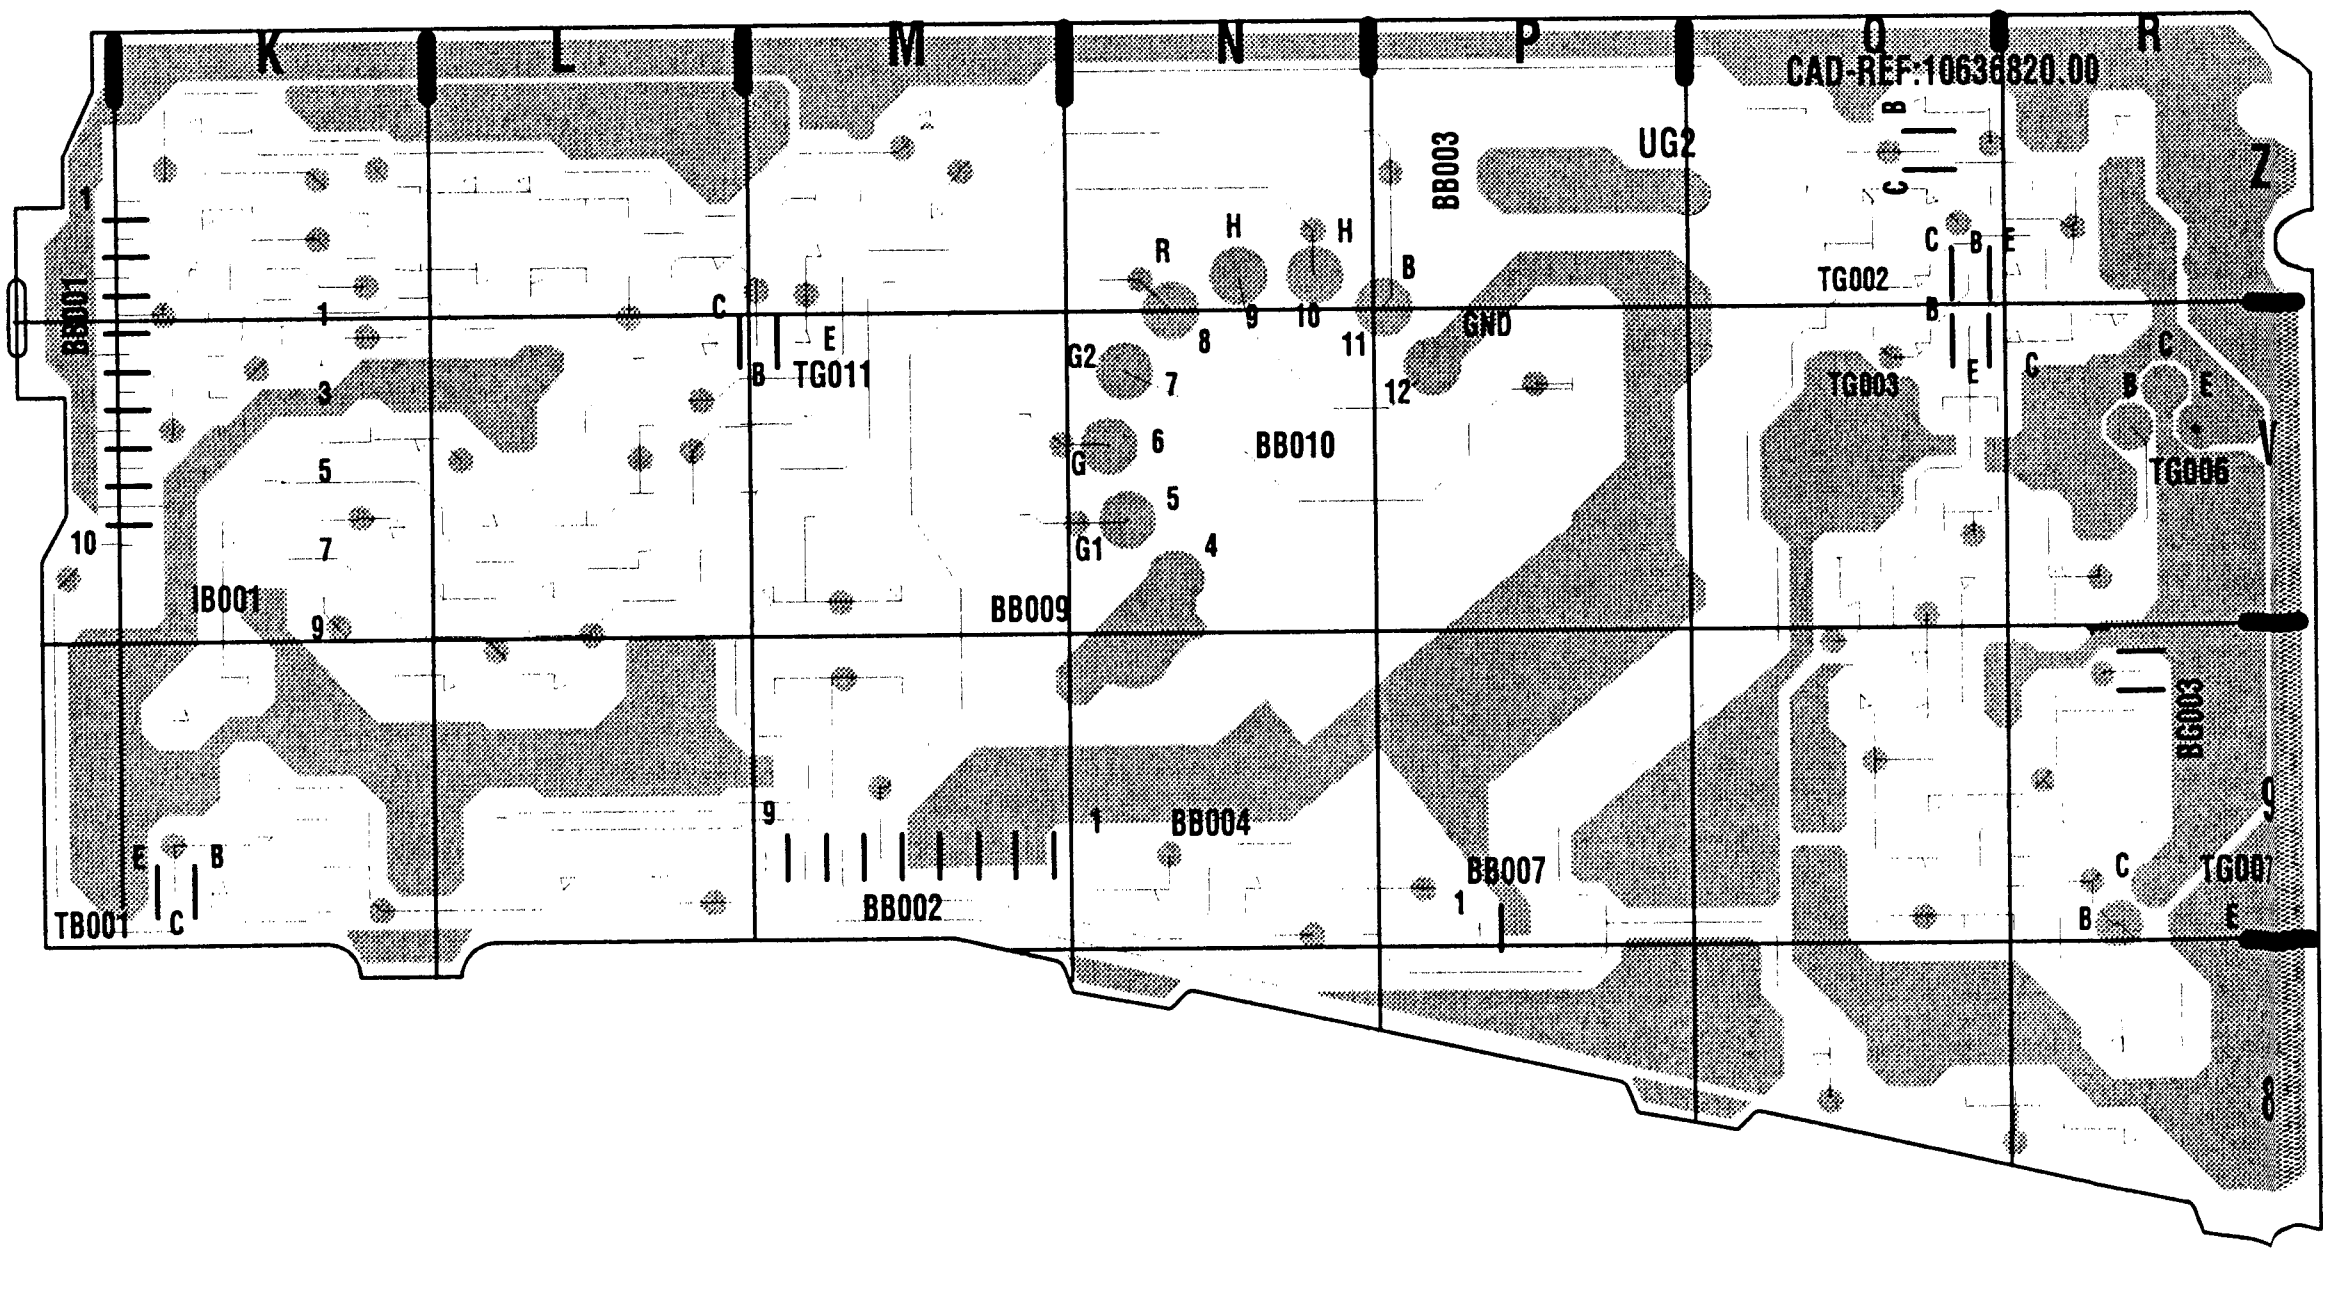

K
L
M
N
P
Q
R
CAD-REF:10636820.00
UG2
BB003
Z
TG002
TG003
TG006
V
BB001
TG011
BB010
GND
G2
G
G1
BB009
IB001
BG003
TG007
BB004
BB007
BB002
TB001
9
8

AV INTERFACE PRINTED CIRCUIT BOARD - CIRCUIT IMPRIME DE LA PLATINE INTERFACE AV - LEITERPLATTE INTERFACE AV - PIASTRA INTERFACE AV - PLATINA INTERFACE AV

COMPONENT SIDE - COTÉ COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

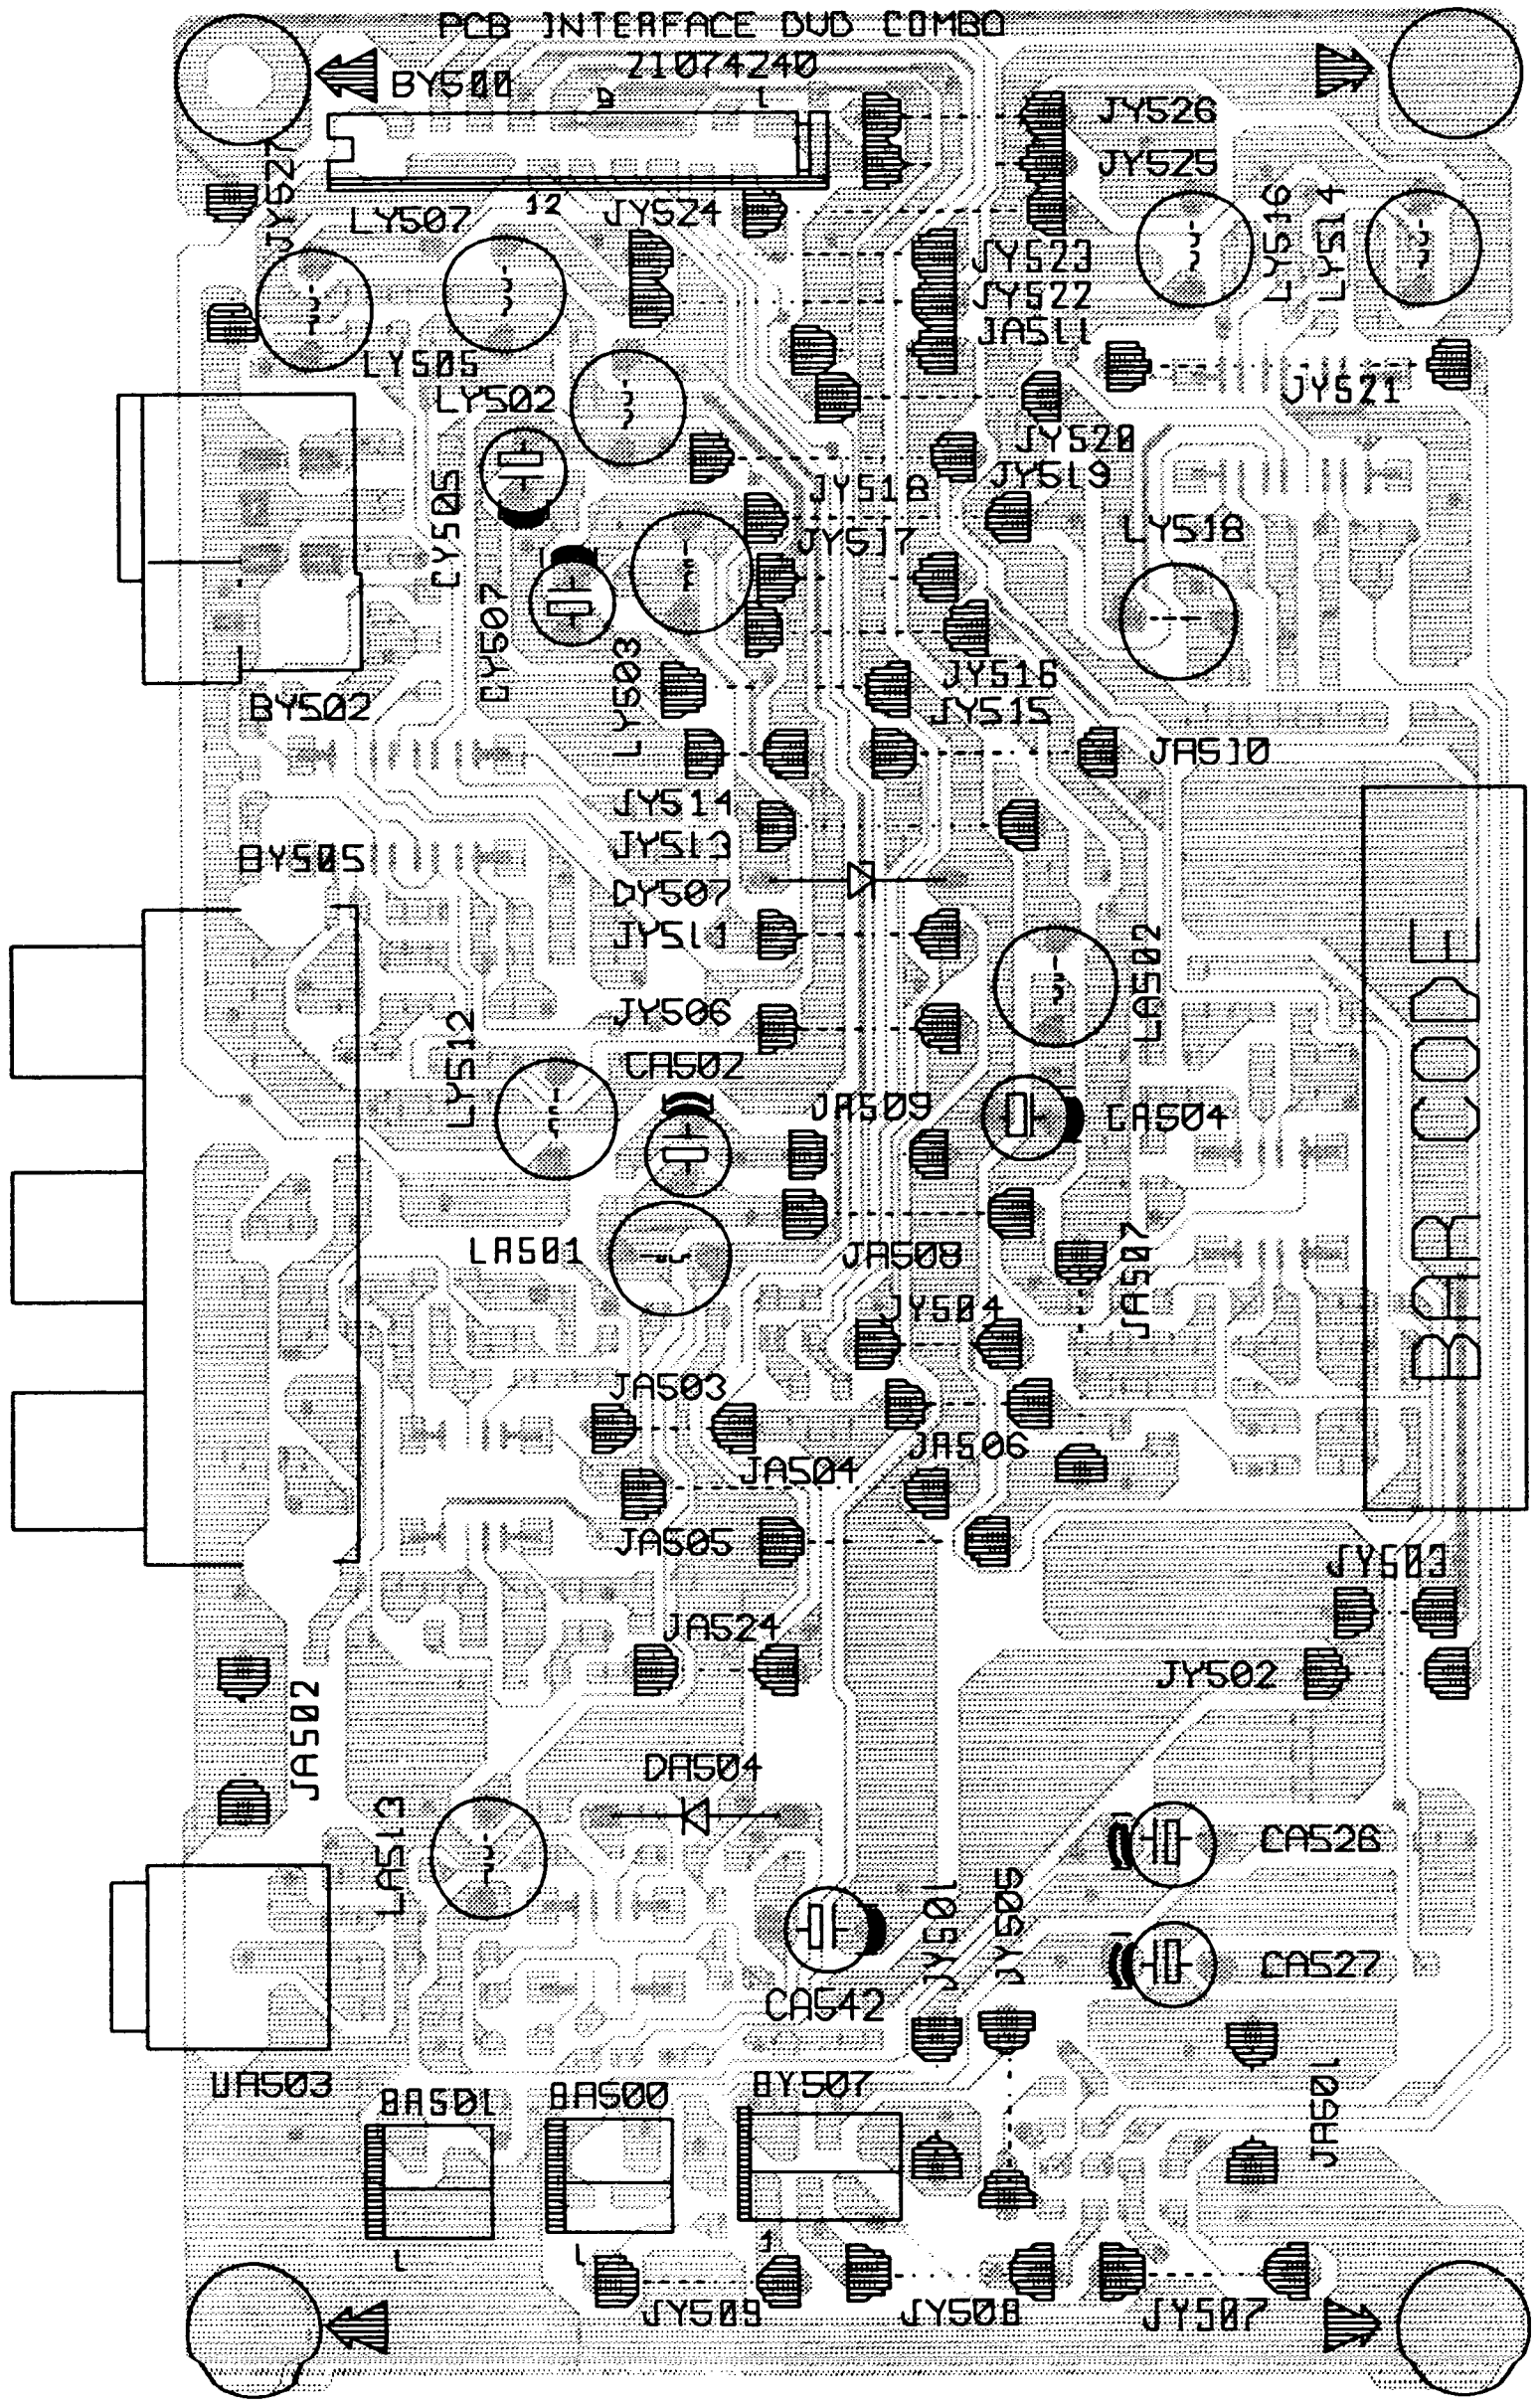

PCB INTERFACE DVD COMBO
21074240
BY500
JY527
LY507
JY524
JY526
JY525
LY516
LY514
JY523
JY522
JA511
LY505
LY502
JY521
JY520
JY519
JY518
JY517
LY518
LY505
CY507
LY503
BY502
JY516
JY515
JA510
JY514
JY513
DY507
JY511
BY505
JY506
LA502
LY512
CA502
JA509
CA504
LA501
JA508
JA507
JY504
JA503
JA504
JA506
JA505
BAR CODE
JY503
JA524
JY502
JA502
DA504
LA513
CA526
CA527
JY501
JY505
CA542
JA501
UA503
BA501
BA500
BY507
JY509
JY508
JY507

SOLDER SIDE - COTÉ CUIVRE - LÖTSEITE - LATO SALDATURE - LADO DEL COBRE

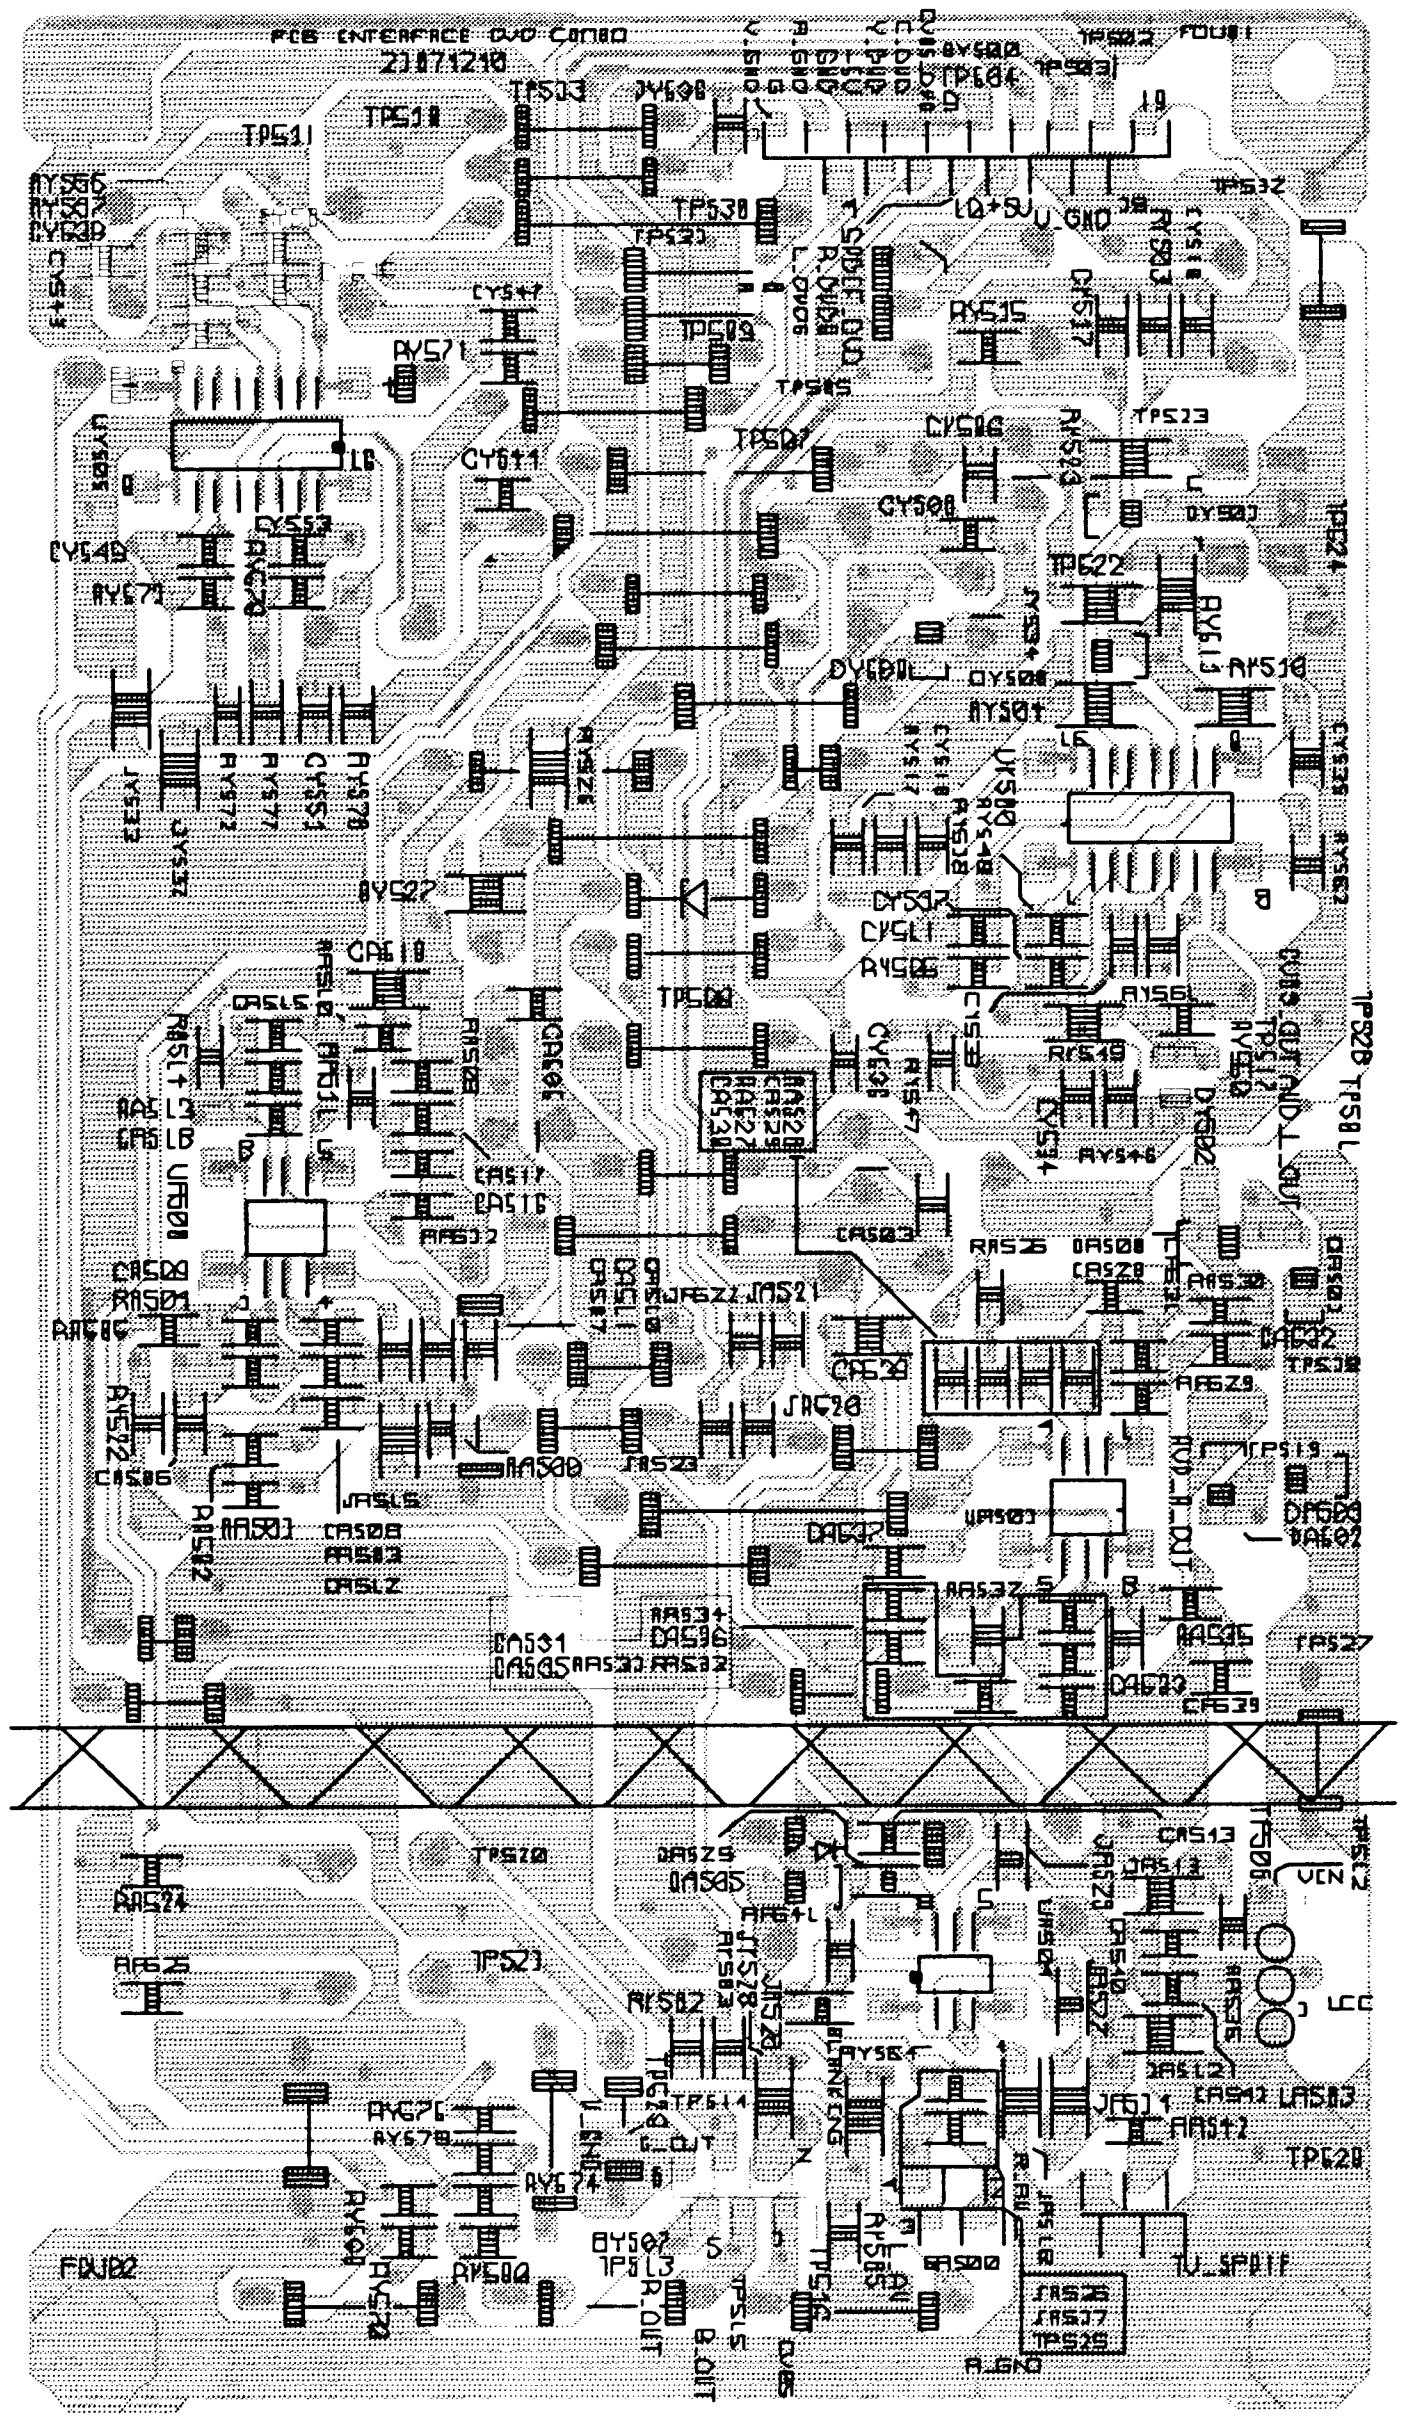

PCB INTERFACE DVD COMBO
21071210
TPS11
TPS10
TPS03
TPS30
TPS09
TPS05
TPS07
TPS22
TPS23
TPS32
TPS08
TPS27
TPS20
TPS21
TPS26
CY547
RY571
CY511
CY549
RY515
CY516
CY508
RY513
RY510
DY504
DY508
RY504
RY527
CY537
CY541
CA519
UA500
UA503
CA513
JA513
LA503
CA539
CA532
RA500
RA501
RA502
RA523
JA520
JA521
CA531
DA505
DA502
RA574
RA575
TV_SPDIF
A_GND
FDU02
L_OUT
R_OUT

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL

COMPONENT SIDE - COTE COMPOSANTS - BESTÜCKUNGSSEITE - LATO COMPONENTI - LADO COMPONENTES

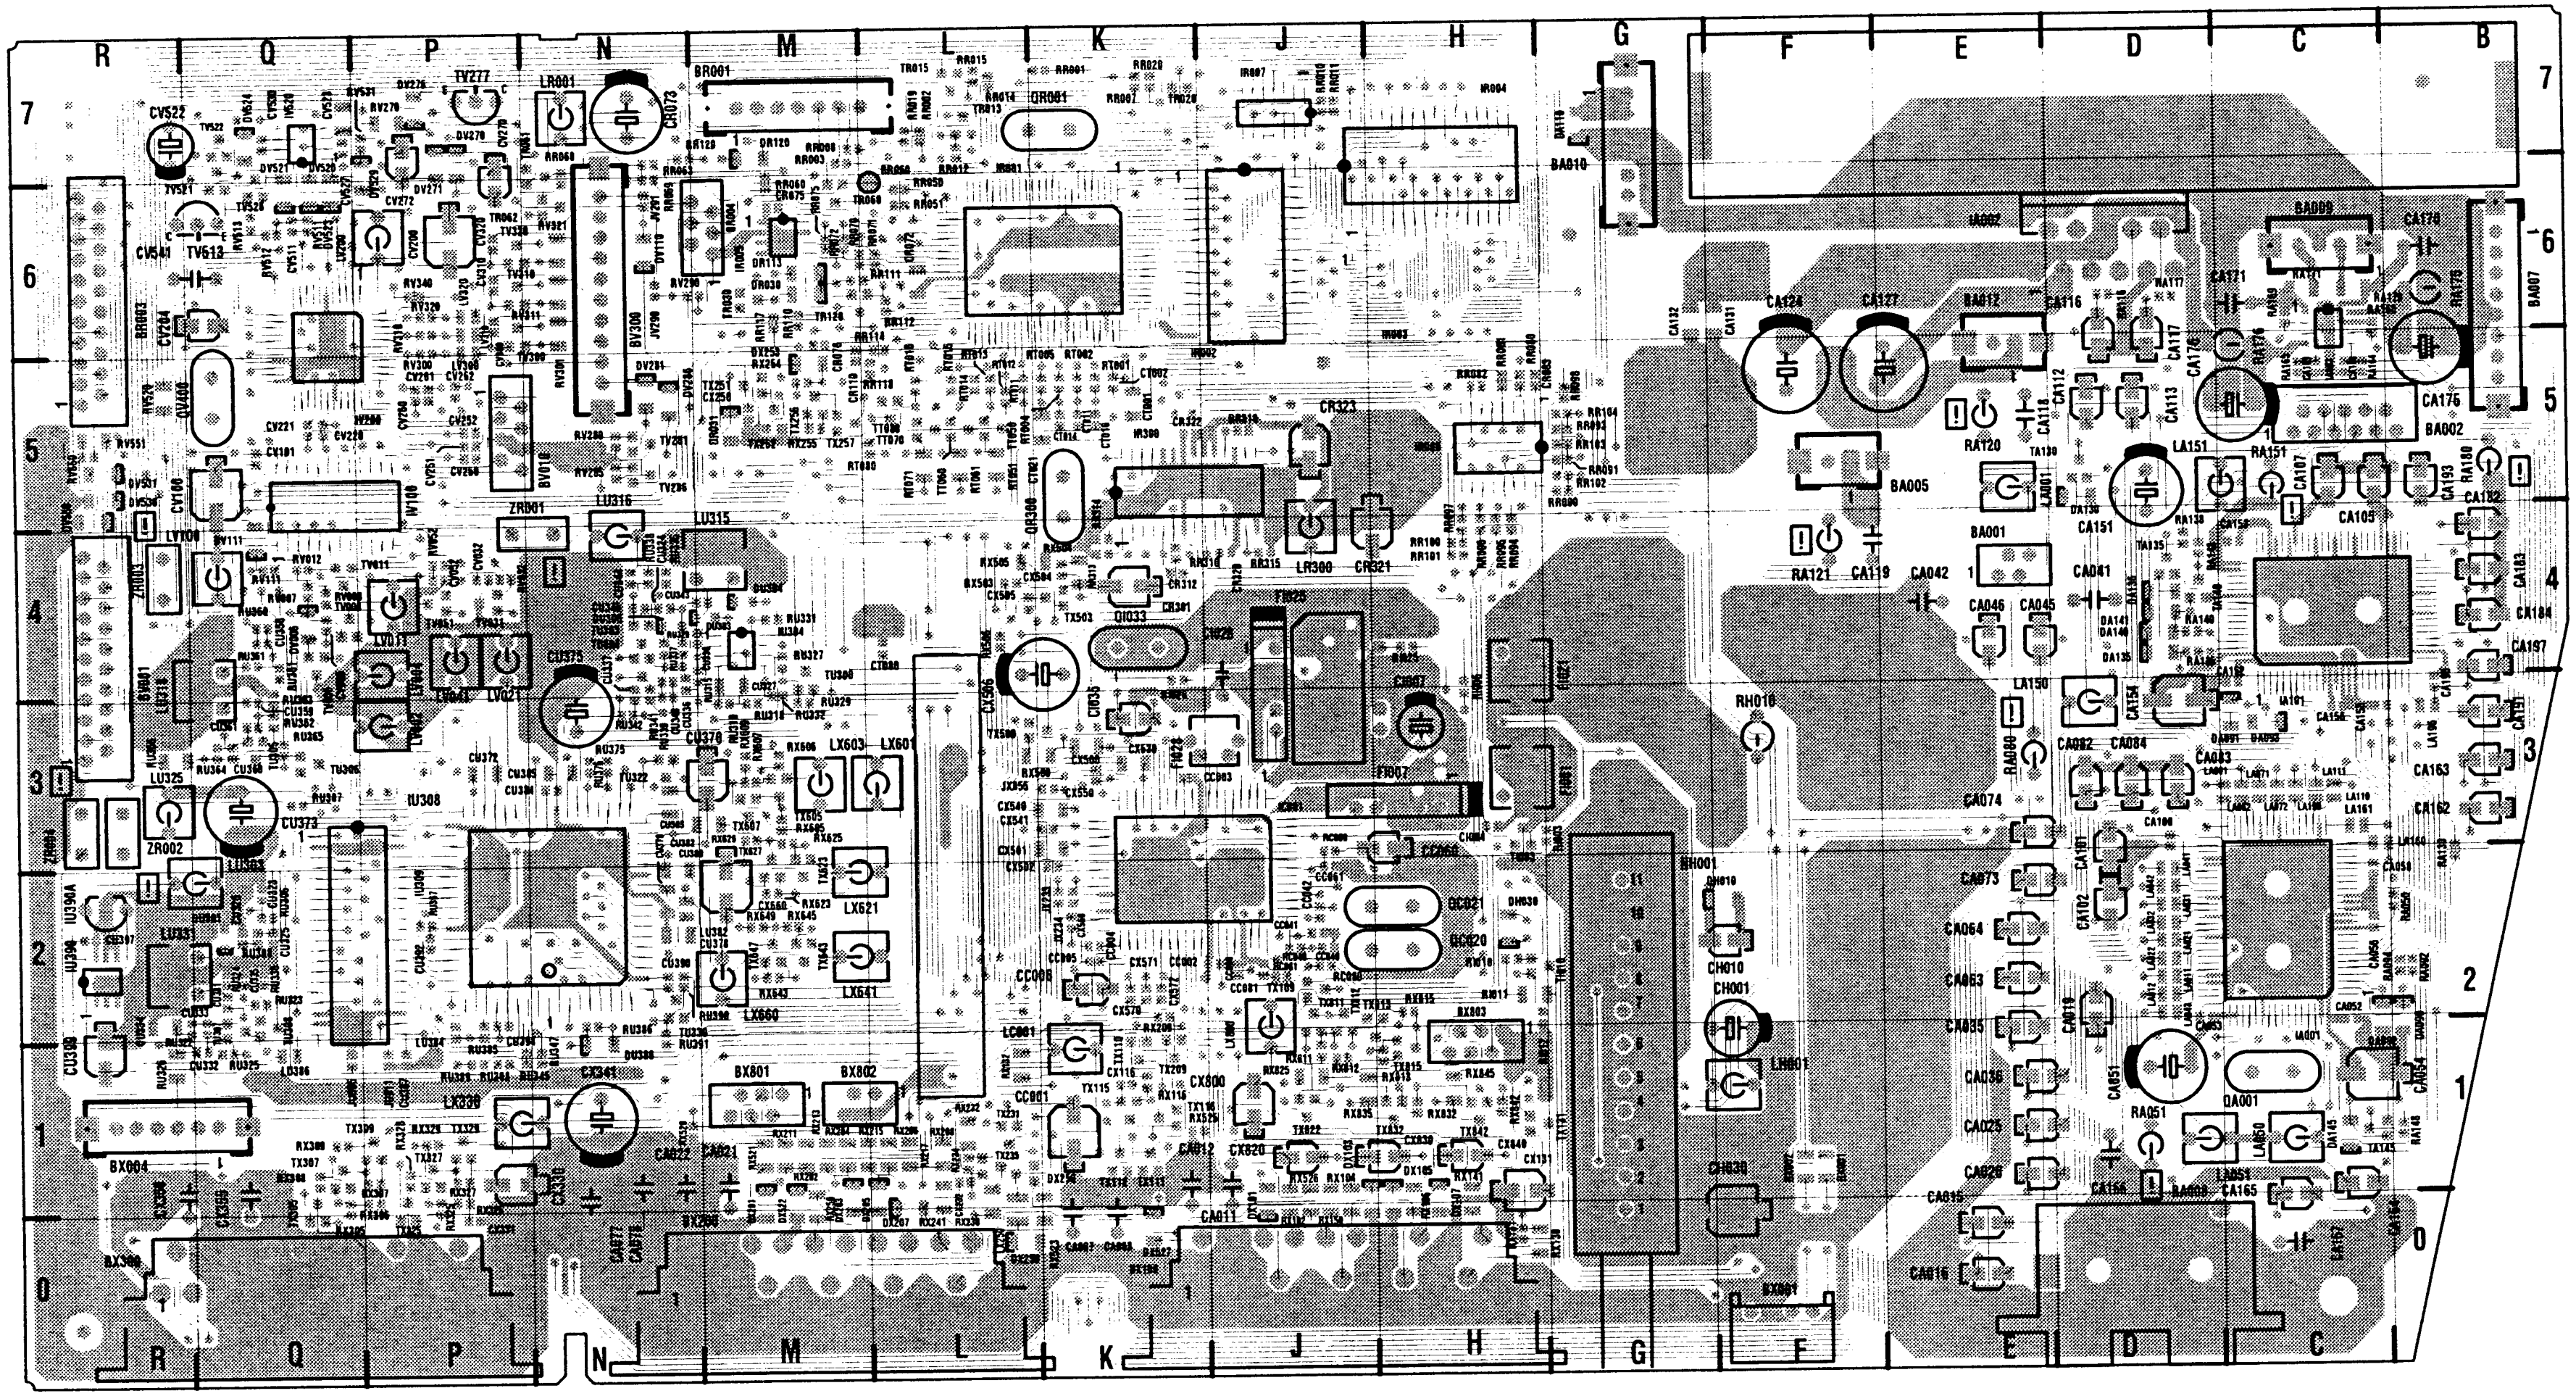
R
Q
P
N
M
L
K
J
H
G
F
E
D
C
B
7
6
5
4
3
2
1
0

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL

SOLDER SIDE - CÔTE SOUDURES - LÖTSEITE - LATO SALDATURE - LADO SOLDADURAS

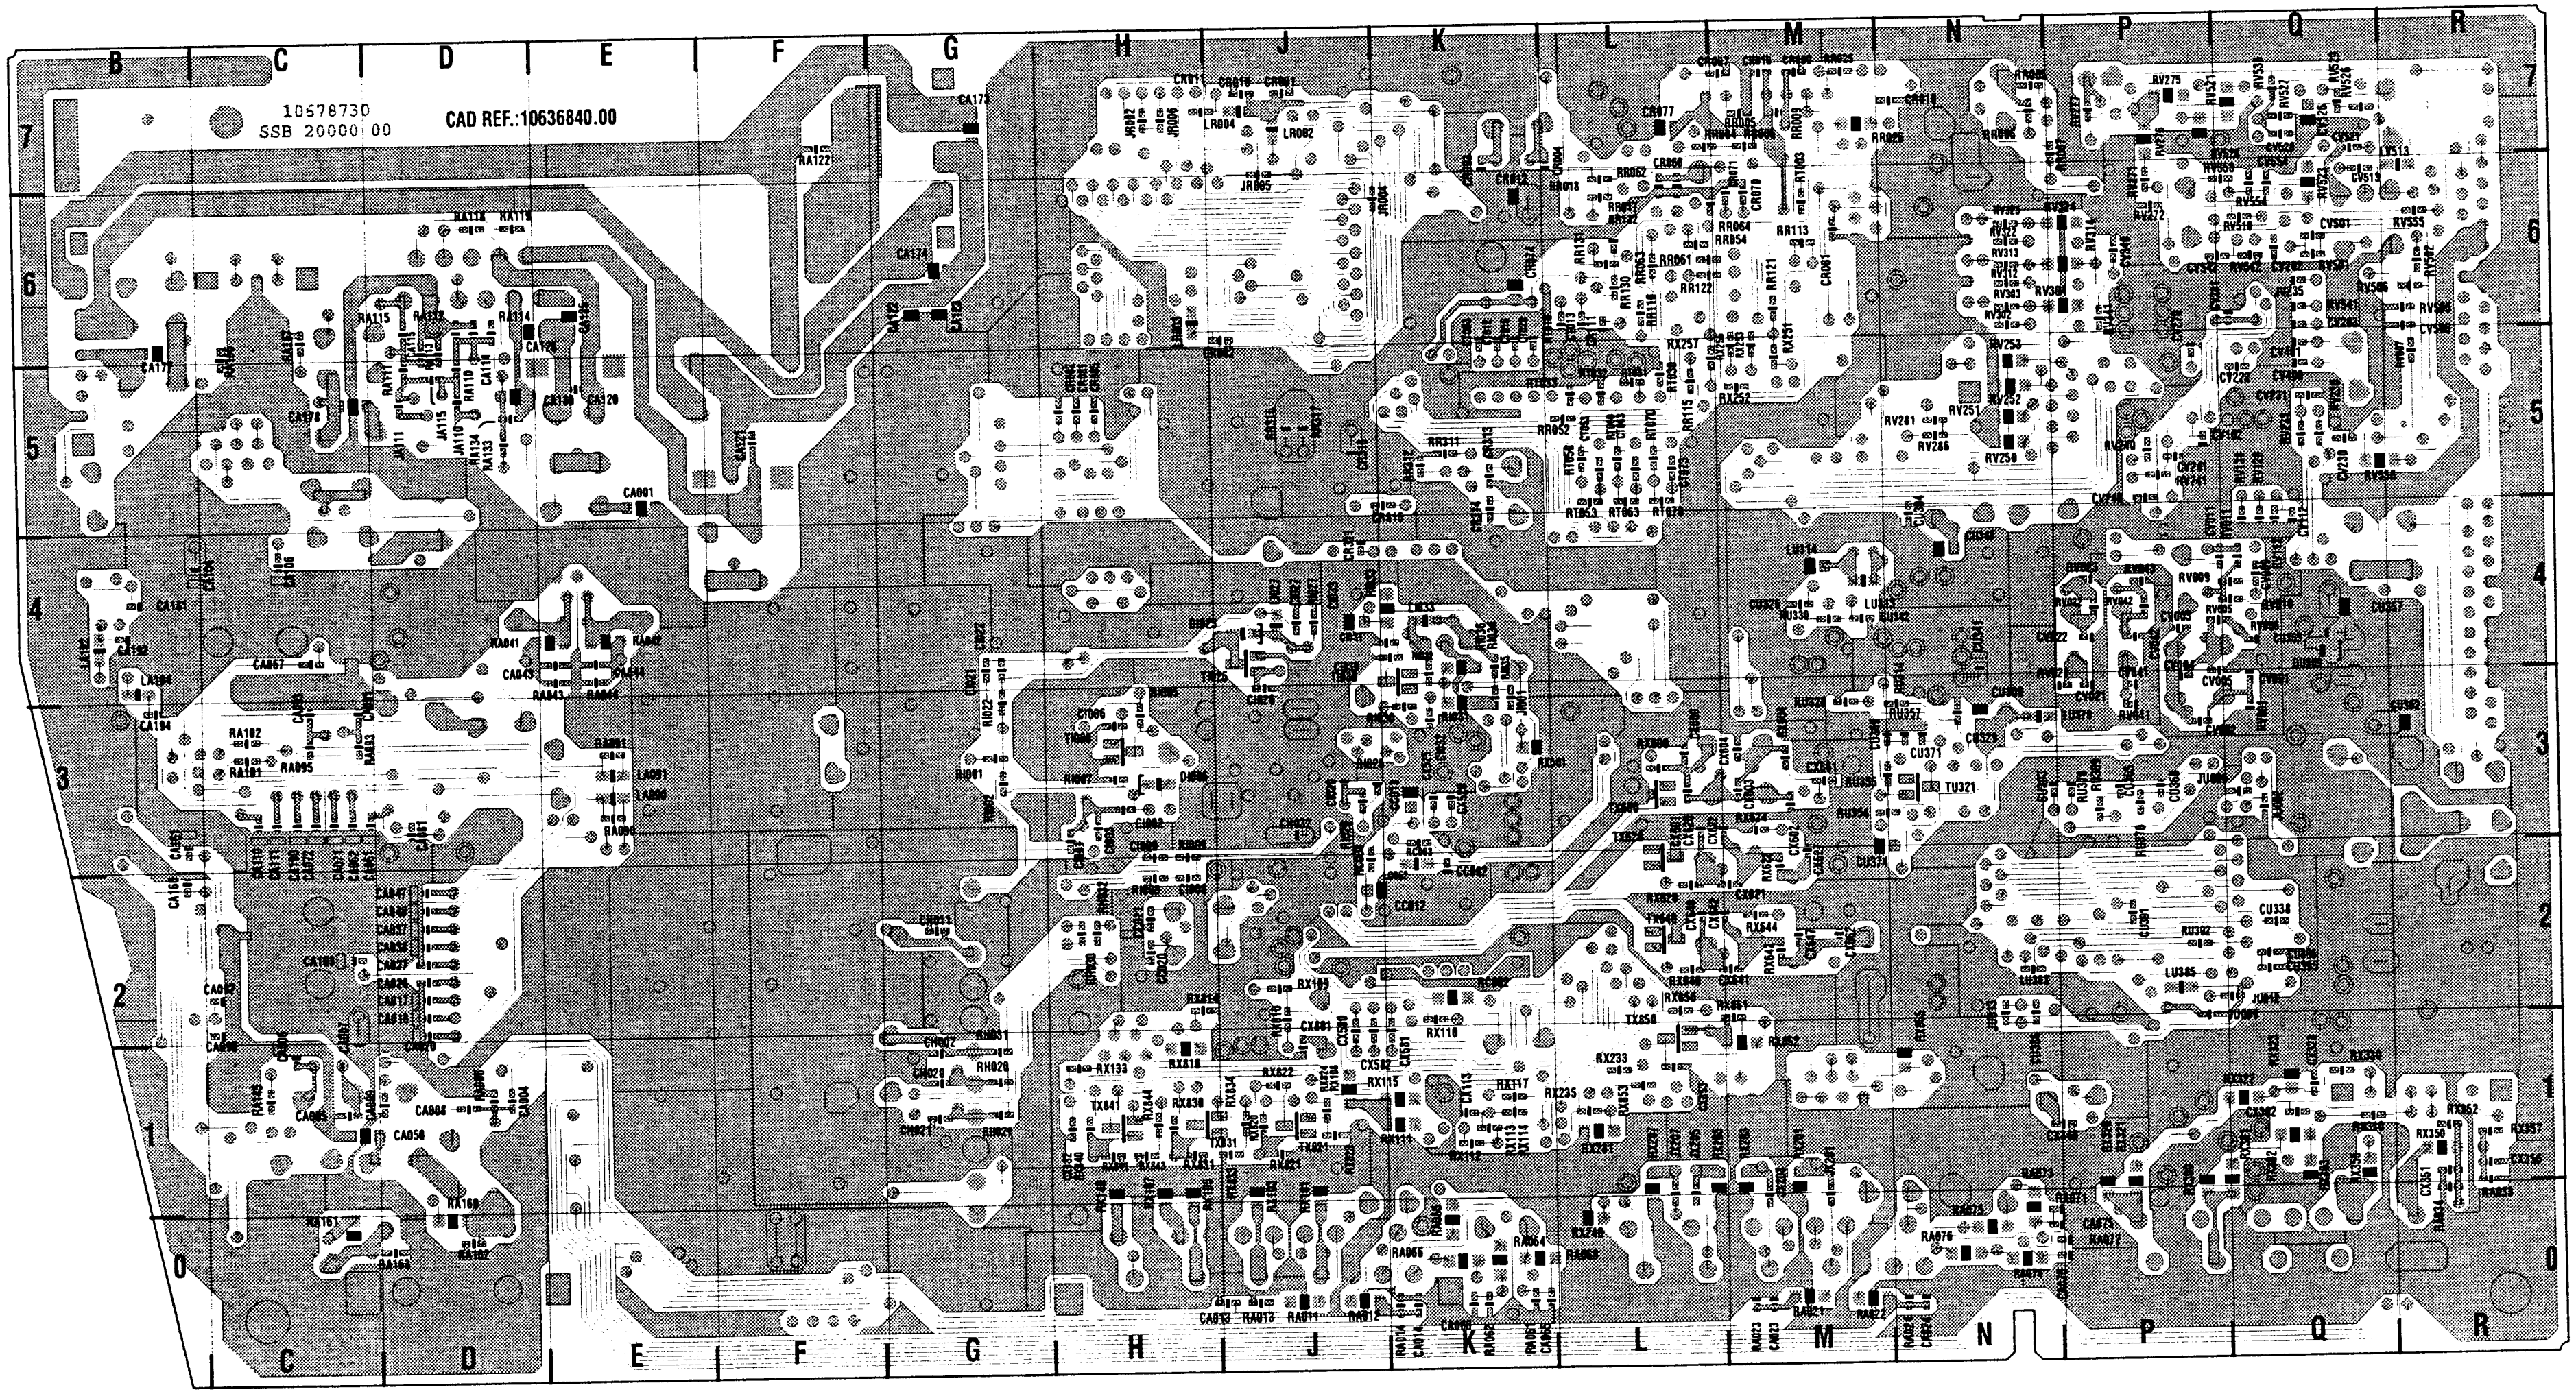
B
C
D
E
F
G
H
J
K
L
M
N
P
Q
R
7
6
5
4
3
2
1
0
10678730
SSB 20000 00
CAD REF.:10636840.00

THOMSON MULTI MEDIA

ICC20 Small Signal Board (SSB) exchange method

Escaping production mode

The replacement board will be delivered in the production mode; this can be easily switched to normal operation once the television has been switch ON by pressing and holding the VOL – (minus) button for approximately 5-seconds.

Setting the language

The board will be delivered with its menus in French.

If you want to select another language proceed as follows: -

- Press the "Menu" key on the remote control unit (RCU)
- In the "Sommaire" menu select the "Installation" sub-menu, and then select "Reglages personnels".
- In the "Reglages personnels"menu select "Langues des menus".
- Now select the menu language you require, once selected press the "Exit" key on the RCU.

Saving the NVM data

Once fitted, the board has to be aligned and adjusted in the Service Mode, however it is possible to save time by copying the contents of the NVM onto a computer without de-soldering it from the board as follow: -

1. Force the microprocessor into the reset mode by connecting the **reset** pin to ground. The best point to pull down the **reset line** is at the cathode of diode DR120 (not fitted).
2. Temporally re-connect the faulty SSB board.
3. Switch "ON" the television.
4. Now the contents of the NVM can be saved to a PC via the TECI bus, an interface kit for copy the NVM content is available from After Sales under Part No. **10613570**

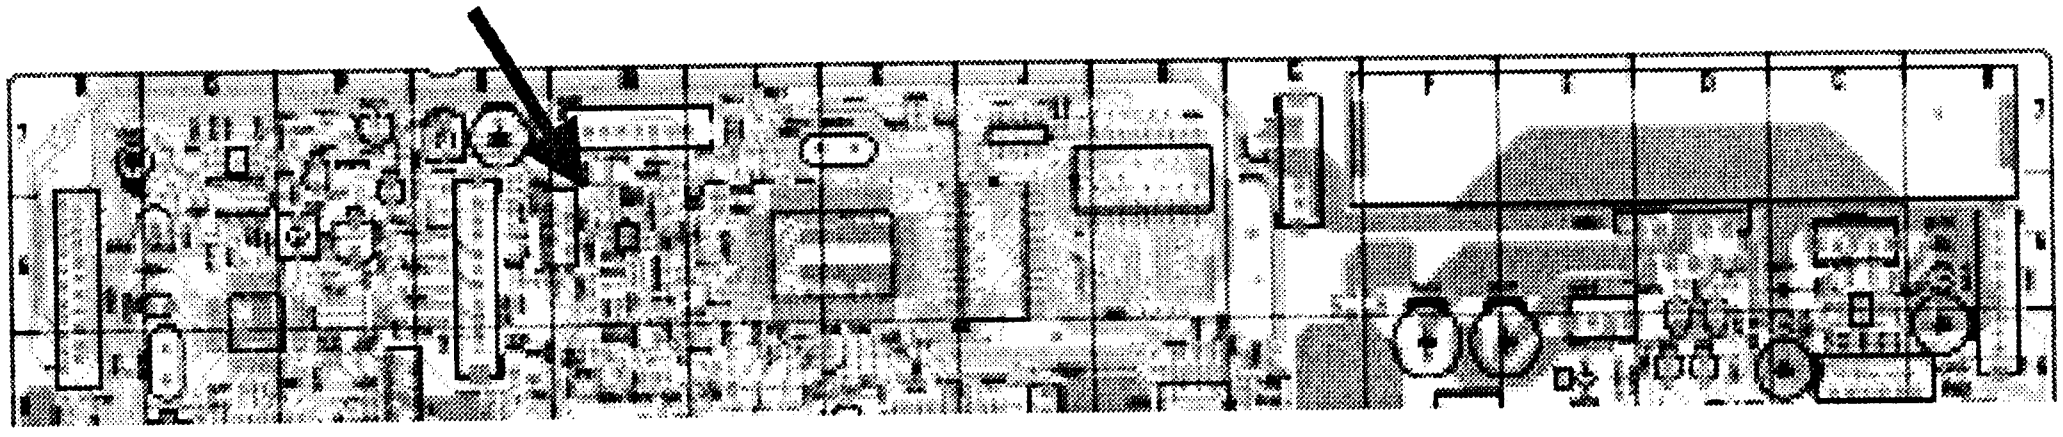

Service Mitteilungen

Betroffene Geräte/Chassis : ICC20

Symptom :
Heller vertikaler Streifen in der Mitte des Bildes.

Abhilfe :
Parallel zur Spule LL010 eine Diode RGP15G, ET-Nr. 102 728 00, löten. Die Kathode an den Kollektor des Transistors TL010.

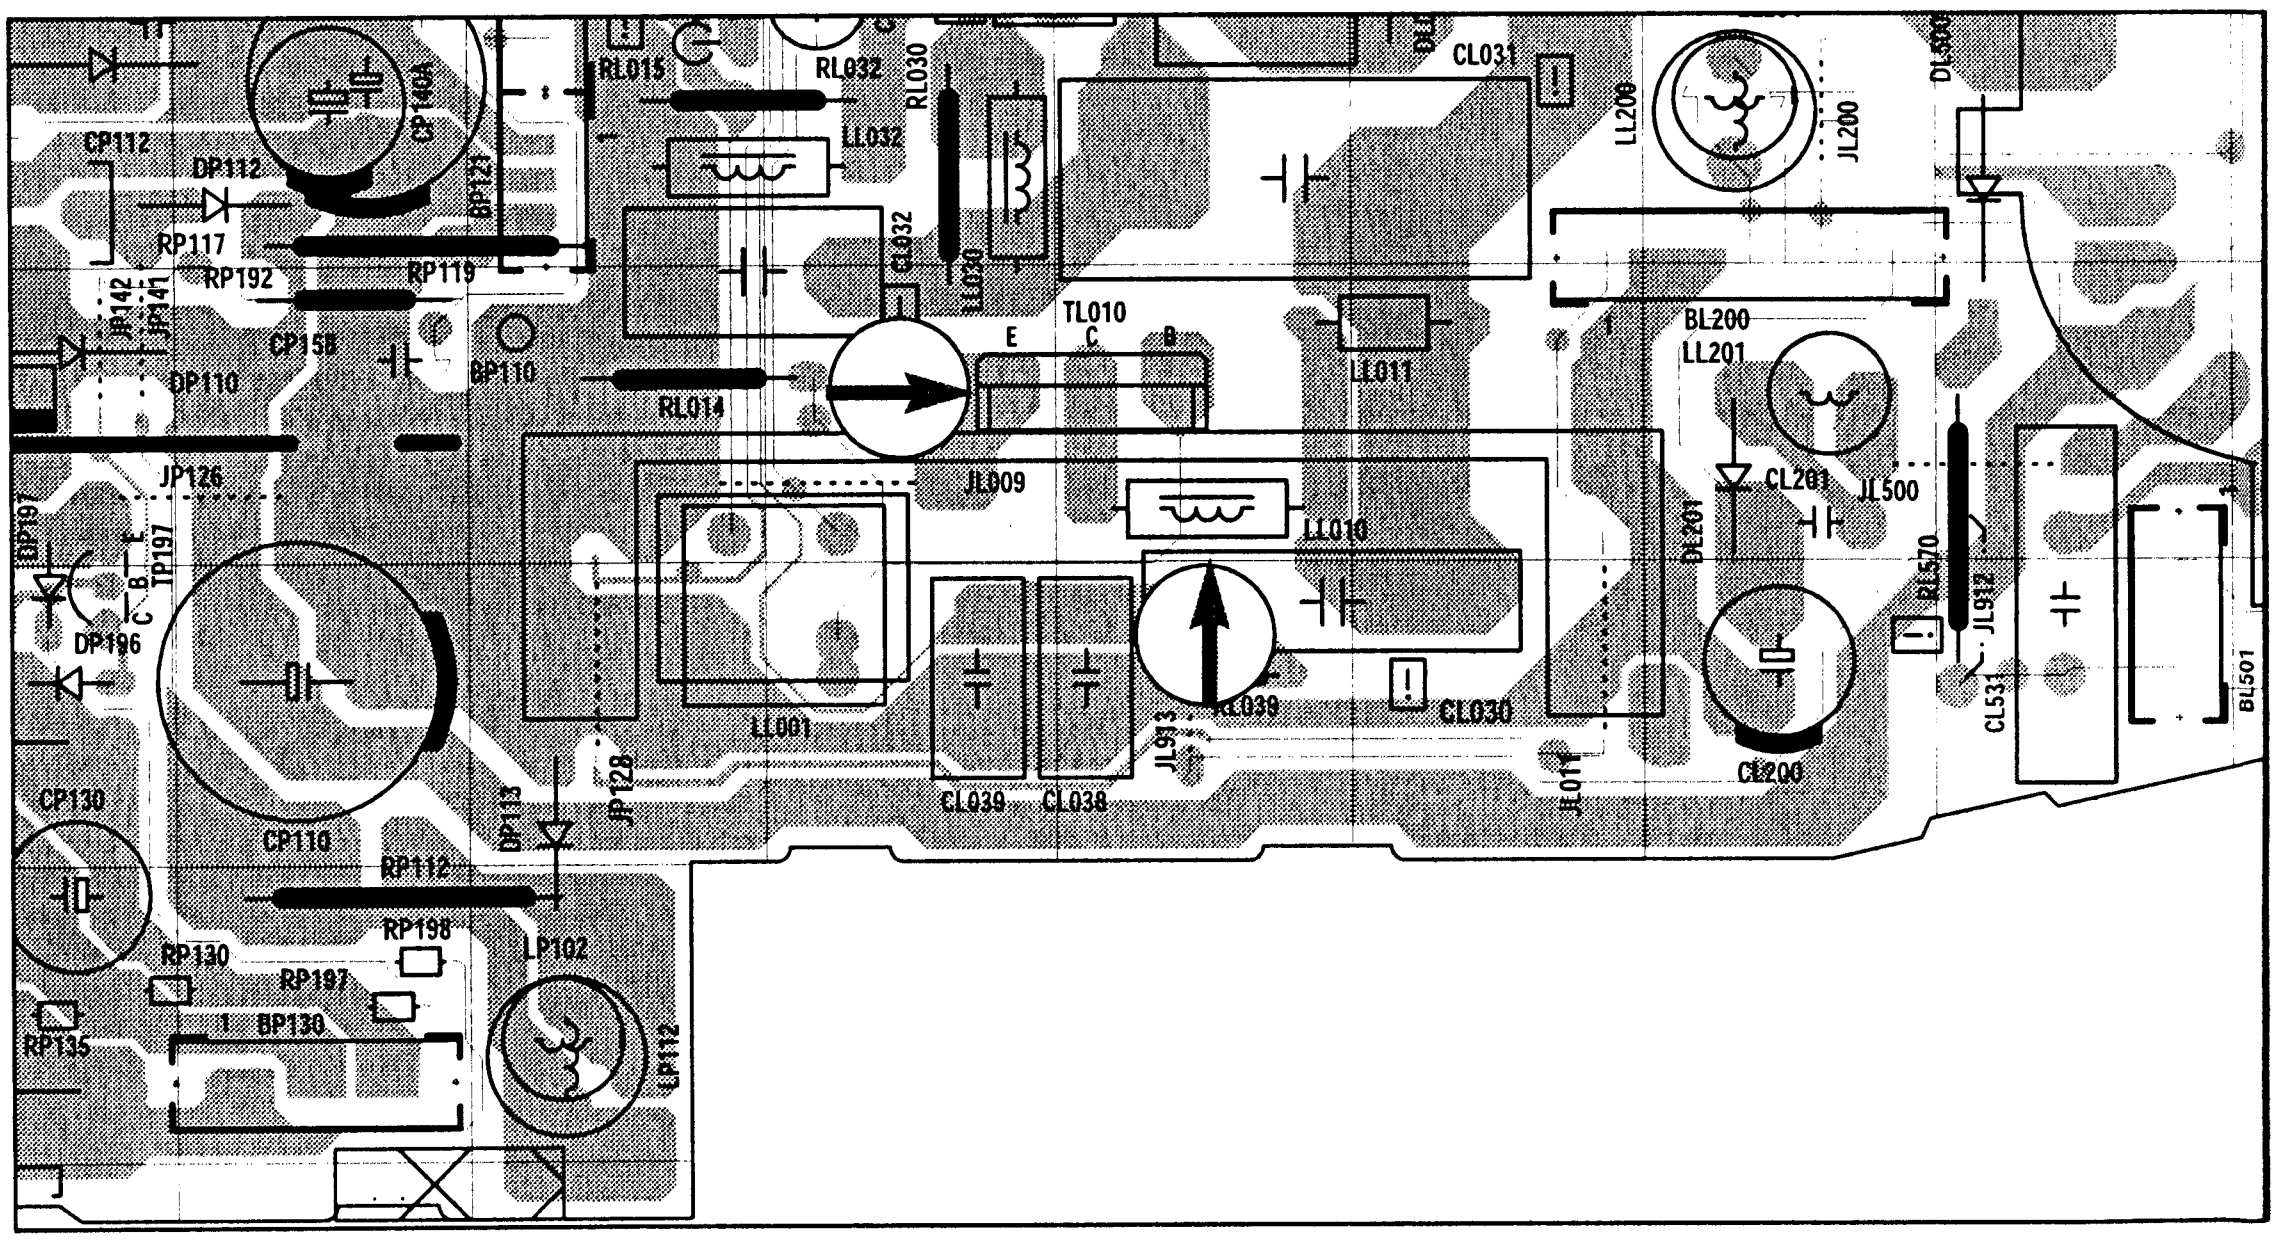
RL015
RL032
RL030
CP140A
CP112
DP112
BP121
LL032
RP117
RP192
RP119
CL032
LL030
JP142
JP141
CP158
BP110
DP110
RL014
TL010
E
C
B
JL009
JP126
DP197
TP197
E
B
C
DP196
LL001
CL039
CL038
JL913
RL039
JP128
DP113
CP130
CP110
RP112
RP198
LP102
RP130
RP197
BP130
RP135
LP112
CL031
LL200
JL200
DL500
BL200
LL201
LL011
LL010
CL201
JL500
DL201
RL570
JL912
CL531
BL501
CL030
JL011
CL200

IRIS CODE: Der Code, wie unten beschrieben, wird gebraucht um die Fehler im Garntiepapier aufzuführen.Es wird damit beabsichtigt Ihnen den Bericht leichter und zuverlässiger zu machen.

Zustand/ Symptom	Teilenummer	Menge	Position	Sektion	F.Code	R. Code
1 3 2 x	1 0 2 7 2 8 0 0	0 1	T L 0 1 0	D F L	☐ Z	☐ K

Die weißen Kästchen müssen nicht ausgefüllt werden. ☐

TECHNICAL INFORMATION

Finished products / Chassis concerned : ICC20

Symptom / Problem observed :

Light vertical band down the centre of the screen.

Solution :

Add an RGP15G diode **(Part No. 10272800)** in parallel with inductor LL010 on copper side of the power and deflection printed circuit board. (diodes cathode to the collector of TL010)

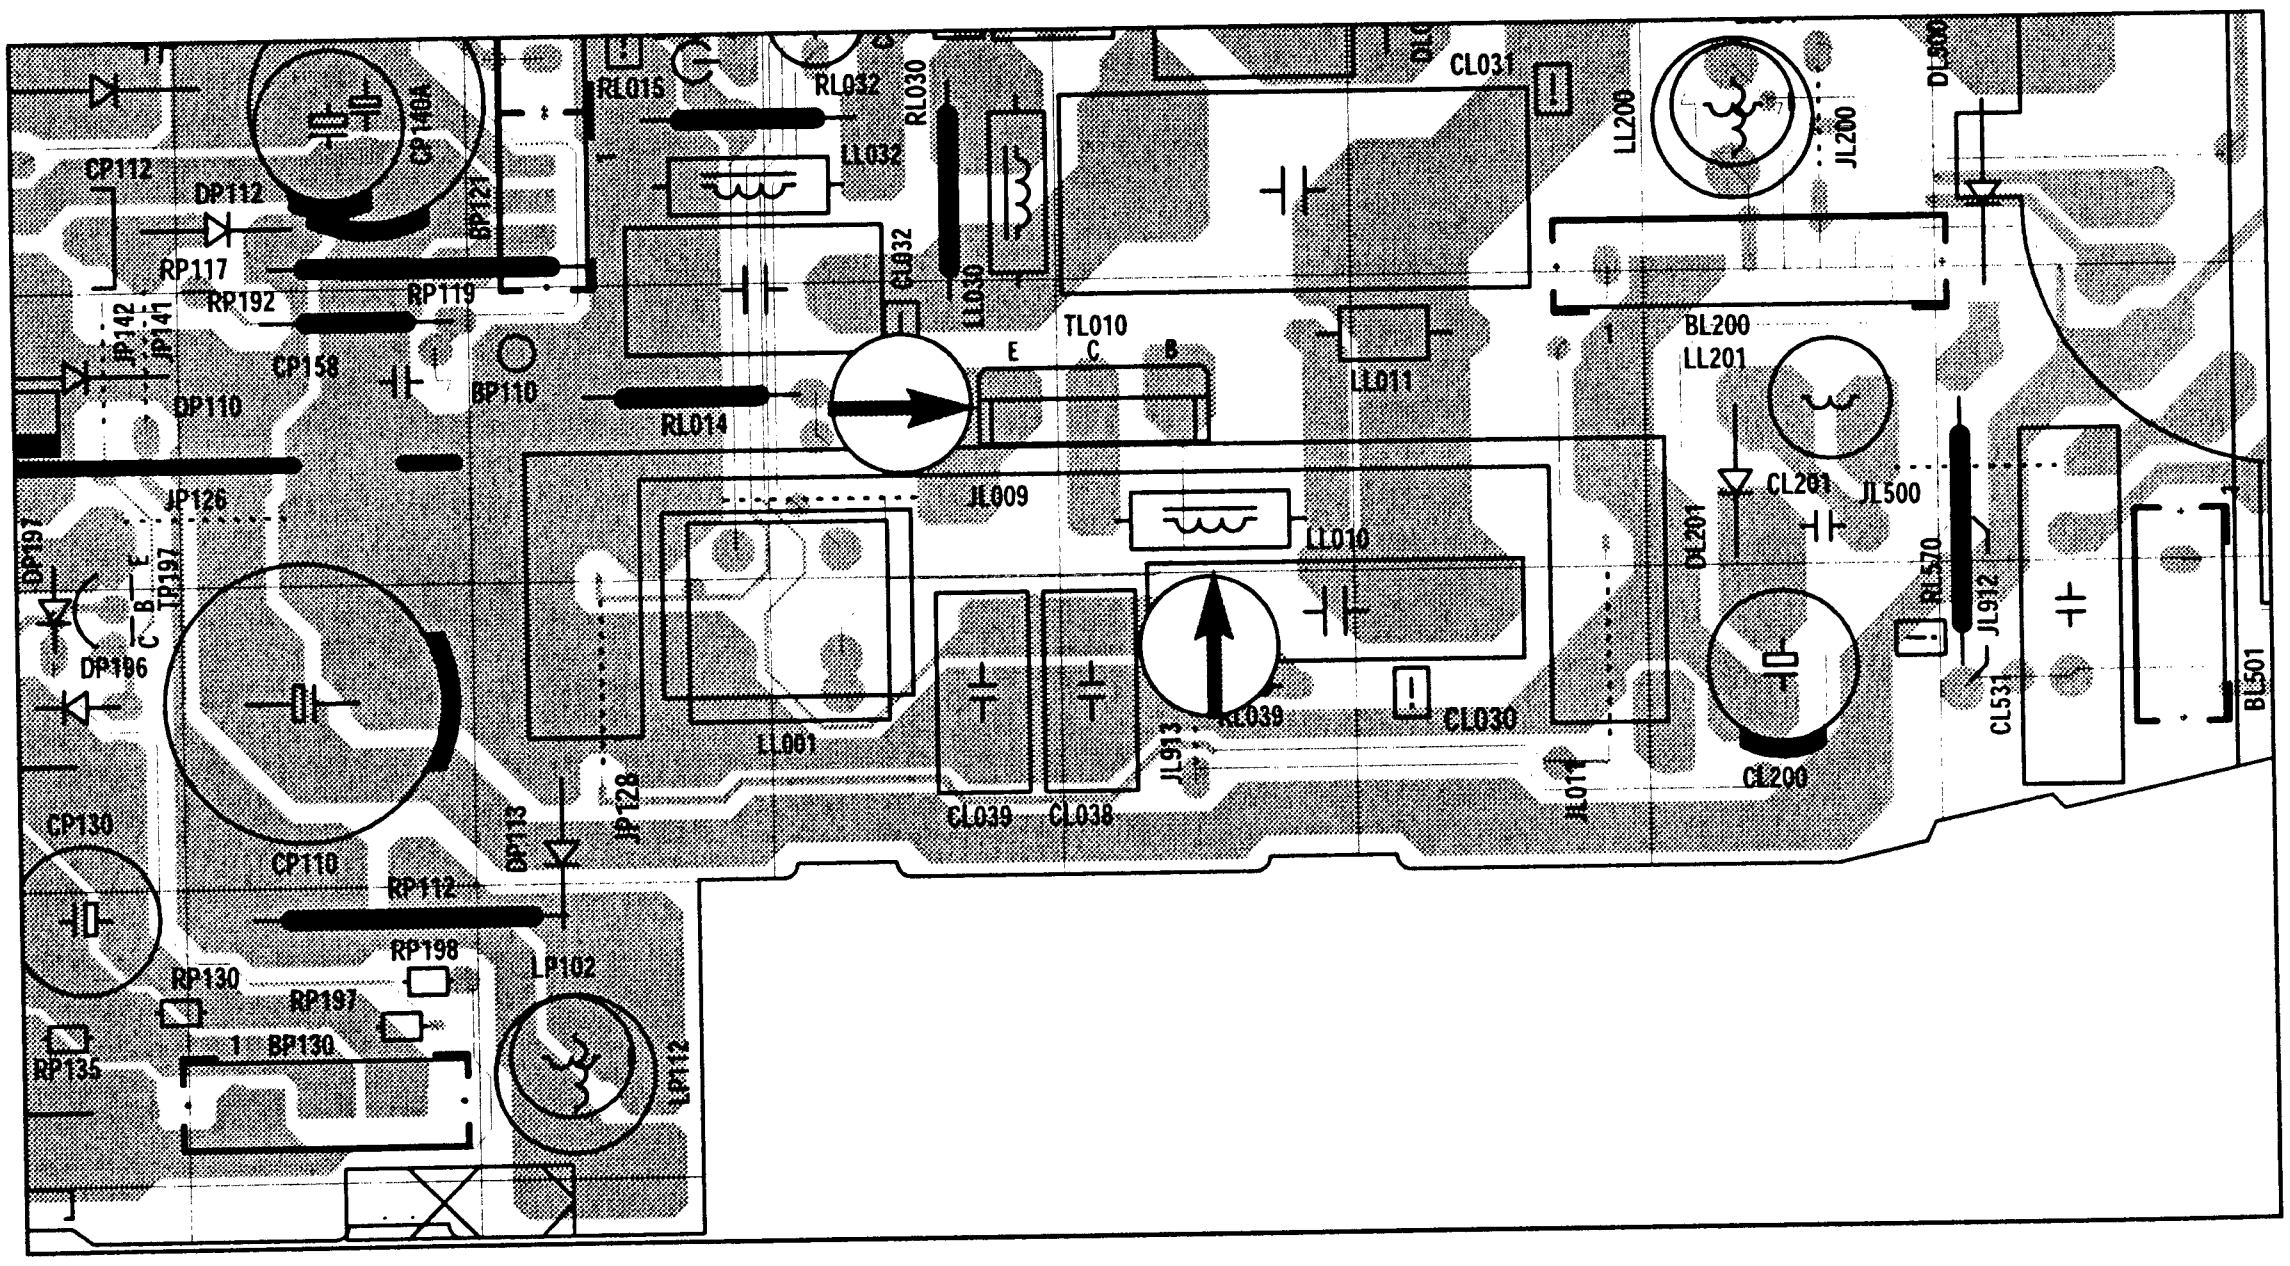
RL015
RL032
RL030
LL032
CL032
LL030
CL031
LL200
JL200
DL300
CP112
DP112
CP140A
BP121
RP117
RP192
RP119
JP142
JP141
CP158
BP110
DP110
RL014
TL010
E
C
B
LL011
BL200
LL201
JL009
LL010
CL201
JL500
JP126
DP197
TP197
C
B
E
DP196
LL001
RL039
CL030
DL201
RL570
JL912
CL531
BL501
CL200
JL011
JL913
CL039
CL038
JP128
DP113
CP130
CP110
RP112
RP198
LP102
RP130
RP197
1
BP130
RP135
LP112

IRIS CODE : The code mentioned below must be used to report the failure in the warranty sheet. It is proposed to make your report easier and more reliable.

Condition/ Symptom/	Part Code Number	Qty	Position	Section	Fault Code	Repair Code
1 3 2 X	1 0 2 7 2 8 0 0	0 1	D L 0 1 2	D F L	☐ Z	☐ K

You do not need to write anything in the white boxes ☐

TECHNICAL INFORMATION

Finished products / Chassis concerned : ICC20

Object / Improvement of the demodulated picture in L standard (France only)

Symptom / Problem observed :

Light horizontal band at the top of the picture, mainly visible on programme 5. (la 5 & Arte)

Cause :

AGC too time constant too fast.

Solution :

Replace metalised polyester capacitor in position CI028 (1µF) by 2.2µF 50V. **(Part N° 13085600)**

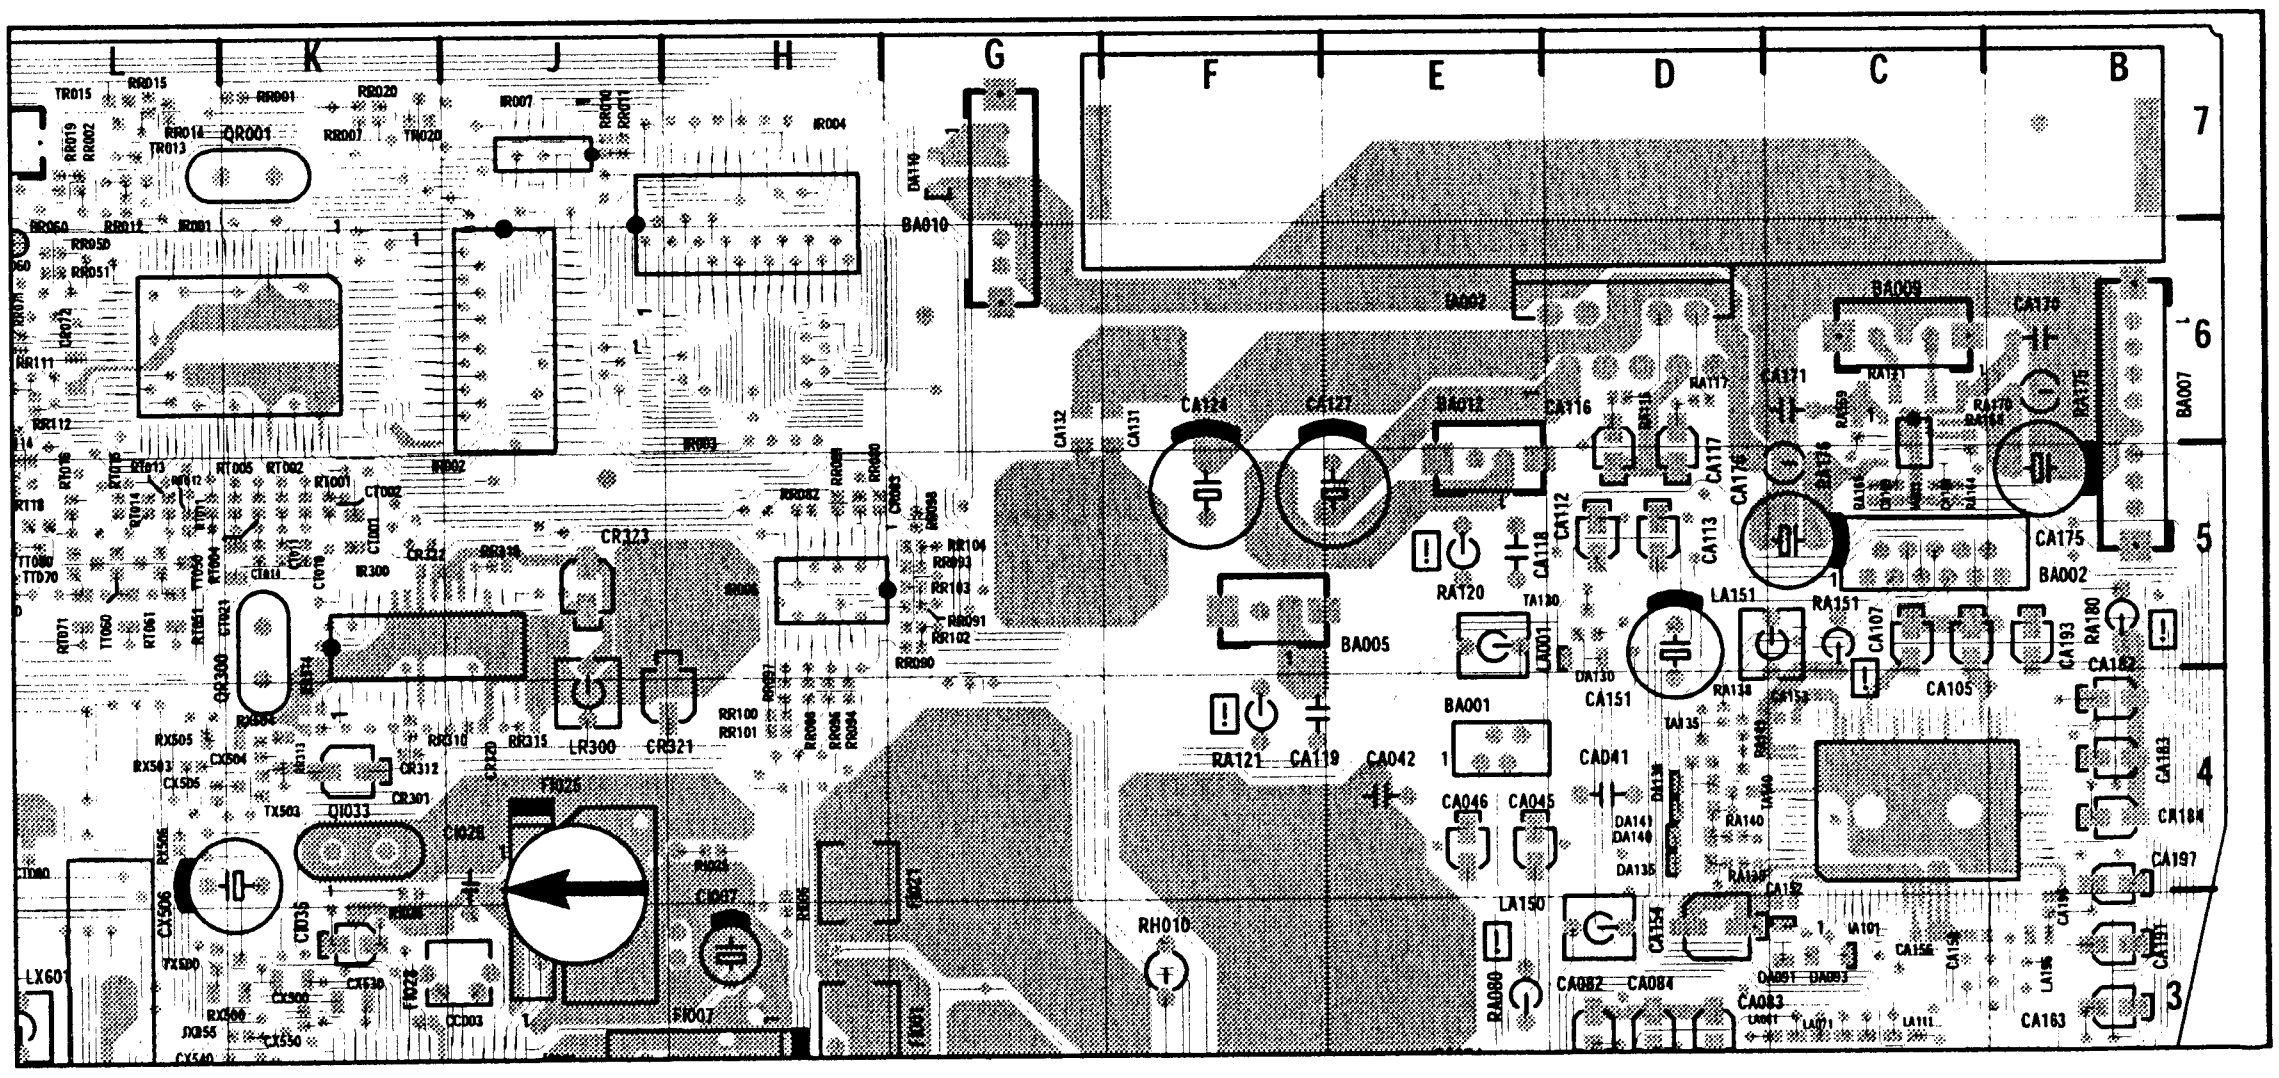

IRIS CODE : The code mentioned below must be used to report the failure in the warranty sheet. It is proposed to make your report easier and more reliable.

Condition/ Symptom/	Part Code Number	Qty	Position	Section	Fault Code	Repair Code
1 3 2 X	1 3 0 8 5 6 0 0	0 1	C I 0 2 8	I F C	☐ Y	☐ A

You do not need to write anything in the white boxes ☐

THOMSON MULTIMEDIA

TV - DVD

Brandt FERGUSON SABA TELEFUNKEN THOMSON

PARTS LIST
LISTE PIECES DETACHEES
ERSATZTEILLISTE
LISTA PARTI DI RICAMBIO
LISTA DE PIEZAS DE REPUESTO

THOMSON
32WT45ES
Chassis ICC20 TV / DVD

MODULES

PSB	C20PB20 B*PW****0* 00	10675420
SSB	C20SB20 B5**08RD31	10684580
AUDI	PA/SW20000	10626290
IFAC	POWER DISTRIBUTION	10673240
MPEG	MPEG	21054290
SMPS	SMPS	21049990
IFAC	AV INTERFACE	21054300
KB	KDB1-2	21049130



FP360,362, **ZP**009	MP315	⚠ 10575090
FP361	RXE025	⚠ 10529720
FP390	RXE090	⚠ 10529790
GK101	TSOP1333	25358570
IA000	TDA7298	10348810
IB001	TDA6108JF	10616240
IF001	TDA8177F	10352880
IK001	TMP87PS38F OTP S2.0 FLAT	21055500
IK003	TFMS5330B	20627780
IP020	VIPER20DIP	25408950
IP050	TEA2262	10495720
IP070,301,305	TLP621 GR(D4-LF2 T)	⚠ 20827900
IP170	LM393/NJM2903D	46069900
IP220	TDA8139	10044580
IP302	MC7808CT	10263430
IP303	PQ3RD13	15168930
IP350	TL431	15069010
UA500,501	MC33078D FLAT	10319560
UY500,505	TSH94D FLAT	15282180
ZL221,251	MP125	⚠ 10469180
ZL231	MP40	⚠ 10469170



TA401,**TF**041, **TL**103,312,803, **TP**173,179,505	BC556B	16001020
TB001,**TL**311	BF422	16003090
TG001	BF199	16002950
TG002	BF370	25420830
TG006	BD140-16	25425020
TG007	BD139-16	16001760
TG011,**TL**003, 104,801,**TP**026, 080,115,151, 152,158,160, 161,184,185, 197,221,506, 510,511	BC546B	45001866
TK001	BC848B SMD	16006290
TL004	MPSW01A	70436520
TL005	MPS750	16001340
TL010	ON4977/BU2525AX	10461310
TL029,100	STP10NB20FP	25414550
TL807	BC327-40	16000450
TL808,**TP**057	BC337-40	45001466
TP020	STH13NB60FI	25381050
TP150	STP22NE03L (TO220)	25341950
TP320	2SK2605	⚠ 20880040
TP321	MCR106-6 400V 4A	20813760
TP322,393	BC548B	16000930
TP323	KTC8550D	21039270
TP325,350,392	BC558B	16001110

DA400,**DG**001, 002,003,004, **DL**001,073,805, **DP**024,054,055, 057,064,069, 115,158,160, 161,170,183, 188,193,194, 196,197,221, 230,501	1N4148	44009209
DA500,501,502, 503,**DY**500,501, 502	BZT55C15 SMD	15187290
DB004	1N4004	44009009
DB006,030,031, 050,051,070, 071,**DL**043,305, **DP**023,342	BAV21	44044407
DF011	BZW04-58	10368210
DF031,033, **DL**302,303, **DP**061,220,361	RGP10G	10459090
DG026	BZX55C6V8	50890650
DK005	LL4148 SMD	16012450
DK006	BZT55C5V1 SMD	15196090
DK007	ZMM2,7 SMD	16030100
DL028,222,252	1N4001	16008160
DL029	RGP02-20	10472330
DL030	DTV32F-1500	10452490
DL032	STTA806DI	25422190
DL034,036,102	EGP10D	20953640
DL101	BZX55C13	70438310
DL201,**DP**112	MUR1100E	10360280
DL221,251	FUF5402	10458530
DL231,**DP**020, 051,113	FUF4005/MUR160	16009580
DL301	BZX85C18	50890010
DP001,002,003, 004,006	GP30M	10455410
DP008	FUF5404	20150190
DP021	RGP10M	10455320
DP053,333	BZX55B15/ZPD15 2%	80444020
DP110	BYT08PI-1000	25442210
DP120,140	S410D	10527250
DP130,135	MUR420	16009630
DP150	BYW29-150	16009140
DP152	ZPD10 2%	80444160
DP301,302,303, 304	BYW27-1000	10455390
DP323,330	ZPD8,2	44021504
DP324	ZPD24	44016504
DP325,337,390, 391	RGP15G	10272800
DP350	ZPD4,7/BZX55C4V7	20475400
DP360,362	1N5822	44058204
DP392	BZX55B5V1/ZPD5V1 2%	44035702
DP502	BAT42	16007410
GE101	TLUV5300 LED	11137650
GK001	LTL-1BEHJ OG/P-GN	21085280

R : RECYCLED PART
: PIECE RECYCLEE
: AUSTAUSCHTEILE
: RICAMBIO RICICLATO
: MODULO REPROCESADO

For any requests, please contact THOMSON multimedia after sales service area
Pour toutes précisions, contactez votre service apres vente local THOMSON multimedia
Für weitere Auskünfte, wenden Sie sich bitte an die THOMSON multimedia Kundendienste
Per precisazioni, contattare l'assistenza tecnica THOMSON multimedia
Para cualquier pregunta, por favor contactar con el responsable de zona del servicio postventa de THOMSON multimedia

No copying, translation, modification on other use authorized. All rights reserved worldwide. • Tous droits de reproduction, de traduction, d'adaptation et d'exécution réservés pour tous les pays. • Sämtliche Urheberrechte an diesen Texten und Zeichnungen stehen uns zu. Nachdrucke, Vervielfältigungen - auch auszugsweise - nur mit unserer vorherigen Zustimmung zulässig. Alle Rechte vorbehalten. • I diritti di riproduzione, di traduzione, e esecuzione sono riservati per tutti i paesi. • Derechos de reproduccion, de traduccion, de adaptacion y de ejecucion reservados para todos los paises.



QK001	8M0HZ		21063030



LF021	22U0H 10% 1,6A		10470180
LL029	OST-WEST SPULE		10347650
LL034			10679870



PP180	1K0 OHM		70434550

RA407	4R7 OHM 5% 0,35W	⚠	10226310
RB001,004	1K5 OHM 5% 0,50W		10121880
RB031,051,071	560R0 OHM 10% 0,50W		10257590
RB032,052,072, **RE**102,**RP**181	100R0 OHM 5% 0,25W		30943330
RF003,006	1K3 OHM 1% 0,40W		15012810
RF008	1R5 OHM 1% 0,70W		10451140
RF011,012	1R82 OHM 1% 0,70W		10451420
RG026,027	3K3 OHM 5% 3W		30941170
RG030,**RL**808, 809	22R0 OHM 5% 0,25W	⚠	35031220
RK101	453R0 OHM 1% 0,250W		15018140
RK102	681R0 OHM 1% 0,25W		15020310
RK103	1K5 OHM 1% 0,25W		80437630
RK104	3K32 OHM 1% 0,25W		15017270
RL015	6R8 OHM 5% 0,25W	⚠	41023309
RL021	1R21 OHM 1% 0,70W		13010820
RL022,**RP**228	1K0 OHM 1% 0,25W		15012570
RL023	3M9 OHM 2% 0,40W		13057750
RL024	100K0 OHM 1% 0,25W		15010160
RL025	1R0 OHM 1% 0,70W		10254220
RL027	2K2 OHM 5% 0,50W	⚠	10239310
RL037	330R0 OHM 10% 0,50W		14050190
RL044	536K0 OHM 1% 0,25W		15019140
RL100,221,251	0R27 OHM 5% 2,50W		10263600
RL231	4R7 OHM 5% 2,5W		10471330
RL303	33K2 OHM 1% 0,25W		15016530
RL308	15K0 OHM 1% 0,25W		15011700
RL310	46K4 OHM 1% 0,70W		10403710
RL311	2K21 OHM 1% 0,25W		15015480
RP004	2R7 OHM 5% 4,50W		10379110
RP015	18R0 OHM 220V PTC	⚠	41398800
RP020	100R0 OHM 5% 0,75W	⚠	10230030
RP049	33R0 OHM 5% 2W		50888890
RP050	10M0 OHM 5% 0,70W	⚠	20564520
RP051	100R0 OHM 5% 4,50W		10379830
RP052	0R1 OHM 5% 2,50W	⚠	10288160
RP090	22K1 OHM 1% 0,25W		60442350
RP179	8K25 OHM 1% 0,25W		15021830
RP180	205K0 OHM 1% 0,40W		15013970
RP227	2K26 OHM 1% 0,25W		15015500
RP320,361	1R0 OHM 5% 2,50W		10383240

CB001	10N0F 3K0V		14036450
CB004,**CL**043	100N0F 20% 250V		13072860
CF020	100N0F 10% 100V		20467110
CL030	1N9F 2.5% 2K0V		10532420
CL031	11N6F 2,5% 2K0V		40406501
CL032	33N0F 5% 400V		10076920
CL033	680N0F 5% 400.0V	⚠	10552180
CL034	12N0F 2% 400V		10672180
CL035	410N0F 5% 400V		10180780
CL038,039	27N0F 5% 250V		50895120
CL100	150N0F 5% 250V		10647360
CL201,221,231, 251	330P0F 20% 1K0V		14035270
CL301	10N0F 5% 400V		10588870
CP001,002,601, 602,611,612	100N0F 20% 275V	⚠	10331520
CP003,004,005, 304	4N7F 1K0V		10058740
CP006	470N0F 10% 400V		10469630
CP007	560N0F 5% 250V		10376360
CP008,051,121, 131,136,141	470P0F 10% 2K0V		10099390
CP010	390U0F 20% 400V		25444380
CP015	68N0F 20% 250V		10256210
CP020,022	220P0F 10% 1K0V		25460410
CP021	1N0F 5% 400V		13055520
CP049	1N5F 20% 400V	⚠	10442770
CP050	150P0F 20% 400V	⚠	20738090
CP052,112	2N2F 10% 1K0V		13090980
CP111	470P0F 10% 2K0V		25392030
CP301,302	100N0F 20% 275V	⚠	40404090
CP305,306	1N5F 10% 1K0V		20338740
CP308	47U0F 20% 385V	⚠	50844400
CP309	2N2F 20% 1K0V		43325400
CP315	1N0F 20% 400V	⚠	43106800
CP362,363,392	1N0F 20% 1K0V		20388780

LL001			10669660
LL008	DSTFBT 1372.0054	⚠	10675710
LL033			10347660
LL037		⚠	10518250
LP001,601		⚠	10203560
LP020	STAND-BY	⚠	25425970
LP050	SMT7LZ	⚠	10643540
LP070	DRIVER	⚠	60412091
LP301,611		⚠	20247580
LP303	TFSMT	⚠	2105993A

OTHER PARTS
AUTRES PIECES
SONSTIGE TEILE
ALTRE PARTI
OTRAS PIEZAS

BB010	CATHODE RAY TUBE SOCKET SUPPORT TUBE CATHODIQUE BILDROEHRENFASSUNG SUPPORTO TUBO CATODICO SOPORTE T.R.C	⚠	80298800
BJ010	CINCH SOCKET PRISE CINCH CINCH-BUCHSE PRESA CINCH TOMA CINCH		10037440
BJ011	SVHS SOCKET PRISE SVHS S-VHS-BUCHSE PRESA SVHS TOMA SVHS		20392900
BK004	CABLE 6X 255MM CABLE NAPPE 6X 255MM FOLIENKABEL 6X 255MM CAVO DI COLLEGAMENTO 6X 255MM CABLE 6X 255MM	⚠	21089390
BK005	CABLE 11X 340MM CABLE NAPPE 11X 340MM FOLIENKABEL 11X 340MM CAVO DI COLLEGAMENTO 11X 340MM CABLE 11X 340MM		21082290
BQ012	JACK SOCKET PRISE JACK BUCHSE PRESA JACK TOMA JACK		10539510
BU702	CABLE 19X 70MM CABLE NAPPE 19X 70MM FOLIENKABEL 19X 70MM CAVO DI COLLEGAMENTO 19X 70MM CABLE 19X 70MM		21067570
BY500	CABLE 19X 70MM CABLE NAPPE 19X 70MM FOLIENKABEL 19X 70MM CAVO DI COLLEGAMENTO 19X 70MM CABLE 19X 70MM		21063420
BY502	SVHS SOCKET PRISE SVHS S-VHS-BUCHSE PRESA SVHS TOMA SVHS		20862120
BY505	CINCH SOCKET 3 ASSY ENSEMBLE 3 PRISES CINCH CINCH 3 BUCHSEN-EINHEIT ASSIEME 3 PRESA CINCH CONJUNTO 3 TOMA CINCH		21063440
CH200	ON/OFF SWITCH CONTACTEUR MARCHE/ARRET EIN-AUS SCHALTER CONTATTORE ACCESO/SPENTO CONTACTOR MARCHA/PARADA	⚠	10276500
CJ015	CABLE WITH CONNECTOR 9 PINS 340MM CABLE AVEC CONNECTEUR 9 VOIES 340MM KABEL MIT VERBINDER 9 PINS 340MM CAVO CON CONNETTORE 9 SPINOTTI 340MM CABLE CON CONECTOR 9 PUNTOS 340MM		10231790

CJ016	CABLE WITH CONNECTOR 3 PINS 220MM CABLE AVEC CONNECTEUR 3 VOIES 220MM KABEL MIT VERBINDER 3 PINS 220MM CAVO CON CONNETTORE 3 SPINOTTI 220MM CABLE CON CONECTOR 3 PUNTOS 220MM	25459200
CJ020	CABLE WITH CONNECTOR 10 PINS 340MM CABLE AVEC CONNECTEUR 10 VOIES 340MM KABEL MIT VERBINDER 10 PINS 340MM CAVO CON CONNETTORE 10 SPINOTTI 340MM CABLE CON CONECTOR 10 PUNTOS 340MM	10526610
CJ030	CABLE WITH CONNECTOR 6 PINS 500MM CABLE AVEC CONNECTEUR 6 VOIES 500MM KABEL MIT VERBINDER 6 PINS 500MM CAVO CON CONNETTORE 6 SPINOTTI 500MM CABLE CON CONECTOR 6 PUNTOS 500MM	25460570
CJ035	CABLE WITH CONNECTOR 3 PINS 580MM CABLE AVEC CONNECTEUR 3 VOIES 580MM KABEL MIT VERBINDER 3 PINS 580MM CAVO CON CONNETTORE 3 SPINOTTI 580MM CABLE CON CONECTOR 3 PUNTOS 580MM	30020170
CJ075	CABLE WITH CONNECTOR 3 PINS 460MM CABLE AVEC CONNECTEUR 3 VOIES 460MM KABEL MIT VERBINDER 3 PINS 460MM CAVO CON CONNETTORE 3 SPINOTTI 460MM CABLE CON CONECTOR 3 PUNTOS 460MM	25443770
CJ076	CABLE WITH CONNECTOR 2 PINS 460MM CABLE AVEC CONNECTEUR 2 VOIES 460MM KABEL MIT VERBINDER 2 PINS 460MM CABLE CON CONNETTORE 2 SPINOTTI 460MM CABLE CON CONECTOR 2 PUNTOS 460MM	25443810
CJ081,143	CABLE WITH CONNECTOR 2 PINS 580MM GREEN CABLE AVEC CONNECTEUR 2 VOIES 580MM VERT CABLE MIT VERBINDER 2 PINS 580MM GRUEN CAVO CON CONNECTOR 2 SPINOTTI 580MM VERD CABLE CON CONECTOR 2 PUNTOS 580MM VERDE	10327420
CJ100	THT CABLE CABLE THT KABEL THT CAVO THT CABLE THT	⚠ 10664300
CJ105	CABLE 460MM 20KV HT CABLE 460MM 20KV HT KABEL 460MM 20KV HT CAVO 460MM 20KV HT CABLE 460MM 20KV HT	⚠ 10369650
CJ145	CABLE WITH CONNECTOR 8 PINS 300MM CABLE AVEC CONNECTEUR 8 VOIES 300MM KABEL MIT VERBINDER 8 PINS 300MM CABLE CON CONNETTORE 8 SPINOTTI 300MM CABLE CON CONECTOR 8 PUNTOS 300MM	25019130
CJ490	CABLE WITH CONNECTOR 7 PINS 260MM CABLE AVEC CONNECTEUR 7 VOIES 260MM KABEL MIT VERBINDER 7 PINS 260MM CAVO CON CONNETTORE 7 SPINOTTI 260MM CABLE CON CONECTOR 7 PUNTOS 260MM	25348010
FP001,601,602	2A5T TIME-LAG FUSE 2A5T FUSIBLE TEMPORISE 2A5T THERMISCHE SICHERUNG 2A5T FUSIBILE TEMPORIZZATO 2A5T FUSIBLE TEMPORIZADO	⚠ 10246750
SK001,002, 003,004,005, 015,016,017, 018,019,020, 021,022,023, 024,025	MICROSWITCH MICRO CONTACTEUR MIKROSCHALTER MICROINTERRUTTORE MICROCONTACTOR	20540300
SK101,102, 103,104	MICROSWITCH MICRO CONTACTEUR MIKROSCHALTER MICROINTERRUTTORE MICROCONTACTOR	30011100
SP015	RELAY 12V RELAIS 12V RELAIS 12V RELE 12V RELE 12V	⚠ 90294100
UA503	OPTICAL SOCKET PRISE OPTIQUE OPTICAL-BUCHSE PRESA OTTICA TOMA OPTICO	15293550

EQUIPMENT/PRESENTATION
EQUIPEMENT/PRESENTATION
AUSSTATTUNG/GEHAEUSE
PARTI VARIE
EQUIPO/PRESENTACION

FRONT PANEL DVD FACADE DVD FRONTPLATTE DVD PANNELLO FRONTALE DVD PANEL FRONTAL DVD	21050580
COVER TRAY CD CACHE TIROIR CD ABDECKUNG SCHUBLADE CD COPERCHIO CASSETTO CD CUBIERTA CORREDERA CD	21050770
LABEL (COVER TRAY CD) ETIQUETTE (CACHE TIROIR CD) ETIKETT (ABDECKUNG SCHUBLADE CD) ETICHETTA (COPERCHIO CASSETTO CD) ROTULO (CUBIERTA CORREDERA CD)	2110522A
BUTTON STRIP DVD CONTROL BARRETTE DE TOUCHES DVD CONTROL TASTENLEISTE DVD CONTROL PIATTINA TASTI DVD CONTROL PLACA DE TECLAS DVD CONTROL	21050610
KNOB OPEN/CLOSE TOUCHE OPEN/CLOSE TASTE OPEN/CLOSE TASTO OPEN/CLOSE TECLA OPEN/CLOSE	21050650
BUTTON STRIP TV CONTROL BARRETTE DE TOUCHES TV CONTROL TASTENLEISTE TV CONTROL PIATTINA TASTI TV CONTROL PLACA DE TECLAS TV CONTROL	21050800
BUTTON STRIP NAVIGATION BARRETTE DE TOUCHES NAVIGATION TASTENLEISTE NAVIGATION PIATTINA TASTI NAVIGAZIONE PLACA DE TECLAS NAVEGACION	21050710
KNOB GUIDE OK TOUCHE GUIDE OK TASTE GUIDE OK TASTO GUIDE OK TECLA GUIDE OK	21050680
TVM502A OPTICAL PLAYER TVM502A LECTEUR OPTIQUE TVM502A CD-LAUFWERK TVM502A ASSIEME OTTICA TVM502A MECANISMO OPTICO	10669590
FRONT PANEL TV FACADE TV FRONTPLATTE TV PANNELLO FRONTALE TV PANEL FRONTAL TV	25455470
REAR PANEL DOS RUECKWAND PANNELLO POSTERIORE TAPA POSTERIOR	⚠ 25465780
JACK PANEL BE15TH TABLEAU DE PRISES BE15TH JACK FRONTPLATTE BE15TH QUADRO DI PRESA JACK BE15TH TABLERO DE TOMA JACK BE15TH	⚠ 25467140
LOGO THOMSON LOGO THOMSON SCHRIFTZUG THOMSON MARCHIO THOMSON LOGOTIPO THOMSON	25376750
CHASSIS SLIDE SECURING GLISSIERE FIXATION CHASSIS SCHIEBER BEFESTIGUNG CHASSIS SVIVOLO DI FISSAGGIO CHASSIS CORREDERA DE SUJECION CHASIS	25413960
LOUDSPEAKER GRID BOOMER BE15TH GRILLE HAUT PARLEUR GRAVES BE15TH LAUTSPRECHER GITTER TIEFTOENER BE15TH GRIGLIA ALTOPARLANTE SUPERIOR BE15TH REJILLA ALTAVOZ GRAVES BE15TH	25465810
8R OHM 12W LOUDSPEAKER 60X160MM 8R OHM 12W HAUT PARLEUR 60X160MM 8R OHM 12W LAUTSPRECHER 60X160MM 8R OHM 12W ALTOPARLANTE 60X160MM 8R OHM 12W ALTAVOZ 60X160MM	25481710
8R OHM 20W LOUDSPEAKER 51X51MM 8R OHM 20W HAUT PARLEUR 51X51MM 8R OHM 20W LAUTSPRECHER 51X51MM 8R OHM 20W ALTOPARLANTE 51X51MM 8R OHM 20W ALTAVOZ 51X51MM	25461220
4R OHM 30W LOUDSPEAKER 130MM 4R OHM 30W HAUT PARLEUR 130MM 4R OHM 30W LAUTSPRECHER 130MM 4R OHM 30W ALTOPARLANTE 130MM 4R OHM 30W ALTAVOZ 130MM	10517870
ON/OFF BUTTON SI01TH TOUCHE MARCHE/ARRET SI01TH EIN-AUS TASTE SI01TH TASTA ACCESSO/SPENTO SI01TH TECLA MARCHA/PARADA SI01TH	25462910

POWER SUPPLY LEAD CORDON D'ALIMENTZATION NETZKABEL CAVO DI ALIMENTAZIONE CABLE DE ALIMENTACION	⚠ 25420360
CORD STOPPER ATTACHE CORDON SECTEUR ZUGENTLASTUNG BRIDA CORDONE DI ALIMENTAZIONE SUJECION CABLE DE ALIMENTACION	25071420
W76EJY011X121 CATHODE RAY TUBE W76EJY011X121 TUBE CATHODIQUE W76EJY011X121 FARBBILDROEHRE W76EJY011X121 TUBO CATODICO W76EJY011X121 T.R.C	⚠ 10670260
DOUBLE DEGAUSSING COIL BOBINE DE DEMAGNETISATION DOUBLE DOPPE ENTMAGNETISIERUNGSSPULE BOBINA DI SMAGNETIZZAZIONE DOPPIA BOBINA DE DESIMANTACION DOBLE	⚠ 10669680
EFC COIL BOBINE EFC EFC-SPULE BOBINA EFC BOBINA EFC	10542150
RCV400 REMOTE CONTROL RCV400 TELECOMMANDE RCV400 FERNBEDIENUNG RCV400 TELECOMANDO RCV400 TELEMANDO	21074280
FOLDING BOX EMBALLAGE CARTON KARTON IMBALLAGGIO CARTONE EMBALAJE CARTON	25417300
FITTING DOWNER CALE INFERIEURE POLSTER UNTEN DISTANZIATORE INFERIORE CALZO INFERIOR	25451020
FITTING UPPER CALE SUPERIEURE POLSTER OBEN DISTANZIATORE SUPERIORE CALZO SUPERIOR	25451030

ICC20 SERVICE MANUAL EUROPE ICC20 DOC TECHNIQUE EUROPE ICC20 TECHNISCHE DOKUMENTATION EUROPE ICC20 DOCUMENTAZIONE TECNICA EUROPE ICC20 DOCUMENTACION TECNICA EUROPE	35118540
DVD17/20 SERVICE MANUAL DVD17/20 DOC TECHNIQUE DVD17/20 TECHNISCHE DOKUMENTATION DVD17/20 DOCUMENTAZIONE TECNICA DVD17/20 DOCUMENTACION TECNICA	35127160
ICC20 TV/DVD SERVICE MANUAL SUPPLEM. ICC20 TV/DVD DOC TECHNIQUE ADDITIF ICC20 TV/DVD TECHNISCHE DOKUMENT. ZUSATZ ICC20 TV/DVD DOCUMENTAZIONE ADDITIVO ICC20 TV/DVD DOCUMENTACION ADICCIONAL	35130200
32WT45ES PARTS LIST 32WT45ES LISTE PIECES DETACHEES 32WT45ES ERSATZTEILLISTE 32WT45ES LISTA PARTI DI RICAMBIO 32WT45ES LISTA PIEZAS DE REPUESTO	35130210
32WT45ES UM NL/DK/S/RU/CS/PL/H/SK 32WT45ES NU NL/DK/S/RU/CS/PL/H/SK 32WT45ES BA NL/DK/S/RU/CS/PL/H/SK 32WT45ES IU NL/DK/S/RU/CS/PL/H/SK 32WT45ES IU NL/DK/S/RU/CS/PL/H/SK	25473580
32WT45ES UM F/D/I/GB/GR/E/P 32WT45ES NU F/D/I/GB/GR/E/P 32WT45ES BA F/D/I/GB/GR/E/P 32WT45ES IU F/D/I/GB/GR/E/P 32WT45ES IU F/D/I/GB/GR/E/P	25466870

The description and characteristics given here are of informative significance only, and non committal. To keep up the high quality of our products, we reserve the right to make any changes or improvement without previous notice. • Les descriptions et caractéristiques figurant sur ce document sont données à titre d'information et non d'engagement. En effet, soucieux de la qualité de nos produits, nous nous réservons le droit d'effectuer, sans préavis, toute modification ou amélioration. • Die Beschreibungen und Daten in dieser Anleitung dienen nur zur Information und sind nicht bindend. Um die Qualität unserer Produkte ständig zu verbessern, behalten wir uns das Recht auf Änderungen vor. • Le descrizioni e le caratteristiche date su questo documento sono fornite a semplice titolo informativo e senza impegno. Ci riserviamo il diritto di eseguire, senza preavviso, qualsiasi modifica o miglioramento. • Las descripciones y características que figuran en este documento se dan a título de información y no de compromiso. En efecto, en bien de la calidad de nuestros productos, nos reservamos el derecho de efectuar, sin previo aviso, cualquier modificación o mejora -

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLA
POWER SUPPLY PART - PARTIE ALIMENTATION - NETZTEIL - ALIMENTAZIONE - ALIMENTACIÓ

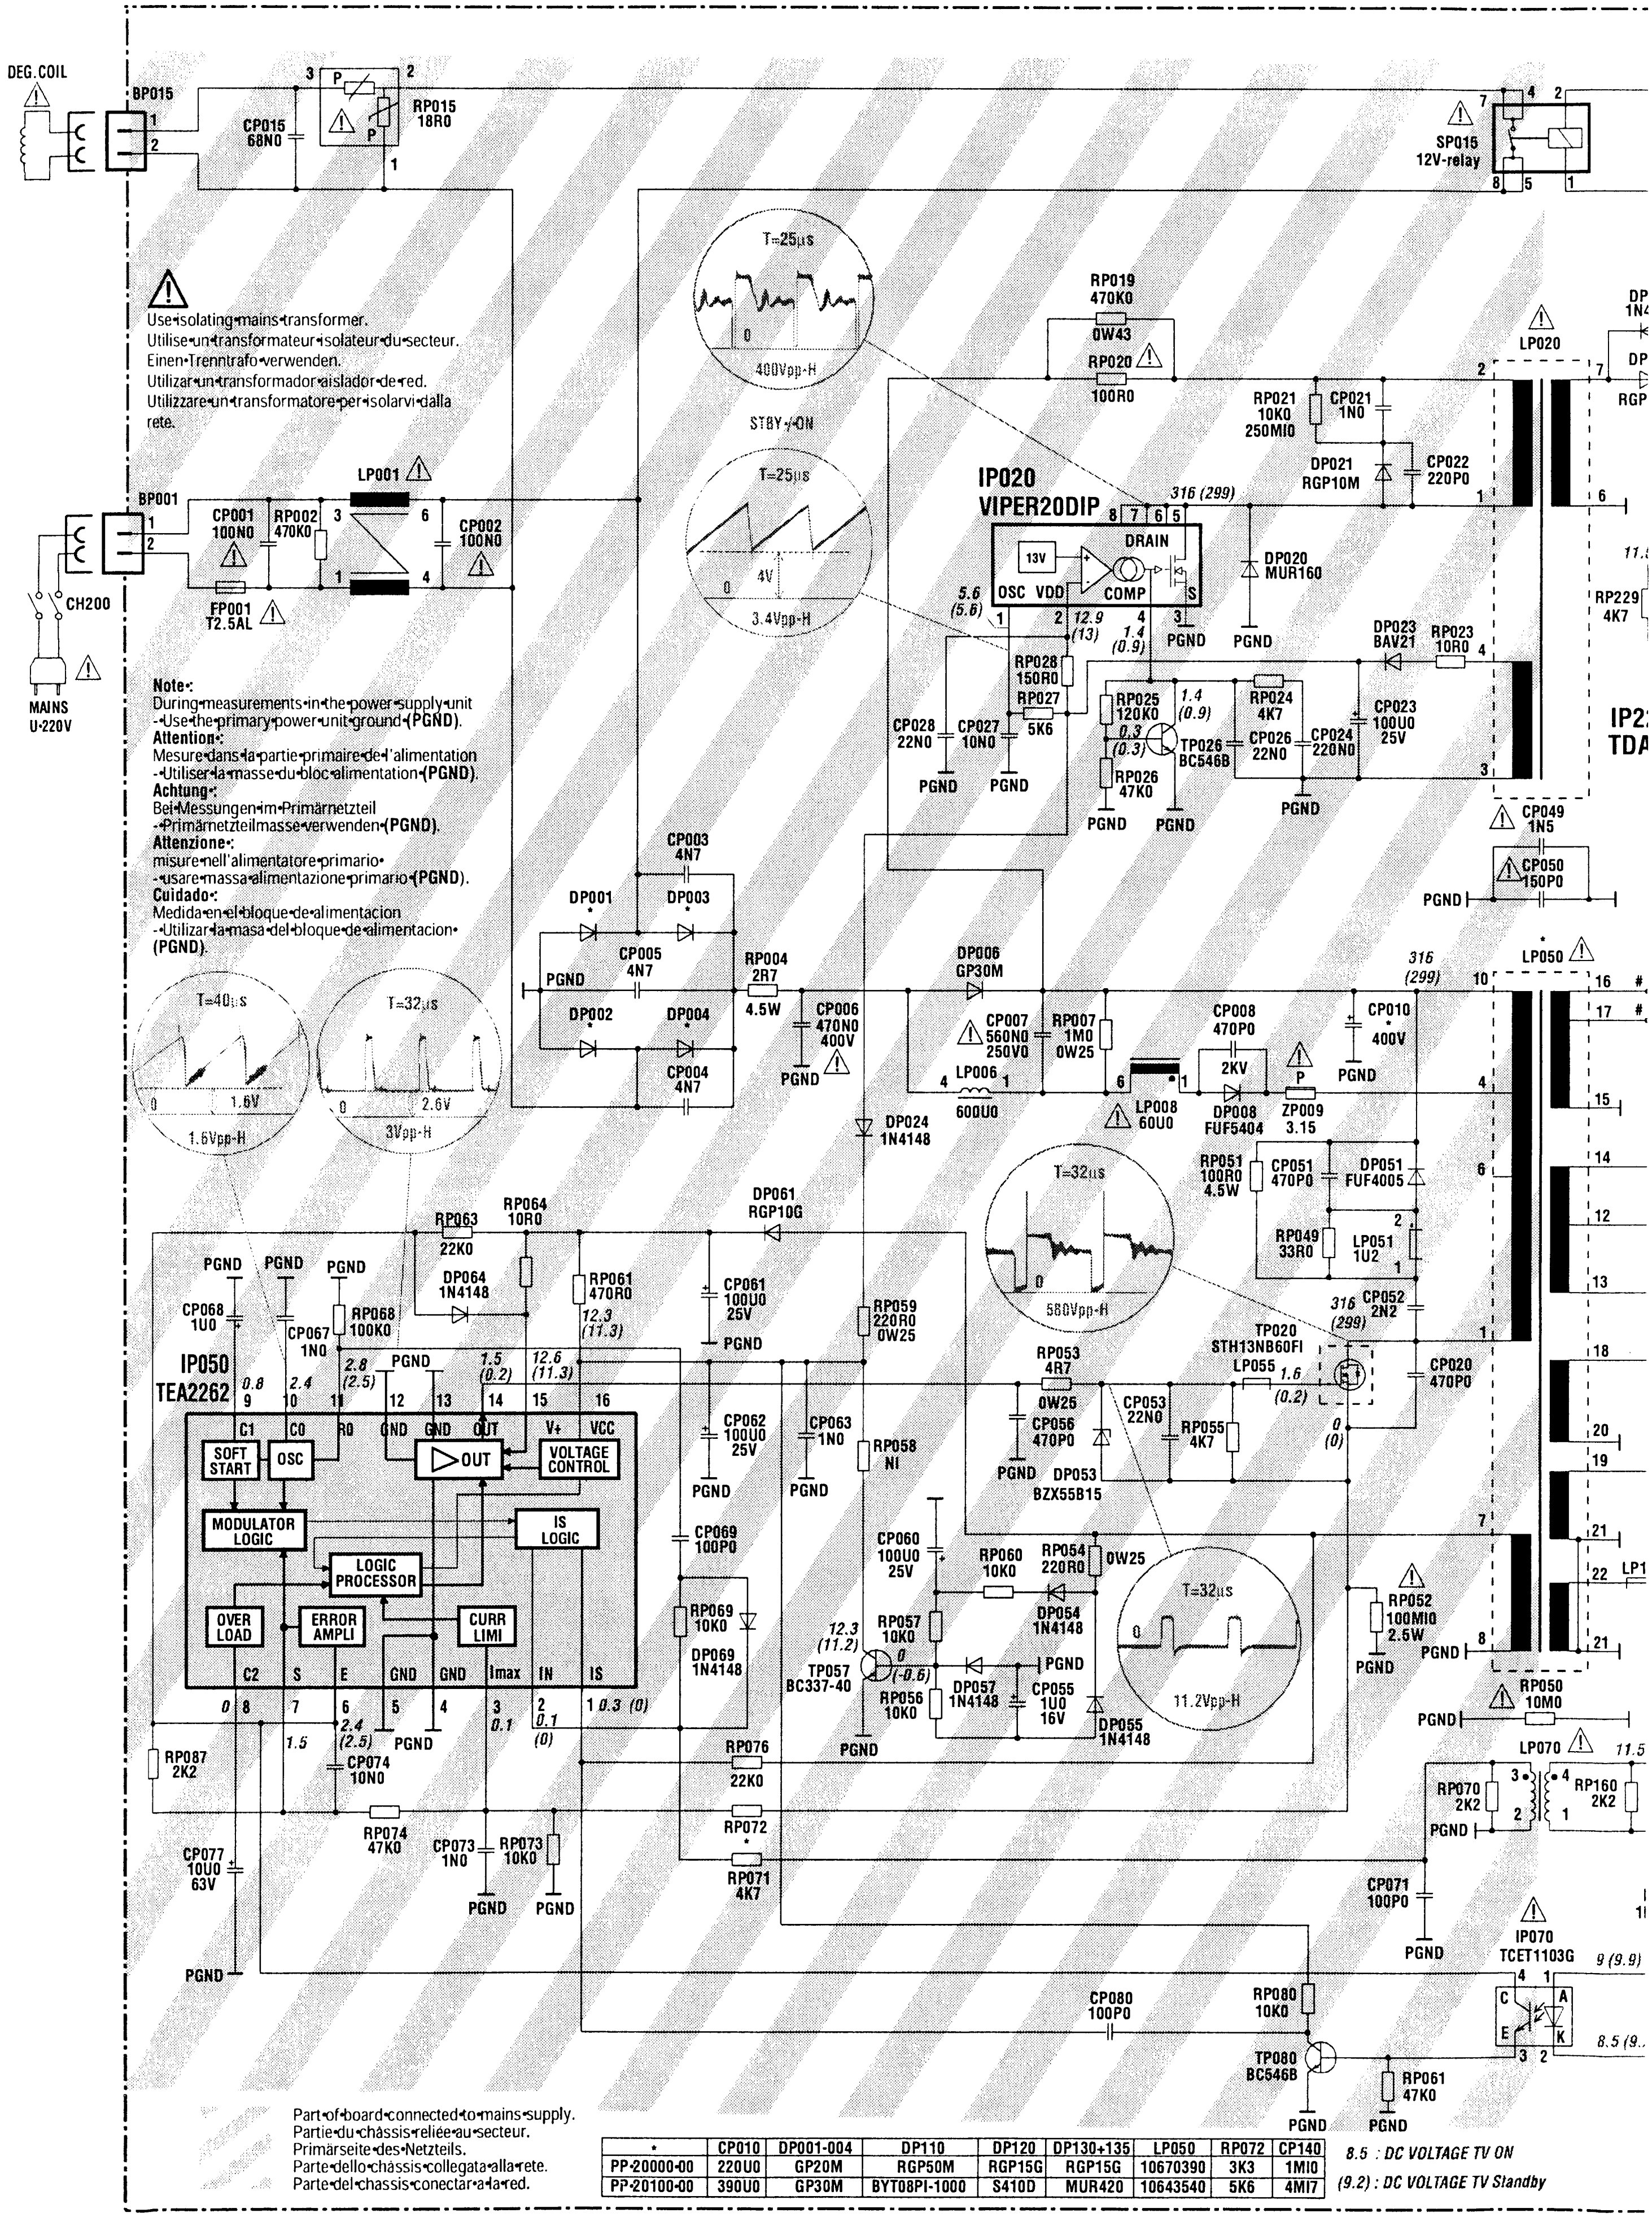
DEG.COIL
BP015
CP015 68N0
RP015 18R0
SP015 12V-relay
BP001
CP001 100N0
RP002 470K0
LP001
CP002 100N0
FP001 T2.5AL
CH200
MAINS U-220V
T=25µs
400Vpp-H
STBY-/-ON
T=25µs
4V
3.4Vpp-H
RP019 470K0
0W43
RP020
100R0
IP020
VIPER20DIP
13V
DRAIN
OSC VDD
COMP
316 (299)
5.6 (5.6)
12.9 (13)
1.4 (0.9)
RP021 10K0 250MI0
CP021 1N0
DP021 RGP10M
CP022 220P0
DP020 MUR160
LP020
DP023 BAV21
RP023 10R0
RP028 150R0
RP027 5K6
CP028 22N0
CP027 10N0
RP025 120K0
0.3 (0.3)
TP026 BC546B
RP026 47K0
RP024 4K7
CP026 22N0
CP024 220N0
CP023 100U0 25V
CP049 1N5
CP050 150P0
PGND
CP003 4N7
DP001
DP003
CP005 4N7
DP002
DP004
CP004 4N7
RP004 2R7 4.5W
CP006 470N0 400V
DP006 GP30M
CP007 560N0 250V0
RP007 1M0 0W25
LP006 600U0
CP008 470P0
2KV
LP008 60U0
DP008 FUF5404
ZP009 3.15
CP010 400V
LP050
316 (299)
DP024 1N4148
RP051 100R0 4.5W
CP051 470P0
DP051 FUF4005
RP049 33R0
LP051 1U2
T=40µs
1.6V
1.6Vpp-H
T=32µs
2.6V
3Vpp-H
T=32µs
580Vpp-H
CP052 2N2
TP020 STH13NB60FI
LP055 1.6 (0.2)
CP020 470P0
RP053 4R7 0W25
CP056 470P0
CP053 22N0
RP055 4K7
DP053 BZX55B15
RP063 22K0
RP064 10R0
DP061 RGP10G
DP064 1N4148
RP061 470R0
12.3 (11.3)
CP061 100U0 25V
RP059 220R0 0W25
CP068 1U0
CP067 1N0
RP068 100K0
IP050 TEA2262
SOFT START
OSC
OUT
VOLTAGE CONTROL
MODULATOR LOGIC
IS LOGIC
LOGIC PROCESSOR
OVER LOAD
ERROR AMPLI
CURR LIMI
CP062 100U0 25V
CP063 1N0
RP058 NI
CP069 100P0
RP069 10K0
DP069 1N4148
CP060 100U0 25V
RP060 10K0
RP054 220R0 0W25
DP054 1N4148
RP057 10K0
TP057 BC337-40
RP056 10K0
DP057 1N4148
CP055 1U0 16V
DP055 1N4148
T=32µs
11.2Vpp-H
RP052 100MI0 2.5W
RP050 10M0
LP070
RP070 2K2
RP160 2K2
CP071 100P0
IP070 TCET1103G
9 (9.9)
8.5 (9..
RP087 2K2
CP074 10N0
RP074 47K0
CP073 1N0
RP073 10K0
RP076 22K0
RP072
RP071 4K7
CP077 10U0 63V
CP080 100P0
RP080 10K0
TP080 BC546B
RP061 47K0
RP229 4K7
IP2
TDA

Use isolating mains transformer.
Utilise un transformateur isolateur du secteur.
Einen Trenntrafo verwenden.
Utilizar un transformador aislador de red.
Utilizzare un transformatore per isolarvi dalla rete.

Note :
During measurements in the power supply unit
- Use the primary power unit ground (**PGND**).
Attention :
Mesure dans la partie primaire de l'alimentation
- Utiliser la masse du bloc alimentation (**PGND**).
Achtung :
Bei Messungen im Primärnetzteil
- Primärnetzteilmasse verwenden (**PGND**).
Attenzione :
misure nell'alimentatore primario
- usare massa alimentazione primario (**PGND**).
Cuidado :
Medida en el bloque de alimentacion
- Utilizar la masa del bloque de alimentacion (**PGND**).

Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte dello châssis collegata alla rete.
Parte del chassis conectar a la red.

*	CP010	DP001-004	DP110	DP120	DP130+135	LP050	RP072	CP140
PP-20000-00	220U0	GP20M	RGP50M	RGP15G	RGP15G	10670390	3K3	1MI0
PP-20100-00	390U0	GP30M	BYT08PI-1000	S410D	MUR420	10643540	5K6	4MI7

8.5 : DC VOLTAGE TV ON
(9.2) : DC VOLTAGE TV Standby

ENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS ENTACIÓN

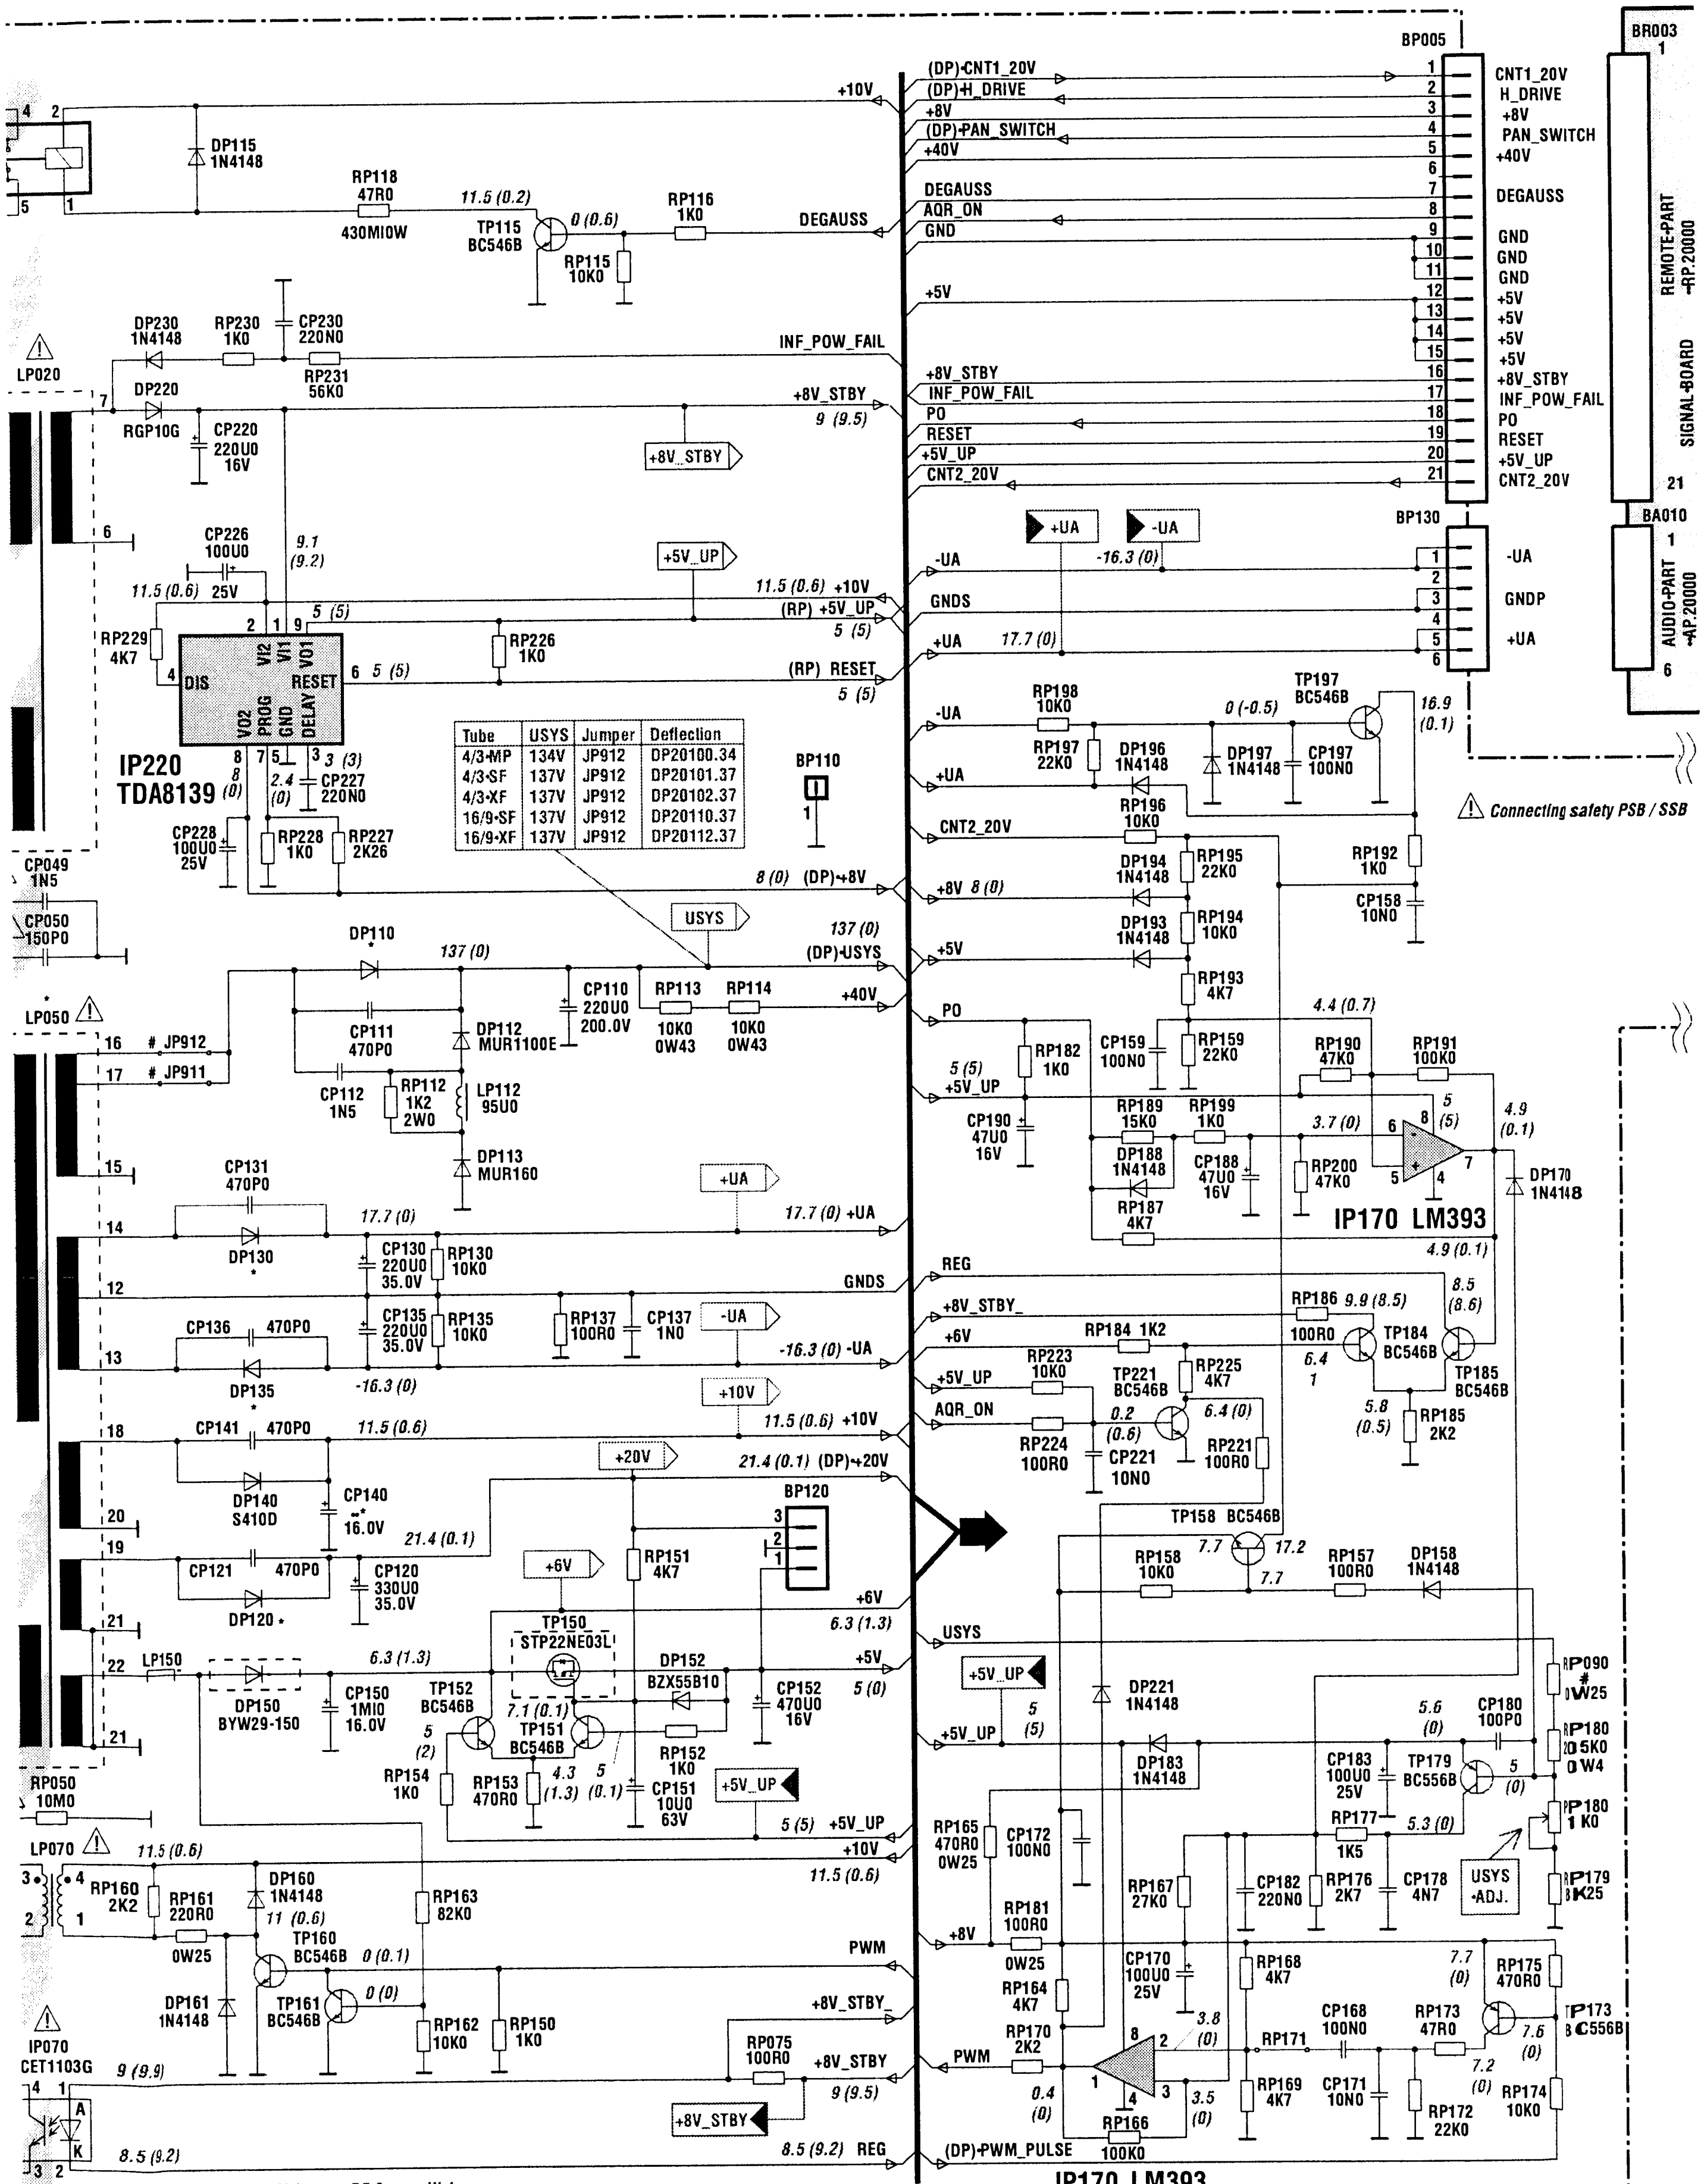
BP005
BR003
CNT1_20V
H_DRIVE
+8V
PAN_SWITCH
+40V
DEGAUSS
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
+5V_UP
CNT2_20V
(DP)-CNT1_20V
(DP)-H_DRIVE
(DP)-PAN_SWITCH
AQR_ON
REMOTE-PART -RP.20000
SIGNAL-BOARD
BA010
AUDIO-PART -AP.20000
BP130
-UA
GNDP
+UA
GNDS
DP115 1N4148
RP118 47R0 430MI0W
TP115 BC546B
RP116 1K0
RP115 10K0
DP230 1N4148
RP230 1K0
CP230 220N0
RP231 56K0
LP020
DP220 RGP10G
CP220 220U0 16V
CP226 100U0 25V
RP229 4K7
IP220 TDA8139
DIS
RESET
VI2
VI1
VO1
VO2
PROG
GND
DELAY
RP226 1K0
CP227 220N0
CP228 100U0 25V
RP228 1K0
RP227 2K26
CP049 1N5
CP050 150P0
BP110
USYS
(DP)-USYS
(DP)-+8V
DP110
CP110 220U0 200.0V
RP113 10K0 0W43
RP114 10K0 0W43
+40V
LP050
# JP912
# JP911
CP111 470P0
DP112 MUR1100E
CP112 1N5
RP112 1K2 2W0
LP112 95U0
DP113 MUR160
CP131 470P0
DP130
CP130 220U0 35.0V
RP130 10K0
CP135 220U0 35.0V
RP135 10K0
RP137 100R0
CP137 1N0
CP136 470P0
DP135
CP141 470P0
DP140 S410D
CP140 16.0V
+10V
+20V
(DP)-+20V
BP120
CP121 470P0
CP120 330U0 35.0V
DP120
+6V
RP151 4K7
TP150 STP22NE03L
DP152 BZX55B10
CP152 470U0 16V
LP150
DP150 BYW29-150
CP150 1MI0 16.0V
TP152 BC546B
TP151 BC546B
RP152 1K0
CP151 10U0 63V
RP154 1K0
RP153 470R0
RP050 10M0
LP070
RP160 2K2
RP161 220R0 0W25
DP160 1N4148
TP160 BC546B
RP163 82K0
DP161 1N4148
TP161 BC546B
RP162 10K0
RP150 1K0
PWM
IP070 CET1103G
RP075 100R0
REG
(DP)-PWM_PULSE
RP198 10K0
TP197 BC546B
RP197 22K0
DP196 1N4148
DP197 1N4148
CP197 100N0
RP196 10K0
Connecting safety PSB / SSB
RP195 22K0
DP194 1N4148
RP192 1K0
CP158 10N0
DP193 1N4148
RP194 10K0
RP193 4K7
CP159 100N0
RP159 22K0
RP182 1K0
RP190 47K0
RP191 100K0
CP190 47U0 16V
RP189 15K0
RP199 1K0
DP188 1N4148
CP188 47U0 16V
RP200 47K0
RP187 4K7
IP170 LM393
DP170 1N4148
+8V_STBY_
RP186 100R0
RP184 1K2
TP184 BC546B
TP185 BC546B
RP223 10K0
TP221 BC546B
RP225 4K7
RP185 2K2
RP224 100R0
CP221 10N0
RP221 100R0
TP158 BC546B
RP158 10K0
RP157 100R0
DP158 1N4148
DP221 1N4148
RP090 W25
CP180 100P0
RP180 5K0 W4
DP183 1N4148
CP183 100U0 25V
TP179 BC556B
RP165 470R0 0W25
CP172 100N0
RP177 1K5
RP167 27K0
CP182 220N0
RP176 2K7
CP178 4N7
USYS ADJ.
RP180 1K0
RP179 K25
RP181 100R0 0W25
CP170 100U0 25V
RP168 4K7
RP175 470R0
RP164 4K7
RP170 2K2
CP168 100N0
RP173 47R0
TP173 C556B
RP171
RP166 100K0
RP169 4K7
CP171 10N0
RP172 22K0
RP174 10K0

Tube	USYS	Jumper	Deflection
4/3-MP	134V	JP912	DP20100.34
4/3-SF	137V	JP912	DP20101.37
4/3-XF	137V	JP912	DP20102.37
16/9-SF	137V	JP912	DP20110.37
16/9-XF	137V	JP912	DP20112.37

= Value see DP 2... partlists

IP170 LM393

Safety-Part When-repairing,-use-original-part-only	Sicherheitsbauteil Bei-Ersatz-nur-Originalteil-verwenden	Utilice-solo-piezas-originales Pieza-de-seguridad
Piece-de-securite N'utilisez-que-les-pieces-d'origine	Componenti-di-sicurezza Per-la-riparazione-utilizzare-solo-componenti-originali	

(PP)·POWER·SUPPLY

PSB PP·20000·00
PP·20100·00

MAIN•SCHEMATIC•DIAGRAM•-•SCHEMA•DE•LA•PLATINE•PRINCIPALE•-•SCHALTBILD•HAUPTPLATINE•

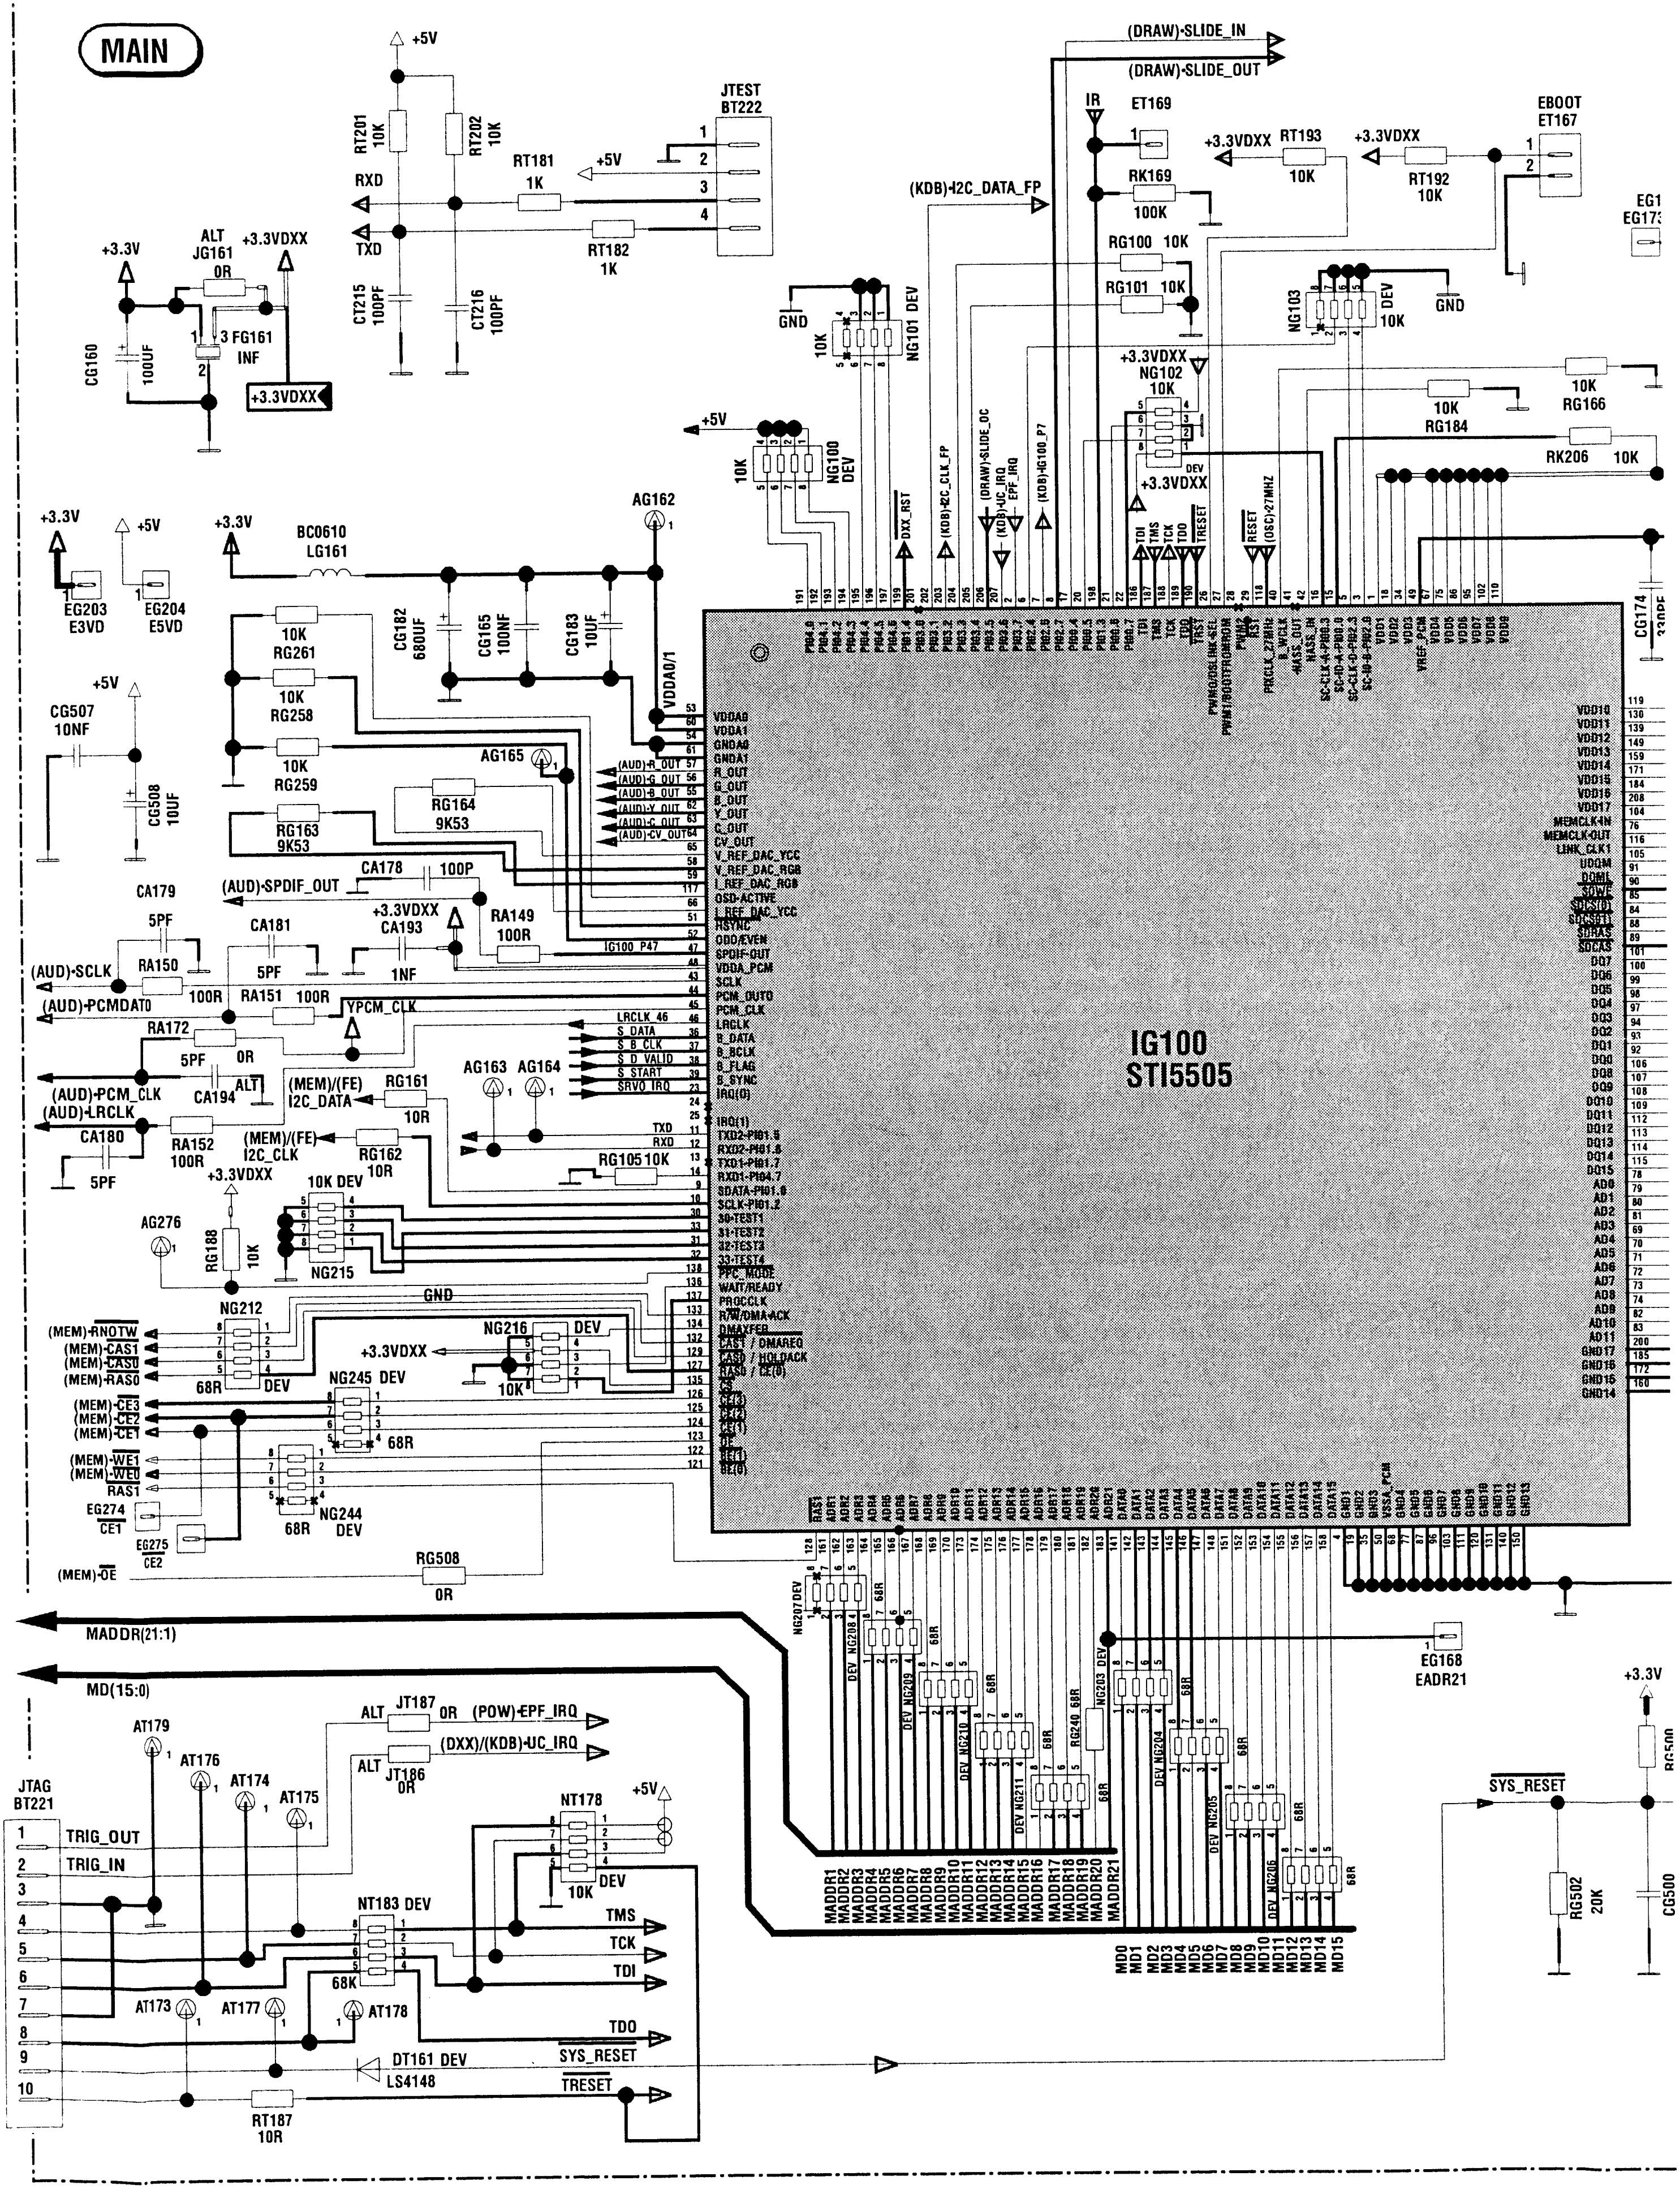
MAIN
IG100
STI5505
JTEST
BT222
JTAG
BT221
+5V
+3.3V
+3.3VDXX
RT201 10K
RT202 10K
RT181 1K
RT182 1K
RXD
TXD
CT215 100PF
CT216 100PF
ALT
JG161 0R
FG161 INF
CG160 100UF
(DRAW)•SLIDE_IN
(DRAW)•SLIDE_OUT
IR
ET169
RK169 100K
RT193 10K
RT192 10K
EBOOT
ET167
(KDB)•I2C_DATA_FP
RG100 10K
RG101 10K
NG101 DEV
NG103 DEV
NG102 10K
NG100 DEV
RG184 10K
RG166 10K
RK206 10K
GND
EG203 E3VD
EG204 E5VD
BC0610
LG161
CG182 680UF
CG165 100NF
CG183 10UF
AG162
VDDA0/1
RG261 10K
RG258 10K
RG259 10K
RG164 9K53
RG163 9K53
AG165
CG507 10NF
CG508 10UF
CA178 100P
(AUD)•SPDIF_OUT
CA179 5PF
CA181 5PF
CA193 1NF
RA149 100R
(AUD)•SCLK
RA150 100R
(AUD)•PCMDAT0
RA151 100R
YPCM_CLK
RA172 0R
CA194 5PF
(AUD)•PCM_CLK
(AUD)•LRCLK
(MEM)/(FE) I2C_DATA
RG161 10R
(MEM)/(FE) I2C_CLK
RG162 10R
AG163
AG164
CA180 5PF
RA152 100R
RG105 10K
AG276
RG188 10K
NG215
NG212
NG216 DEV
NG245 DEV
NG244 DEV
(MEM)•RNOTW
(MEM)•CAS1
(MEM)•CAS0
(MEM)•RAS0
(MEM)•CE3
(MEM)•CE2
(MEM)•CE1
(MEM)•WE1
(MEM)•WE0
RAS1
EG274 CE1
EG275 CE2
(MEM)•OE
RG508 0R
MADDR(21:1)
MD(15:0)
EG168 EADR21
CG174
AT179
AT176
AT174
AT175
ALT JT187 0R (POW)•EPF_IRQ
ALT JT186 0R (DXX)/(KDB)•UC_IRQ
NT178 10K DEV
NT183 DEV 68K
TRIG_OUT
TRIG_IN
TMS
TCK
TDI
TDO
SYS_RESET
TRESET
AT173
AT177
AT178
DT161 DEV LS4148
RT187 10R
RG502 20K
CG500
SYS_RESET
NG207 DEV
NG208 DEV
NG209 DEV
NG210 DEV
NG211 DEV
NG203 DEV
NG204 DEV
NG205 DEV
NG206 DEV
RG240 68R
MADDR1 … MADDR21
MD0 … MD15

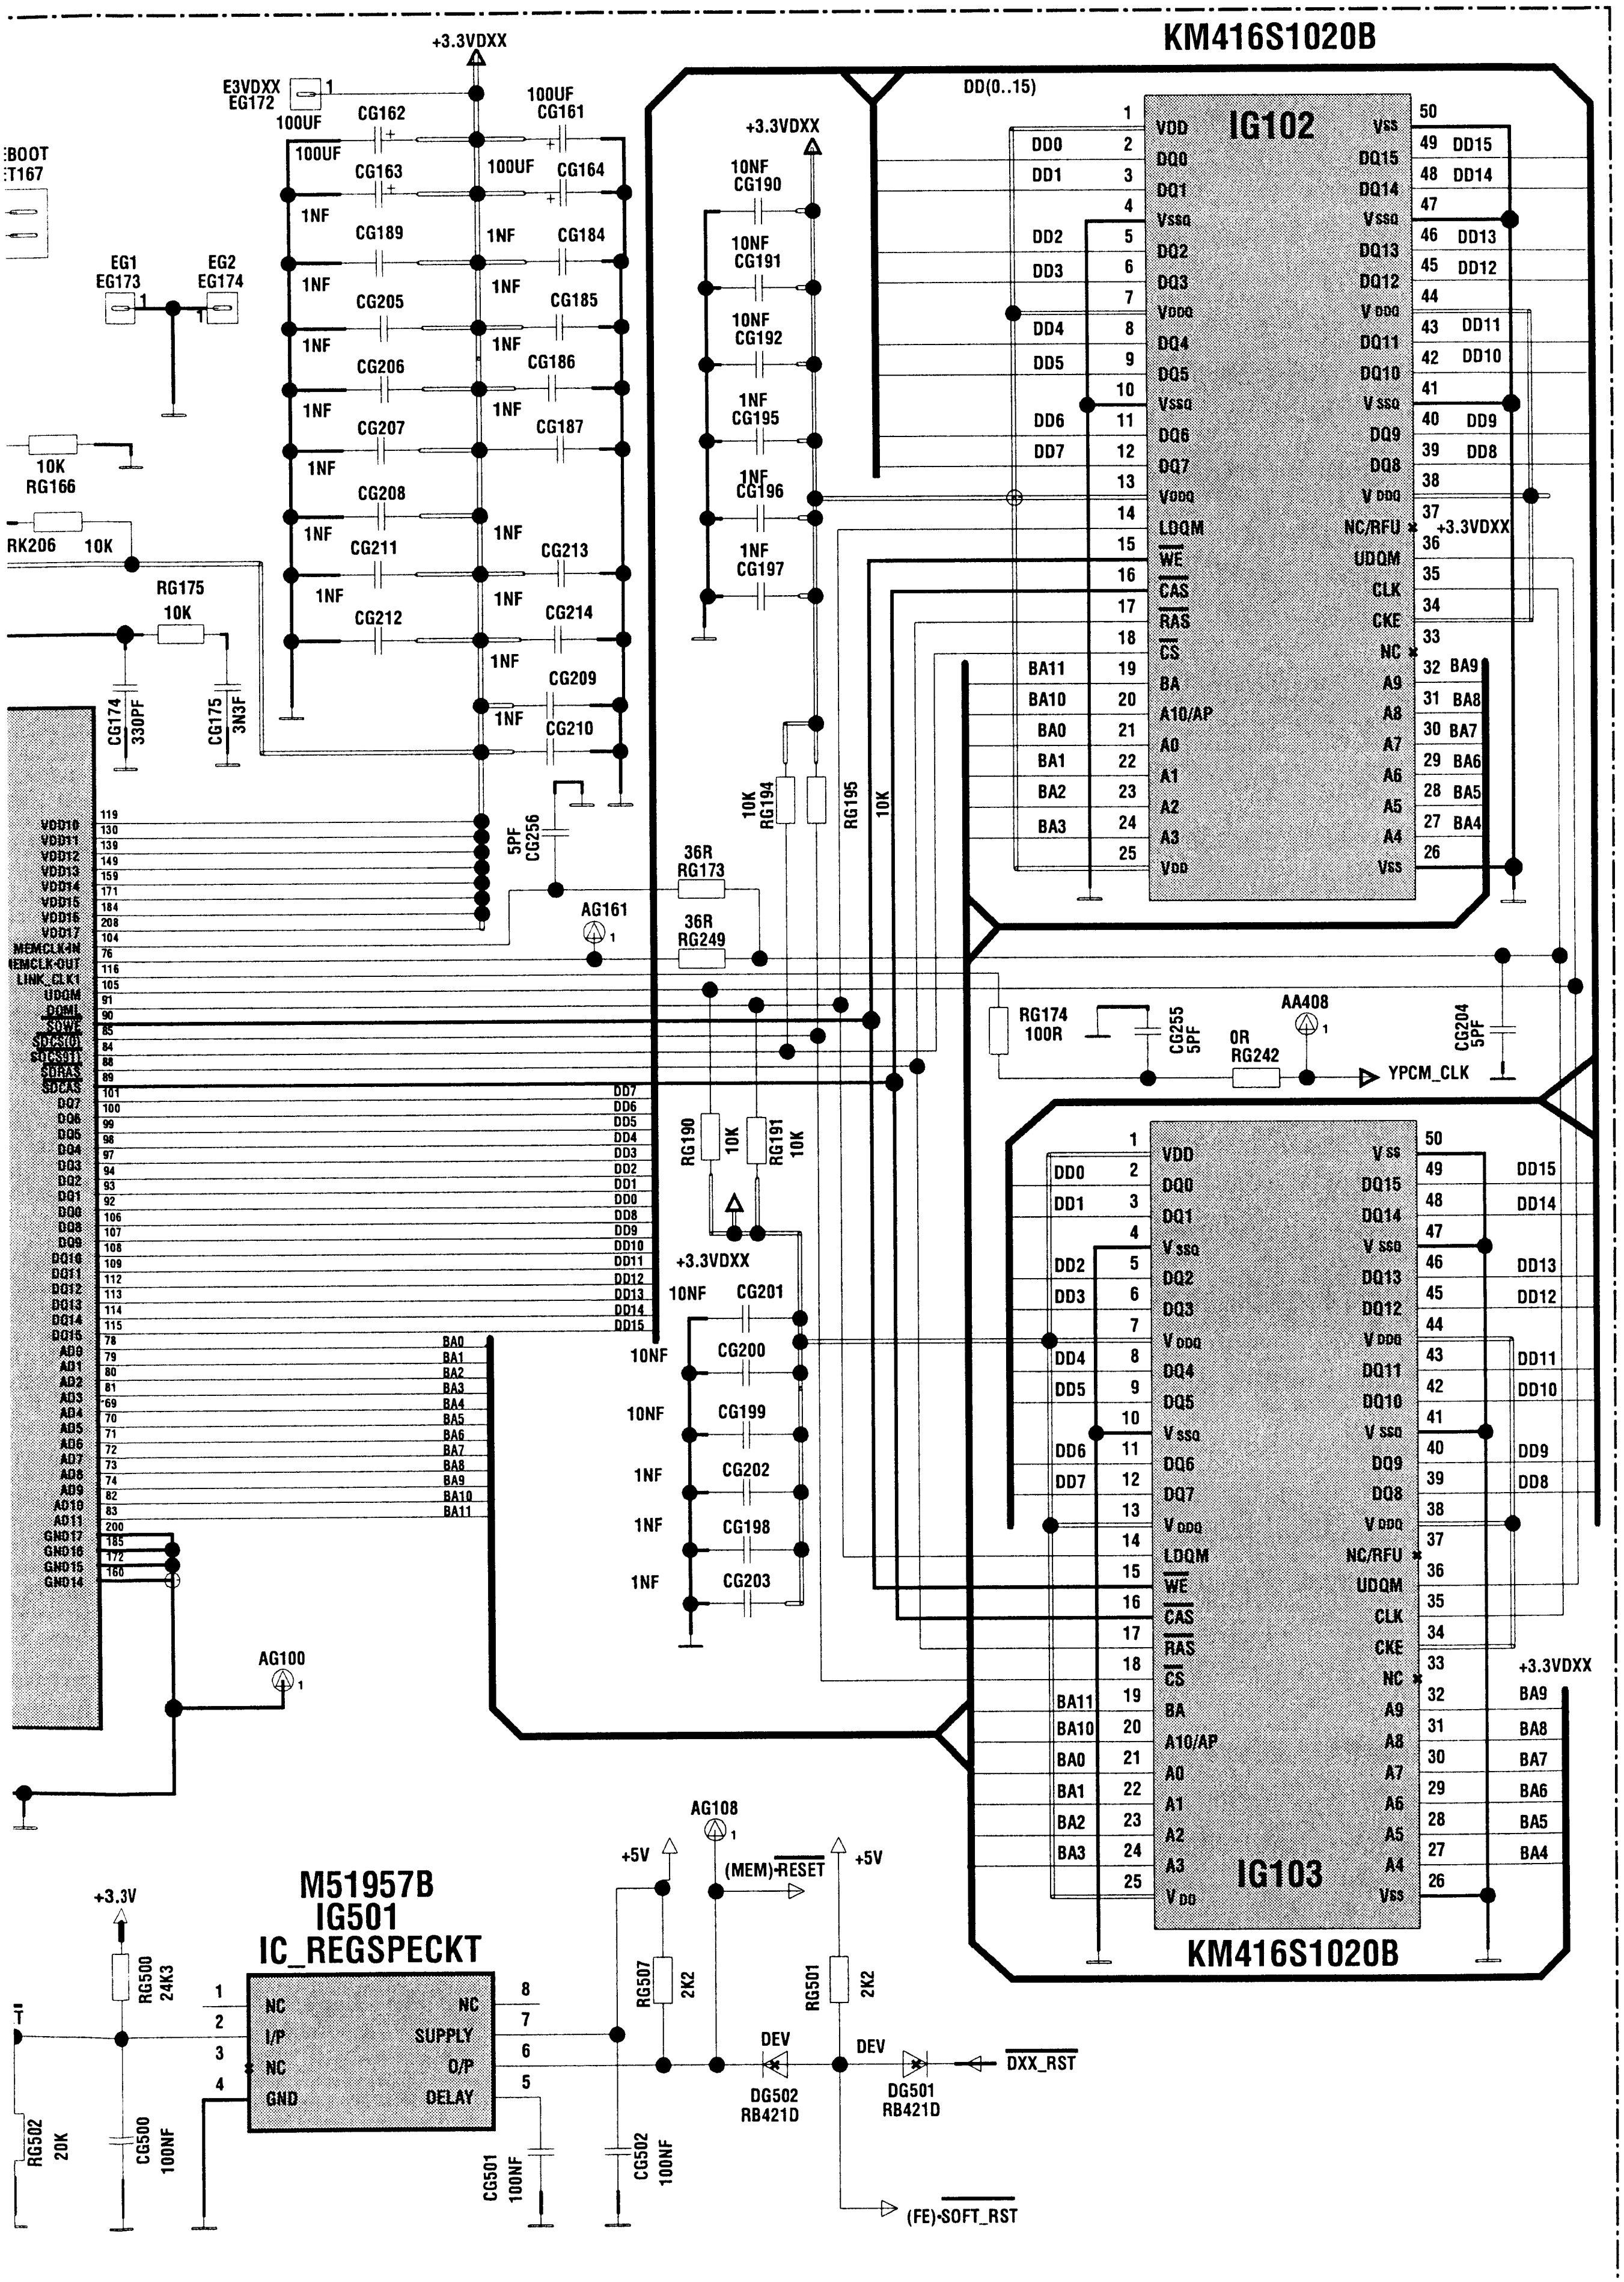
KM416S1020B
IG102
IG103
KM416S1020B
M51957B
IG501
IC_REGSPECKT
+3.3VDXX
E3VDXX
EG172
100UF
CG162
CG161
CG163
CG164
1NF
CG189
CG184
CG205
CG185
CG206
CG186
CG207
CG187
CG208
CG211
CG213
CG212
CG214
CG209
CG210
5PF
CG256
EG1
EG173
EG2
EG174
BOOT
T167
10K
RG166
RK206
RG175
CG174
330PF
CG175
3N3F
10NF
CG190
CG191
CG192
CG195
CG196
CG197
RG194
RG195
36R
RG173
RG249
AG161
RG174
100R
CG255
0R
RG242
AA408
CG204
YPCM_CLK
RG190
RG191
CG201
CG200
CG199
CG202
CG198
CG203
DD(0..15)
VDD10
VDD11
VDD12
VDD13
VDD14
VDD15
VDD16
VDD17
MEMCLK-IN
MEMCLK-OUT
LINK_CLK1
UDQM
LDQM
SDWE
SDCS(0)
SDCS(1)
SDRAS
SDCAS
GND17
GND16
GND15
GND14
AG100
VDD
DQ0
DQ1
VSSQ
DQ2
DQ3
VDDQ
DQ4
DQ5
DQ6
DQ7
LDQM
WE
CAS
RAS
CS
BA
A10/AP
A0
A1
A2
A3
VSS
DQ15
DQ14
DQ13
DQ12
DQ11
DQ10
DQ9
DQ8
NC/RFU
UDQM
CLK
CKE
NC
A9
A8
A7
A6
A5
A4
BA0
BA1
BA2
BA3
BA4
BA5
BA6
BA7
BA8
BA9
BA10
BA11
AG108
+5V
(MEM)•RESET
+3.3V
RG500
24K3
RG502
20K
CG500
100NF
NC
I/P
GND
SUPPLY
O/P
DELAY
CG501
CG502
RG507
2K2
RG501
DEV
DG502
RB421D
DG501
DXX_RST
(FE)•SOFT_RST
(DXX)

MAIN•SCHEMATIC•DIAGRAM-•SCHEMA•DE•LA•PLATINE•PRINCIPALE-•SCHALTBILD•HAUPTPLATINE-•SCHEMA•DELLA•PIASTRA•PRINCIPALE-•ESQUEMA•DE•LA•PLATINA•PRINCIPAL•••

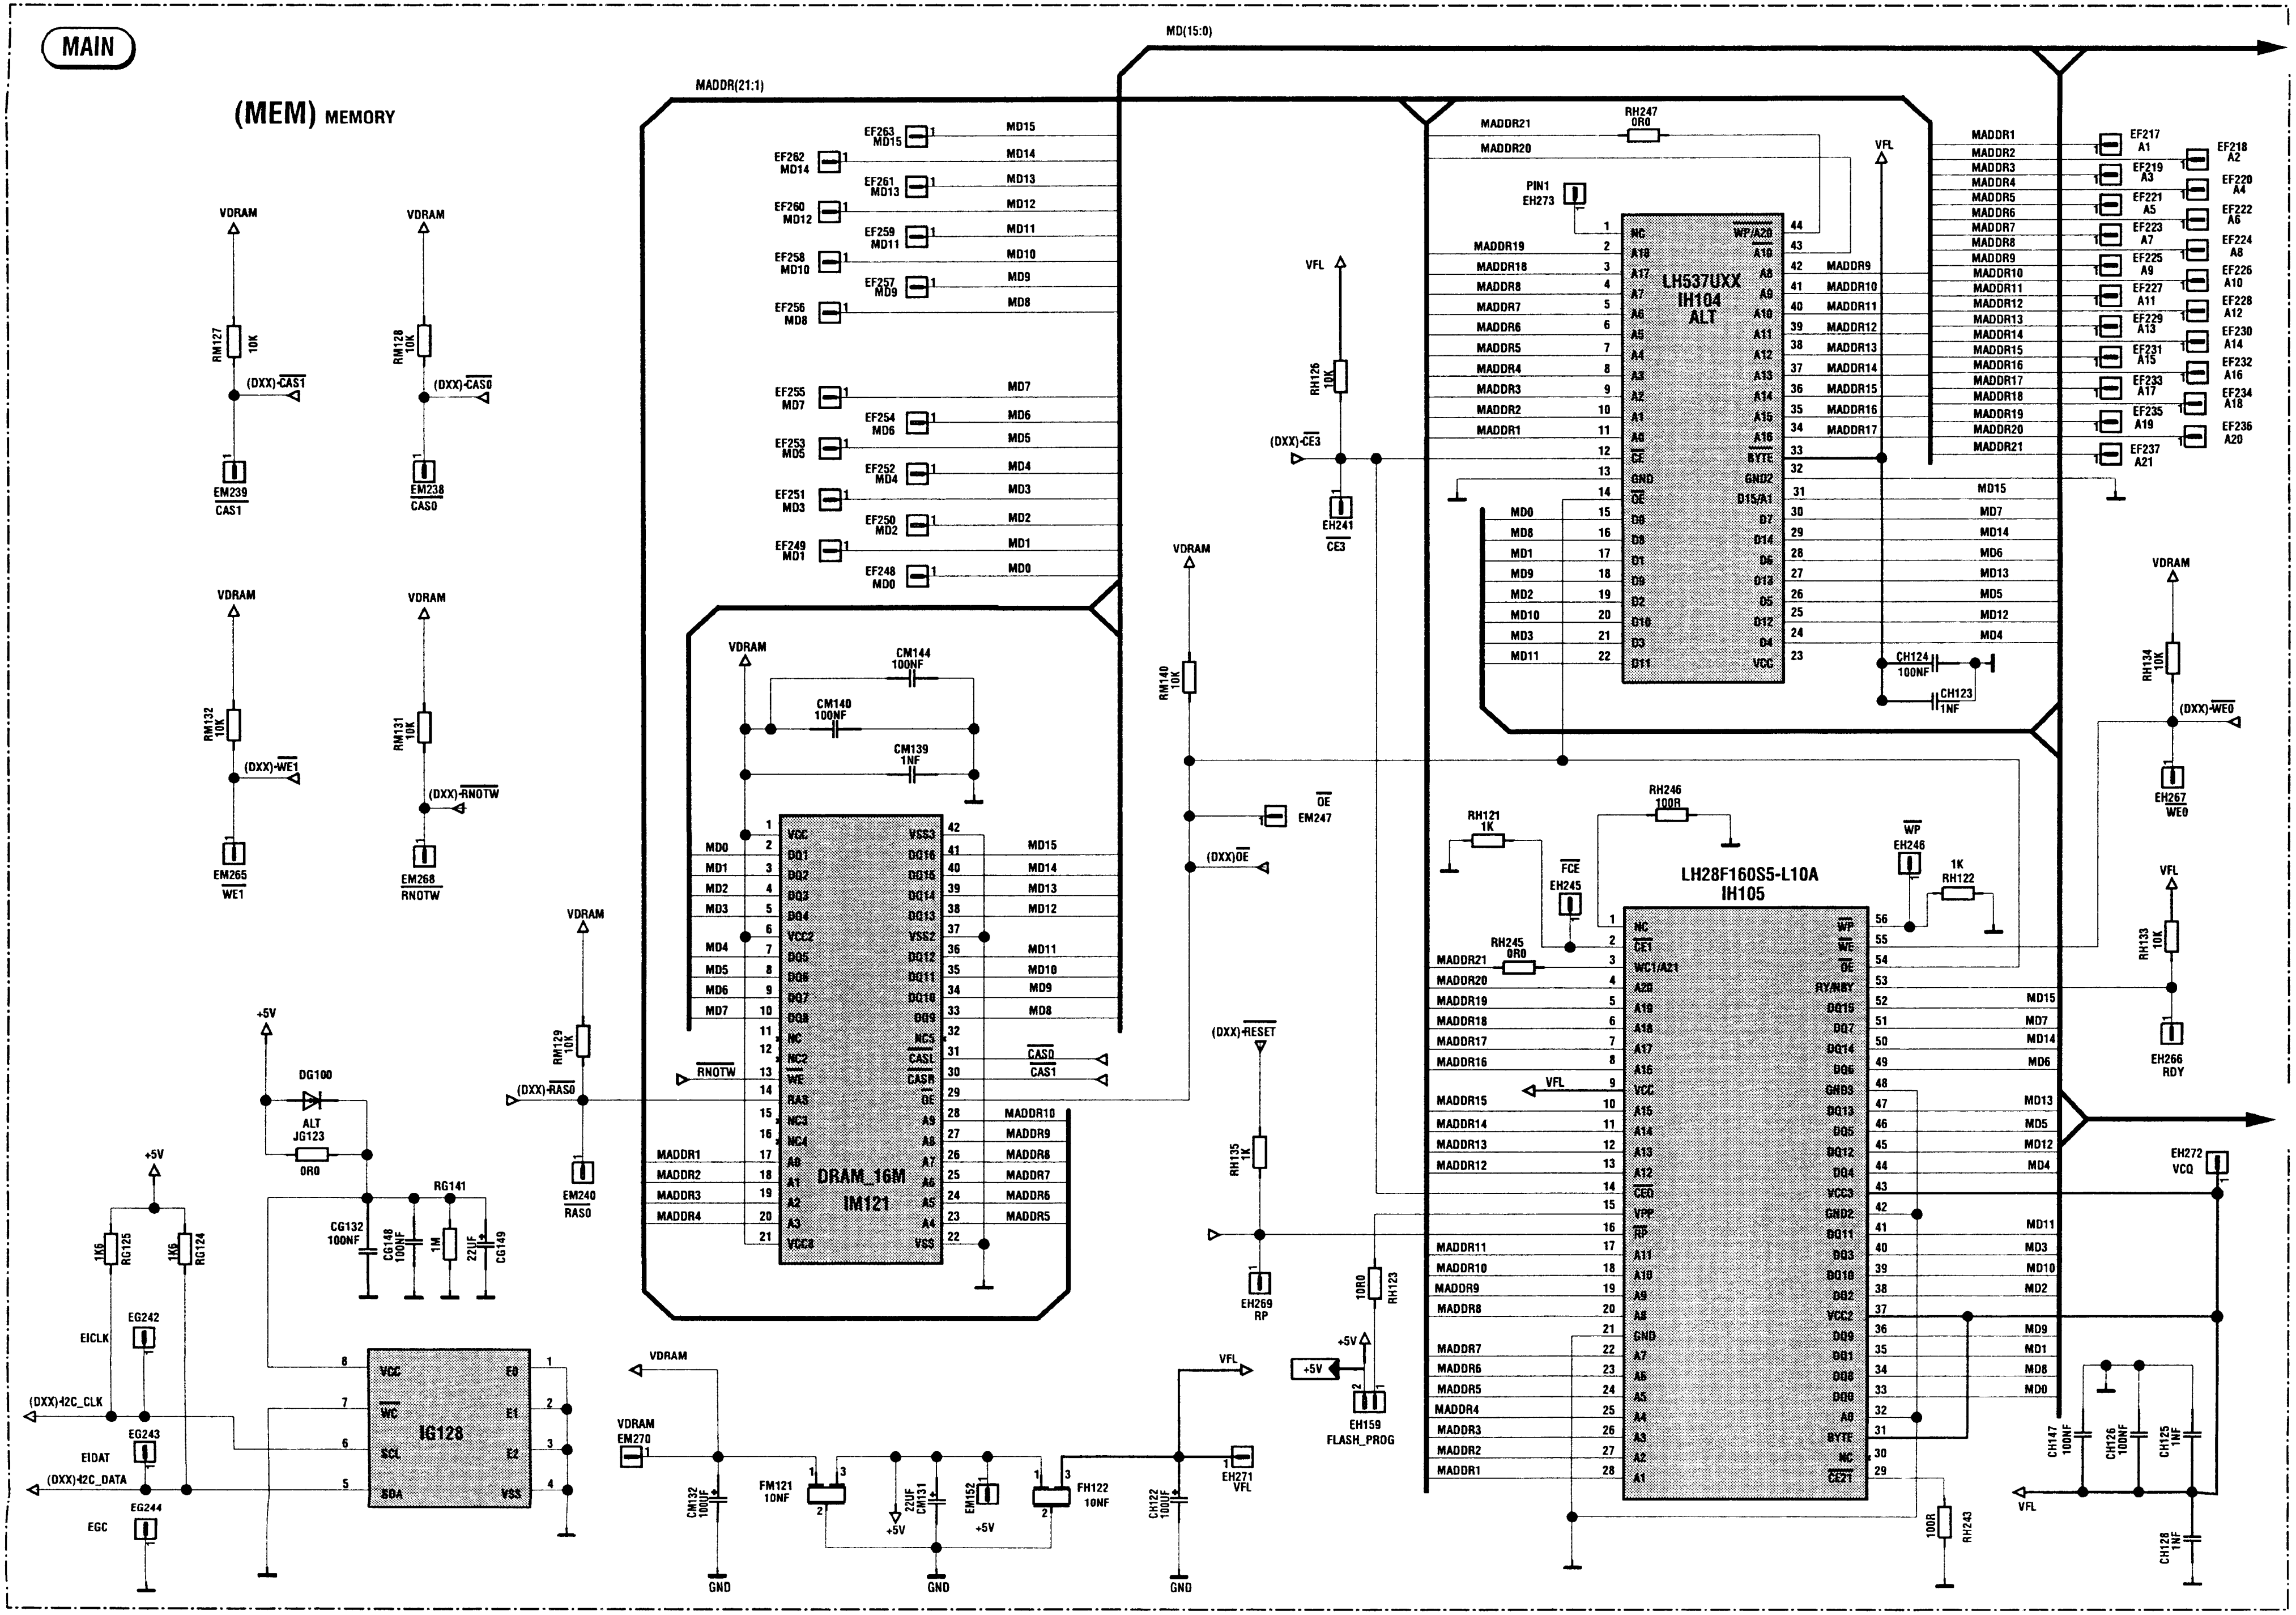
MAIN
(MEM) MEMORY
MADDR(21:1)
MD(15:0)
VDRAM
RM127 10K
(DXX)-CAS1
EM239 CAS1
RM128 10K
(DXX)-CAS0
EM238 CAS0
RM132 10K
(DXX)-WE1
EM265 WE1
RM131 10K
(DXX)-RNOTW
EM268 RNOTW
EF263 MD15
EF262 MD14
EF261 MD13
EF260 MD12
EF259 MD11
EF258 MD10
EF257 MD9
EF256 MD8
EF255 MD7
EF254 MD6
EF253 MD5
EF252 MD4
EF251 MD3
EF250 MD2
EF249 MD1
EF248 MD0
CM144 100NF
CM140 100NF
CM139 1NF
DRAM_16M
IM121
VCC DQ1 DQ2 DQ3 DQ4 VCC2 DQ5 DQ6 DQ7 DQ8 NC NC2 WE RAS NC3 NC4 A0 A1 A2 A3 VCC3
VSS3 DQ16 DQ15 DQ14 DQ13 VSS2 DQ12 DQ11 DQ10 DQ9 NC5 CASL CASH OE A9 A8 A7 A6 A5 A4 VSS
RM129 10K
(DXX)-RAS0
EM240 RAS0
+5V
DG100
ALT JG123 0R0
RG141
CG132 100NF
CG148 100NF
1M
22UF CG149
RG125 1K6
RG124 1K6
EICLK
EG242
(DXX)-I2C_CLK
EIDAT
EG243
(DXX)-I2C_DATA
EG244
EGC
IG128
VCC WC SCL SDA E0 E1 E2 VSS
VDRAM
EM270
CM132 100UF
FM121 10NF
22UF CM131
EM152
+5V
FH122 10NF
CH122 100UF
EH271 VFL
GND
VFL
RH126 10K
(DXX)-CE3
EH241 CE3
RH140 10K
EM247 OE
(DXX)-OE
(DXX)-RESET
RH135 1K
EH269 RP
RH123 10R0
+5V
EH159 FLASH_PROG
MADDR21 RH247 0R0
MADDR20
PIN1 EH273
LH537UXX
IH104
ALT
NC A18 A17 A7 A6 A5 A4 A3 A2 A1 A0 CE GND OE D0 D8 D1 D9 D2 D10 D3 D11
WP/A20 A19 A8 A9 A10 A11 A12 A13 A14 A15 A16 BYTE GND2 D15/A1 D7 D14 D6 D13 D5 D12 D4 VCC
CH124 100NF
CH123 1NF
EF217 A1
EF218 A2
EF219 A3
EF220 A4
EF221 A5
EF222 A6
EF223 A7
EF224 A8
EF225 A9
EF226 A10
EF227 A11
EF228 A12
EF229 A13
EF230 A14
EF231 A15
EF232 A16
EF233 A17
EF234 A18
EF235 A19
EF236 A20
EF237 A21
RH134 10K
(DXX)-WE0
EH267 WE0
RH246 100R
RH121 1K
FCE EH245
RH245 0R0
WP EH246
1K RH122
LH28F160S5-L10A
IH105
NC CE1 WC1/A21 A20 A19 A18 A17 A16 VCC A15 A14 A13 A12 CE0 VPP RP A11 A10 A9 A8 GND A7 A6 A5 A4 A3 A2 A1
WP WE OE RY/BBY DQ15 DQ7 DQ14 DQ6 GND3 DQ13 DQ5 DQ12 DQ4 VCC3 GND2 DQ11 DQ3 DQ10 DQ2 VCC2 DQ9 DQ1 DQ8 DQ0 A0 BYTE NC CE21
RH133 10K
EH266 RDY
EH272 VCQ
CH147 100NF
CH126 100NF
CH125 1NF
CH128 1NF
RH243 100R
VFL

MAIN SCHEMATIC DIAGRAM - SCHEMA DE LA PLATINE PRINCIPALE - SCHALTBILD HAUPTPLATINE - SCHEMA DELLA PIASTRA PRINCIPALE- ESQUEMA DE LA PLATINA PRINCIPAL

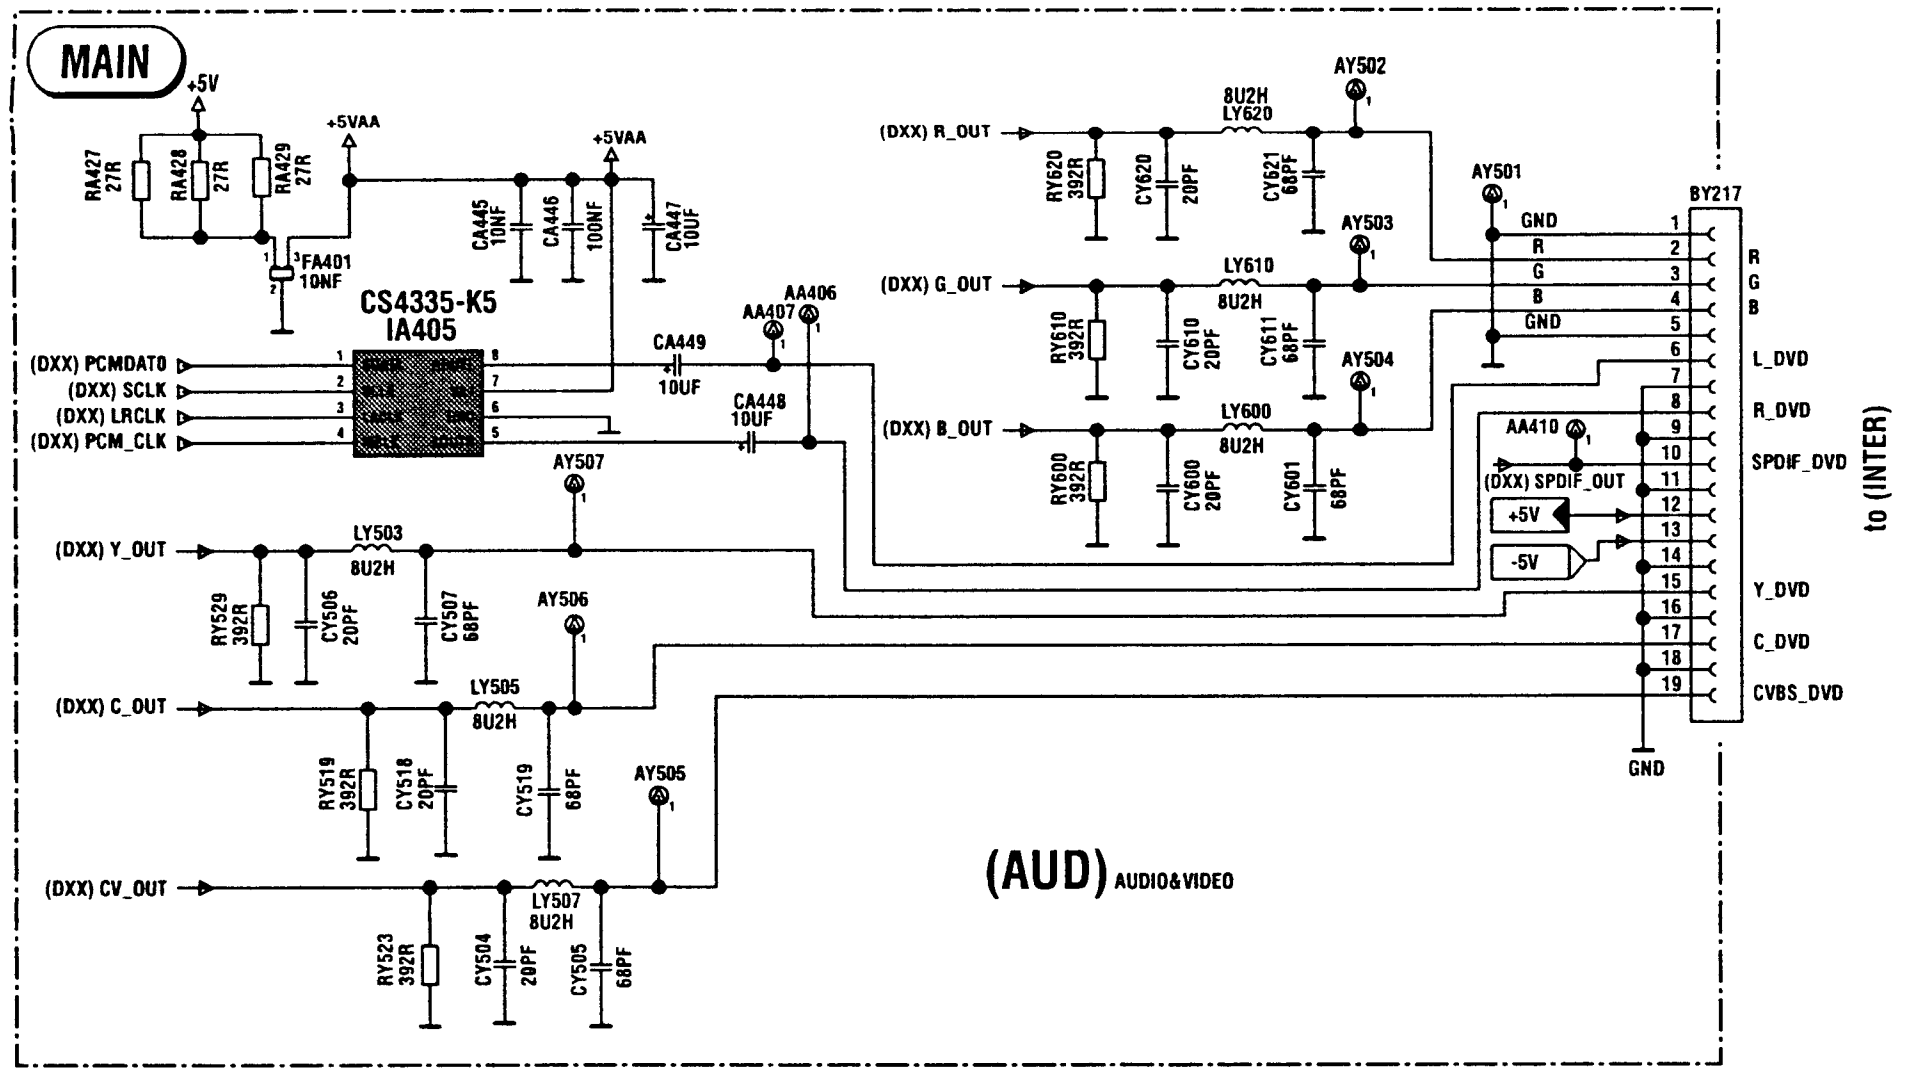
MAIN
+5V
RA427 27R
RA428 27R
RA429 27R
+5VAA
FA401 10NF
CA445 10NF
CA446 100NF
CA447 10UF
CS4335-K5
IA405
(DXX) PCMDAT0
(DXX) SCLK
(DXX) LRCLK
(DXX) PCM_CLK
CA449 10UF
CA448 10UF
AA407
AA406
(DXX) R_OUT
RY620 392R
CY620 20PF
8U2H LY620
CY621 68PF
AY502
AY501
(DXX) G_OUT
RY610 392R
CY610 20PF
LY610 8U2H
CY611 68PF
AY503
(DXX) B_OUT
RY600 392R
CY600 20PF
LY600 8U2H
CY601 68PF
AY504
AY507
(DXX) Y_OUT
RY529 392R
CY506 20PF
LY503 8U2H
CY507 68PF
AY506
(DXX) C_OUT
RY519 392R
CY518 20PF
LY505 8U2H
CY519 68PF
AY505
(DXX) CV_OUT
RY523 392R
CY504 20PF
LY507 8U2H
CY505 68PF
AA410
(DXX) SPDIF_OUT
+5V
-5V
BY217
GND
R
G
B
GND
R
G
B
L_DVD
R_DVD
SPDIF_DVD
Y_DVD
C_DVD
CVBS_DVD
GND
to (INTER)
(AUD) AUDIO&VIDEO

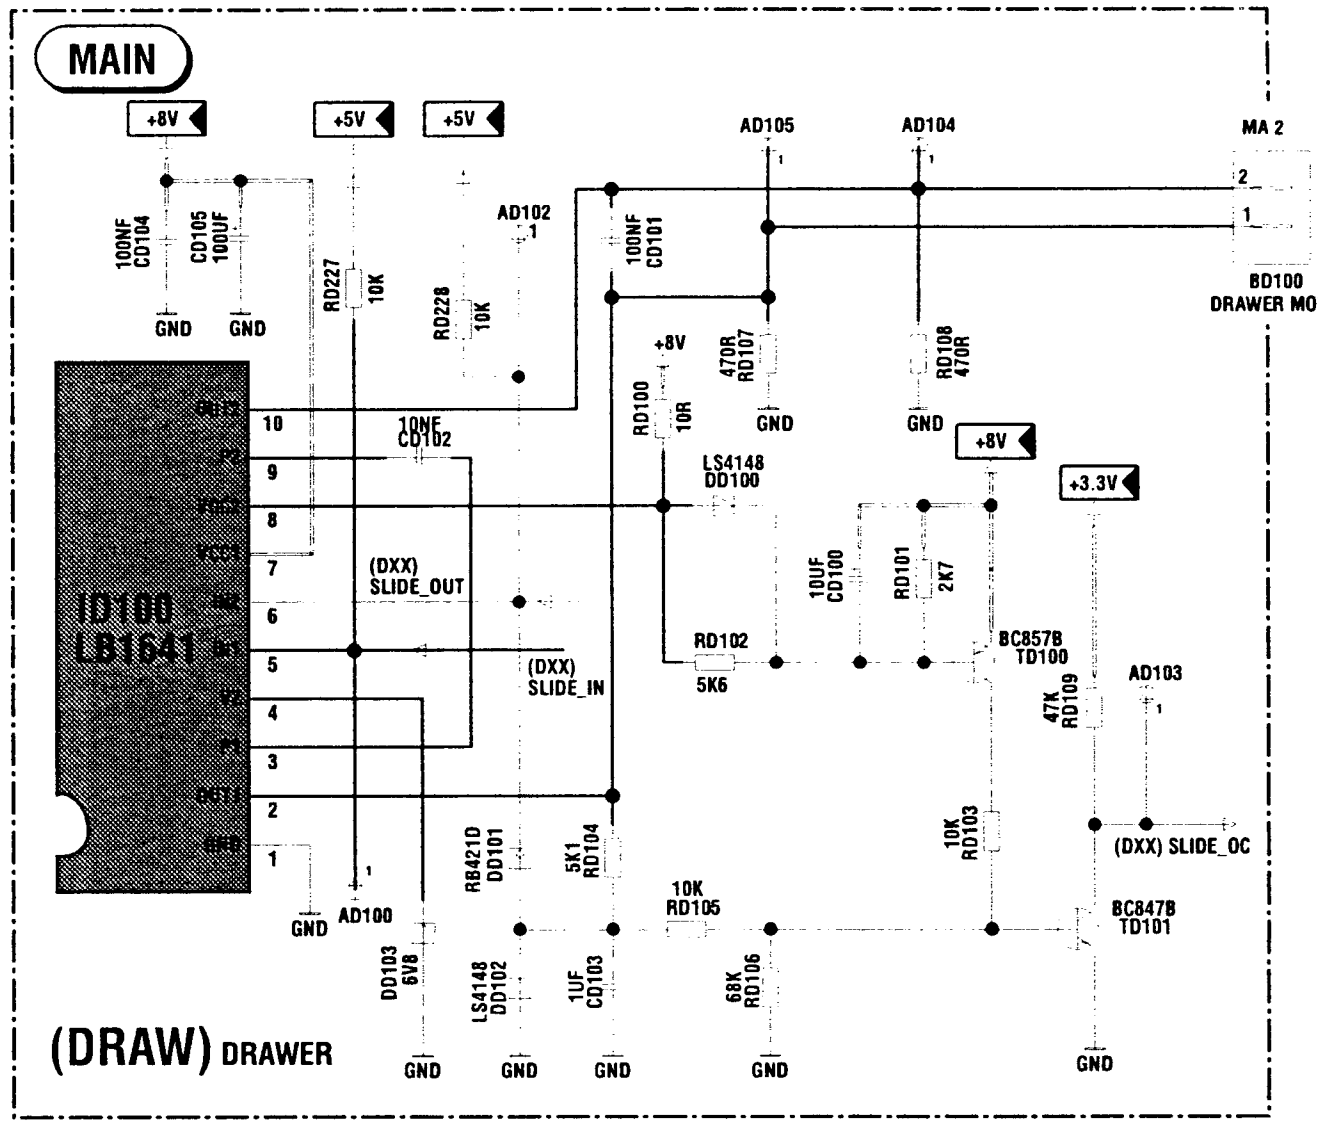
MAIN
+8V
+5V
+5V
100NF CD104
CD105 100UF
GND
GND
RD227 10K
RD228 10K
AD102
100NF CD101
AD105
AD104
MA 2
BD100
DRAWER MOTOR
470R RD107
RD108 470R
GND
GND
ID100
LB1641
OUT2
F2
VCC2
VCC1
IN2
IN1
V2
F1
OUT1
GND
10NF CD102
(DXX) SLIDE_OUT
(DXX) SLIDE_IN
+8V
RD100 10R
LS4148 DD100
RD102 5K6
10UF CD100
RD101 2K7
+8V
+3.3V
BC857B TD100
47K RD109
AD103
10K RD103
(DXX) SLIDE_OC
RB421D DD101
5K1 RD104
10K RD105
BC847B TD101
GND
AD100
DD103 6V8
LS4148 DD102
1UF CD103
68K RD106
GND
GND
GND
GND
GND
(DRAW) DRAWER

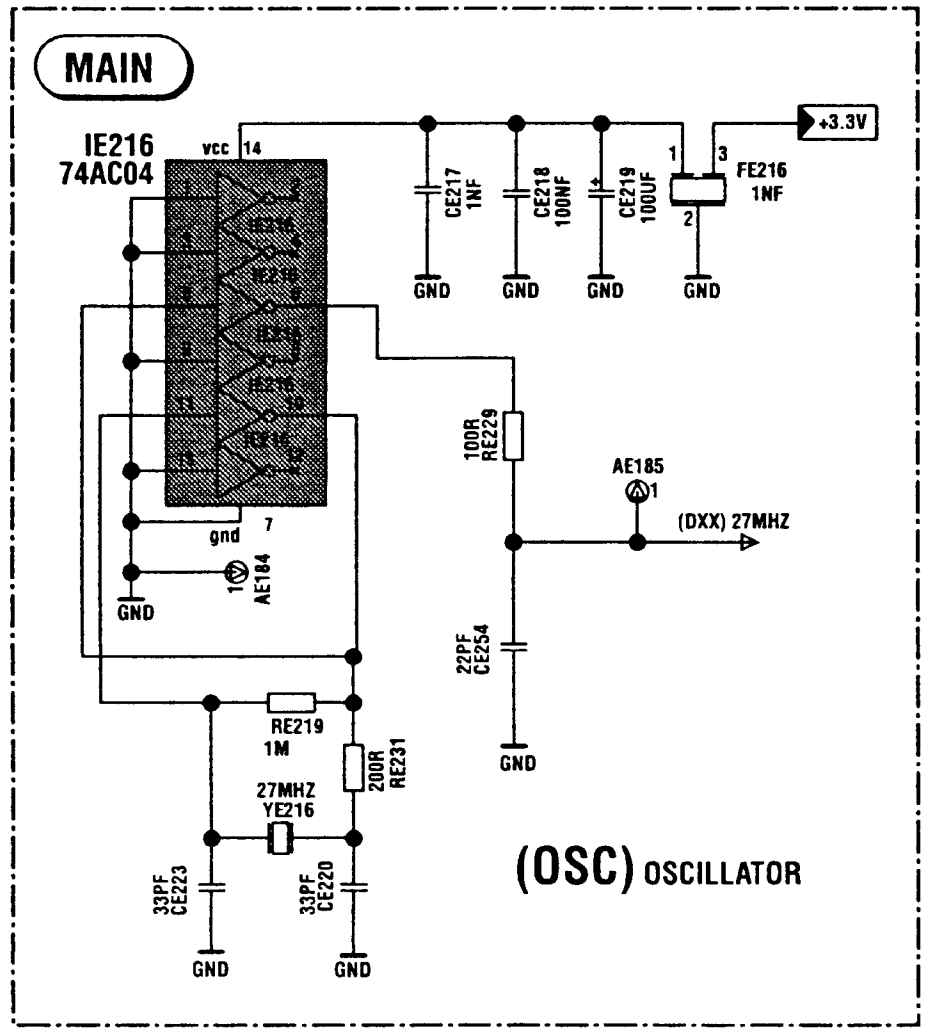
MAIN
IE216
74AC04
vcc 14
gnd 7
CE217 1NF
CE218 100NF
CE219 100UF
FE216 1NF
+3.3V
GND
GND
GND
GND
100R RE229
AE185
(DXX) 27MHZ
22PF CE254
GND
AE184
GND
RE219 1M
200R RE231
27MHZ YE216
33PF CE223
33PF CE220
GND
GND
(OSC) OSCILLATOR

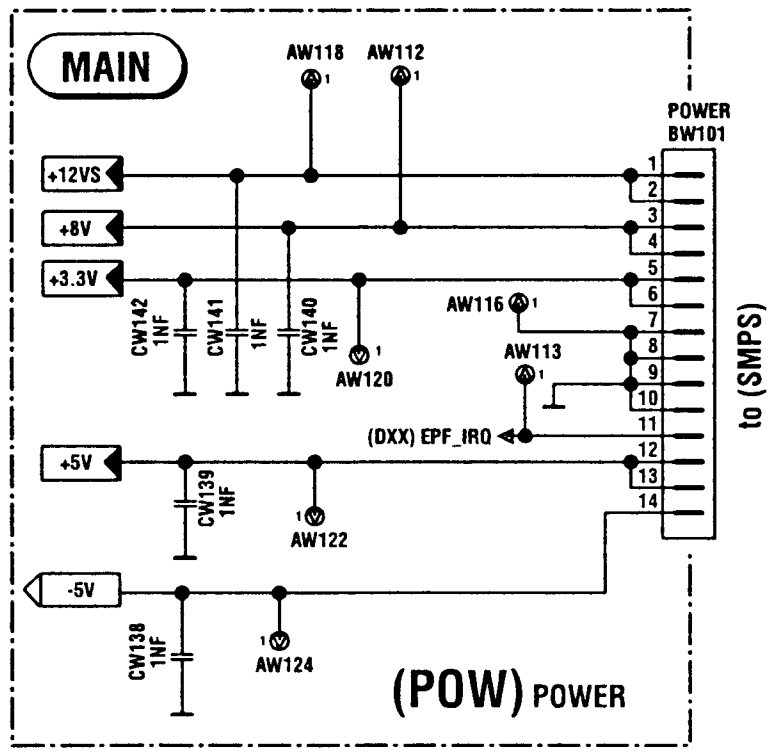
MAIN
AW118
AW112
POWER
BW101
+12VS
+8V
+3.3V
CW142 1NF
CW141 1NF
CW140 1NF
AW120
AW116
AW113
(DXX) EPF_IRQ
+5V
CW139 1NF
AW122
-5V
CW138 1NF
AW124
to (SMPS)
(POW) POWER

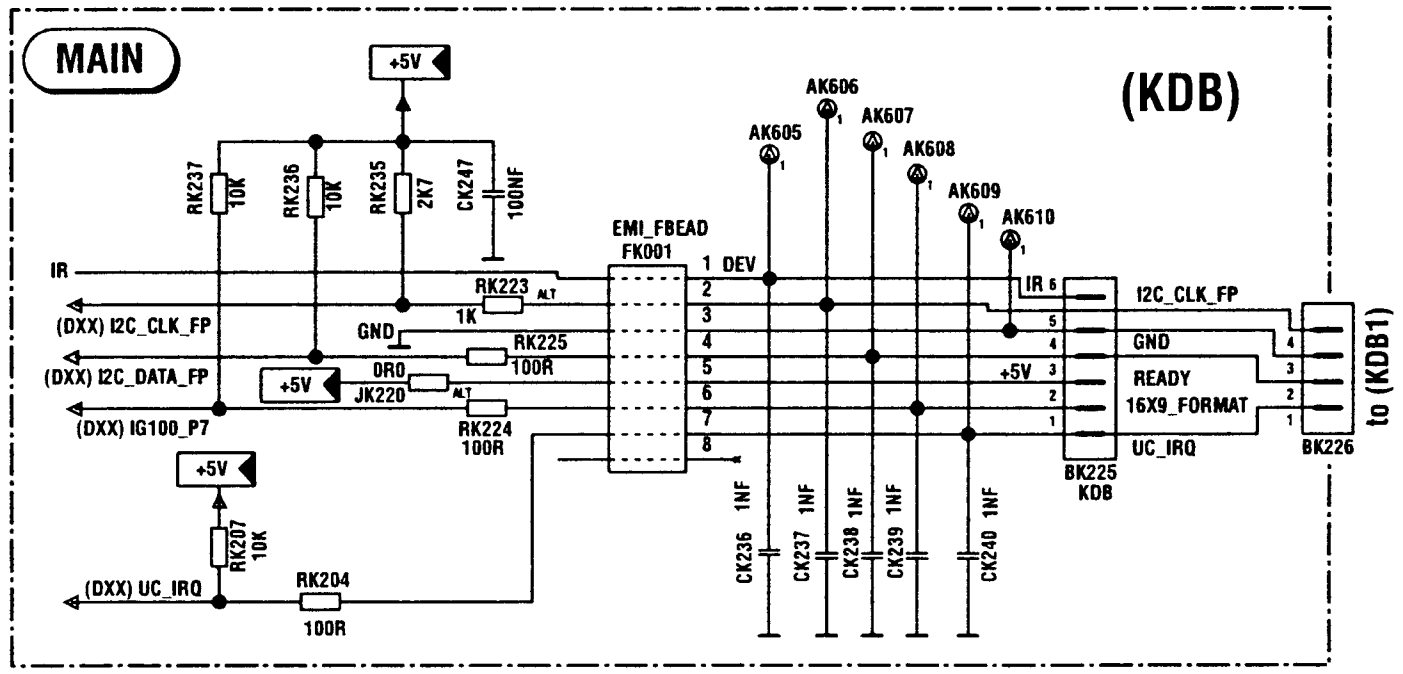
MAIN
(KDB)
+5V
RK237 10K
RK236 10K
RK235 2K7
CK247 100NF
IR
(DXX) I2C_CLK_FP
(DXX) I2C_DATA_FP
(DXX) IG100_P7
RK223 ALT 1K
GND
RK225 100R
0R0
+5V
JK220
RK224 100R
+5V
RK207 10K
(DXX) UC_IRQ
RK204 100R
EMI_FBEAD
FK001
1 DEV
AK605
AK606
AK607
AK608
AK609
AK610
CK236 1NF
CK237 1NF
CK238 1NF
CK239 1NF
CK240 1NF
IR
+5V
BK225
KDB
I2C_CLK_FP
GND
READY
16X9_FORMAT
UC_IRQ
BK226
to (KDB1)

KEYBOARD SCHEMATIC DIAGRAM - SCHEMA DES CIRCUITS COMMANDES - SCHALTBILD BEDIENTEIL - SCHEMA DEI CIRCUITI TASTIERA - ESQUEMA DE LOS CIRCUITOS MANDOS

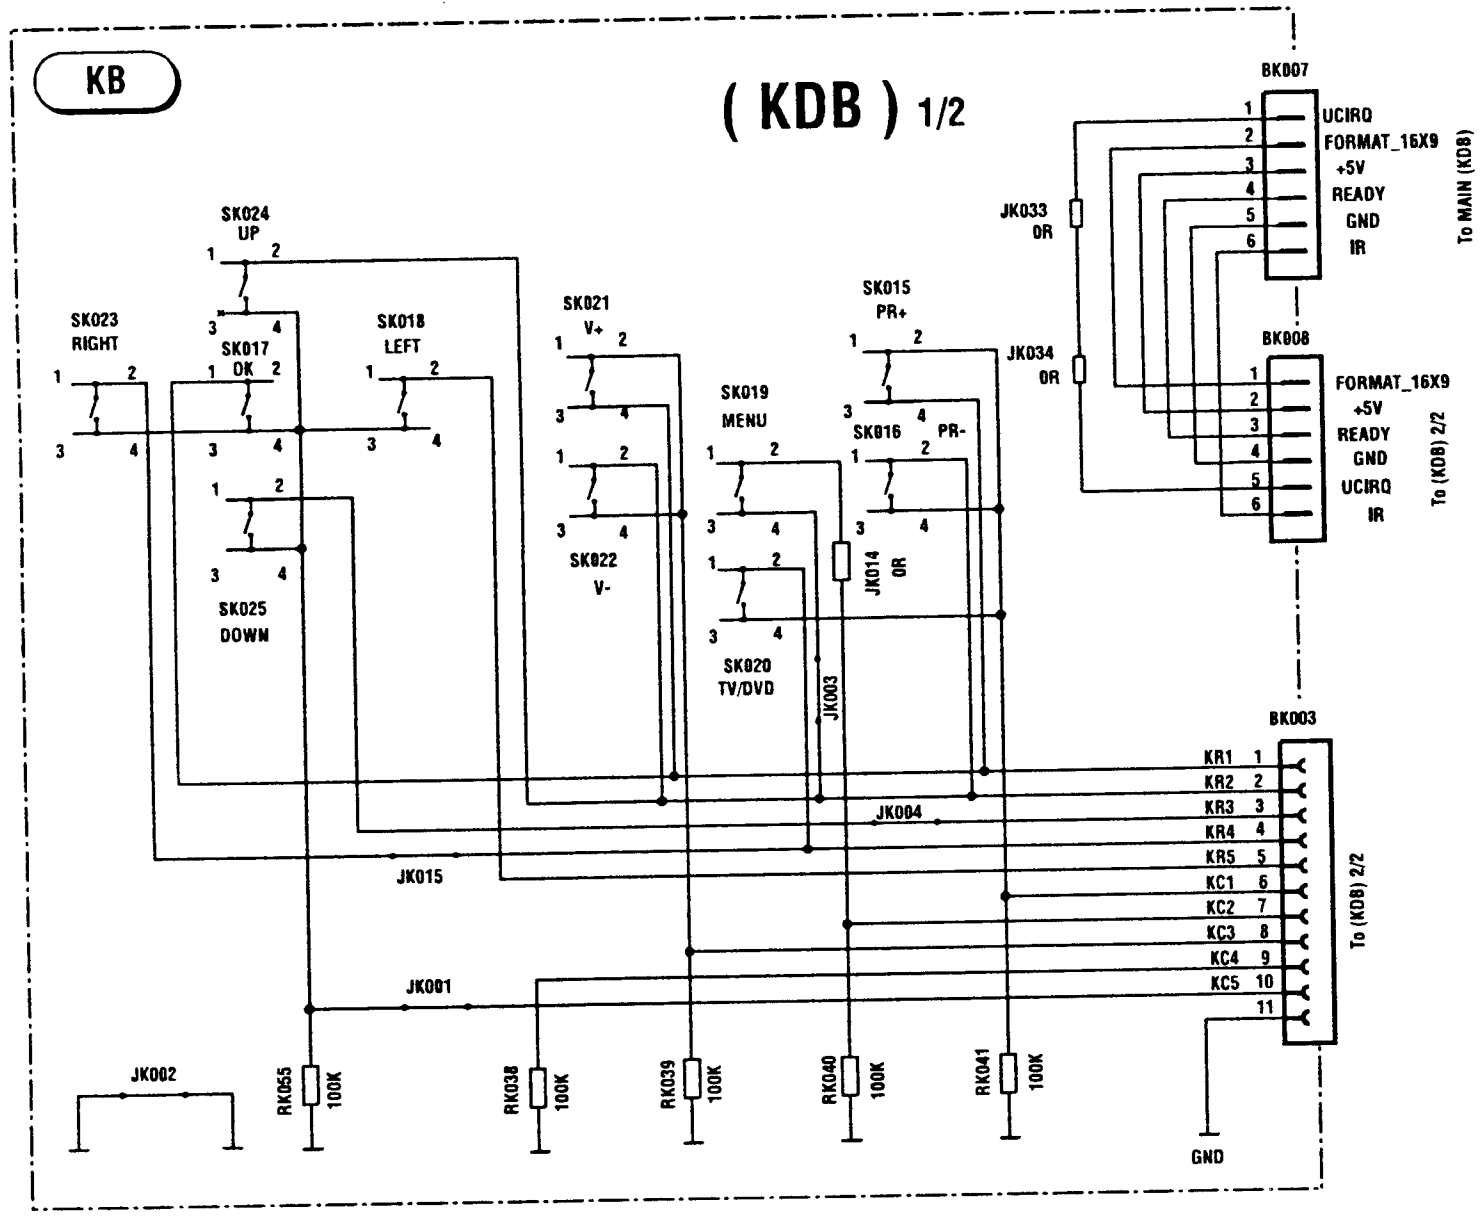
KB
(KDB) 1/2
SK024 UP
SK023 RIGHT
SK017 OK
SK018 LEFT
SK025 DOWN
SK021 V+
SK022 V-
SK019 MENU
SK020 TV/DVD
SK015 PR+
SK016 PR-
JK033 0R
JK034 0R
JK014 0R
JK003
JK004
JK015
JK001
JK002
BK007
UCIRQ
FORMAT_16X9
+5V
READY
GND
IR
To MAIN (KDB)
BK008
To (KDB) 2/2
BK003
KR1
KR2
KR3
KR4
KR5
KC1
KC2
KC3
KC4
KC5
RK055 100K
RK038 100K
RK039 100K
RK040 100K
RK041 100K
GND

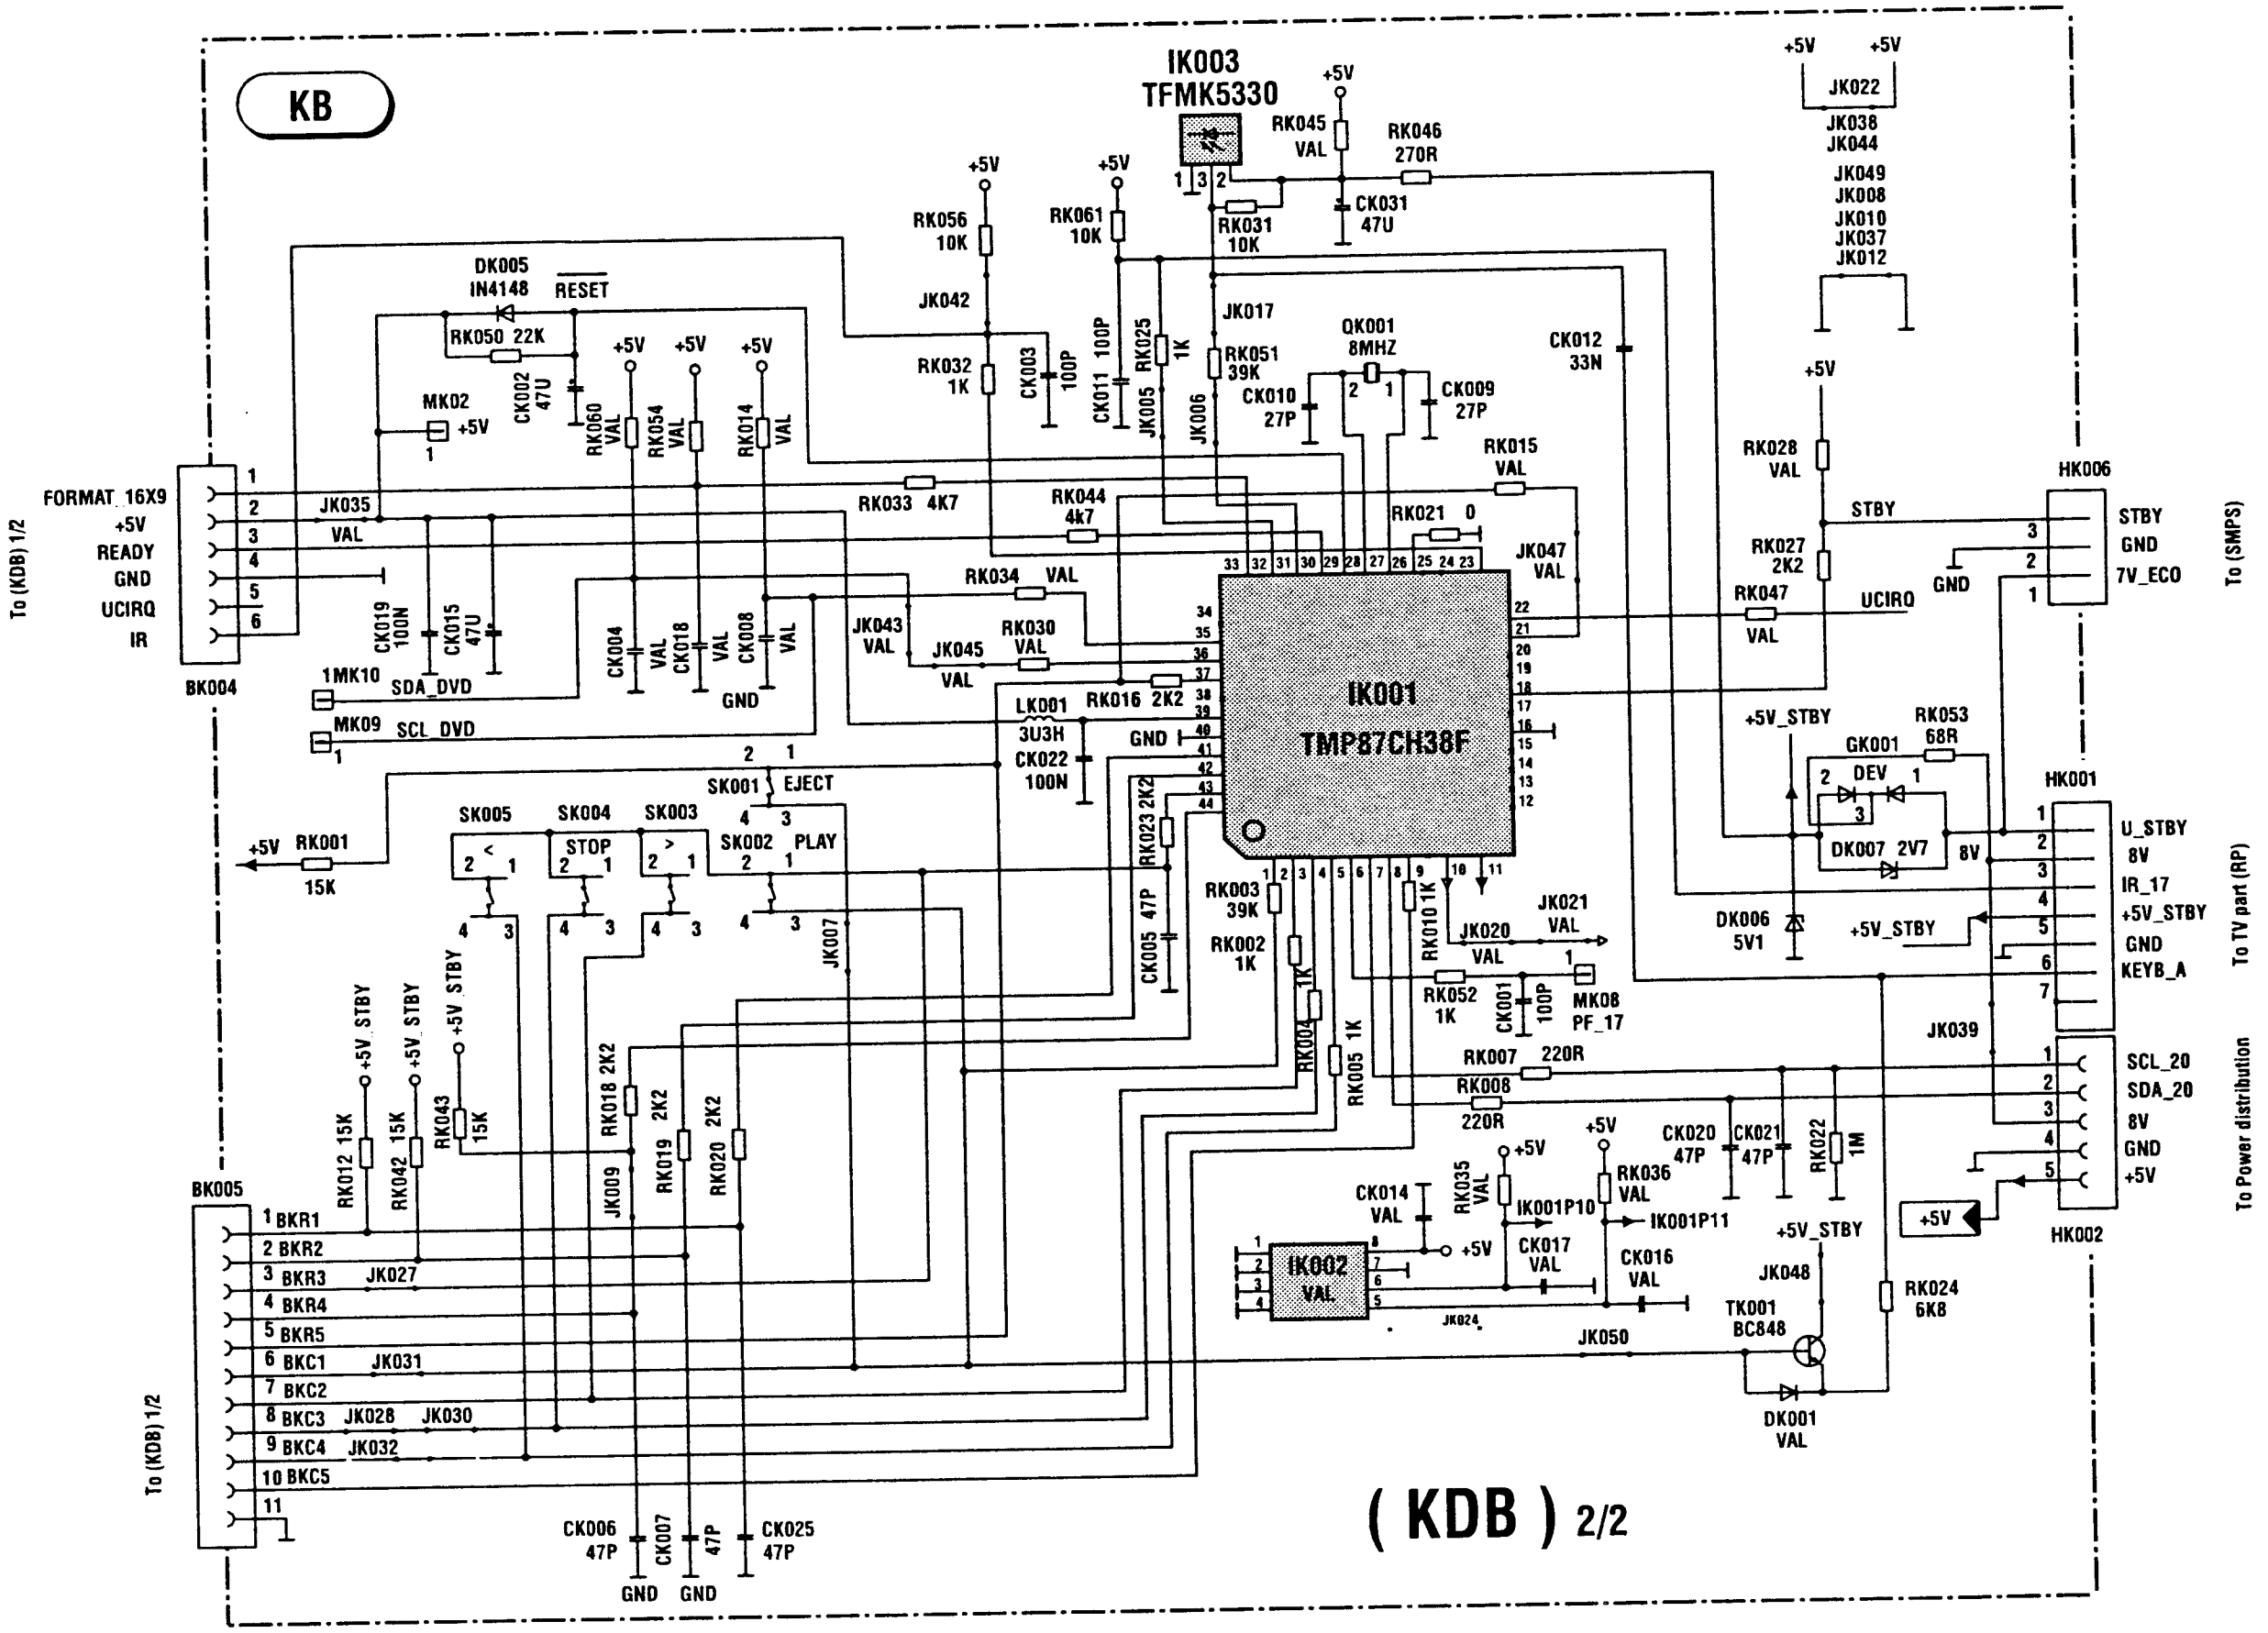
KB
(KDB) 2/2
IK003 TFMK5330
IK001 TMP87CH38F
IK002 VAL
QK001 8MHZ
DK005 IN4148
RESET
RK050 22K
RK045 VAL
RK046 270R
RK031 10K
CK031 47U
RK056 10K
RK061 10K
RK032 1K
RK025 1K
RK051 39K
CK010 27P
CK009 27P
CK012 33N
RK015 VAL
RK021 0
RK033 4K7
RK044 4K7
RK034 VAL
RK030 VAL
RK016 2K2
LK001 3U3H
CK022 100N
RK023 2K2
CK005 47P
RK003 39K
RK002 1K
RK004 1K
RK005 1K
RK010 1K
RK052 1K
CK001 100P
MK08 PF_17
RK007 220R
RK008 220R
RK001 15K
RK012 15K
RK042 15K
RK043 15K
RK018 2K2
RK019 2K2
RK020 2K2
CK006 47P
CK007 47P
CK025 47P
SK005 <
SK004 STOP
SK003 >
SK002 PLAY
SK001 EJECT
BK004
FORMAT_16X9
+5V
READY
GND
UCIRQ
IR
To (KDB) 1/2
MK10 SDA_DVD
MK09 SCL_DVD
BK005
BKR1
BKR2
BKR3
BKR4
BKR5
BKC1
BKC2
BKC3
BKC4
BKC5
HK006
STBY
GND
7V_ECO
To (SMPS)
HK001
U_STBY
8V
IR_17
+5V_STBY
GND
KEYB_A
To TV part (RP)
HK002
SCL_20
SDA_20
8V
GND
+5V
To Power distribution
RK028 VAL
RK027 2K2
RK047 VAL
GK001 DEV
DK007 2V7
DK006 5V1
RK053 68R
RK022 1M
CK020 47P
CK021 47P
RK036 VAL
RK035 VAL
CK014 VAL
CK017 VAL
CK016 VAL
TK001 BC848
RK024 6K8
DK001 VAL
JK048
JK050
JK039
JK022
JK021 VAL
JK020 VAL

POWER SUPPLY SCHEMATIC DIADIAGRAM SCHEMA DES CIRCUITS D'ALIMENTATIONS - SCHALTBILD NETZTEIL - SCHEMA DEI CIRCUITI DI ALIMENTAZIONE - ESQUEMA DE LOS CIRCUITOS DE ALIMENTACIÓN

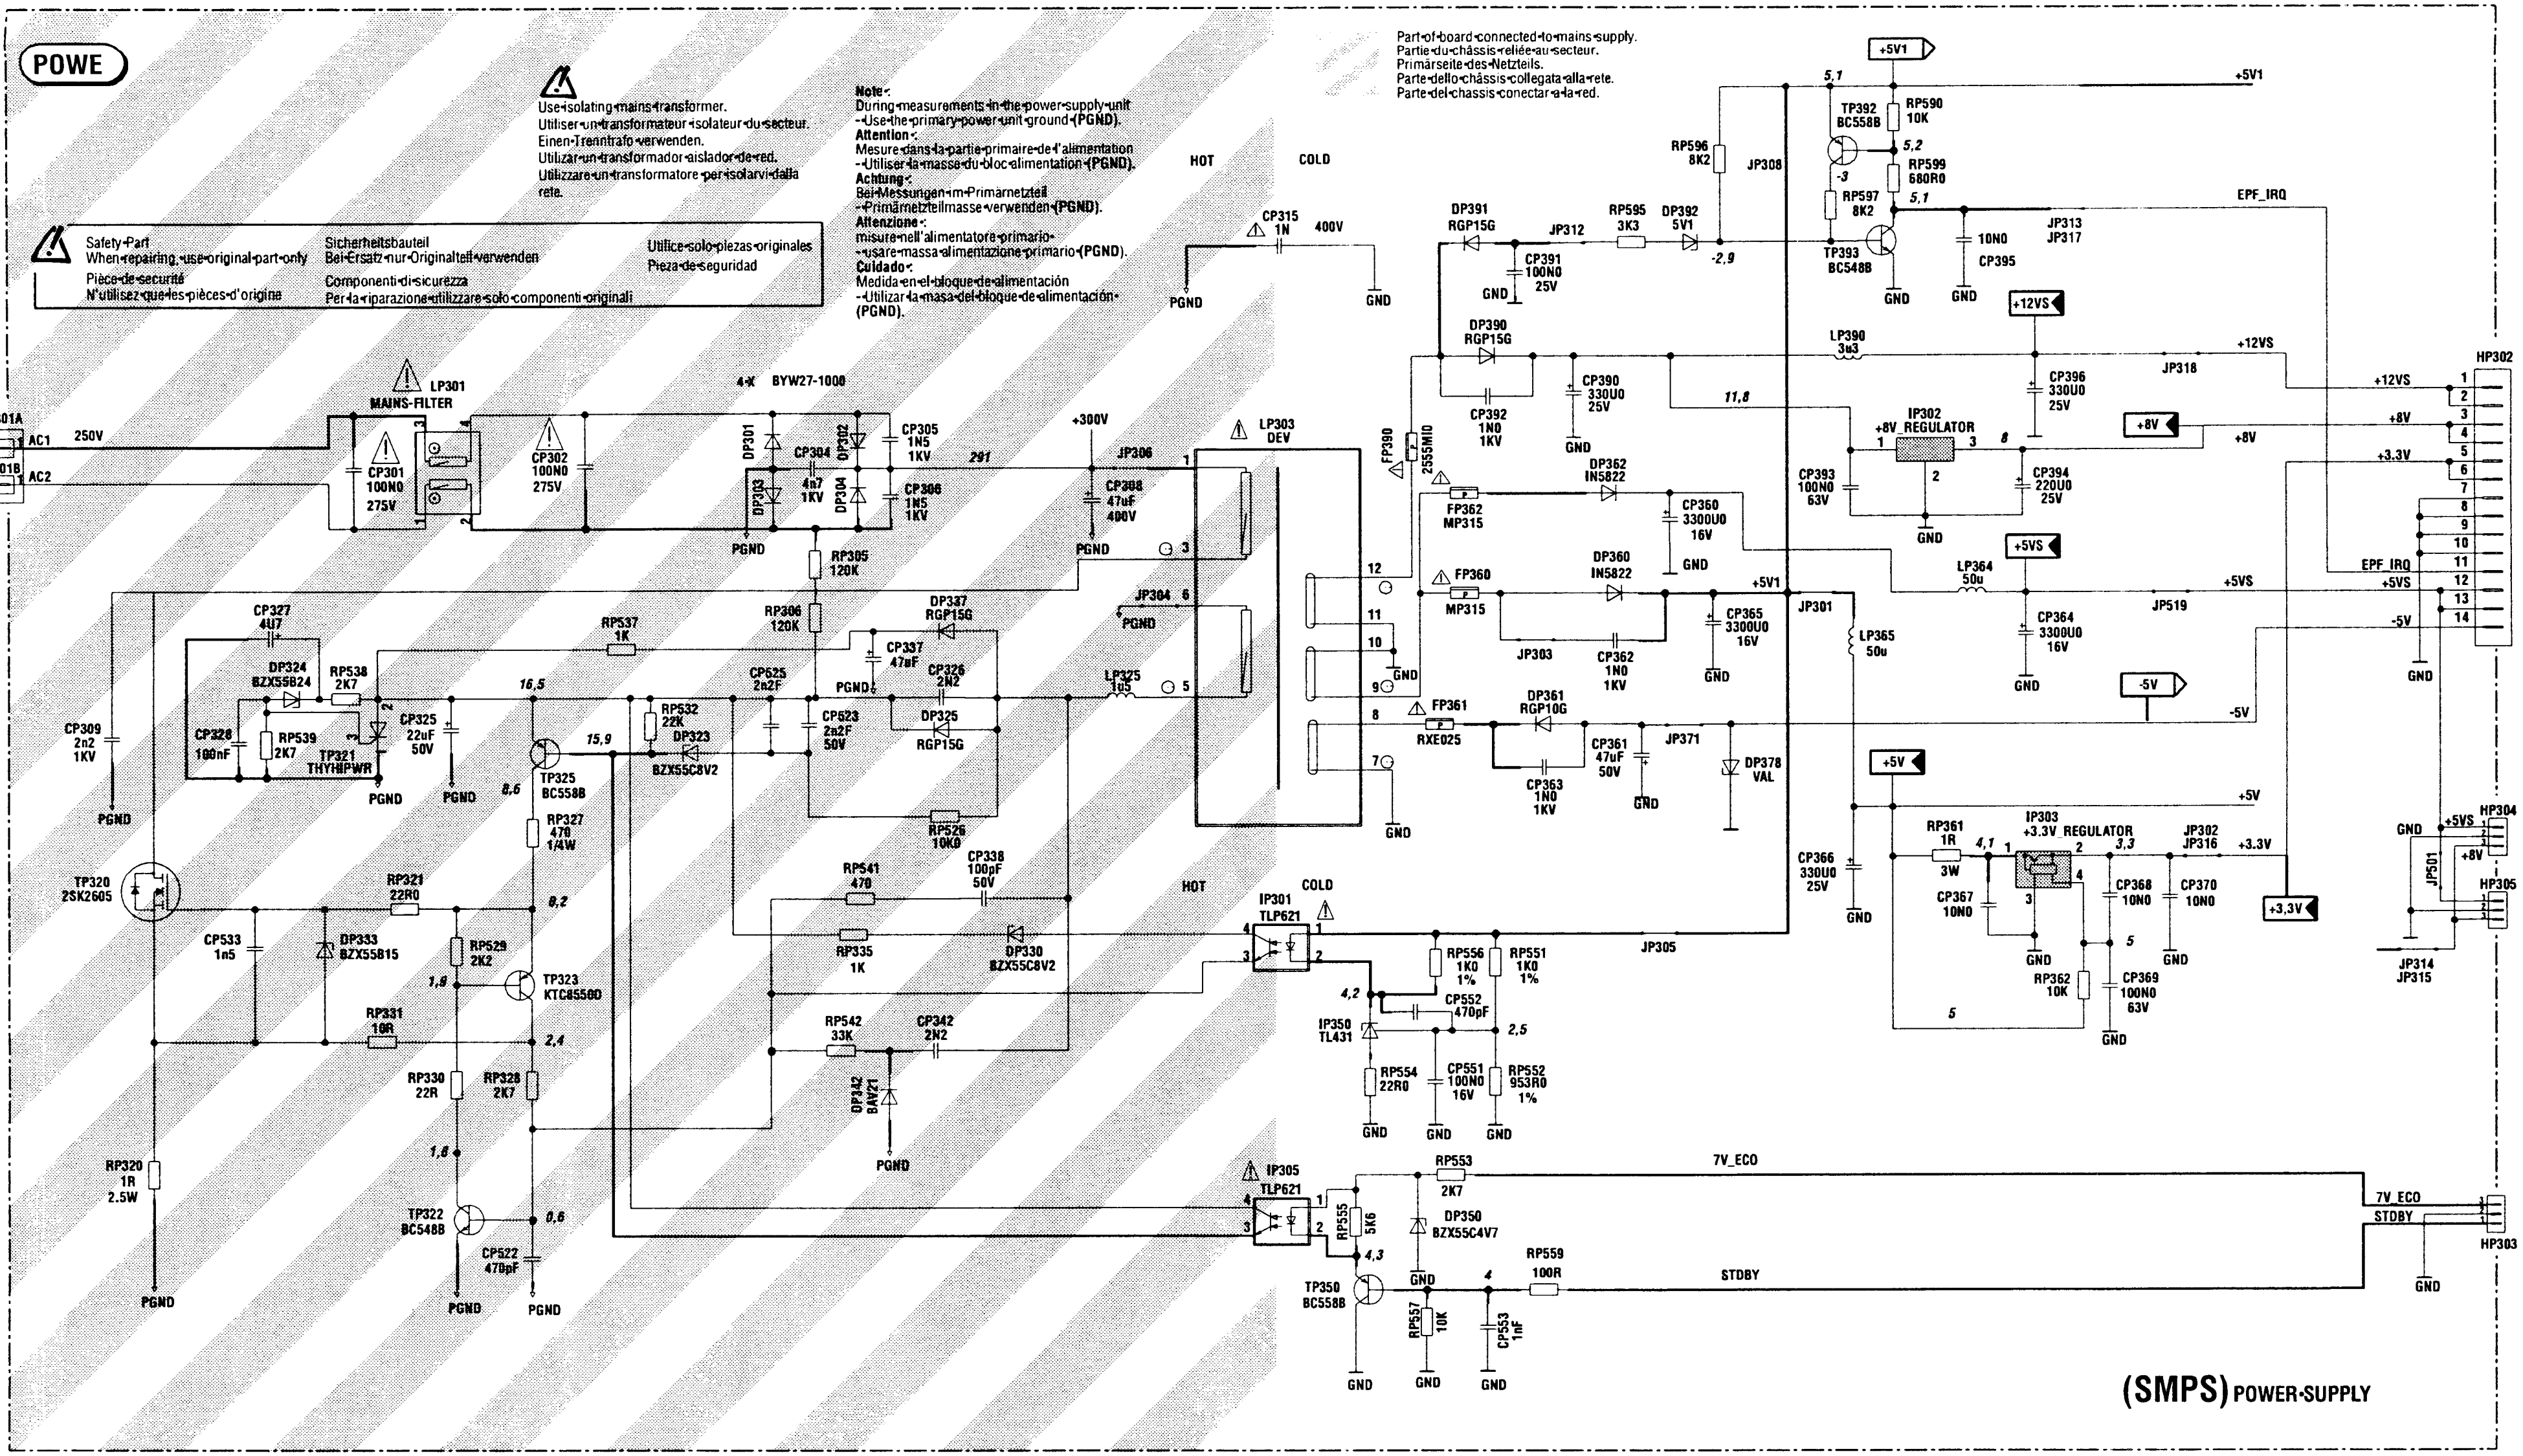

Use isolating mains transformer.
Utiliser un transformateur isolateur du secteur.
Einen Trenntrafo verwenden.
Utilizar un transformador aislador de red.
Utilizzare un transformatore per isolarvi dalla rete.

Note :
During measurements in the power supply unit
- Use the primary power unit ground (PGND).

Attention :
Mesure dans la partie primaire de l'alimentation
- Utiliser la masse du bloc alimentation (PGND).

Achtung :
Bei Messungen im Primärnetzteil
- Primärnetzteilmasse verwenden (PGND).

Attenzione :
misure nell'alimentatore primario
- usare massa alimentazione primario (PGND).

Cuidado :
Medida en el bloque de alimentación
- Utilizar la masa del bloque de alimentación (PGND).

Safety Part
When repairing, use original part only

Pièce de securité
N'utilisez que les pièces d'origine

Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

Componenti di sicurezza
Per la riparazione utilizzare solo componenti originali

Utilice solo piezas originales
Pieza de seguridad

Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte dello châssis collegata alla rete.
Parte del chassis conectar a la red.

POWE
HOT
COLD
BP301
BP301A
BP301B
AC1
AC2
250V
LP301
MAINS-FILTER
CP301
100N0
275V
CP302
100N0
275V
4 X BYW27-1000
DP301
DP302
DP303
DP304
CP304
4n7
1KV
CP305
1N5
1KV
CP306
1N5
1KV
291
+300V
JP306
CP308
47uF
400V
PGND
CP315
1N
400V
GND
LP303
DEV
RP305
120K
RP306
120K
JP304
LP325
1u5
CP327
4U7
DP324
BZX55B24
RP538
2K7
CP328
100nF
RP539
2K7
TP321
THYHIPWR
CP325
22uF
50V
RP537
1K
16,5
15,9
8,6
8,2
1,8
2,4
1,8
0,6
CP525
2n2F
CP523
2n2F
50V
CP337
47uF
DP337
RGP15G
CP326
2N2
DP325
RGP15G
RP532
22K
DP323
BZX55C8V2
RP526
10K0
TP325
BC558B
RP327
470
1/4W
CP309
2n2
1KV
TP320
2SK2605
RP321
22R0
CP533
1n5
DP333
BZX55B15
RP529
2K2
TP323
KTC8550D
RP331
10R
RP330
22R
RP328
2K7
TP322
BC548B
CP522
470pF
RP320
1R
2.5W
RP541
470
CP338
100pF
50V
RP335
1K
DP330
BZX55C8V2
RP542
33K
CP342
2N2
DP342
BAV21
IP301
TLP621
IP305
TLP621
RP556
1K0
1%
RP551
1K0
1%
CP552
470pF
4,2
2,5
IP350
TL431
RP554
22R0
CP551
100N0
16V
RP552
953R0
1%
RP553
2K7
7V_ECO
RP555
5K6
DP350
BZX55C4V7
4,3
TP350
BC558B
RP559
100R
4
STDBY
RP557
10K
CP553
1nF
JP305
12
11
10
9
8
7
FP390
2555M10
DP391
RGP15G
CP391
100N0
25V
JP312
RP595
3K3
DP392
5V1
-2,9
RP596
8K2
JP308
5,1
TP392
BC558B
RP590
10K
5,2
-3
RP599
680R0
RP597
8K2
TP393
BC548B
10N0
CP395
JP313
JP317
EPF_IRQ
+5V1
DP390
RGP15G
CP392
1N0
1KV
CP390
330U0
25V
11,8
LP390
3u3
+12VS
CP396
330U0
25V
JP318
DP362
1N5822
FP362
MP315
CP360
3300U0
16V
CP393
100N0
63V
IP302
+8V_REGULATOR
CP394
220U0
25V
+8V
FP360
MP315
DP360
1N5822
CP365
3300U0
16V
JP303
CP362
1N0
1KV
JP301
LP365
50u
LP364
50u
+5VS
CP364
3300U0
16V
JP519
-5V
FP361
RXE025
DP361
RGP10G
CP361
47uF
50V
JP371
CP363
1N0
1KV
DP378
VAL
+5V
CP366
330U0
25V
RP361
1R
3W
4,1
IP303
+3.3V_REGULATOR
3,3
CP367
10N0
CP368
10N0
CP370
10N0
RP362
10K
CP369
100N0
63V
5
JP302
JP316
+3.3V
HP302
To MAIN (POW)
HP304
HP305
JP501
JP314
JP315
HP303
To KDB(-2/2
(SMPS) POWER SUPPLY

TP320 (Drain)

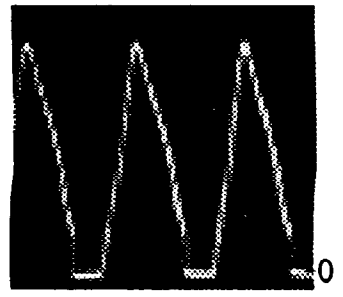

T=15µs 680Vpp

TP320 (Gate)

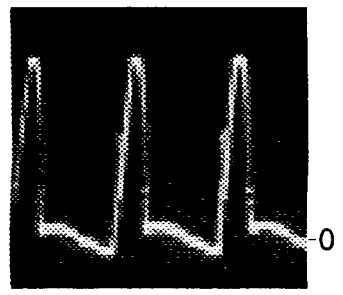

T=15µs 12Vpp

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
FRONTEND PART (2) - EINGANGSSTUFEN (2) - PRESE FRONTALI (2) - FRONT END PART (2)

SCART INTERFACE - INTERFACE PERITELEVISION - SCART INTERFACE - PRESA PERITEL- EUROCONECTOR

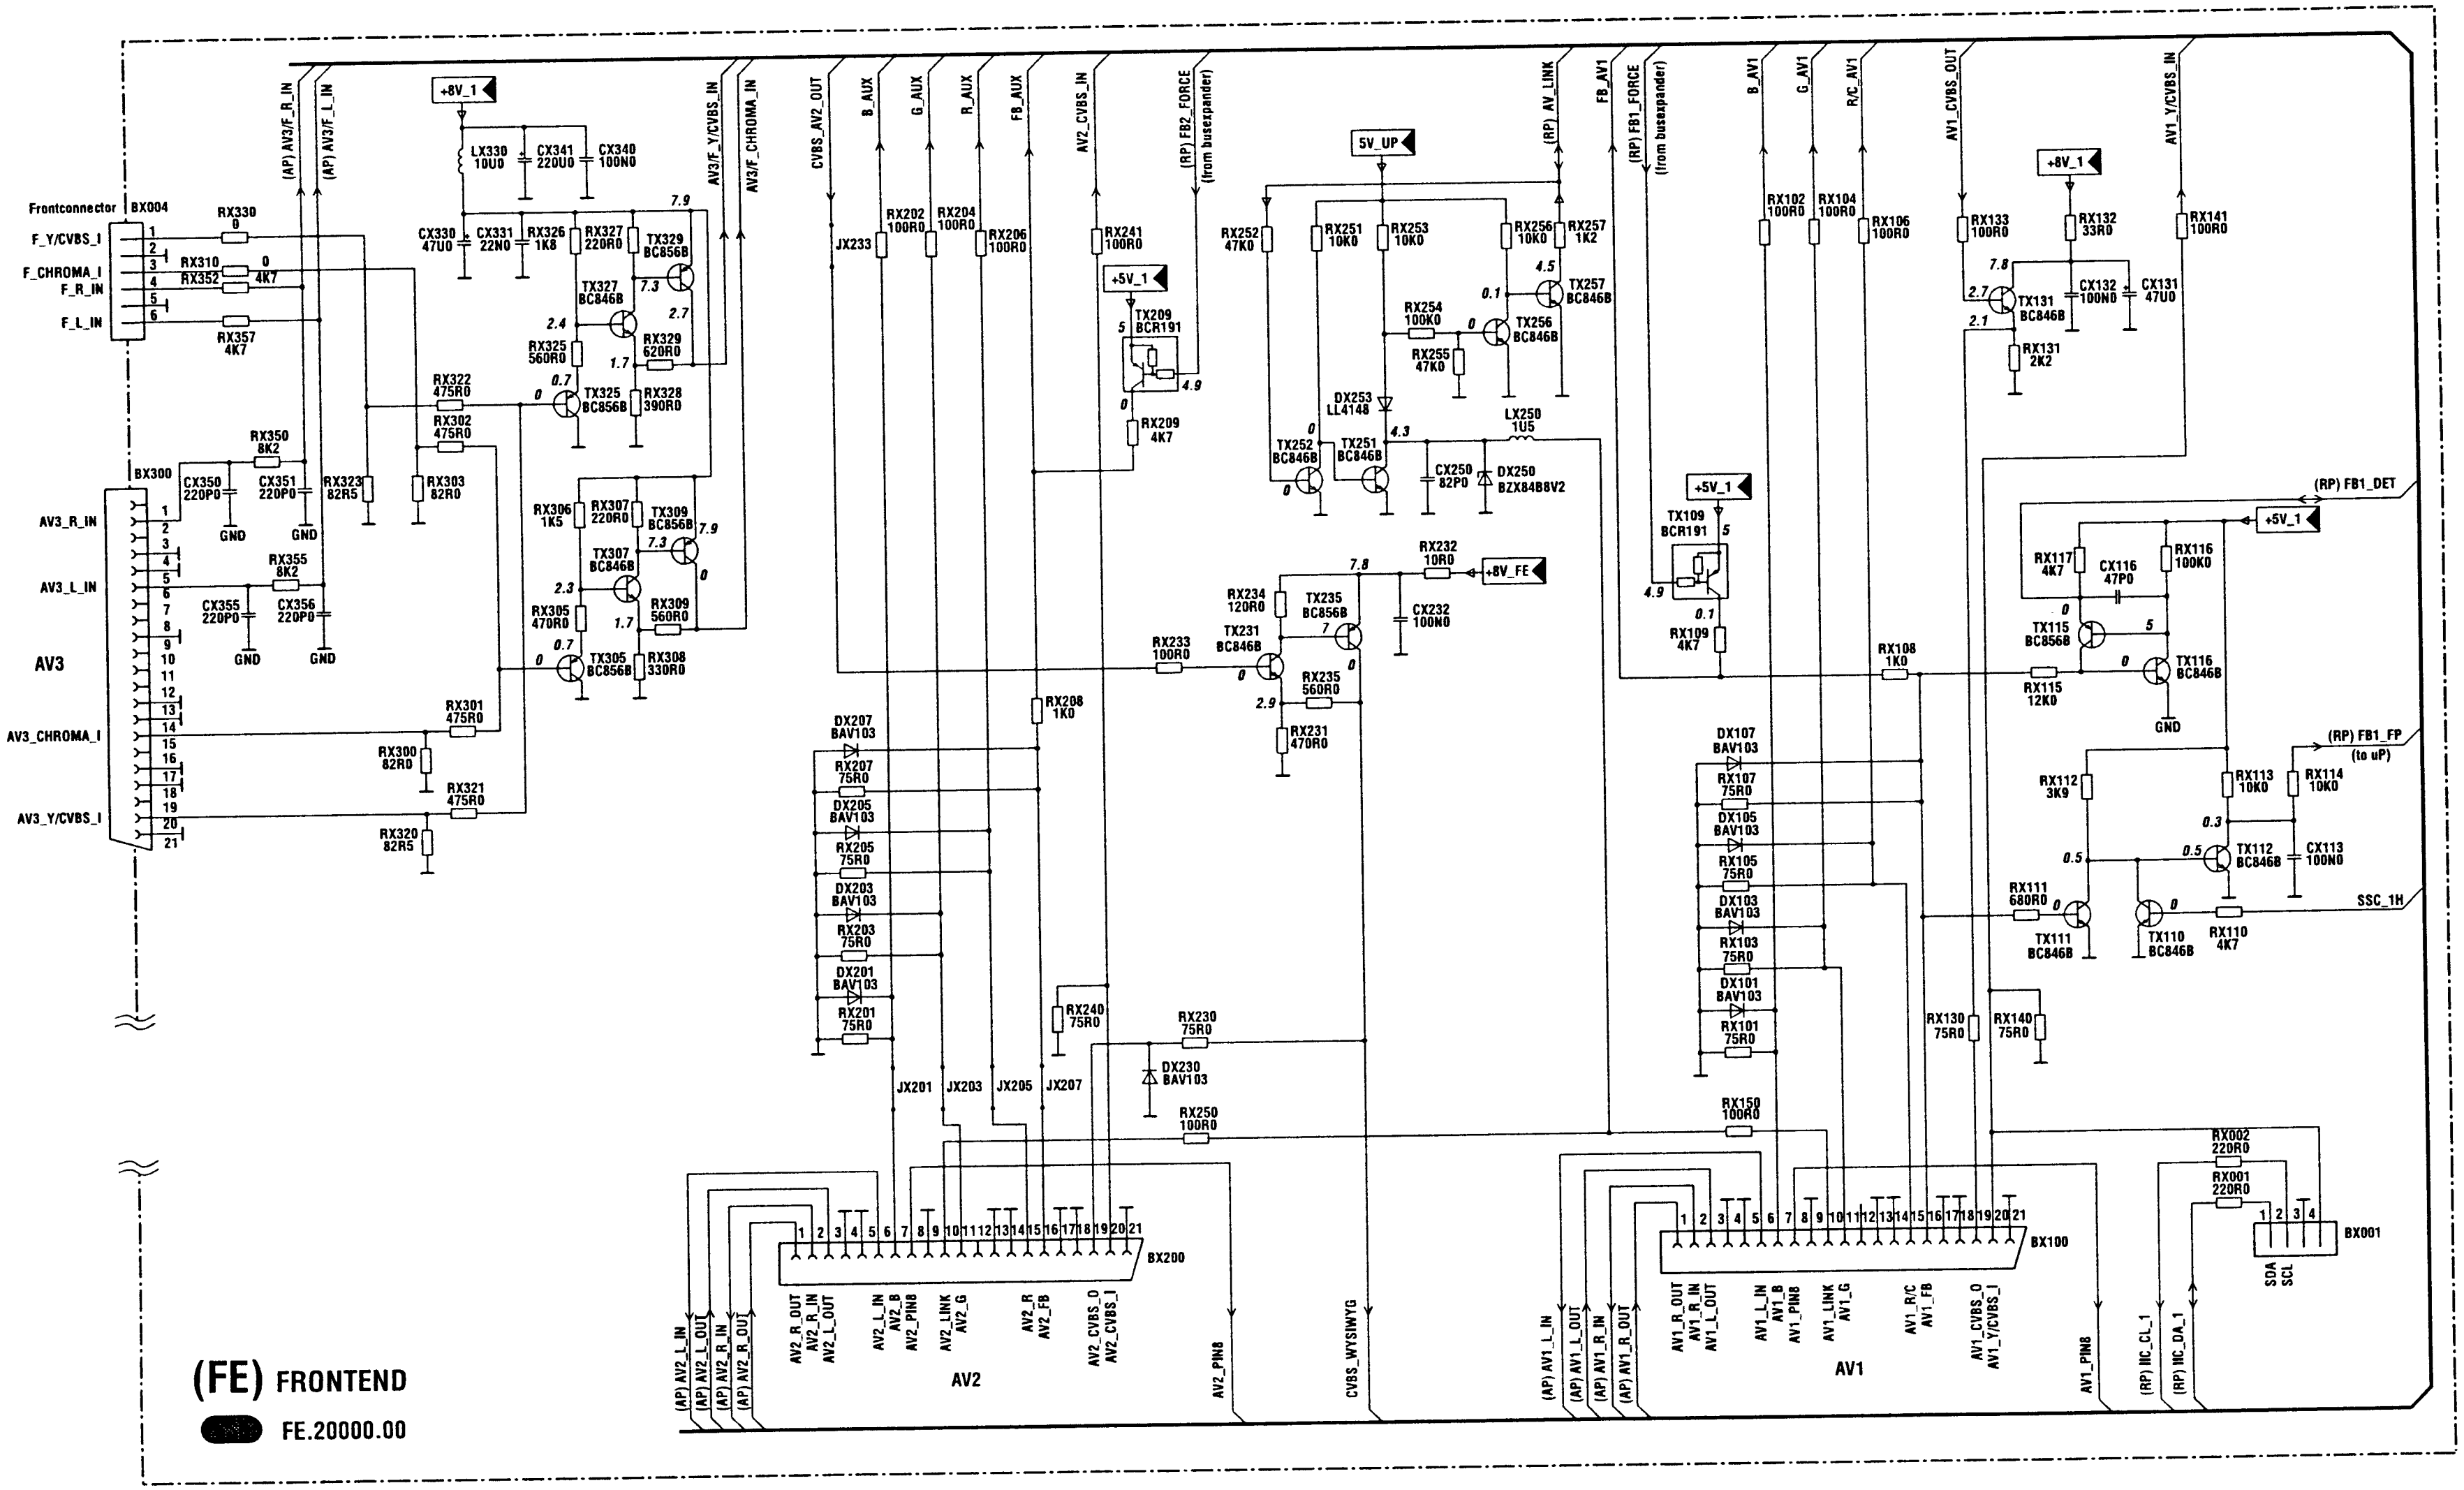

Frontconnector
BX004
F_Y/CVBS_I
F_CHROMA_I
F_R_IN
F_L_IN
RX330 0
RX310 0
RX352 4K7
RX357 4K7
BX300
AV3_R_IN
AV3_L_IN
AV3
AV3_CHROMA_I
AV3_Y/CVBS_I
CX350 220P0
CX351 220P0
RX350 8K2
RX355 8K2
CX355 220P0
CX356 220P0
GND
RX323 82R5
RX303 82R0
RX322 475R0
RX302 475R0
RX301 475R0
RX300 82R0
RX321 475R0
RX320 82R5
(AP) AV3/F_R_IN
(AP) AV3/F_L_IN
+8V_1
LX330 10U0
CX341 220U0
CX340 100N0
CX330 47U0
CX331 22N0
RX326 1K8
RX327 220R0
TX329 BC856B
TX327 BC846B
RX325 560R0
RX329 620R0
RX328 390R0
TX325 BC856B
RX306 1K5
RX307 220R0
TX309 BC856B
TX307 BC846B
RX305 470R0
RX309 560R0
RX308 330R0
TX305 BC856B
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
CVBS_AV2_OUT
B_AUX
G_AUX
R_AUX
FB_AUX
AV2_CVBS_IN
(RP) FB2_FORCE (from busexpander)
JX233
RX202 100R0
RX204 100R0
RX206 100R0
RX241 100R0
+5V_1
TX209 BCR191
RX209 4K7
5V_UP
RX252 47K0
RX251 10K0
RX253 10K0
RX256 10K0
RX257 1K2
TX257 BC846B
RX254 100K0
TX256 BC846B
RX255 47K0
DX253 LL4148
LX250 1U5
TX252 BC846B
TX251 BC846B
CX250 82P0
DX250 BZX84B8V2
(RP) AV_LINK
FB_AV1
(RP) FB1_FORCE (from busexpander)
RX232 10R0
+8V_FE
RX234 120R0
TX235 BC856B
CX232 100N0
RX233 100R0
TX231 BC846B
RX235 560R0
RX231 470R0
RX208 1K0
DX207 BAV103
RX207 75R0
DX205 BAV103
RX205 75R0
DX203 BAV103
RX203 75R0
DX201 BAV103
RX201 75R0
RX240 75R0
RX230 75R0
DX230 BAV103
RX250 100R0
JX201
JX203
JX205
JX207
BX200
(AP) AV2_L_IN
(AP) AV2_L_OUT
(AP) AV2_R_IN
(AP) AV2_R_OUT
AV2_R_OUT
AV2_R_IN
AV2_L_OUT
AV2_L_IN
AV2_B
AV2_PIN8
AV2_LINK
AV2_G
AV2_R
AV2_FB
AV2_CVBS_O
AV2_CVBS_I
AV2
AV2_PIN8
CVBS_WYSIWYG
B_AV1
G_AV1
R/C_AV1
RX102 100R0
RX104 100R0
RX106 100R0
AV1_CVBS_OUT
AV1_Y/CVBS_IN
RX133 100R0
RX132 33R0
RX141 100R0
TX131 BC846B
CX132 100N0
CX131 47U0
RX131 2K2
TX109 BCR191
RX109 4K7
RX108 1K0
(RP) FB1_DET
RX117 4K7
CX116 47P0
RX116 100K0
TX115 BC856B
TX116 BC846B
RX115 12K0
DX107 BAV103
RX107 75R0
DX105 BAV103
RX105 75R0
DX103 BAV103
RX103 75R0
DX101 BAV103
RX101 75R0
(RP) FB1_FP (to uP)
RX112 3K9
RX113 10K0
RX114 10K0
TX112 BC846B
CX113 100N0
RX111 680R0
TX111 BC846B
TX110 BC846B
RX110 4K7
SSC_1H
RX130 75R0
RX140 75R0
RX150 100R0
RX002 220R0
RX001 220R0
BX100
BX001
SDA
SCL
(AP) AV1_L_IN
(AP) AV1_L_OUT
(AP) AV1_R_IN
(AP) AV1_R_OUT
AV1_R_OUT
AV1_R_IN
AV1_L_OUT
AV1_L_IN
AV1_B
AV1_PIN8
AV1_LINK
AV1_G
AV1_R/C
AV1_FB
AV1_CVBS_O
AV1_Y/CVBS_I
AV1
AV1_PIN8
(RP) IIC_CL_1
(RP) IIC_DA_1

(FE) FRONTEND

FE.20000.00

VHF / UHF TUNER CTT5010 (For information only)

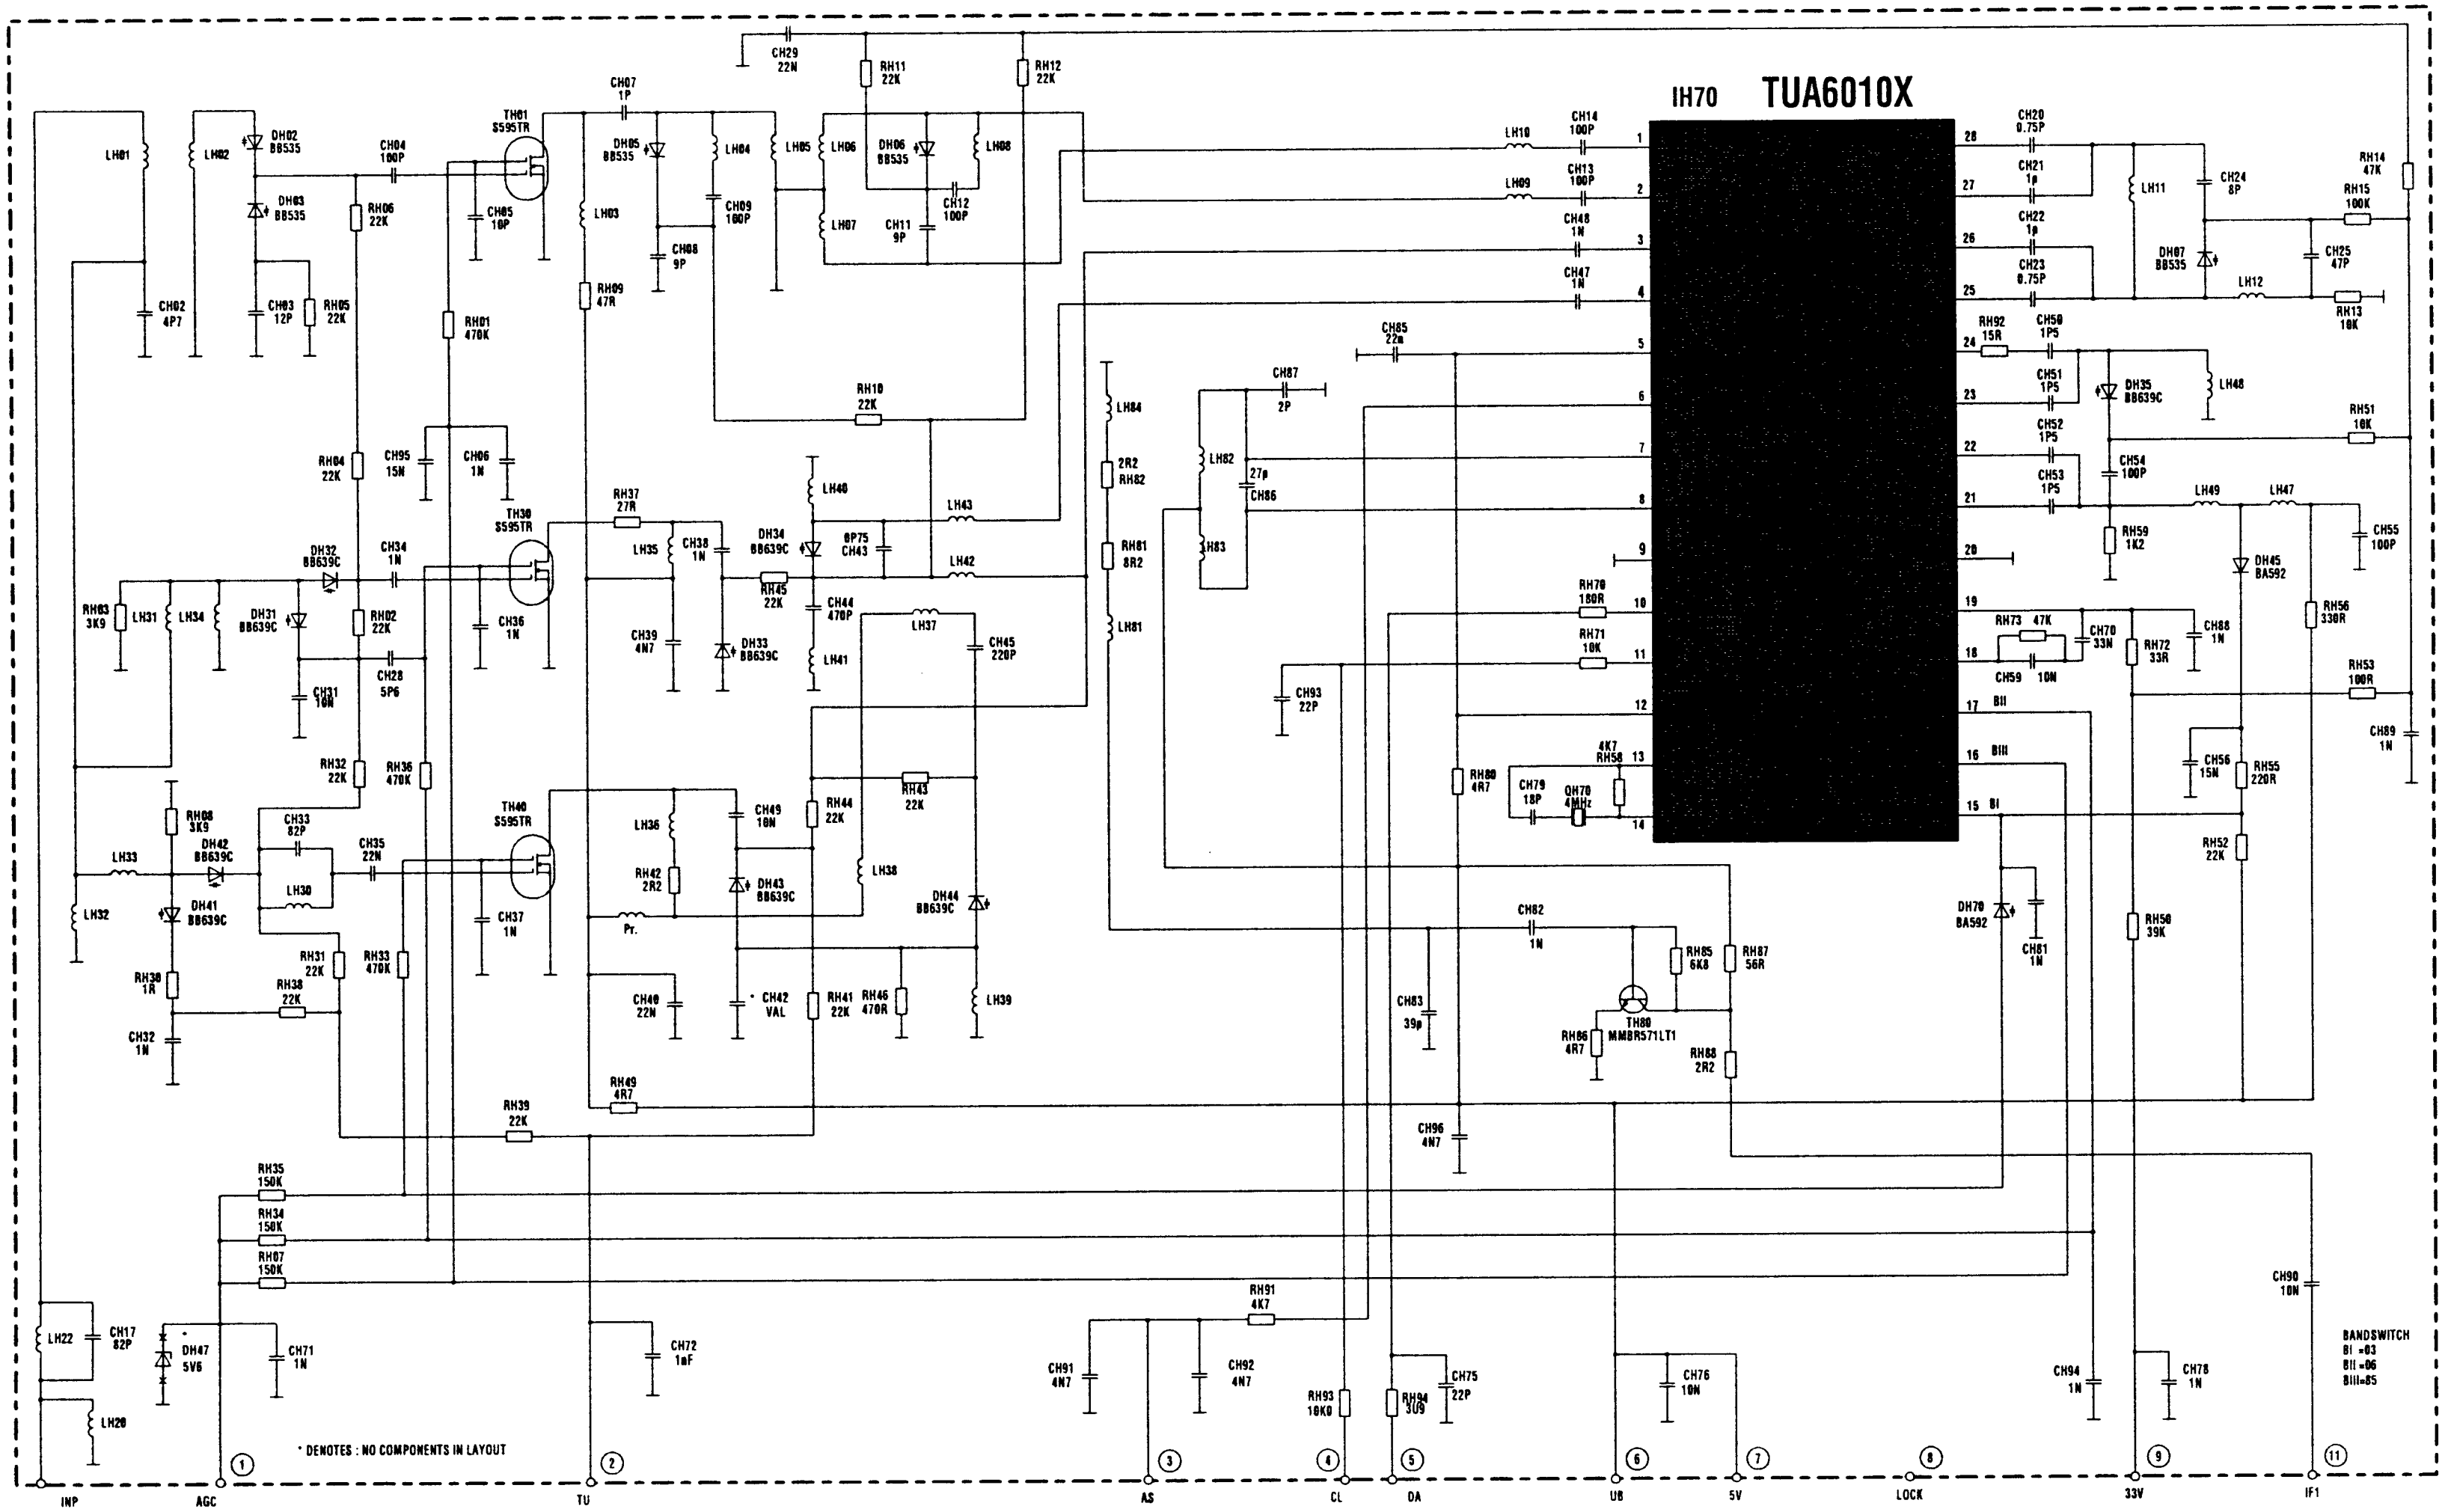
IH70 TUA6010X
TH01 S595TR
TH30 S595TR
TH40 S595TR
TH80 MMBR571LT1
DH02 BB535
DH03 BB535
DH05 BB535
DH06 BB535
DH07 BB535
DH31 BB639C
DH32 BB639C
DH33 BB639C
DH34 BB639C
DH35 BB639C
DH41 BB639C
DH42 BB639C
DH43 BB639C
DH44 BB639C
DH45 BA592
DH70 BA592
DH47 5V6
QH70 4MHz
CH29 22N
RH11 22K
RH12 22K
CH07 1P
CH14 100P
CH13 100P
CH48 1N
CH47 1N
CH20 0.75P
CH21 1p
CH22 1p
CH23 0.75P
CH24 8P
CH25 47P
RH14 47K
RH15 100K
RH13 10K
RH10 22K
RH51 10K
RH53 100R
RH56 330R
RH55 220R
RH52 22K
RH50 39K
RH72 33R
RH73 47K
RH70 180R
RH71 10K
RH58 4K7
RH80 4R7
RH85 6K8
RH87 56R
RH86 4R7
RH88 2R2
RH91 4K7
RH93 10K0
RH94 3U9
RH35 150K
RH34 150K
RH07 150K
RH39 22K
RH49 4R7
RH38 22K
RH30 1R
RH31 22K
RH33 470K
RH32 22K
RH36 470K
RH08 3K9
RH03 3K9
RH04 22K
RH02 22K
RH06 22K
RH05 22K
RH01 470K
RH09 47R
RH37 27R
RH45 22K
RH44 22K
RH43 22K
RH41 22K
RH46 470R
RH42 2R2
RH81 8R2
RH82 2R2
RH92 15R
RH59 1K2
CH02 4P7
CH03 12P
CH04 100P
CH05 10P
CH06 1N
CH08 9P
CH09 100P
CH11 9P
CH12 100P
CH95 15N
CH34 1N
CH36 1N
CH37 1N
CH28 5P6
CH31 10N
CH33 82P
CH35 22N
CH32 1N
CH38 1N
CH39 4N7
CH40 22N
CH42 VAL
CH43 0P75
CH44 470P
CH45 220P
CH49 10N
CH17 82P
CH71 1N
CH72 1nF
CH85 22n
CH87 2P
CH86 27p
CH93 22P
CH79 18P
CH82 1N
CH83 39p
CH96 4N7
CH91 4N7
CH92 4N7
CH75 22P
CH76 10N
CH94 1N
CH78 1N
CH90 10N
CH89 1N
CH88 1N
CH56 15N
CH70 33N
CH59 10N
CH81 1N
CH50 1P5
CH51 1P5
CH52 1P5
CH53 1P5
CH54 100P
CH55 100P
LH01
LH02
LH03
LH04
LH05
LH06
LH07
LH08
LH09
LH10
LH11
LH12
LH20
LH22
LH30
LH31
LH32
LH33
LH34
LH35
LH36
LH37
LH38
LH39
LH40
LH41
LH42
LH43
LH47
LH48
LH49
LH81
LH82
LH83
LH84
Pr.
BII
BIII
BI
* DENOTES : NO COMPONENTS IN LAYOUT
BANDSWITCH
BI =03
BII =06
BIII=05
INP
AGC
TU
AS
CL
DA
UB
5V
LOCK
33V
IF1
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑪

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
REMOTE / MICROCONTROLLER - GESTION / MICROCONTROLEUR - FERNBEDIENUNGS- UND MICROCONTROLLERSTUFEN - MICROPROCESSORE - REMOTO / MICROCONTROLADOR

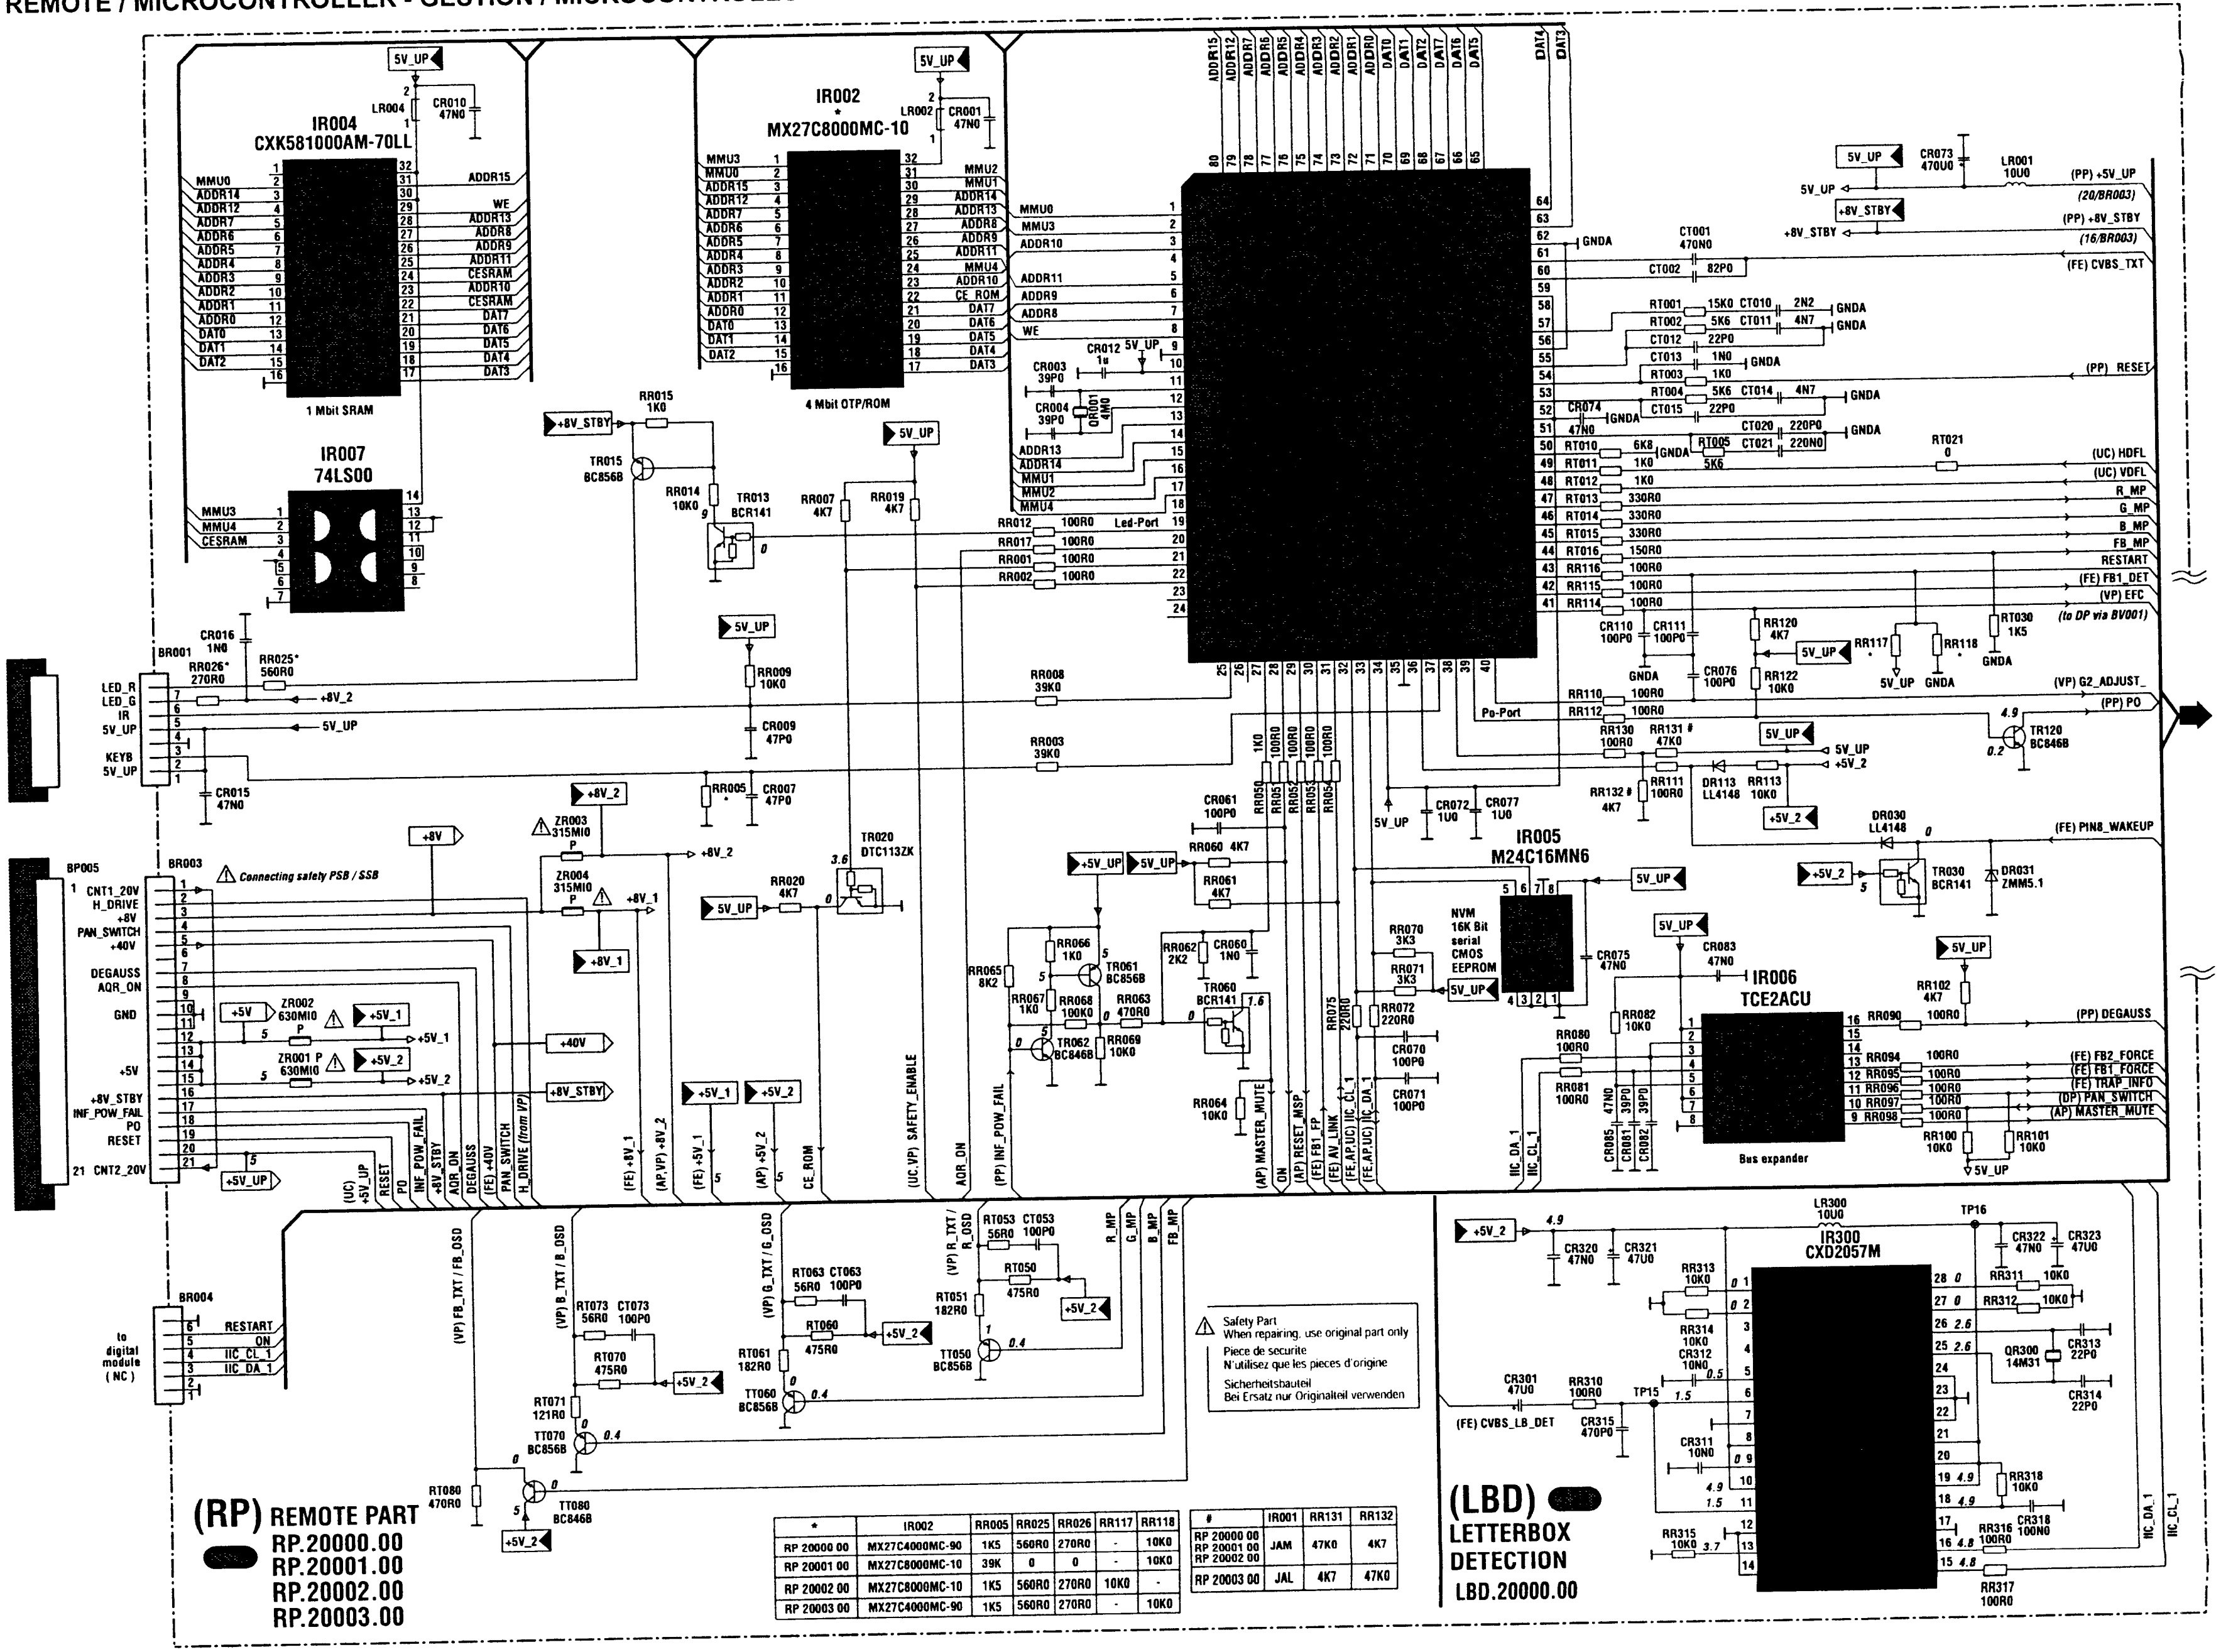
IR004
CXK581000AM-70LL
1 Mbit SRAM
IR002
MX27C8000MC-10
4 Mbit OTP/ROM
IR007
74LS00
IR005
M24C16MN6
NVM
16K Bit
serial
CMOS
EEPROM
IR006
TCE2ACU
Bus expander
IR300
CXD2057M
BR001
BR003
BR004
BP005
LED_R
LED_G
IR
5V_UP
KEYB
CNT1_20V
H_DRIVE
+8V
PAN_SWITCH
+40V
DEGAUSS
AQR_ON
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
CNT2_20V
Connecting safety PSB / SSB
to digital module (NC)
RESTART
ON
IIC_CL_1
IIC_DA_1
(PP) +5V_UP
(PP) +8V_STBY
(FE) CVBS_TXT
(PP) RESET
(UC) HDFL
(UC) VDFL
R_MP
G_MP
B_MP
FB_MP
RESTART
(FE) FB1_DET
(VP) EFC
(to DP via BV001)
(VP) G2_ADJUST_
(PP) PO
(FE) PIN8_WAKEUP
(PP) DEGAUSS
(FE) FB2_FORCE
(FE) FB1_FORCE
(FE) TRAP_INFO
(DP) PAN_SWITCH
(AP) MASTER_MUTE
(FE) CVBS_LB_DET
Led-Port
Po-Port
TR015 BC856B
TR013 BCR141
TR020 DTC113ZK
TR061 BC856B
TR062 BC846B
TR060 BCR141
TR120 BC846B
TR030 BCR141
DR030 LL4148
DR031 ZMM5.1
DR113 LL4148
ZR001 630MI0
ZR002 630MI0
ZR003 315MI0
ZR004 315MI0
TT050 BC856B
TT060 BC856B
TT070 BC856B
TT080 BC846B
QR300 14M31
LR300 10U0
TP15
TP16

Safety Part

Safety Part
When repairing, use original part only

Piece de securite
N'utilisez que les pieces d'origine

Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

*	IR002	RR005	RR025	RR026	RR117	RR118
RP 20000 00	MX27C4000MC-90	1K5	560R0	270R0	-	10K0
RP 20001 00	MX27C8000MC-10	39K	0	0	-	10K0
RP 20002 00	MX27C8000MC-10	1K5	560R0	270R0	10K0	-
RP 20003 00	MX27C4000MC-90	1K5	560R0	270R0	-	10K0

#	IR001	RR131	RR132
RP 20000 00 RP 20001 00 RP 20002 00	JAM	47K0	4K7
RP 20003 00	JAL	4K7	47K0

(RP) REMOTE PART

RP.20000.00
RP.20001.00
RP.20002.00
RP.20003.00

(LBD) LETTERBOX DETECTION

LBD.20000.00

VIDEO AMPLIFIER BOARD - PLATINE AMPLIFICATEURS VIDEO - VIDEOVERSTÄRKERPLATTE - PIASTRA AMPLIFICATORE VIDEO - PLATINA AMPLIFICADOR VIDEO
CRT 20000.00 - CRT BS20100.00

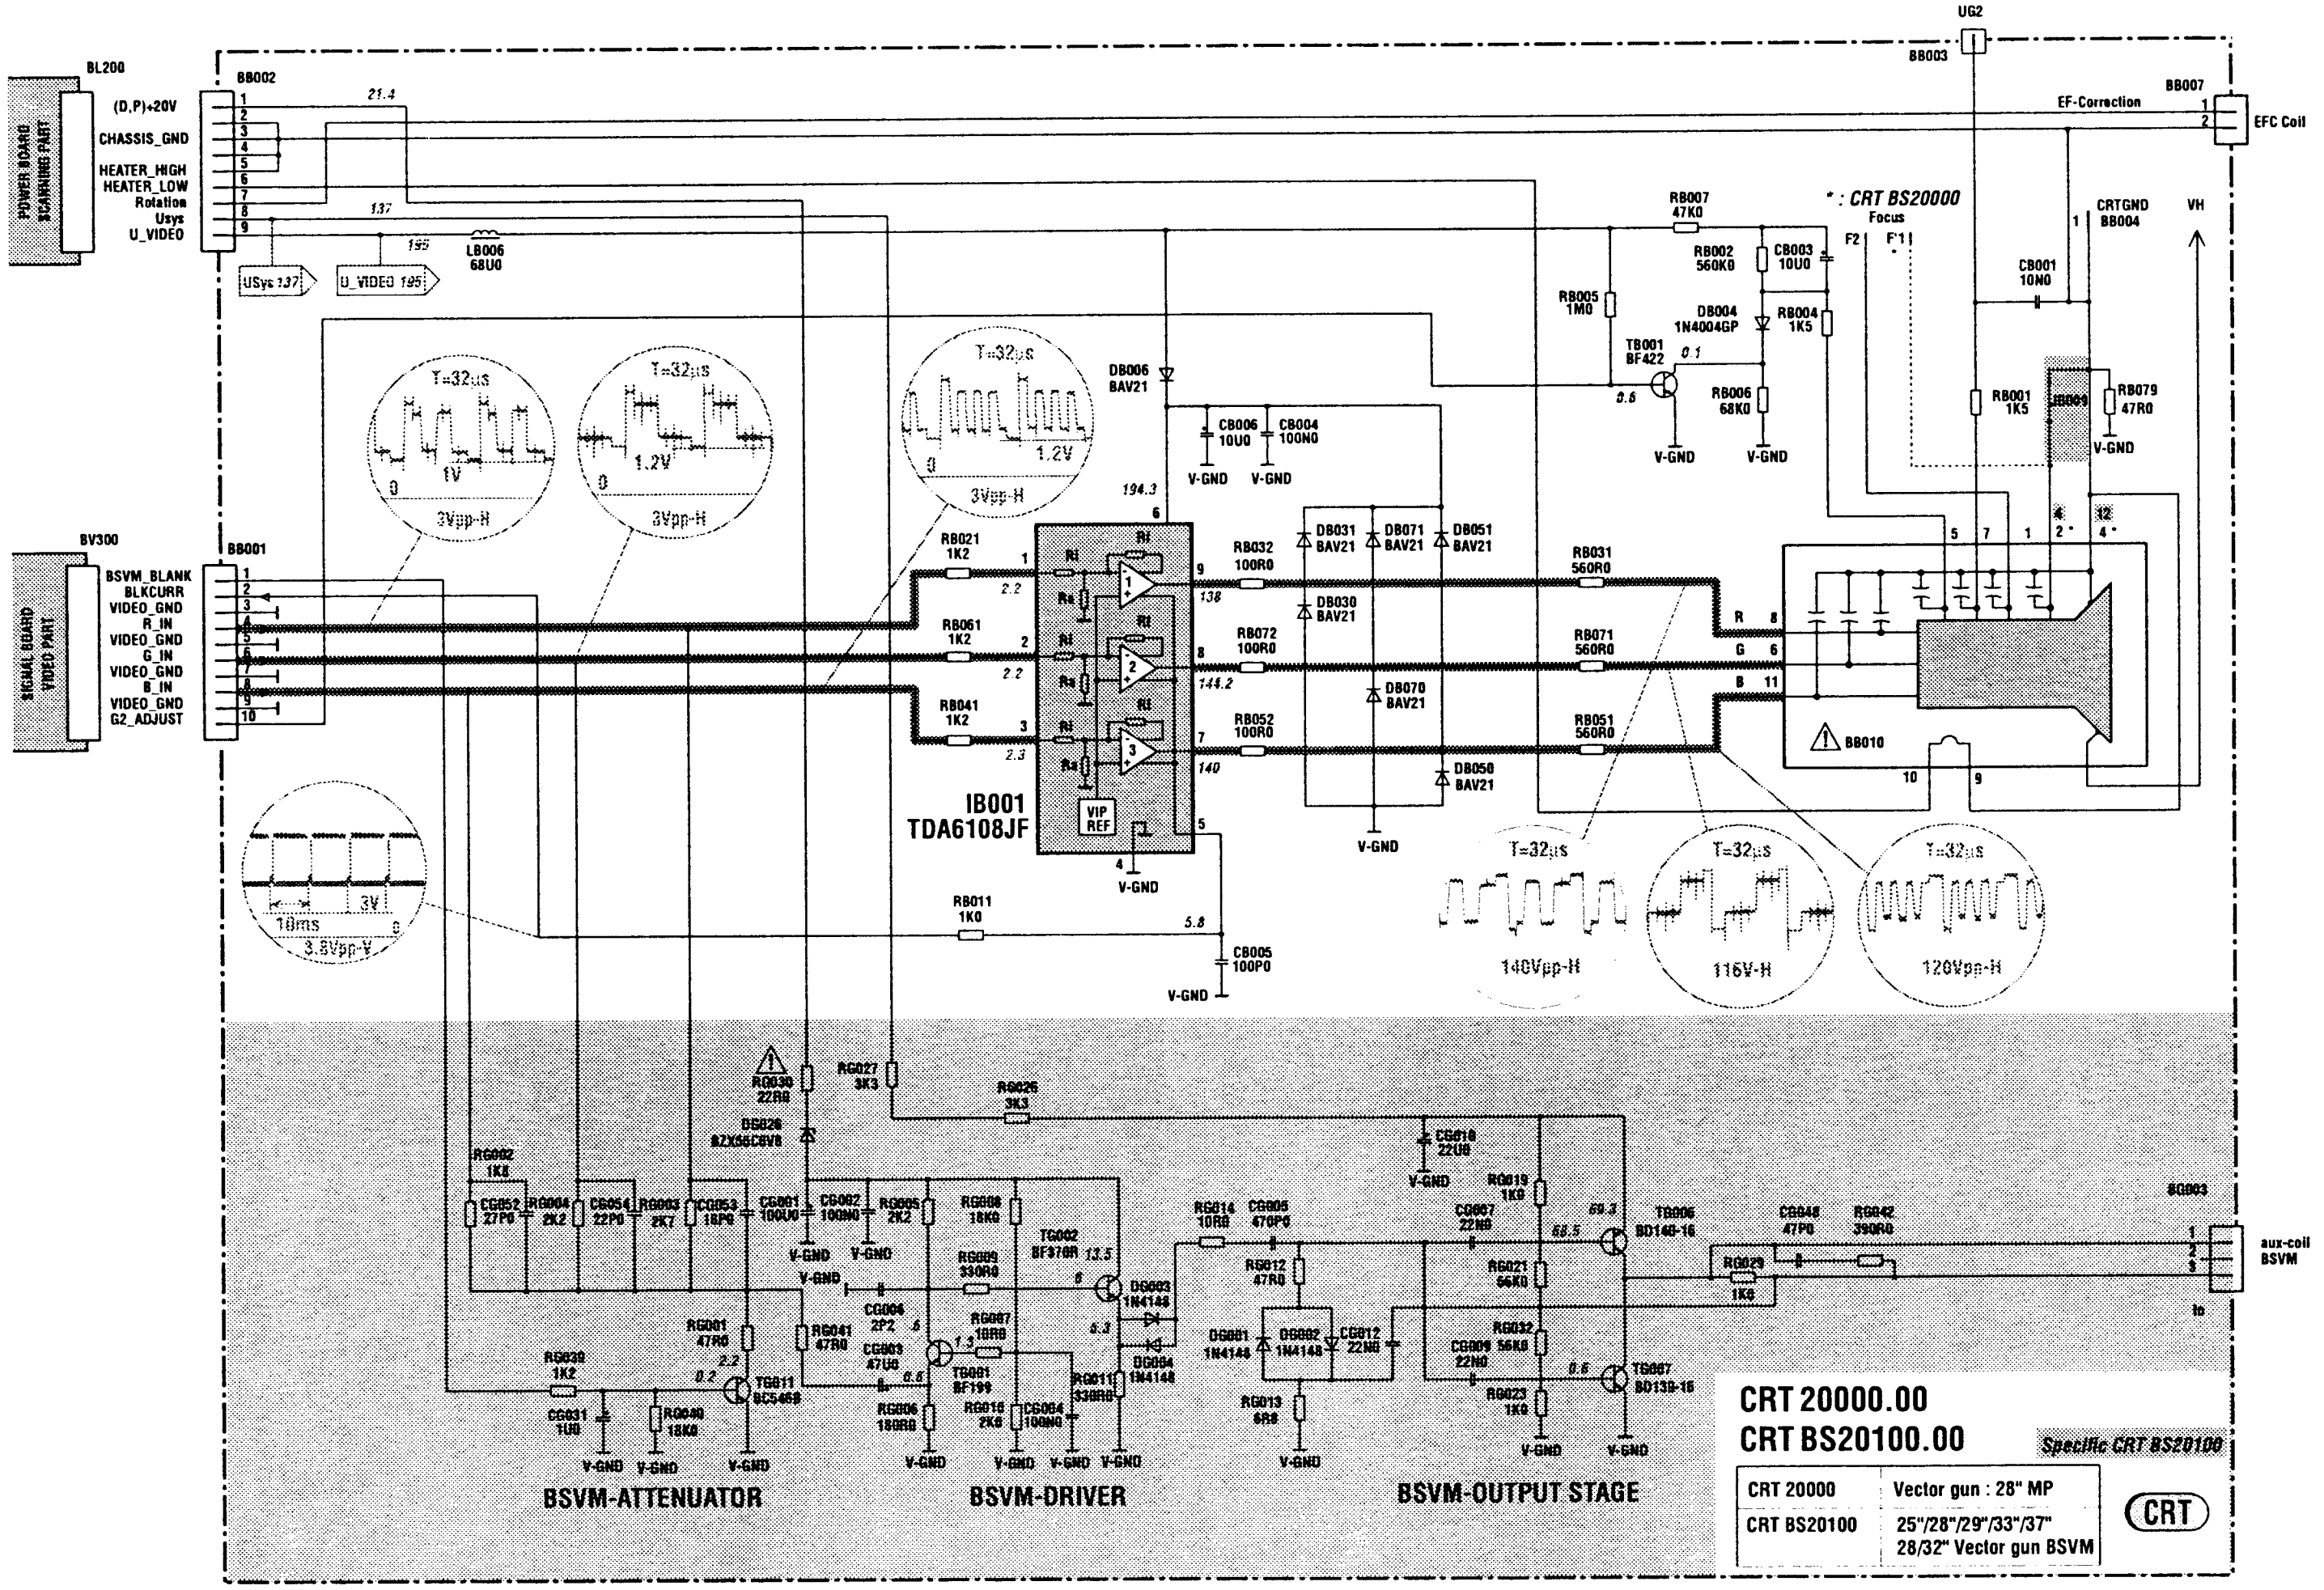
BL200
POWER BOARD SCANNING PART
(D,P)+20V
CHASSIS_GND
HEATER_HIGH
HEATER_LOW
Rotation
Usys
U_VIDEO
BB002
21.4
137
195
LB006 68U0
USys 137
U_VIDEO 195
BV300
SIGNAL BOARD VIDEO PART
BSVM_BLANK
BLKCURR
VIDEO_GND
R_IN
VIDEO_GND
G_IN
VIDEO_GND
B_IN
VIDEO_GND
G2_ADJUST
BB001
T=32µs
1V
3Vpp-H
1.2V
10ms
3V
3.6Vpp-V
DB006 BAV21
CB006 10U0
CB004 100N0
V-GND
194.3
RB021 1K2
RB061 1K2
RB041 1K2
2.2
2.3
Ri
Ra
VIP REF
IB001
TDA6108JF
138
144.2
140
RB032 100R0
RB072 100R0
RB052 100R0
DB031 BAV21
DB071 BAV21
DB051 BAV21
DB030 BAV21
DB070 BAV21
DB050 BAV21
RB011 1K0
5.8
CB005 100P0
RB031 560R0
RB071 560R0
RB051 560R0
140Vpp-H
116V-H
120Vpp-H
UG2
BB003
BB007
EF-Correction
EFC Coil
RB007 47K0
* : CRT BS20000
Focus
F2
F'1
RB002 560K0
CB003 10U0
RB005 1M0
DB004 1N4004GP
RB004 1K5
TB001 BF422
0.1
0.6
RB006 68K0
CRTGND
BB004
VH
CB001 10N0
RB001 1K5
IB009
RB079 47R0
R
G
B
BB010
RG030 22R0
RG027 3K3
RG026 3K3
DG026 BZX55C6V8
RG002 1K8
CG052 27P0
RG004 2K2
CG054 22P0
RG003 2K7
CG053 18P0
CG001 100U0
CG002 100N0
RG005 2K2
RG008 18K0
RG009 330R0
TG002 BF370R
13.5
DG003 1N4148
DG004 1N4148
CG004 2P2
CG003 47U0
RG007 10R0
RG001 47R0
RG041 47R0
RG039 1K2
CG031 1U0
RG040 18K0
TG011 BC546B
TG001 BF199
RG006 180R0
RG016 2K6
CG084 100N0
RG011 330R0
5.3
6.6
1.3
0.2
CG010 22U0
RG014 10R0
CG005 470P0
RG012 47R0
DG001 1N4148
DG002 1N4148
CG012 22N0
RG013 6R8
CG007 22N0
CG009 22N0
RG019 1K0
RG021 56K0
RG032 56K0
RG023 1K0
69.3
68.5
0.6
TG006 BD140-16
TG007 BD139-16
RG029 1K0
CG048 47P0
RG042 390R0
BG003
aux-coil BSVM
Io
BSVM-ATTENUATOR
BSVM-DRIVER
BSVM-OUTPUT STAGE
CRT 20000.00
CRT BS20100.00
Specific CRT BS20100
CRT 20000
Vector gun : 28" MP
CRT BS20100
25"/28"/29"/33"/37"
28/32" Vector gun BSVM
CRT

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS
POWER SUPPLY PART - PARTIE ALIMENTATION - NETZTEIL - ALIMENTAZIONE - ALIMENTACIÓN

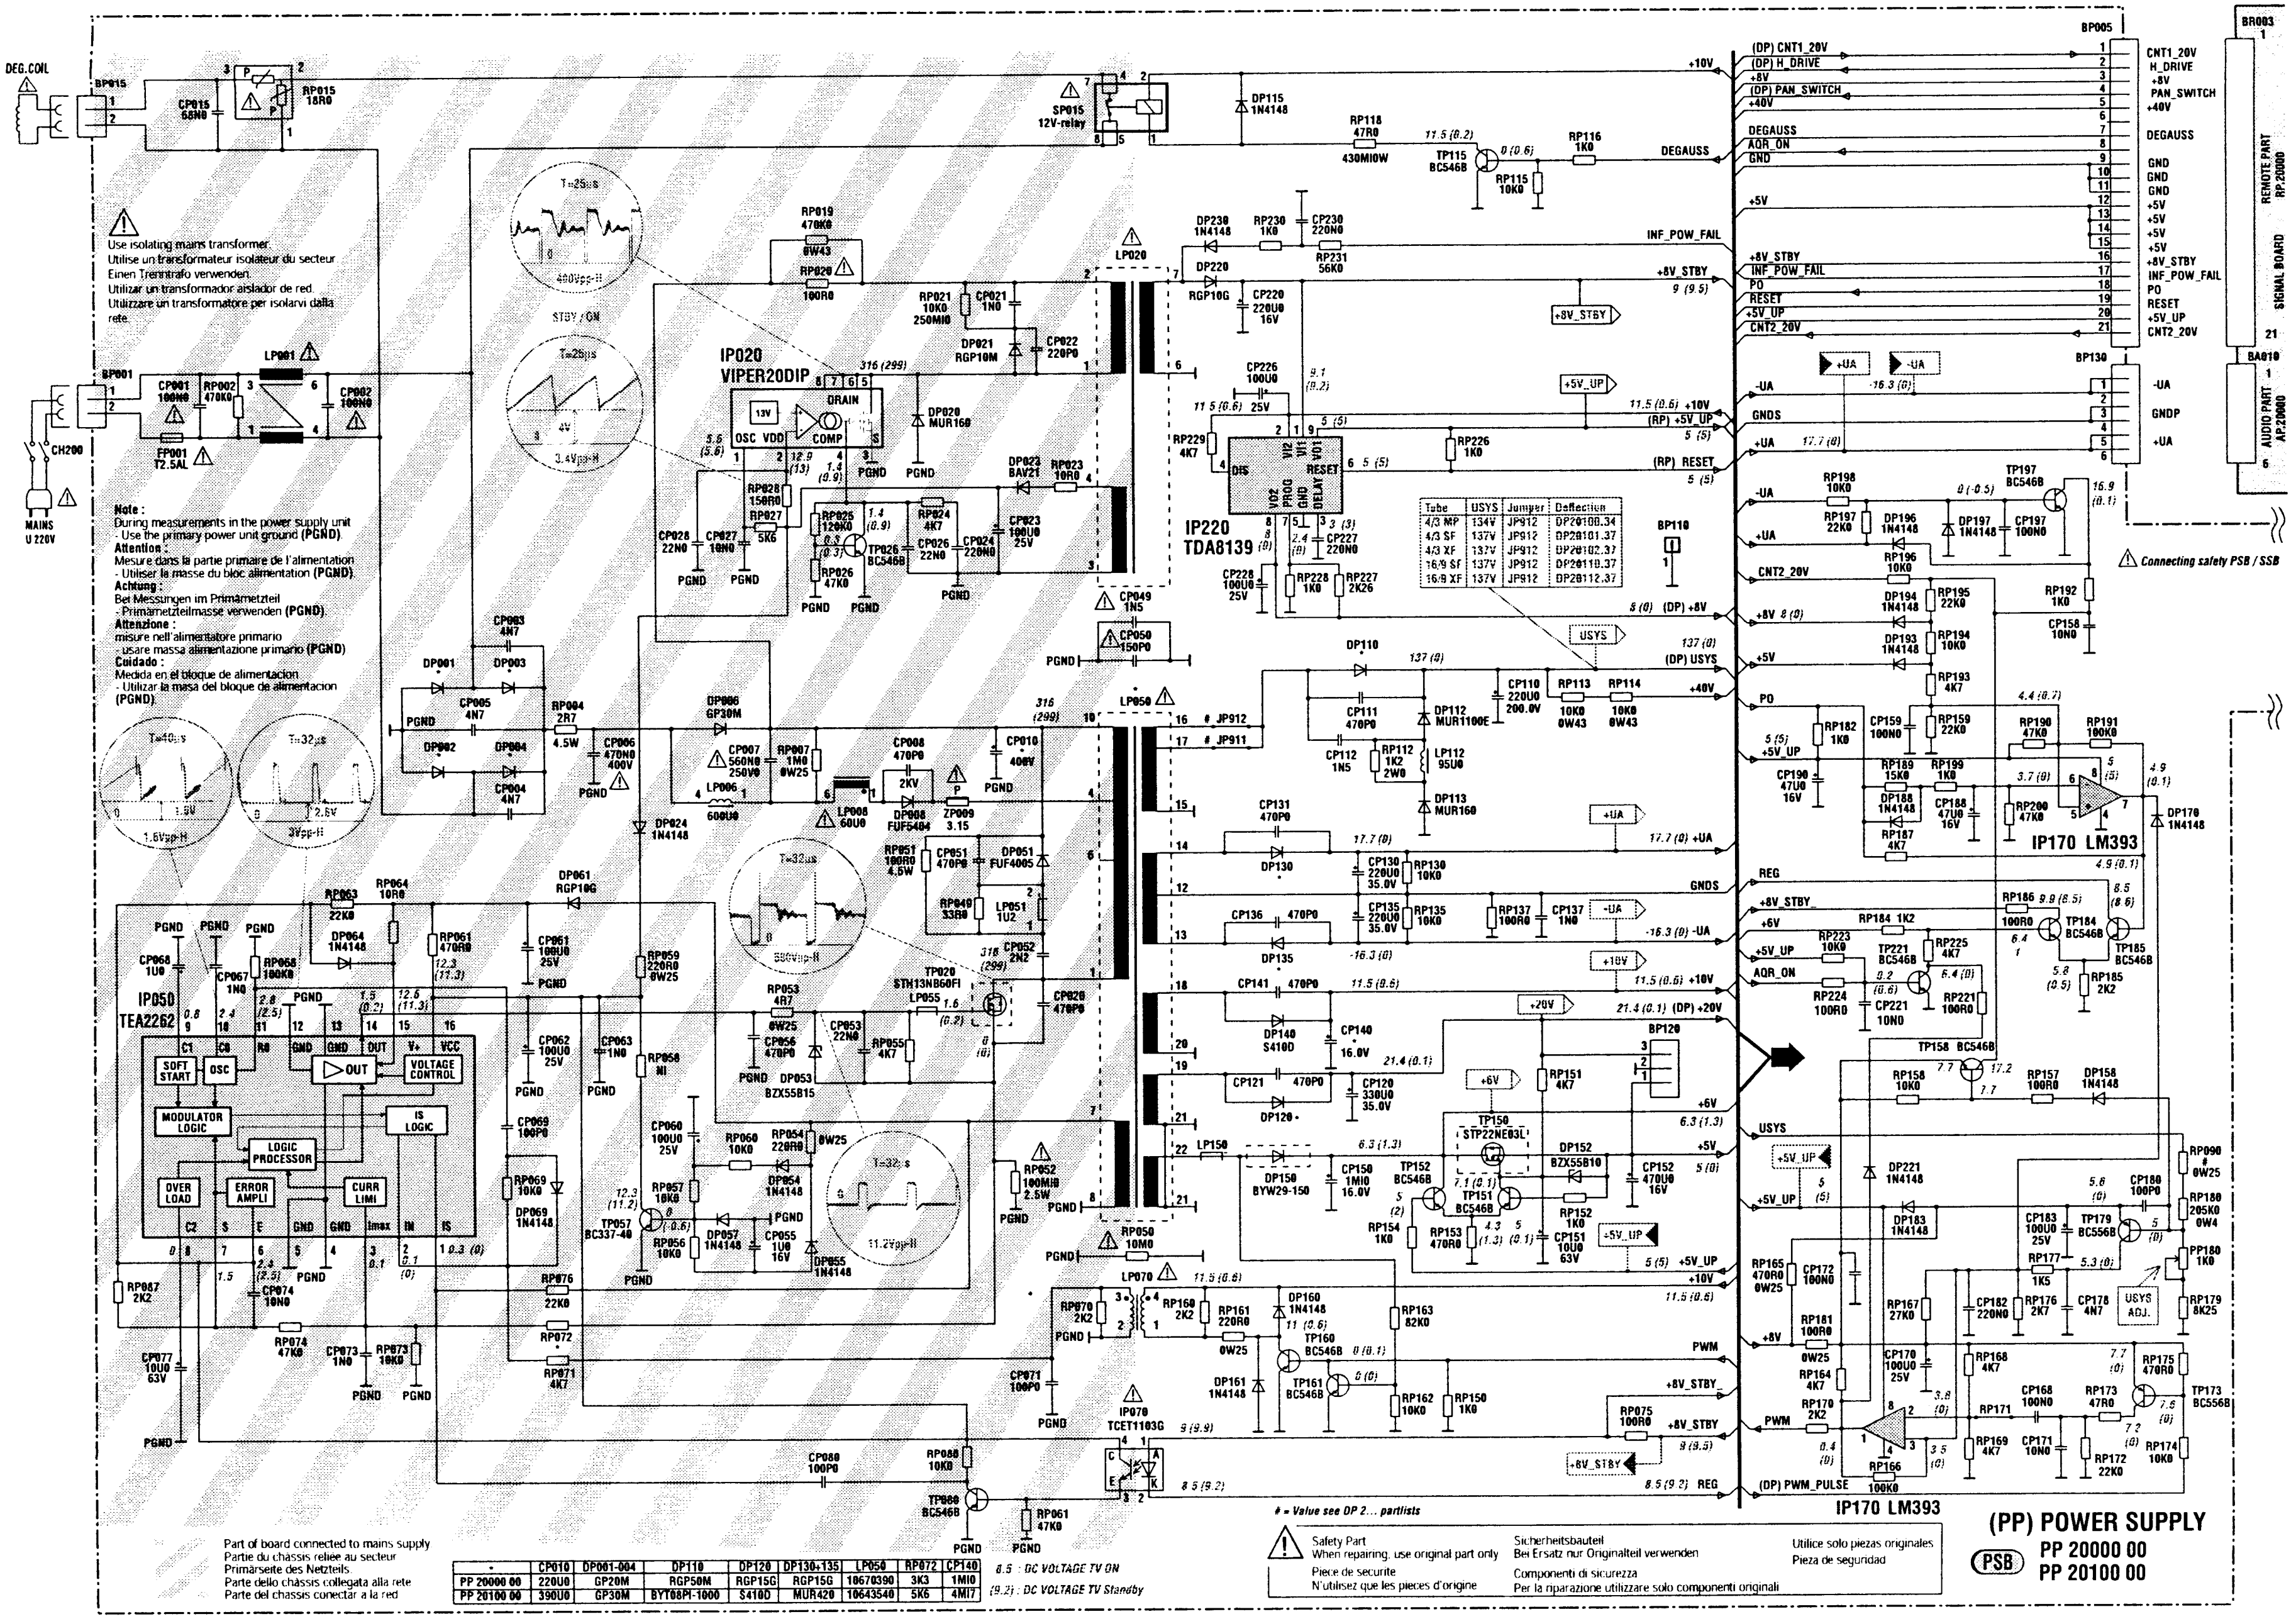
DEG.COIL
BP015
CP015 68N0
RP015 18R0
SP015 12V-relay
DP115 1N4148
RP118 47R0 430MI0W
TP115 BC546B
RP115 10K0
RP116 1K0
DEGAUSS
MAINS U 220V
CH200
BP001
CP001 100N0
RP002 470K0
LP001
CP002 100N0
FP001 T2.5AL
IP020 VIPER20DIP
OSC VDD DRAIN COMP
RP019 470K0 0W43
RP020 100R0
RP021 10K0 250MI0
CP021 1N0
DP021 RGP10M
CP022 220P0
DP020 MUR160
DP023 BAV21
RP023 10R0
RP028 150R0
RP027 5K6
RP025 120K0
RP024 4K7
TP026 BC546B
RP026 47K0
CP026 22N0
CP024 220N0
CP023 100U0 25V
CP028 22N0
CP027 10N0
PGND
LP020
CP049 1N5
CP050 150P0
DP230 1N4148
RP230 1K0
CP230 220N0
RP231 56K0
DP220
RGP10G
CP220 220U0 16V
CP226 100U0 25V
RP229 4K7
IP220 TDA8139
CP228 100U0 25V
RP228 1K0
RP227 2K26
CP227 220N0
RP226 1K0
INF_POW_FAIL
+8V_STBY
+5V_UP
(RP) +5V_UP
(RP) RESET
+10V
BP110
USYS
(DP) USYS
(DP) +8V
+40V
DP001 DP002 DP003 DP004
CP003 4N7
CP005 4N7
CP004 4N7
RP004 2R7 4.5W
CP006 470N0 400V
DP006 GP30M
CP007 560N0 250V0
RP007 1M0 0W25
LP006 600U0
DP024 1N4148
LP008 60U0
CP008 470P0 2KV
DP008 FUF5404
ZP009 3.15
CP010 400V
RP051 100R0 4.5W
CP051 470P0
DP051 FUF4005
RP049 33R0
LP051 1U2
CP052 2N2
TP020 STH13NB60FI
LP055 1U0
CP020 470P0
LP050
JP912
JP911
DP110
CP111 470P0
CP112 1N5
RP112 1K2 2W0
DP112 MUR1100E
LP112 95U0
DP113 MUR160
CP110 220U0 200.0V
RP113 10K0 0W43
RP114 10K0 0W43
CP131 470P0
DP130
CP130 220U0 35.0V
RP130 10K0
CP135 220U0 35.0V
RP135 10K0
CP136 470P0
DP135
RP137 100R0
CP137 1N0
+UA
-UA
GNDS
+10V
+20V
CP141 470P0
DP140 S4100
CP140 16.0V
CP121 470P0
DP120
CP120 330U0 35.0V
BP120
RP151 4K7
+6V
LP150
DP150 BYW29-150
CP150 1MI0 16.0V
TP150 STP22NE03L
DP152 BZX55B10
CP152 470U0 16V
TP152 BC546B
TP151 BC546B
RP154 1K0
RP153 470R0
RP152 1K0
CP151 10U0 63V
+5V
IP050 TEA2262
SOFT START
OSC
OUT
VOLTAGE CONTROL
MODULATOR LOGIC
LOGIC PROCESSOR
IS LOGIC
OVER LOAD
ERROR AMPLI
CURR LIMI
CP068 1U0
CP067 1N0
RP068 100K0
RP063 22K0
RP064 10R0
DP064 1N4148
RP061 470R0
CP061 100U0 25V
DP061 RGP10G
CP062 100U0 25V
CP063 1N0
CP069 100P0
RP069 10K0
DP069 1N4148
RP059 220R0 0W25
RP058 NI
RP053 4R7 0W25
CP056 470P0
DP053 BZX55B15
CP053 22N0
RP055 4K7
CP060 100U0 25V
RP060 10K0
RP054 220R0 0W25
DP054 1N4148
RP057 10K0
TP057 BC337-40
RP056 10K0
DP057 1N4148
CP055 1U0 16V
DP055 1N4148
RP052 100MI0 2.5W
RP050 10M0
RP076 22K0
RP072
RP071 4K7
RP087 2K2
CP074 10N0
RP074 47K0
CP073 1N0
RP073 10K0
CP077 10U0 63V
CP071 100P0
LP070
RP070 2K2
RP160 2K2
RP161 220R0 0W25
DP160 1N4148
TP160 BC546B
DP161 1N4148
TP161 BC546B
RP163 82K0
RP162 10K0
RP150 1K0
IP070 TCET1103G
CP080 100P0
RP080 10K0
TP080 BC546B
RP061 47K0
RP075 100R0
PWM
REG
BP005
CNT1_20V
H_DRIVE
+8V
PAN_SWITCH
+40V
DEGAUSS
AQR_ON
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
+5V_UP
CNT2_20V
BR003
REMOTE PART RP.20000
SIGNAL BOARD
BP130
GNDP
BA010
AUDIO PART AP.20000
RP198 10K0
RP197 22K0
DP196 1N4148
DP197 1N4148
CP197 100N0
TP197 BC546B
RP196 10K0
DP194 1N4148
RP195 22K0
DP193 1N4148
RP194 10K0
RP193 4K7
RP192 1K0
CP158 10N0
RP182 1K0
CP159 100N0
RP159 22K0
RP189 15K0
RP199 1K0
CP190 47U0 16V
DP188 1N4148
CP188 47U0 16V
RP187 4K7
RP190 47K0
RP191 100K0
RP200 47K0
IP170 LM393
DP170 1N4148
RP186 100R0
TP184 BC546B
TP185 BC546B
RP185 2K2
RP184 1K2
RP223 10K0
TP221 BC546B
RP225 4K7
RP224 100R0
CP221 10N0
RP221 100R0
TP158 BC546B
RP158 10K0
RP157 100R0
DP158 1N4148
DP221 1N4148
DP183 1N4148
CP183 100U0 25V
TP179 BC556B
CP180 100P0
RP090 0W25
RP180 205K0 0W4
RP177 1K5
PP180 1K0
USYS ADJ.
RP179 8K25
RP165 470R0 0W25
CP172 100N0
RP181 100R0 0W25
RP167 27K0
CP182 220N0
RP176 2K7
CP178 4N7
CP170 100U0 25V
RP164 4K7
RP170 2K2
RP168 4K7
RP171
CP168 100N0
RP173 47R0
RP175 470R0
TP173 BC556B
RP169 4K7
CP171 10N0
RP172 22K0
RP174 10K0
RP166 100K0
(DP) PWM_PULSE
IP170 LM393
T=25µs
400Vpp-H
STBY / ON
3.4Vpp-H
T=40µs
1.6Vpp-H
T=32µs
3Vpp-H
580Vpp-H
11.2Vpp-H
Connecting safety PSB / SSB

Use isolating mains transformer.
Utilise un transformateur isolateur du secteur.
Einen Trenntrafo verwenden.
Utilizar un transformador aislador de red.
Utilizzare un transformatore per isolarvi dalla rete.

Note :
During measurements in the power supply unit
- Use the primary power unit ground **(PGND)**.

Attention :
Mesure dans la partie primaire de l'alimentation
- Utiliser la masse du bloc alimentation **(PGND)**.

Achtung :
Bei Messungen im Primärnetzteil
- Primärnetzteilmasse verwenden **(PGND)**.

Attenzione :
misure nell'alimentatore primario
- usare massa alimentazione primario **(PGND)**

Cuidado :
Medida en el bloque de alimentacion
- Utilizar la masa del bloque de alimentacion **(PGND)**.

Tube	USYS	Jumper	Deflection
4/3 MP	134V	JP912	DP20100.34
4/3 SF	137V	JP912	DP20101.37
4/3 XF	137V	JP912	DP20102.37
16/9 SF	137V	JP912	DP20110.37
16/9 XF	137V	JP912	DP20112.37

Part of board connected to mains supply
Partie du châssis reliée au secteur
Primärseite des Netzteils.
Parte dello chàssis collegata alla rete
Parte del chassis conectar a la red

*	CP010	DP001-004	DP110	DP120	DP130+135	LP050	RP072	CP140
PP 20000 00	220U0	GP20M	RGP50M	RGP15G	RGP15G	10670390	3K3	1MI0
PP 20100 00	390U0	GP30M	BYT08PI-1000	S4100	MUR420	10643540	5K6	4MI7

8.5 : DC VOLTAGE TV ON
(9.2) : DC VOLTAGE TV Standby

= Value see DP 2... partlists

Safety Part When repairing, use original part only	Sicherheitsbauteil Bei Ersatz nur Originalteil verwenden	Utilice solo piezas originales Pieza de seguridad
Piece de securite N'utilisez que les pieces d'origine	Componenti di sicurezza Per la riparazione utilizzare solo componenti originali	

(PP) POWER SUPPLY

PSB PP 20000 00
PP 20100 00

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

POWER SUPPLY PART - PARTIE ALIMENTATION - NETZTEIL - ALIMENTAZIONE - ALIMENTACIÓN

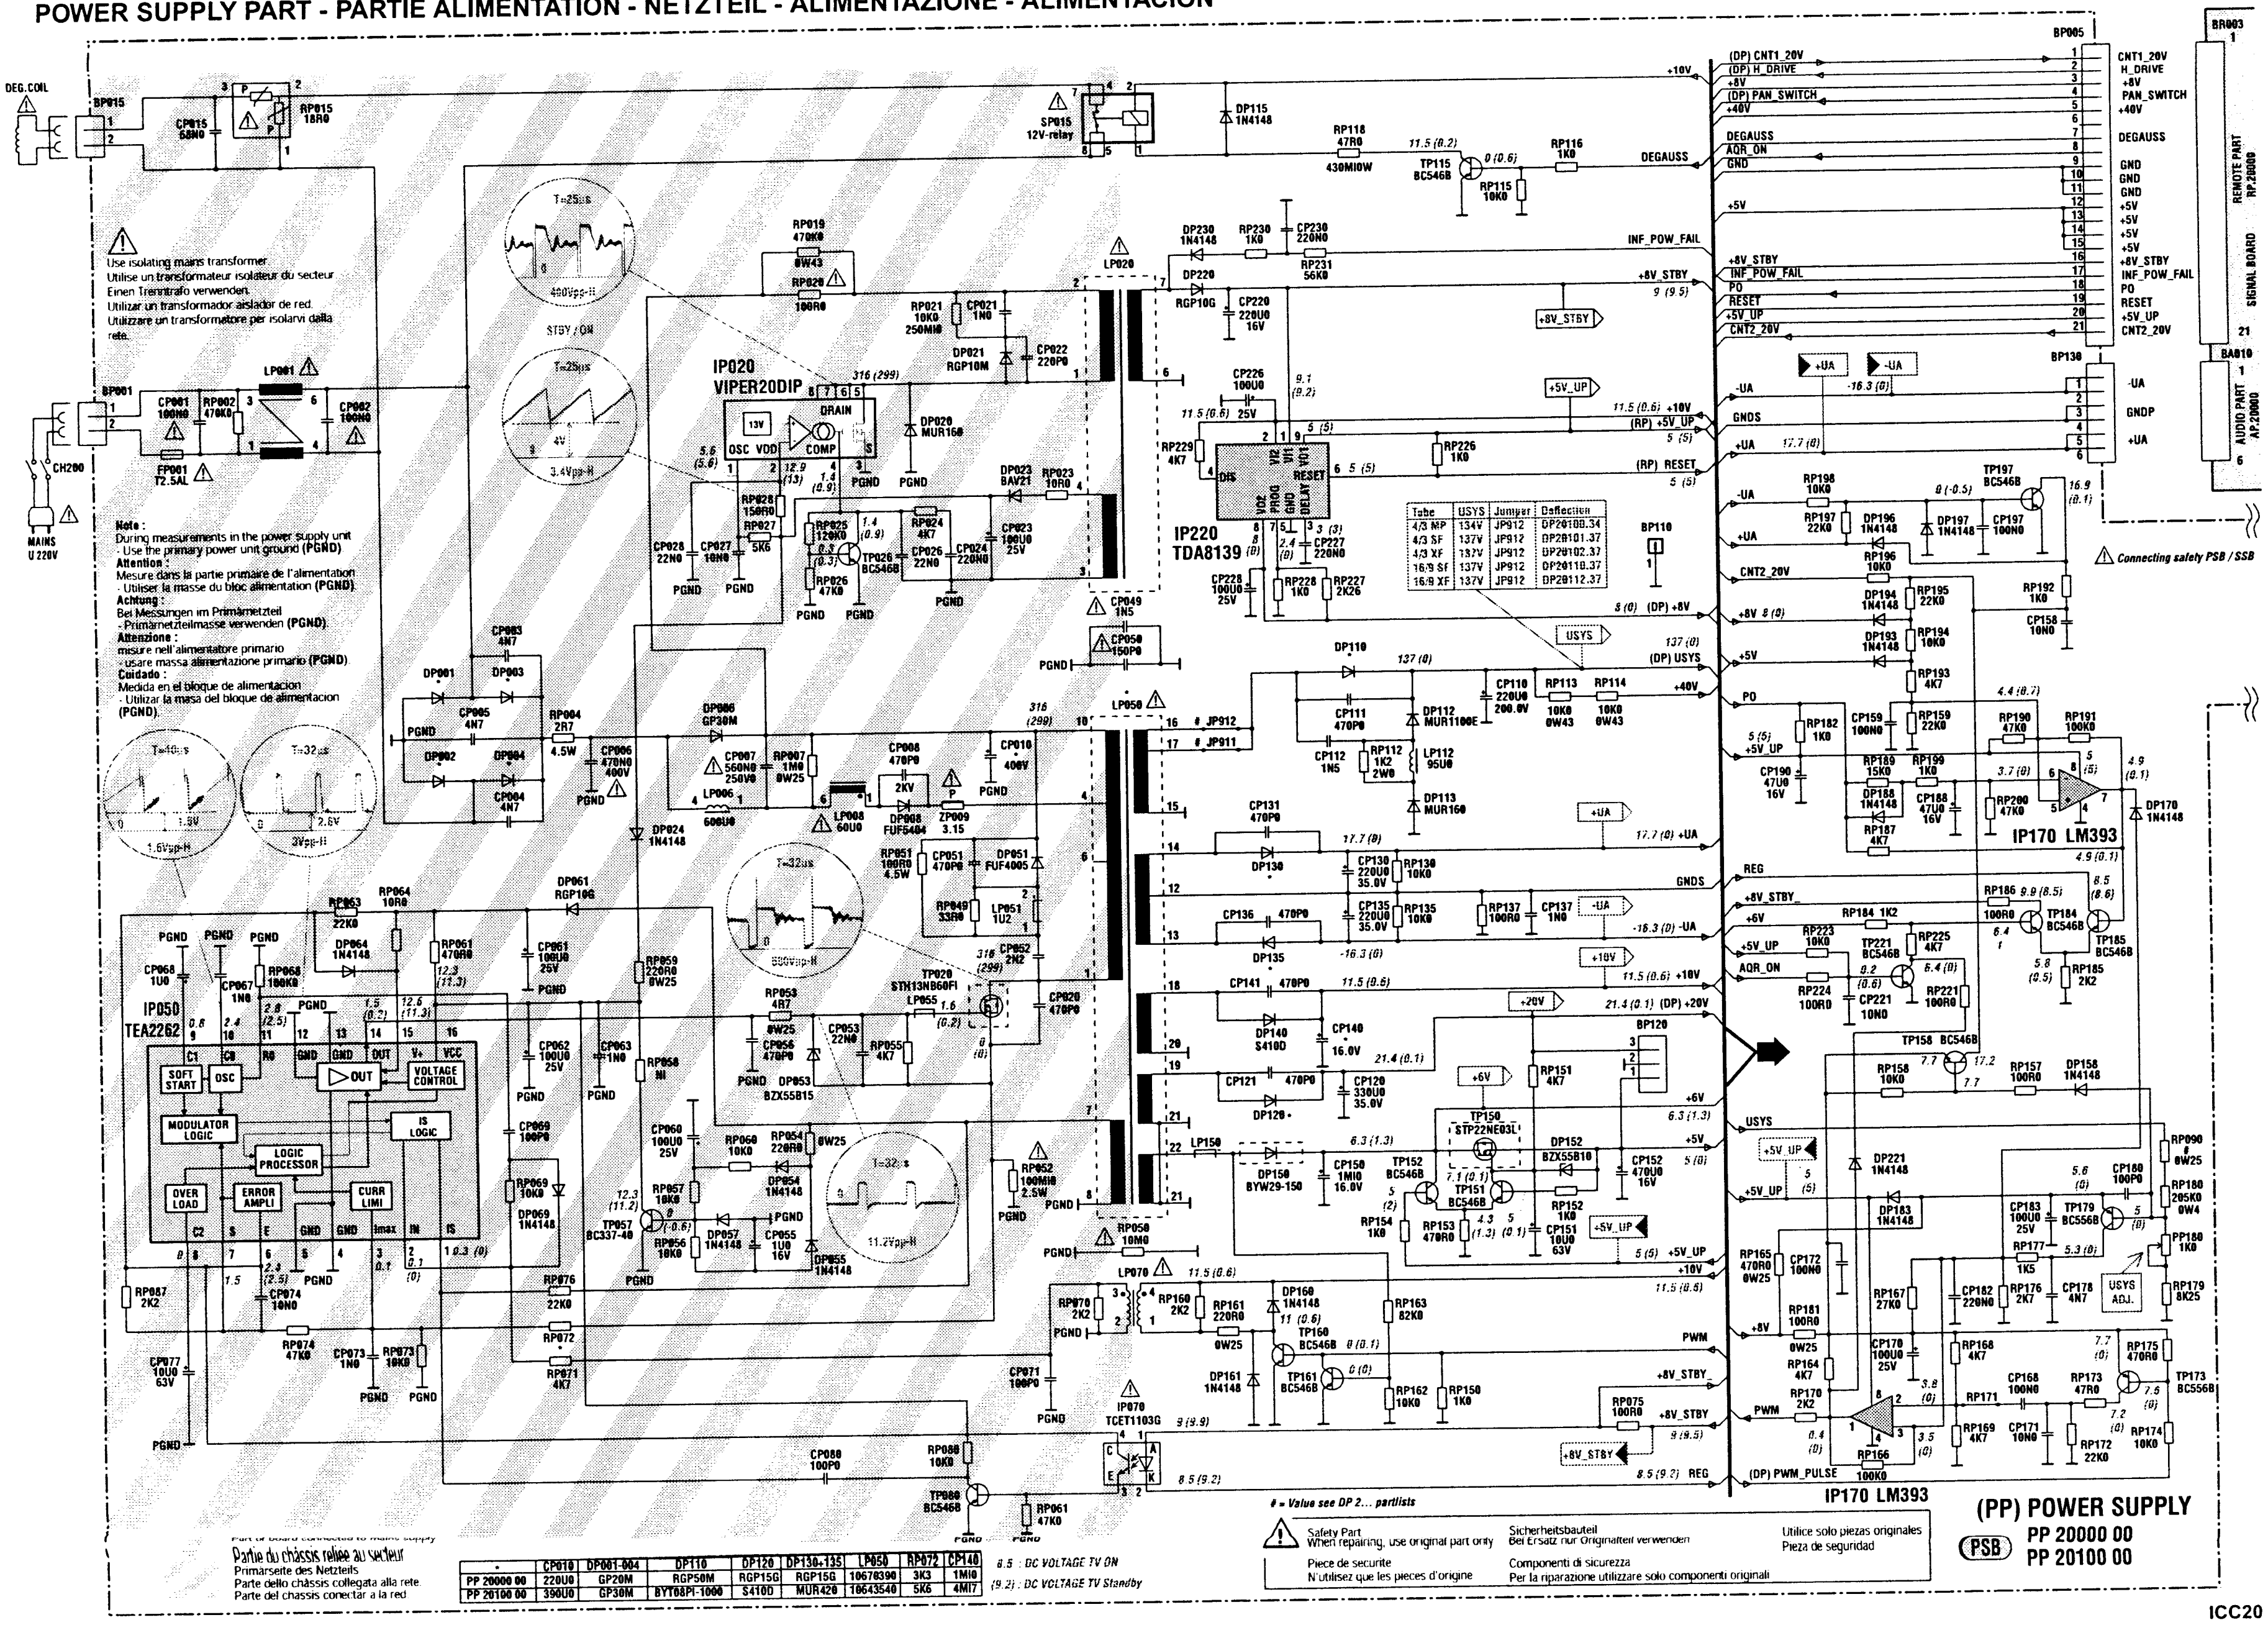
DEG.COIL
BP015
CP015 68N0
RP015 18R0
SP015 12V-relay
BP001
CP001 100N0
RP002 470K0
LP001
CP002 100N0
FP001 T2.5AL
CH200
MAINS U 220V
IP020 VIPER20DIP
DRAIN
OSC
VDD
COMP
RP019 470K0
RP020 100R0
LP020
IP050 TEA2262
SOFT START
OSC
MODULATOR LOGIC
LOGIC PROCESSOR
OVER LOAD
ERROR AMPLI
CURR LIMI
VOLTAGE CONTROL
IS LOGIC
TP020 STH13NB60FI
TP057 BC337-40
TP080 BC546B
IP070 TCET1103G
LP050
LP070
IP220 TDA8139
DP110
DP120
DP130
DP135
DP140 S410D
DP150 BYW29-150
TP150 STP22NE03L
BP110
BP120
BP130
BP005
BR003
BA010
REMOTE PART RP.20000
SIGNAL BOARD
AUDIO PART AP.20000
CNT1_20V
H_DRIVE
+8V
PAN_SWITCH
+40V
DEGAUSS
AQR_ON
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
+5V_UP
CNT2_20V
-UA
GNDS
+UA
USYS
REG
PWM
(DP) PWM_PULSE
IP170 LM393
Connecting safety PSB / SSB

Use isolating mains transformer.
Utilise un transformateur isolateur du secteur
Einen Trenntrafo verwenden.
Utilizar un transformador aislador de red.
Utilizzare un transformatore per isolarvi dalla rete.

Note :
During measurements in the power supply unit
- Use the primary power unit ground **(PGND)**.

Attention :
Mesure dans la partie primaire de l'alimentation
- Utiliser la masse du bloc alimentation **(PGND)**.

Achtung :
Bei Messungen im Primärnetzteil
- Primärnetzteilmasse verwenden **(PGND)**.

Attenzione :
misure nell'alimentatore primario
- usare massa alimentazione primario **(PGND)**.

Cuidado :
Medida en el bloque de alimentacion
- Utilizar la masa del bloque de alimentacion **(PGND)**.

Tube	USYS	Jumper	Deflection
4/3 MP	134V	JP912	DP20100.34
4/3 SF	137V	JP912	DP20101.37
4/3 XF	137V	JP912	DP20102.37
16/9 SF	137V	JP912	DP20110.37
16/9 XF	137V	JP912	DP20112.37

Part of board connected to mains supply
Partie du châssis reliée au secteur
Primärseite des Netzteils
Parte dello châssis collegata alla rete.
Parte del chassis conectar a la red

*	CP010	DP001-004	DP110	DP120	DP130+135	LP050	RP072	CP140
PP 20000 00	220U0	GP20M	RGP50M	RGP15G	RGP15G	10670390	3K3	1MI0
PP 20100 00	390U0	GP30M	BYT08PI-1000	S410D	MUR420	10643540	5K6	4MI7

8.5 : DC VOLTAGE TV ON
(9.2) : DC VOLTAGE TV Standby

= Value see DP 2... partlists

Safety Part
When repairing, use original part only

Piece de securite
N'utilisez que les pieces d'origine

Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

Componenti di sicurezza
Per la riparazione utilizzare solo componenti originali

Utilice solo piezas originales
Pieza de seguridad

(PP) POWER SUPPLY

PSB PP 20000 00
PP 20100 00

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS
SCANNING - BALAYAGE - ABLENKUNG - BARRIDO - SCANSIONE

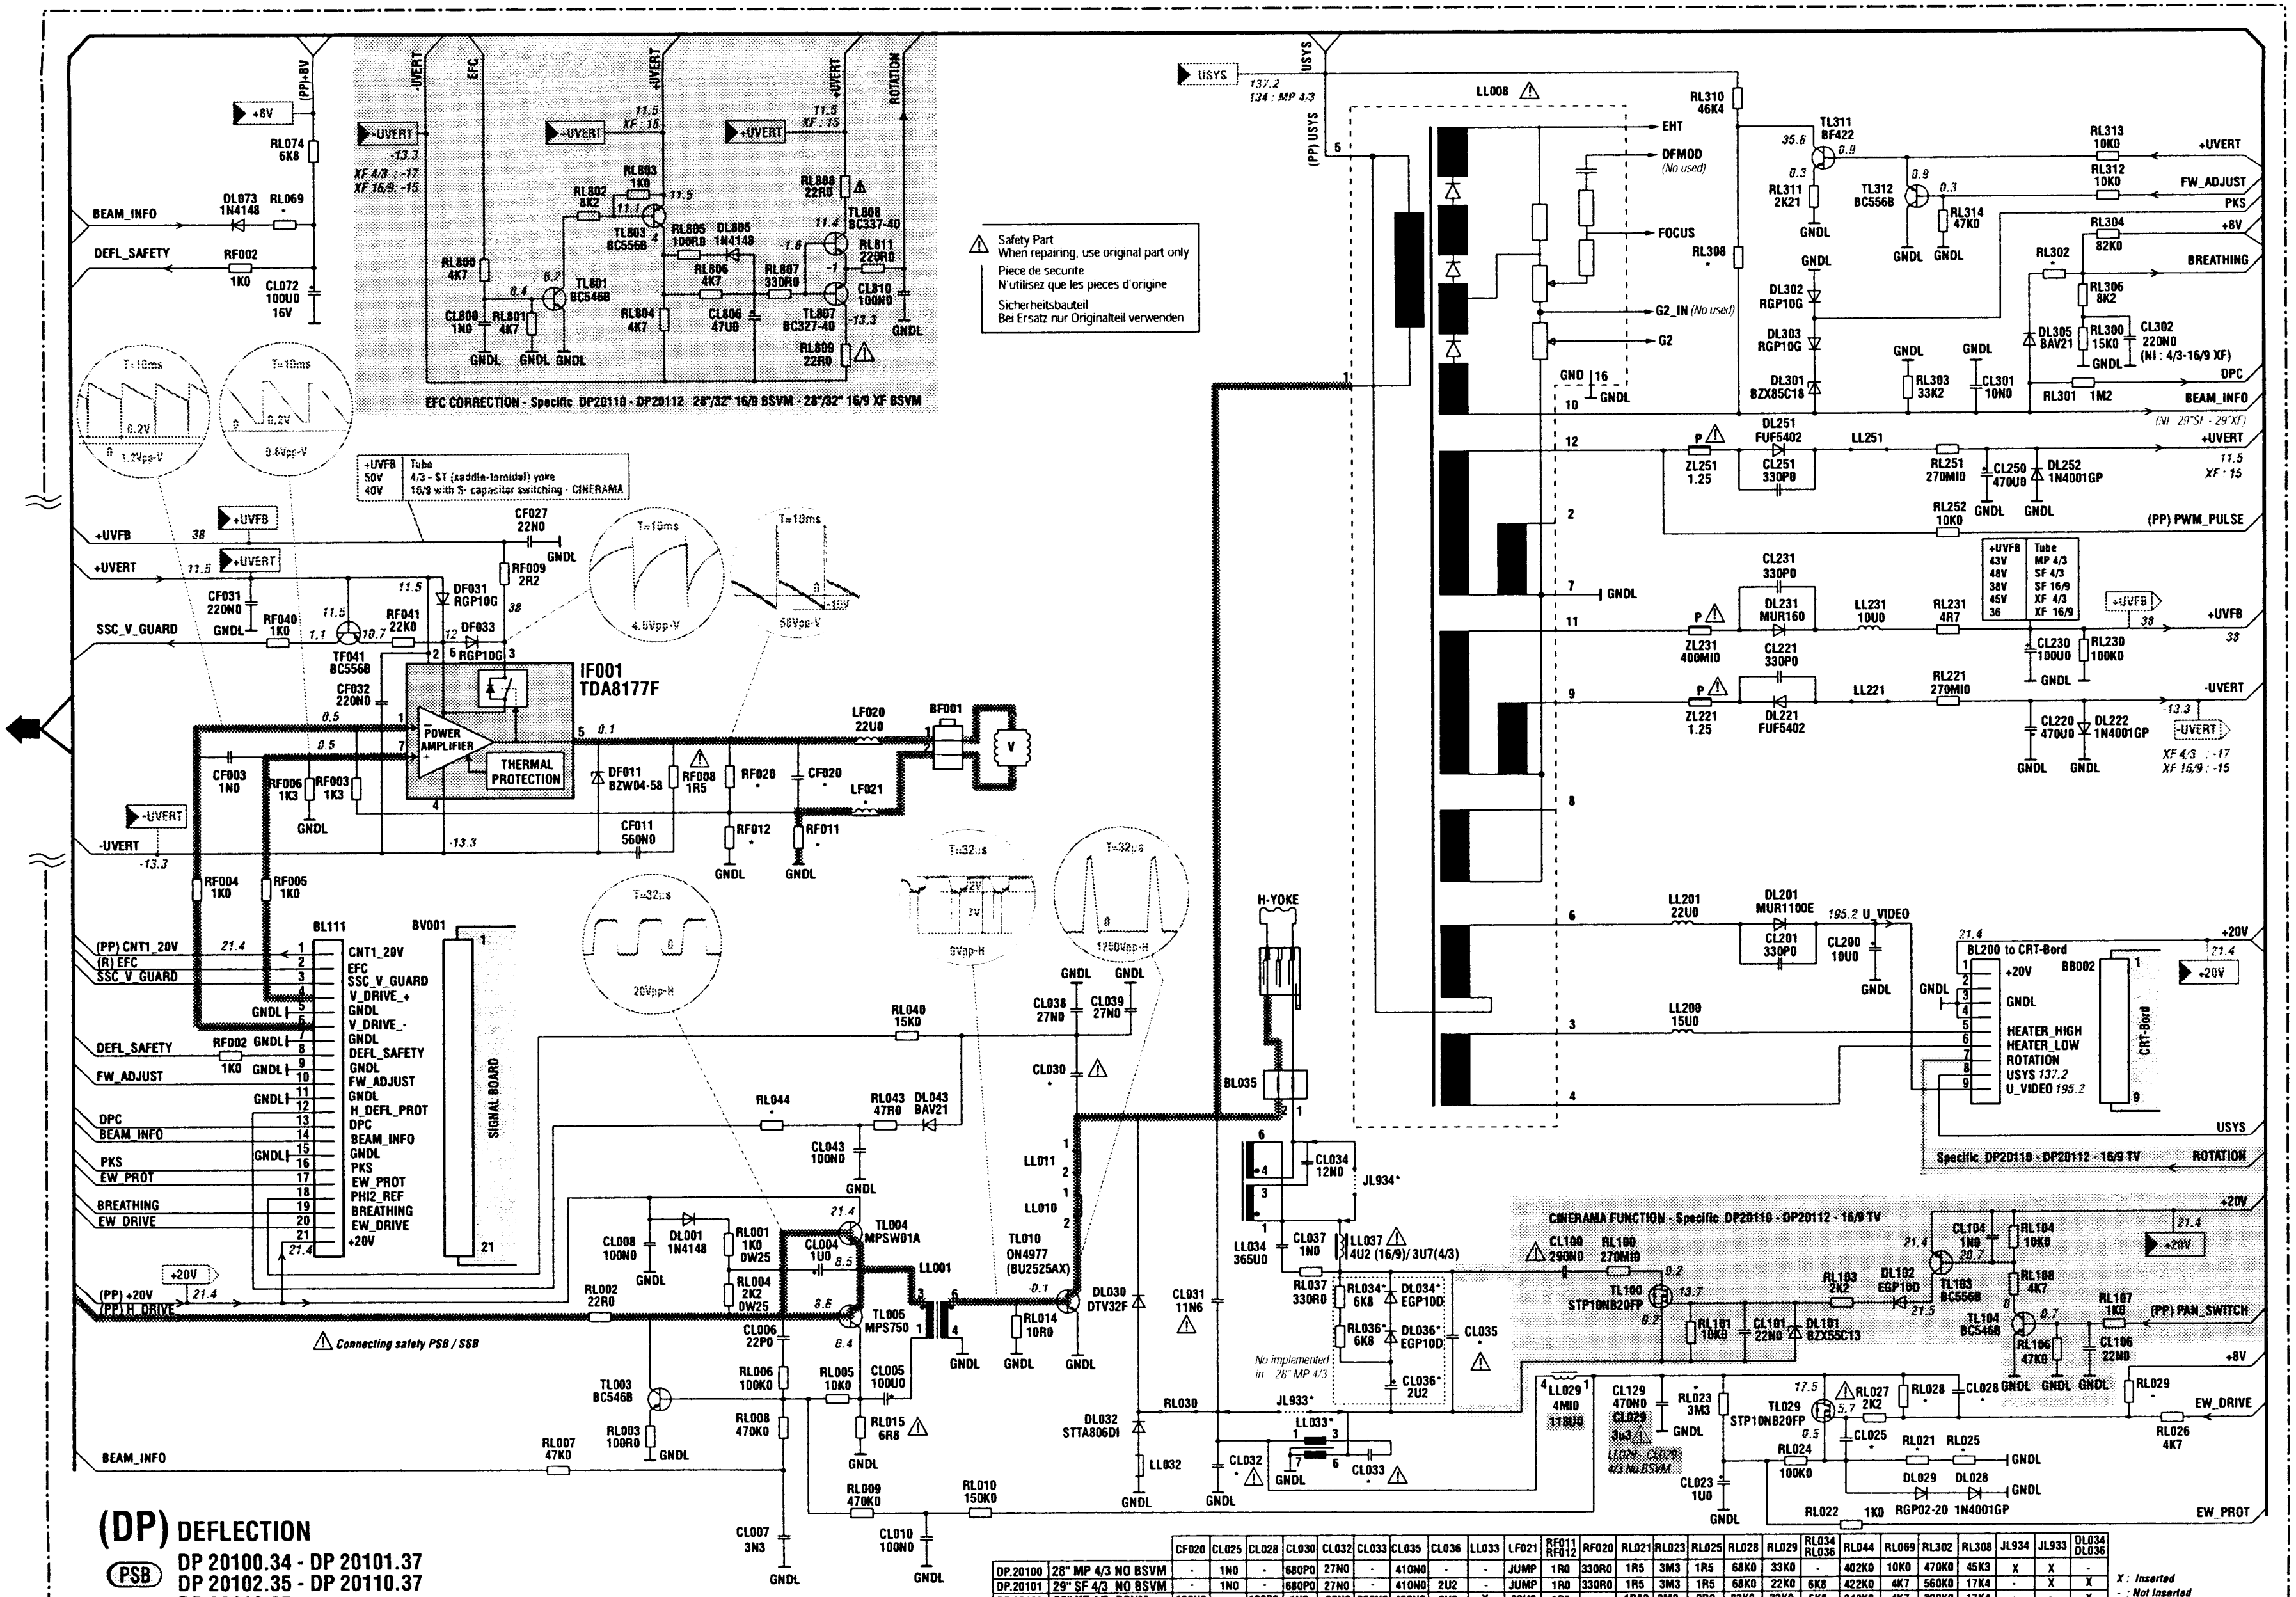

EFC CORRECTION - Specific DP20110 - DP20112 28"/32" 16/9 BSVM - 28"/32" 16/9 XF BSVM
IF001
TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
BL111
BV001
SIGNAL BOARD
H-YOKE
LL008
EHT
DFMOD (No used)
FOCUS
G2_IN (No used)
G2
BL200 to CRT-Bord
CRT-Bord
Specific DP20110 - DP20112 - 16/9 TV
CINERAMA FUNCTION - Specific DP20110 - DP20112 - 16/9 TV
Connecting safety PSB / SSB
Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden
+UVFB 50V 40V
Tube 4/3 - ST (saddle-toroidal) yoke
16/9 with S- capacitor switching - CINERAMA
BEAM_INFO
DEFL_SAFETY
SSC_V_GUARD
+UVFB
+UVERT
-UVERT
FW_ADJUST
DPC
PKS
EW_PROT
BREATHING
EW_DRIVE
(PP) +20V
(PP) H_DRIVE
(PP) PWM_PULSE
(PP) PAN_SWITCH
ROTATION
USYS

(DP) DEFLECTION

(PSB) DP 20100.34 - DP 20101.37
DP 20102.35 - DP 20110.37
DP 20112.35

		CF020	CL025	CL028	CL030	CL032	CL033	CL035	CL036	LL033	LF021	RF011 RF012	RF020	RL021	RL023	RL025	RL028	RL029	RL034 RL036	RL044	RL069	RL302	RL308	JL934	JL933	DL034 DL036
DP.20100	28" MP 4/3 NO BSVM	-	1N0	-	680P0	27N0	-	410N0	-	-	JUMP	1R0	330R0	1R5	3M3	1R5	68K0	33K0	-	402K0	10K0	470K0	45K3	X	X	-
DP.20101	29" SF 4/3 NO BSVM	-	1N0	-	680P0	27N0	-	410N0	2U2	-	JUMP	1R0	330R0	1R5	3M3	1R5	68K0	22K0	6K8	422K0	4K7	560K0	17K4	-	X	X
DP.20102	29" XF 4/3 BSVM	100N0	-	100P0	1N3	27N0	680N0	460N0	2U2	X	22U0	1R5	-	1R82	3M9	0R0	82K0	22K0	6K8	348K0	4K7	390K0	17K4	-	-	X
DP.20110	28/32" 16.9 BSVM	-	1N0	-	1N9	33N0	680N0	560N0	2U2	X	JUMP	1R82	-	1R21	3M3	1R0	68K0	33K0	6K8	536K0	4K7	470K0	17K4	-	-	X
DP.20112	28/32" 16.9 XF BSVM	100N0	1N0	-	1N9	27N0	510N0	510N0	2U2	X	22U0	1R82	-	1R21	3M9	1R0	68K0	33K0	6K8	536K0	4K7	470K0	15K	-	-	X

X : Inserted
- : Not Inserted

POWER / SCAN BOARD - PLATINE ALIMENTATION / BALAYAGE - NETZTEIL- UND ABLENKPLATINE - PIASTRA DEFLESSIONE / ALIMENTAZIONE - PLACA ALIMENTACIÓN / BARRIDOS

SCANNING - BALAYAGE - ABLENKUNG - BARRIDO - SCANSIONE

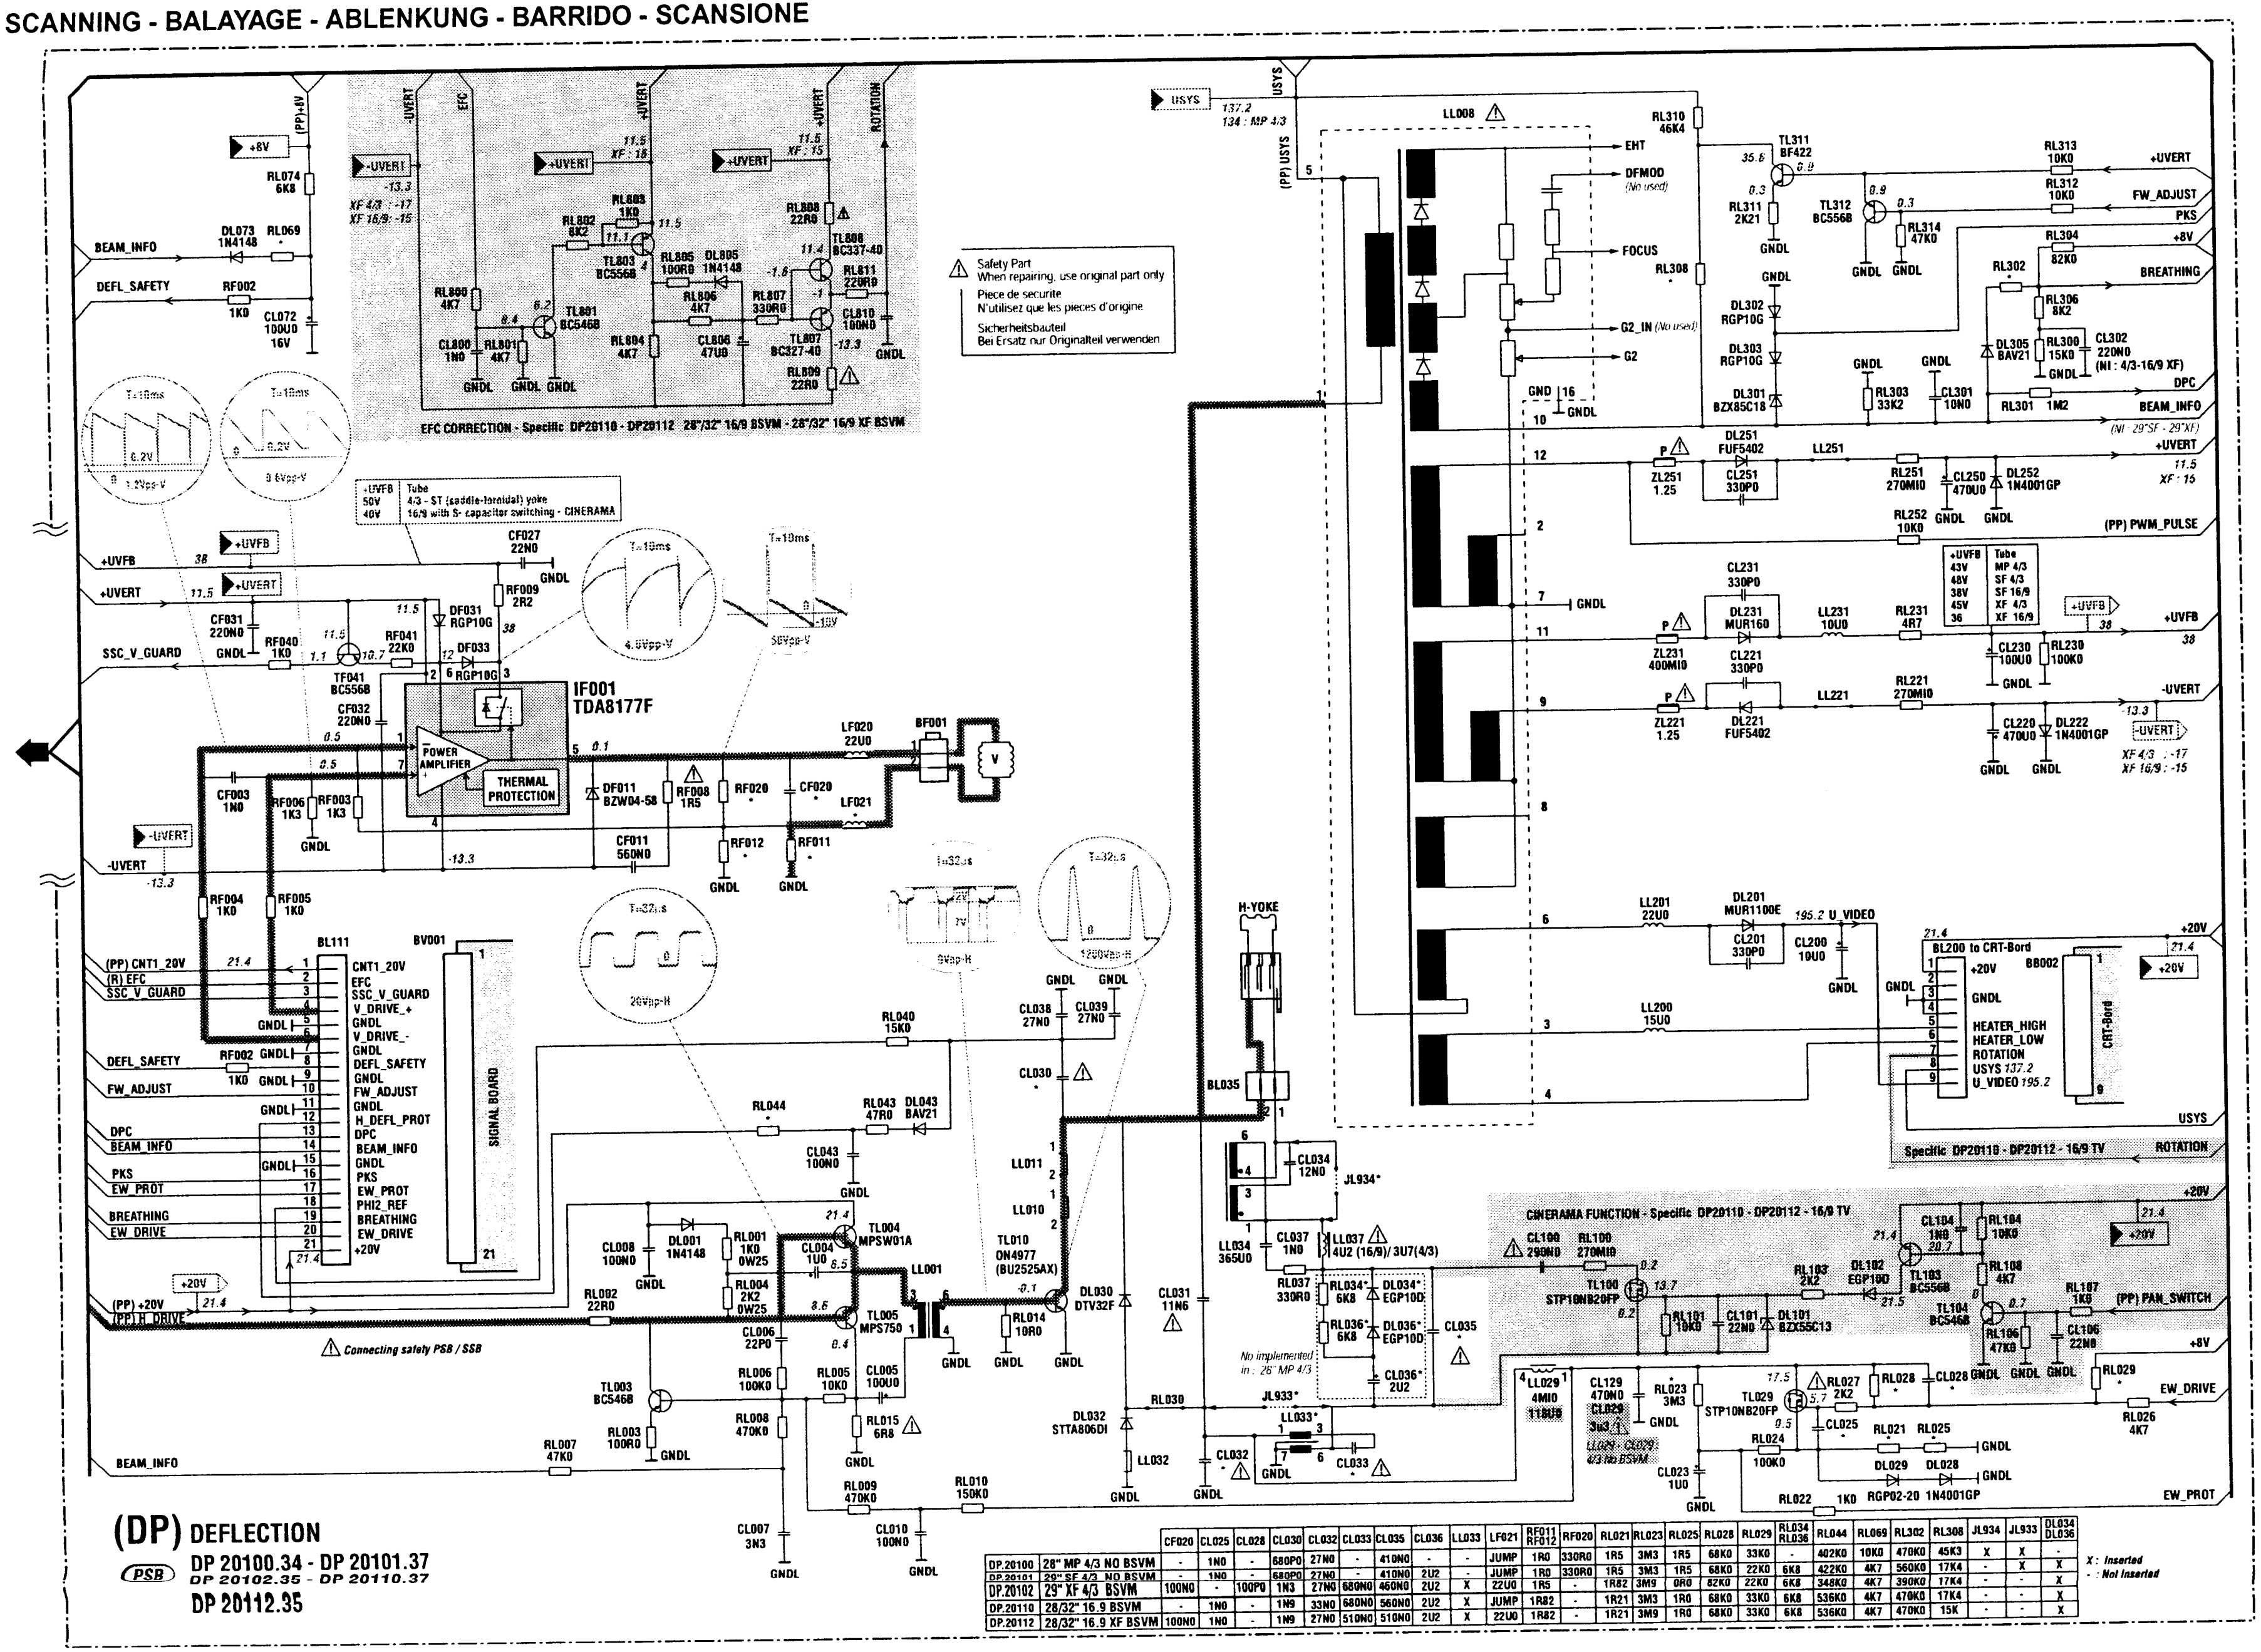
EFC CORRECTION - Specific DP20110 - DP20112 28"/32" 16/9 BSVM - 28"/32" 16/9 XF BSVM
IF001
TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden
+UVFB 50V 40V
Tube
4/3 - ST (saddle-toroidal) yoke
16/9 with S- capacitor switching - CINERAMA
BL111
BV001
SIGNAL BOARD
CNT1_20V
EFC
SSC_V_GUARD
V_DRIVE_+
GNDL
V_DRIVE_-
DEFL_SAFETY
FW_ADJUST
H_DEFL_PROT
DPC
BEAM_INFO
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
+20V
(PP) +20V
(PP) H_DRIVE
Connecting safety PSB / SSB
H-YOKE
LL008
EHT
DFMOD (No used)
FOCUS
G2_IN (No used)
G2
BL200 to CRT-Bord
HEATER_HIGH
HEATER_LOW
ROTATION
USYS 137.2
U_VIDEO 195.2
CRT-Bord
Specific DP20110 - DP20112 - 16/9 TV
CINERAMA FUNCTION - Specific DP20110 - DP20112 - 16/9 TV
(PP) PAN_SWITCH
EW_DRIVE
EW_PROT
+UVERT
FW_ADJUST
PKS
+8V
BREATHING
DPC
BEAM_INFO
(PP) PWM_PULSE
+UVFB
-UVERT
U_VIDEO
USYS
Not implemented in: 26" MP 4/3
LL029 - CL029 4/3 No BSVM

(DP) DEFLECTION

(PSB) DP 20100.34 - DP 20101.37
DP 20102.35 - DP 20110.37
DP 20112.35

		CF020	CL025	CL028	CL030	CL032	CL033	CL035	CL036	LL033	LF021	RF011 RF012	RF020	RL021	RL023	RL025	RL028	RL029	RL034 RL036	RL044	RL069	RL302	RL308	JL934	JL933	DL034 DL036
DP.20100	28" MP 4/3 NO BSVM	-	1N0	-	680P0	27N0	-	410N0	-	-	JUMP	1R0	330R0	1R5	3M3	1R5	68K0	33K0	-	402K0	10K0	470K0	45K3	X	X	-
DP.20101	29" SF 4/3 NO BSVM	-	1N0	-	680P0	27N0	-	410N0	2U2	-	JUMP	1R0	330R0	1R5	3M3	1R5	68K0	22K0	6K8	422K0	4K7	560K0	17K4	-	X	X
DP.20102	29" XF 4/3 BSVM	100N0	-	100P0	1N3	27N0	680N0	460N0	2U2	X	22U0	1R5	-	1R82	3M9	0R0	82K0	22K0	6K8	348K0	4K7	390K0	17K4	-	-	X
DP.20110	28/32" 16.9 BSVM	-	1N0	-	1N9	33N0	680N0	560N0	2U2	X	JUMP	1R82	-	1R21	3M3	1R0	68K0	33K0	6K8	536K0	4K7	470K0	17K4	-	-	X
DP.20112	28/32" 16.9 XF BSVM	100N0	1N0	-	1N9	27N0	510N0	510N0	2U2	X	22U0	1R82	-	1R21	3M9	1R0	68K0	33K0	6K8	536K0	4K7	470K0	15K	-	-	X

X : Inserted
- : Not Inserted

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
UPCONVERTER PART - PARTIE CONVERSION - UPCONVERTER STUFEN - CIRCUITO UPCONVERTER - SUPRACONVERSOR

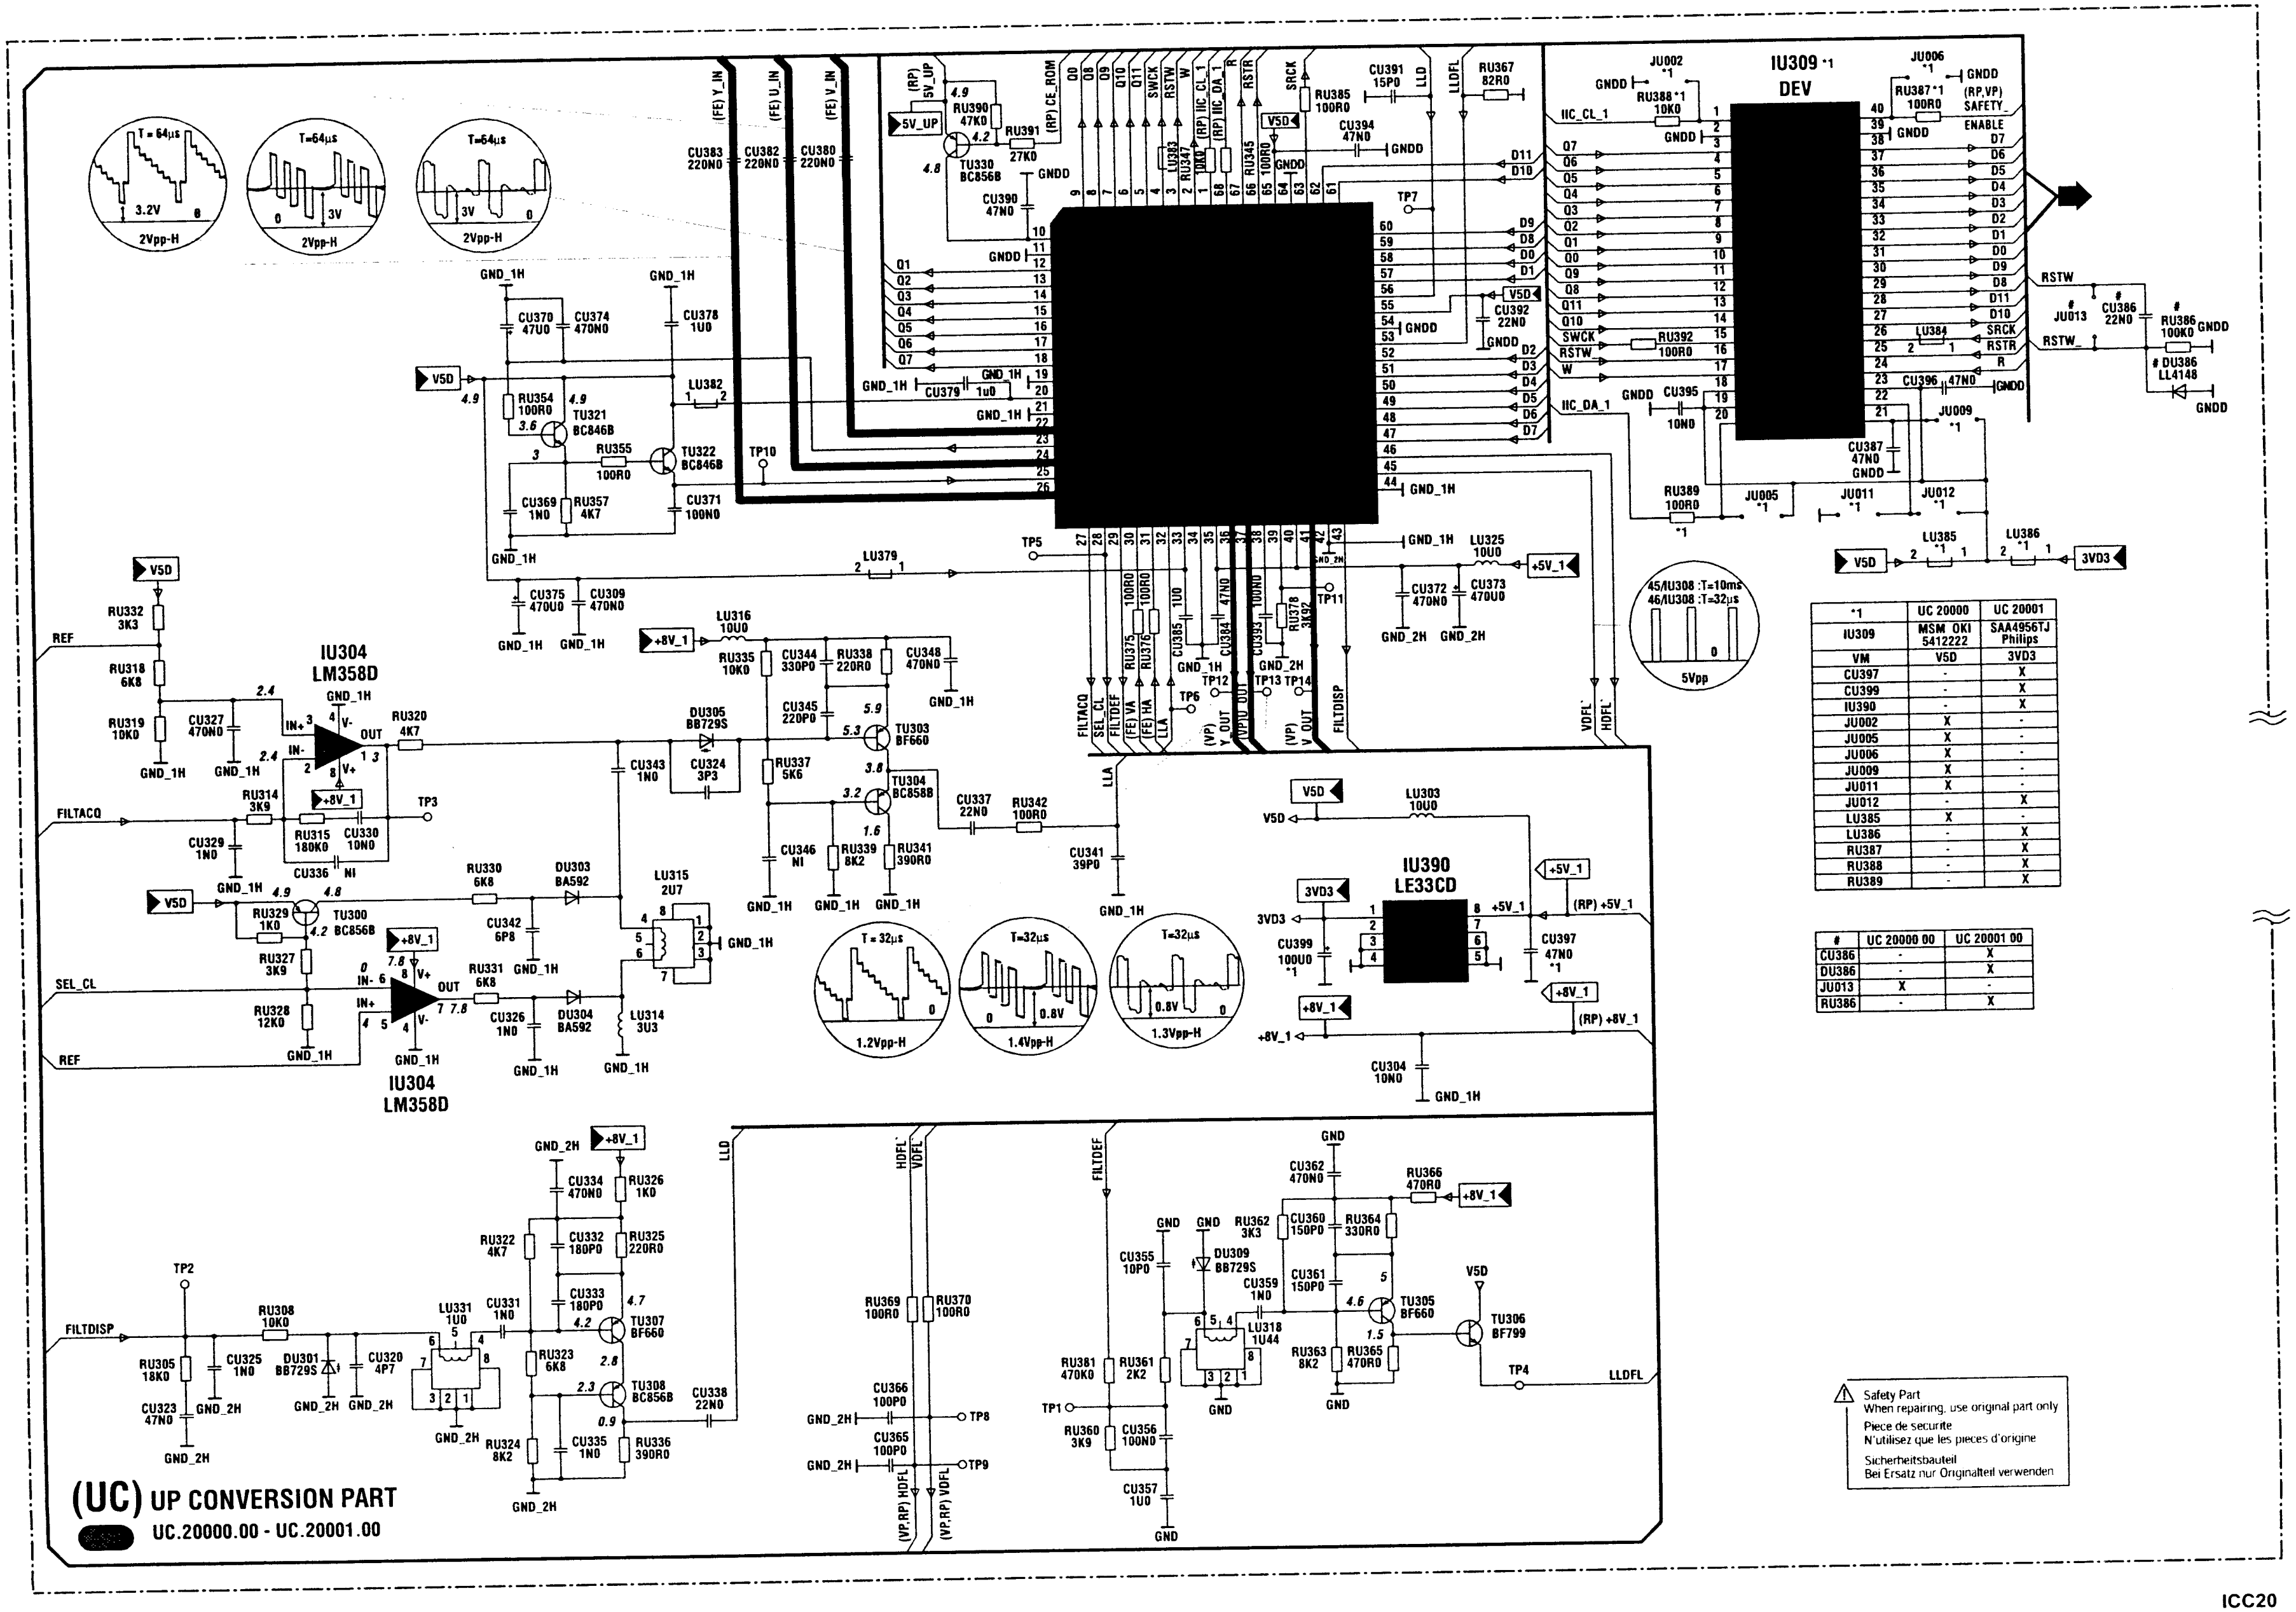
IU304
LM358D
IU309 *1
DEV
IU390
LE33CD
TU300 BC856B
TU303 BF660
TU304 BC858B
TU305 BF660
TU306 BF799
TU307 BF660
TU308 BC856B
TU321 BC846B
TU322 BC846B
TU330 BC856B
DU305 BB729S
DU309 BB729S
DU301 BB729S
DU303 BA592
DU304 BA592
DU386 LL4148
LU315 2U7
LU314 3U3
LU318 1U44
LU331 1U0
REF
FILTACQ
SEL_CL
FILTDISP
LLDFL
RSTW
V5D
3VD3
+8V_1
+5V_1
(RP) +5V_1
(RP) +8V_1
(FE) Y_IN
(FE) U_IN
(FE) V_IN
5V_UP
IIC_CL_1
IIC_DA_1
SAFETY_ENABLE
T=64µs
3.2V
2Vpp-H
3V
T=32µs
1.2Vpp-H
0.8V
1.4Vpp-H
1.3Vpp-H
45/IU308 :T=10ms
46/IU308 :T=32µs
5Vpp
TP1
TP2
TP3
TP4
TP5
TP6
TP7
TP8
TP9
TP10
TP11
TP12
TP13
TP14
GND_1H
GND_2H
GND

*1	UC 20000	UC 20001
IU309	MSM OKI 5412222	SAA4956TJ Philips
VM	V5D	3VD3
CU397	-	X
CU399	-	X
IU390	-	X
JU002	X	-
JU005	X	-
JU006	X	-
JU009	X	-
JU011	X	-
JU012	-	X
LU385	X	-
LU386	-	X
RU387	-	X
RU388	-	X
RU389	-	X

#	UC 20000 00	UC 20001 00
CU386	-	X
DU386	-	X
JU013	X	-
RU386	-	X

⚠ Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

(UC) UP CONVERSION PART
UC.20000.00 - UC.20001.00

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
VIDEO PART - PARTIE VIDEO - VIDEO-SIGNALVERARBEITUNG - ELABORAZIONE VIDEO - TRATAMENTO VIDEO

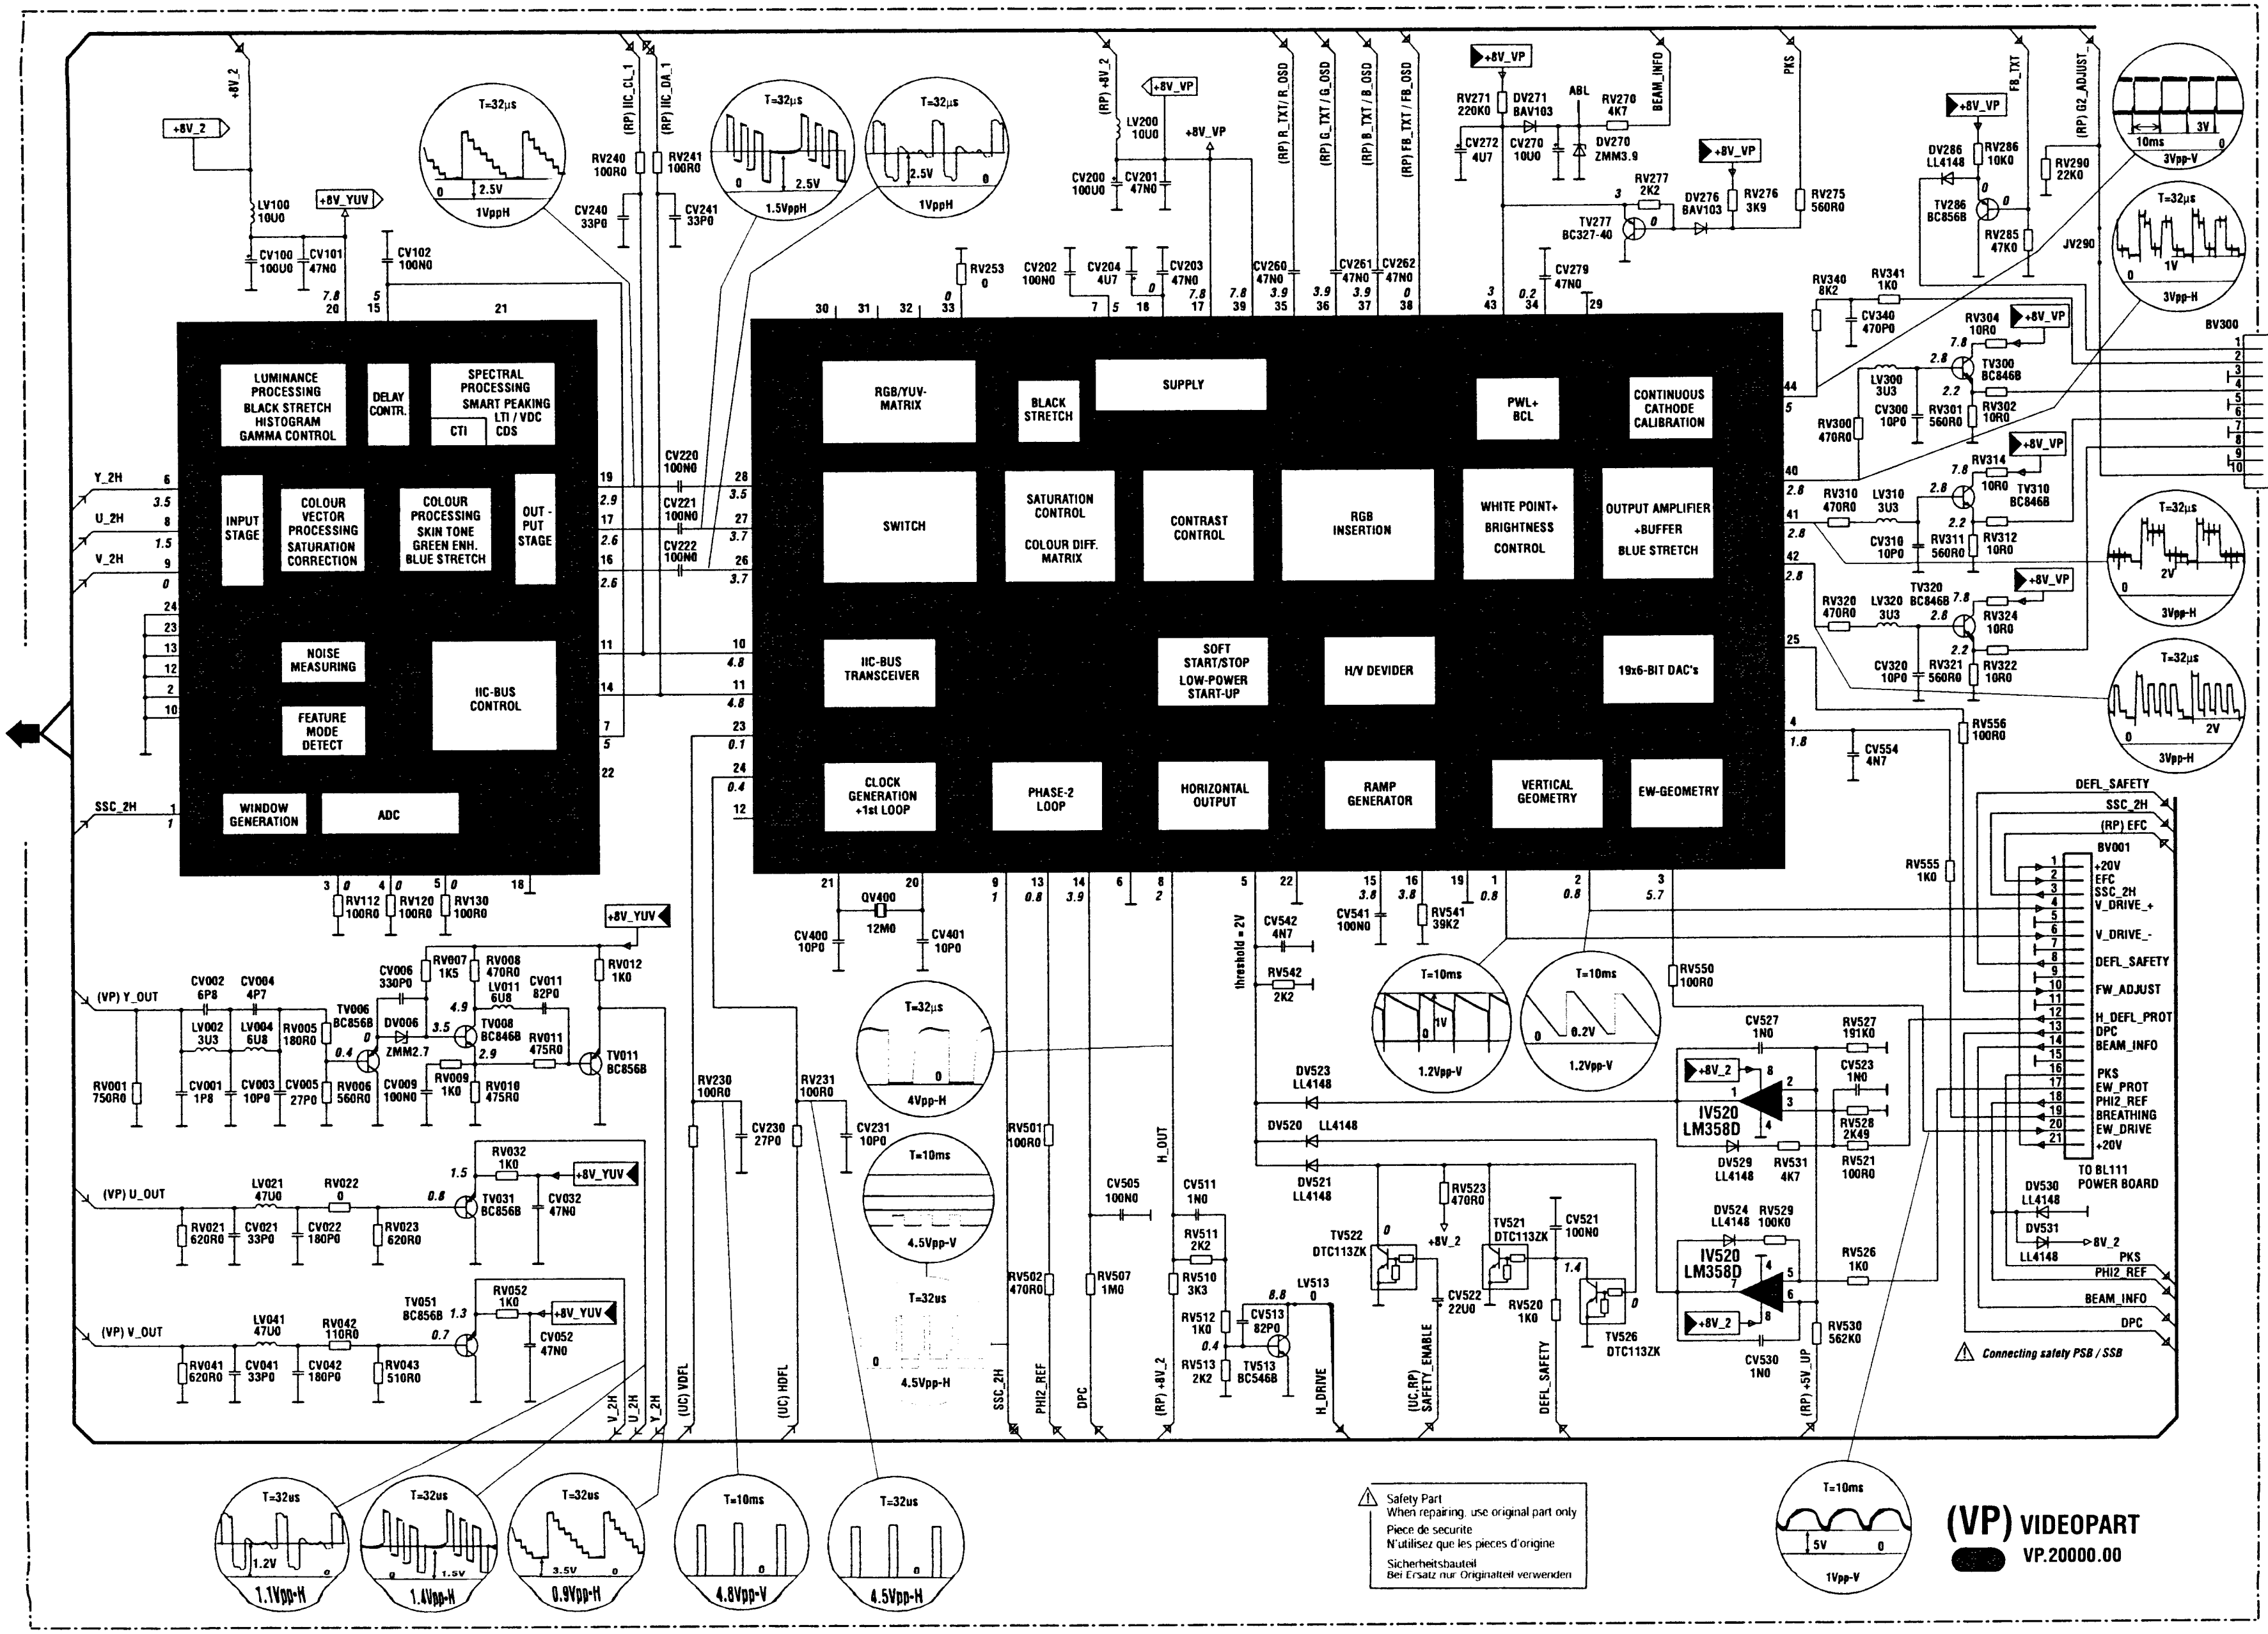
LUMINANCE PROCESSING
BLACK STRETCH
HISTOGRAM
GAMMA CONTROL
DELAY CONTR.
SPECTRAL PROCESSING
SMART PEAKING
LTI / VDC
CTI
CDS
INPUT STAGE
COLOUR VECTOR PROCESSING
SATURATION CORRECTION
COLOUR PROCESSING
SKIN TONE
GREEN ENH.
BLUE STRETCH
OUT-PUT STAGE
NOISE MEASURING
FEATURE MODE DETECT
IIC-BUS CONTROL
WINDOW GENERATION
ADC
RGB/YUV-MATRIX
BLACK STRETCH
SUPPLY
PWL+ BCL
CONTINUOUS CATHODE CALIBRATION
SWITCH
SATURATION CONTROL
COLOUR DIFF. MATRIX
CONTRAST CONTROL
RGB INSERTION
WHITE POINT+ BRIGHTNESS CONTROL
OUTPUT AMPLIFIER +BUFFER BLUE STRETCH
IIC-BUS TRANSCEIVER
SOFT START/STOP LOW-POWER START-UP
H/V DEVIDER
19x6-BIT DAC's
CLOCK GENERATION +1st LOOP
PHASE-2 LOOP
HORIZONTAL OUTPUT
RAMP GENERATOR
VERTICAL GEOMETRY
EW-GEOMETRY
+8V_2
+8V_YUV
+8V_VP
Y_2H
U_2H
V_2H
SSC_2H
(VP) Y_OUT
(VP) U_OUT
(VP) V_OUT
(RP) IIC_CL_1
(RP) IIC_DA_1
(RP) +8V_2
(RP) R_TXT/R_OSD
(RP) G_TXT/G_OSD
(RP) B_TXT/B_OSD
(RP) FB_TXT/FB_OSD
BEAM_INFO
PKS
FB_TXT
(RP) G2_ADJUST
ABL
QV400 12M0
IV520 LM358D
BV300
To BB001 CRT
BSVM_BLANK
BLKCURR
R_OUT
G_OUT
B_OUT
G2_ADJUST
DEFL_SAFETY
SSC_2H
(RP) EFC
BV001
+20V
EFC
SSC_2H
V_DRIVE_+
V_DRIVE_-
DEFL_SAFETY
FW_ADJUST
H_DEFL_PROT
DPC
BEAM_INFO
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
+20V
TO BL111 POWER BOARD
PKS
PHI2_REF
BEAM_INFO
DPC
Connecting safety PSB / SSB
(UC) VDFL
(UC) HDFL
SSC_2H
PHI2_REF
DPC
(RP) +8V_2
H_OUT
H_DRIVE
(UC,RP) SAFETY_ENABLE
DEFL_SAFETY
(RP) +5V_UP
threshold = 2V
T=32µs
T=10ms
1VppH
1.5VppH
3Vpp-V
3Vpp-H
4Vpp-H
4.5Vpp-V
4.5Vpp-H
1.2Vpp-V
1.1Vpp-H
1.4Vpp-H
0.9Vpp-H
4.8Vpp-V
1Vpp-V

⚠ Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

(VP) VIDEOPART
VP.20000.00

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
FRONTEND PART (1) - EINGANGSSTUFEN (1) - PRESE FRONTALI (1) - FRONT END PART (1)

RF/FI / VIDEO SIGNAL PROCESSING - HF/FI / TRAITEMENT LUMINANCE CHROMINANCE - HF-, ZF- UND VIDEO-SIGNALVERARBEITUNG - RF/FI / ELABORAZIONE SEGNALE VIDEO - RF/FI / TRATAMENTO SEÑAL VIDEO

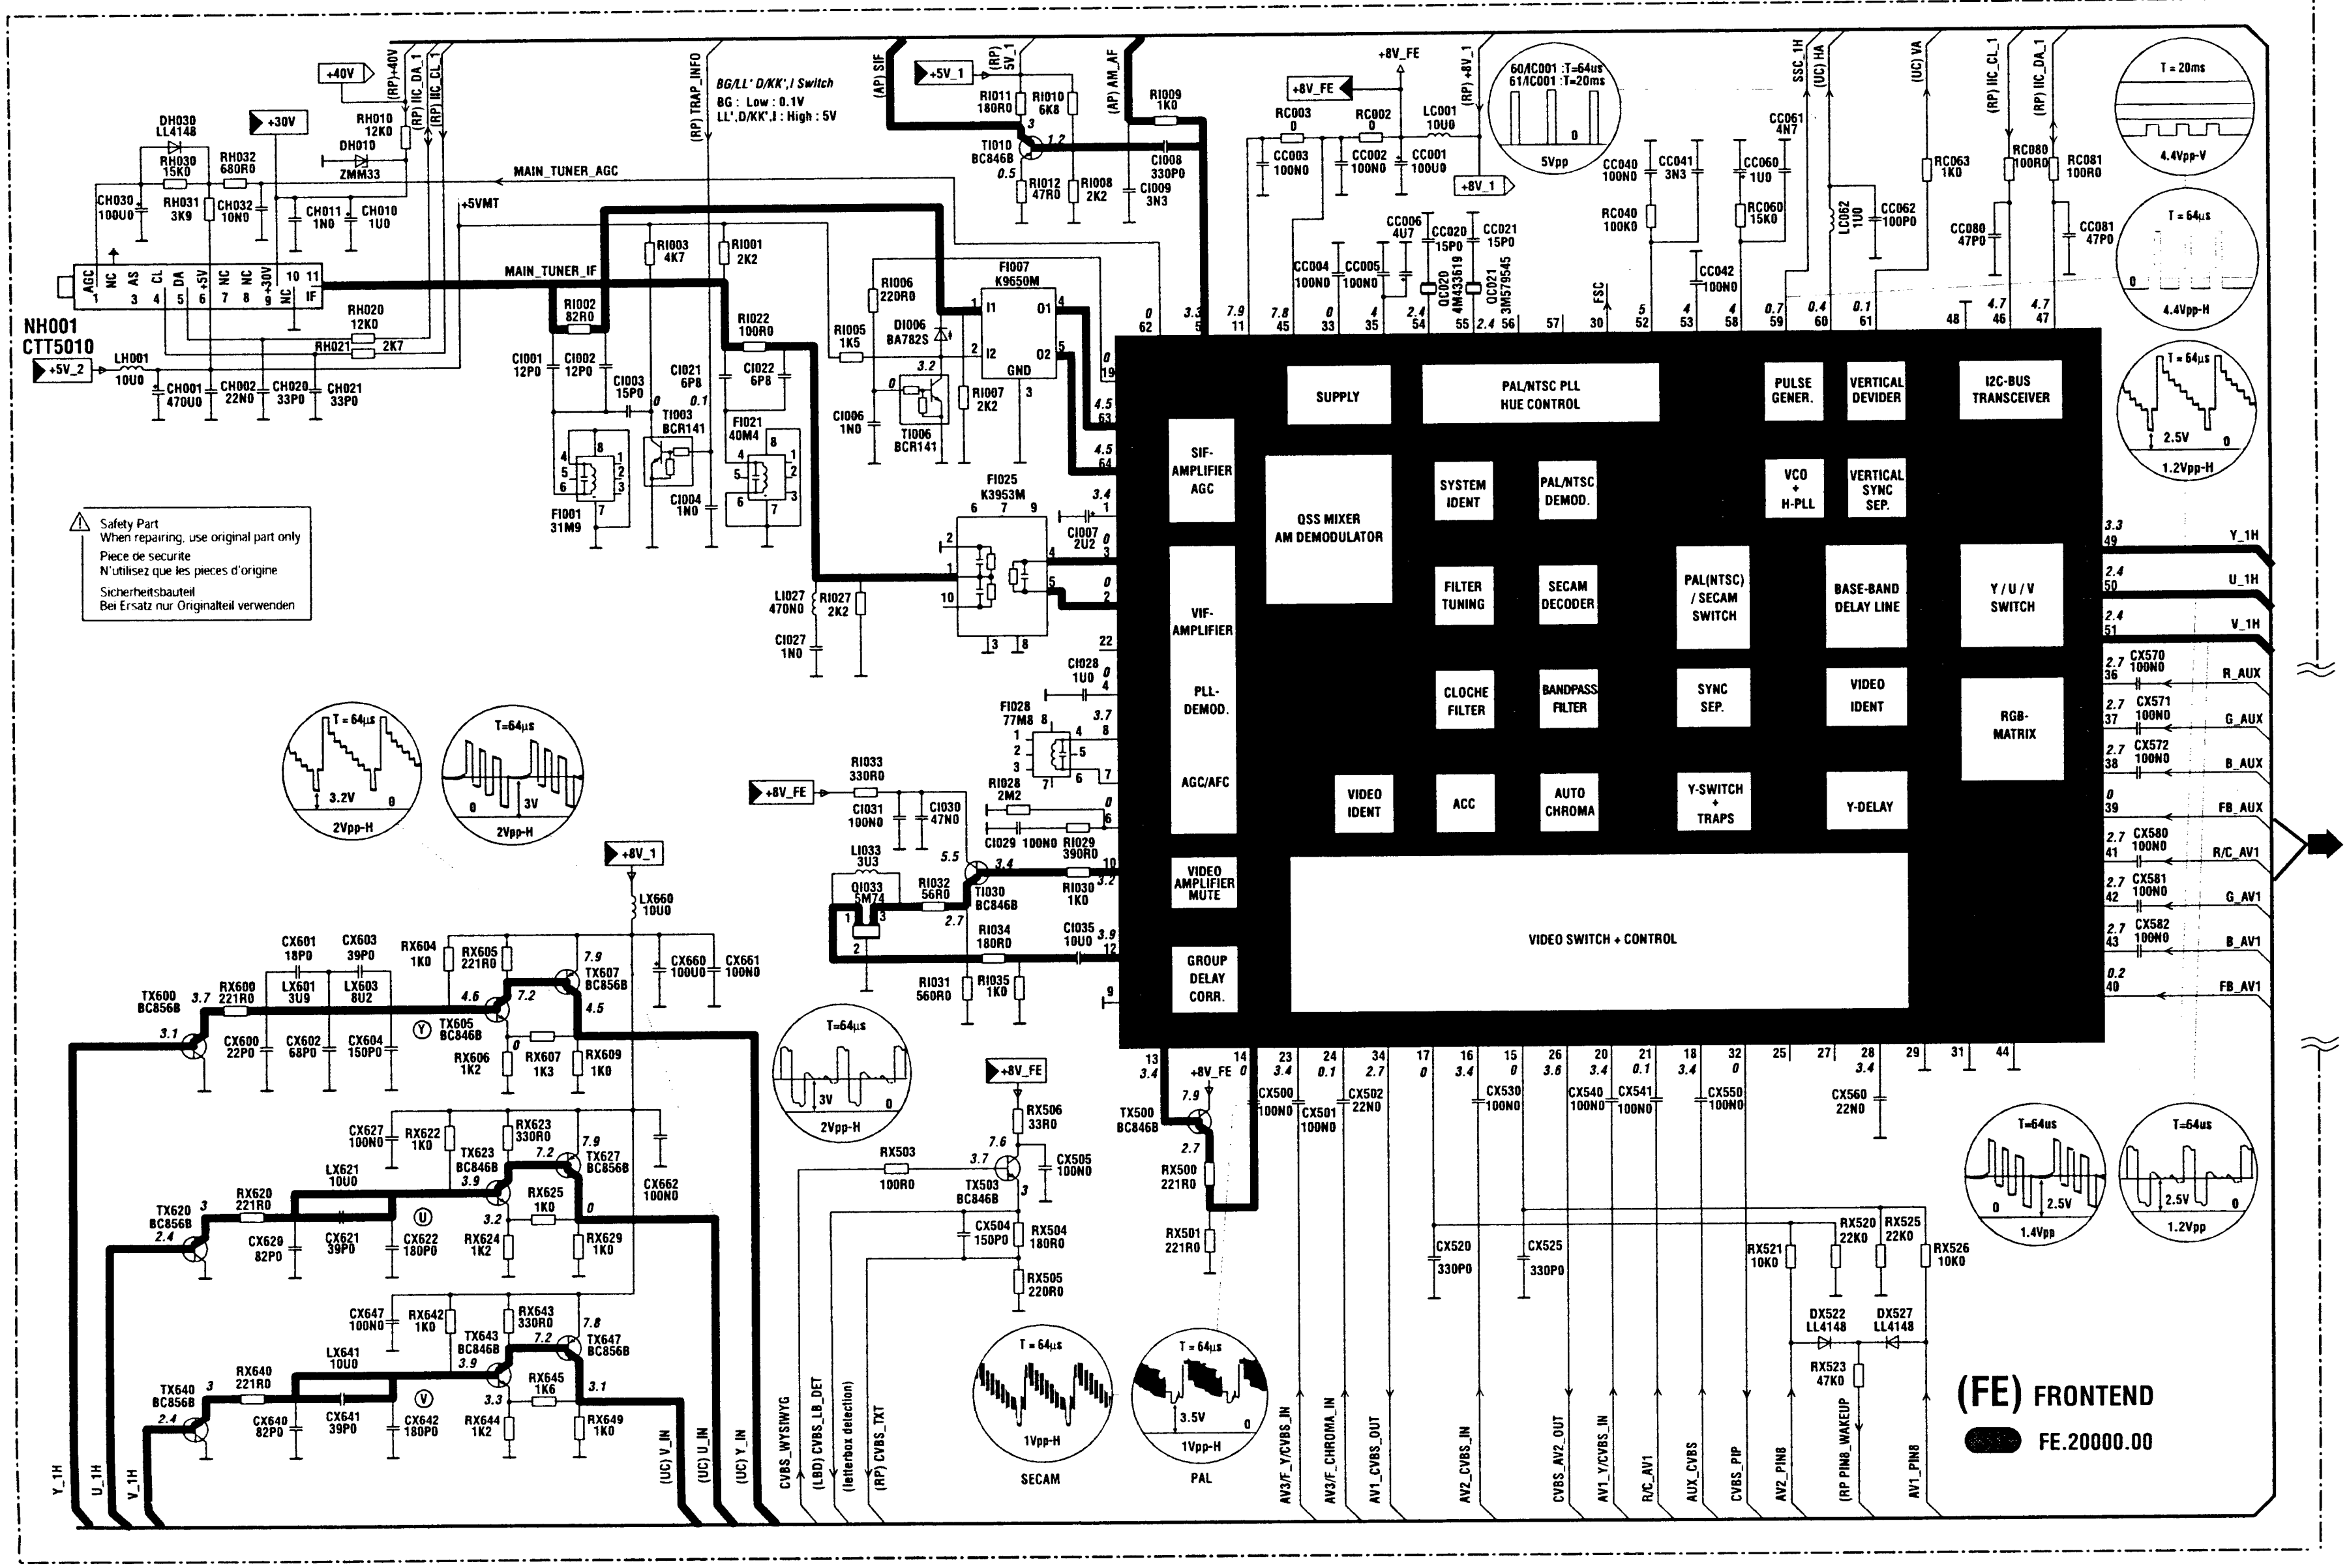

NH001
CTT5010
+5V_2
+40V
+30V
+5VMT
MAIN_TUNER_AGC
MAIN_TUNER_IF
(RP) TRAP_INFO
BG/LL' D/KK',I Switch
BG : Low : 0.1V
LL'.D/KK',I : High : 5V
(AP) SIF
+5V_1
(AP) AM_AF
+8V_FE
+8V_1
60/IC001 :T=64us
61/IC001 :T=20ms
5Vpp
SSC_1H
(UC) HA
(UC) VA
(RP) IIC_CL_1
(RP) IIC_DA_1
FI007
K9650M
FI025
K3953M
FI028
77M8
FI001
31M9
FI021
40M4
TI010
BC846B
TI003
BCR141
TI006
BCR141
TI030
BC846B
QI033
5M74
SUPPLY
PAL/NTSC PLL
HUE CONTROL
PULSE GENER.
VERTICAL DEVIDER
I2C-BUS TRANSCEIVER
SIF-AMPLIFIER AGC
QSS MIXER AM DEMODULATOR
SYSTEM IDENT
PAL/NTSC DEMOD.
VCO + H-PLL
VERTICAL SYNC SEP.
VIF-AMPLIFIER
FILTER TUNING
SECAM DECODER
PAL(NTSC) / SECAM SWITCH
BASE-BAND DELAY LINE
Y/U/V SWITCH
PLL-DEMOD.
CLOCHE FILTER
BANDPASS FILTER
SYNC SEP.
VIDEO IDENT
RGB-MATRIX
AGC/AFC
VIDEO IDENT
ACC
AUTO CHROMA
Y-SWITCH + TRAPS
Y-DELAY
VIDEO AMPLIFIER MUTE
GROUP DELAY CORR.
VIDEO SWITCH + CONTROL
Y_1H
U_1H
V_1H
R_AUX
G_AUX
B_AUX
FB_AUX
R/C_AV1
G_AV1
B_AV1
FB_AV1
TX600 BC856B
TX605 BC846B
TX607 BC856B
TX620 BC856B
TX623 BC846B
TX627 BC856B
TX640 BC856B
TX643 BC846B
TX647 BC856B
TX500 BC846B
TX503 BC846B
Y_1H
U_1H
V_1H
(UC) V_IN
(UC) U_IN
(UC) Y_IN
CVBS_WYSIWYG
(LBD) CVBS_LB_DET
(letterbox detection)
(RP) CVBS_TXT
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
AV1_CVBS_OUT
AV2_CVBS_IN
CVBS_AV2_OUT
AV1_Y/CVBS_IN
R/C_AV1
AUX_CVBS
CVBS_PIP
AV2_PIN8
(RP PIN8_WAKEUP
AV1_PIN8
DX522 LL4148
DX527 LL4148
T = 20ms
4.4Vpp-V
T = 64µs
4.4Vpp-H
2.5V
1.2Vpp-H
3.2V
2Vpp-H
3V
1.4Vpp
1.2Vpp
1Vpp-H
SECAM
PAL
3.5V

⚠ Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

(FE) FRONTEND

FE.20000.00

SMALL SIGNAL BOARD - PLATINE PETITS SIGNAUX - SIGNAL-PLATINE - PIASTRA PICCOLI SEGNALI - PLACA PEQUEÑA SEÑAL
AUDIO PART - PARTIE AUDIO - AUDIOSTUFEN - CIRCUITO AUDIO - AUDIO

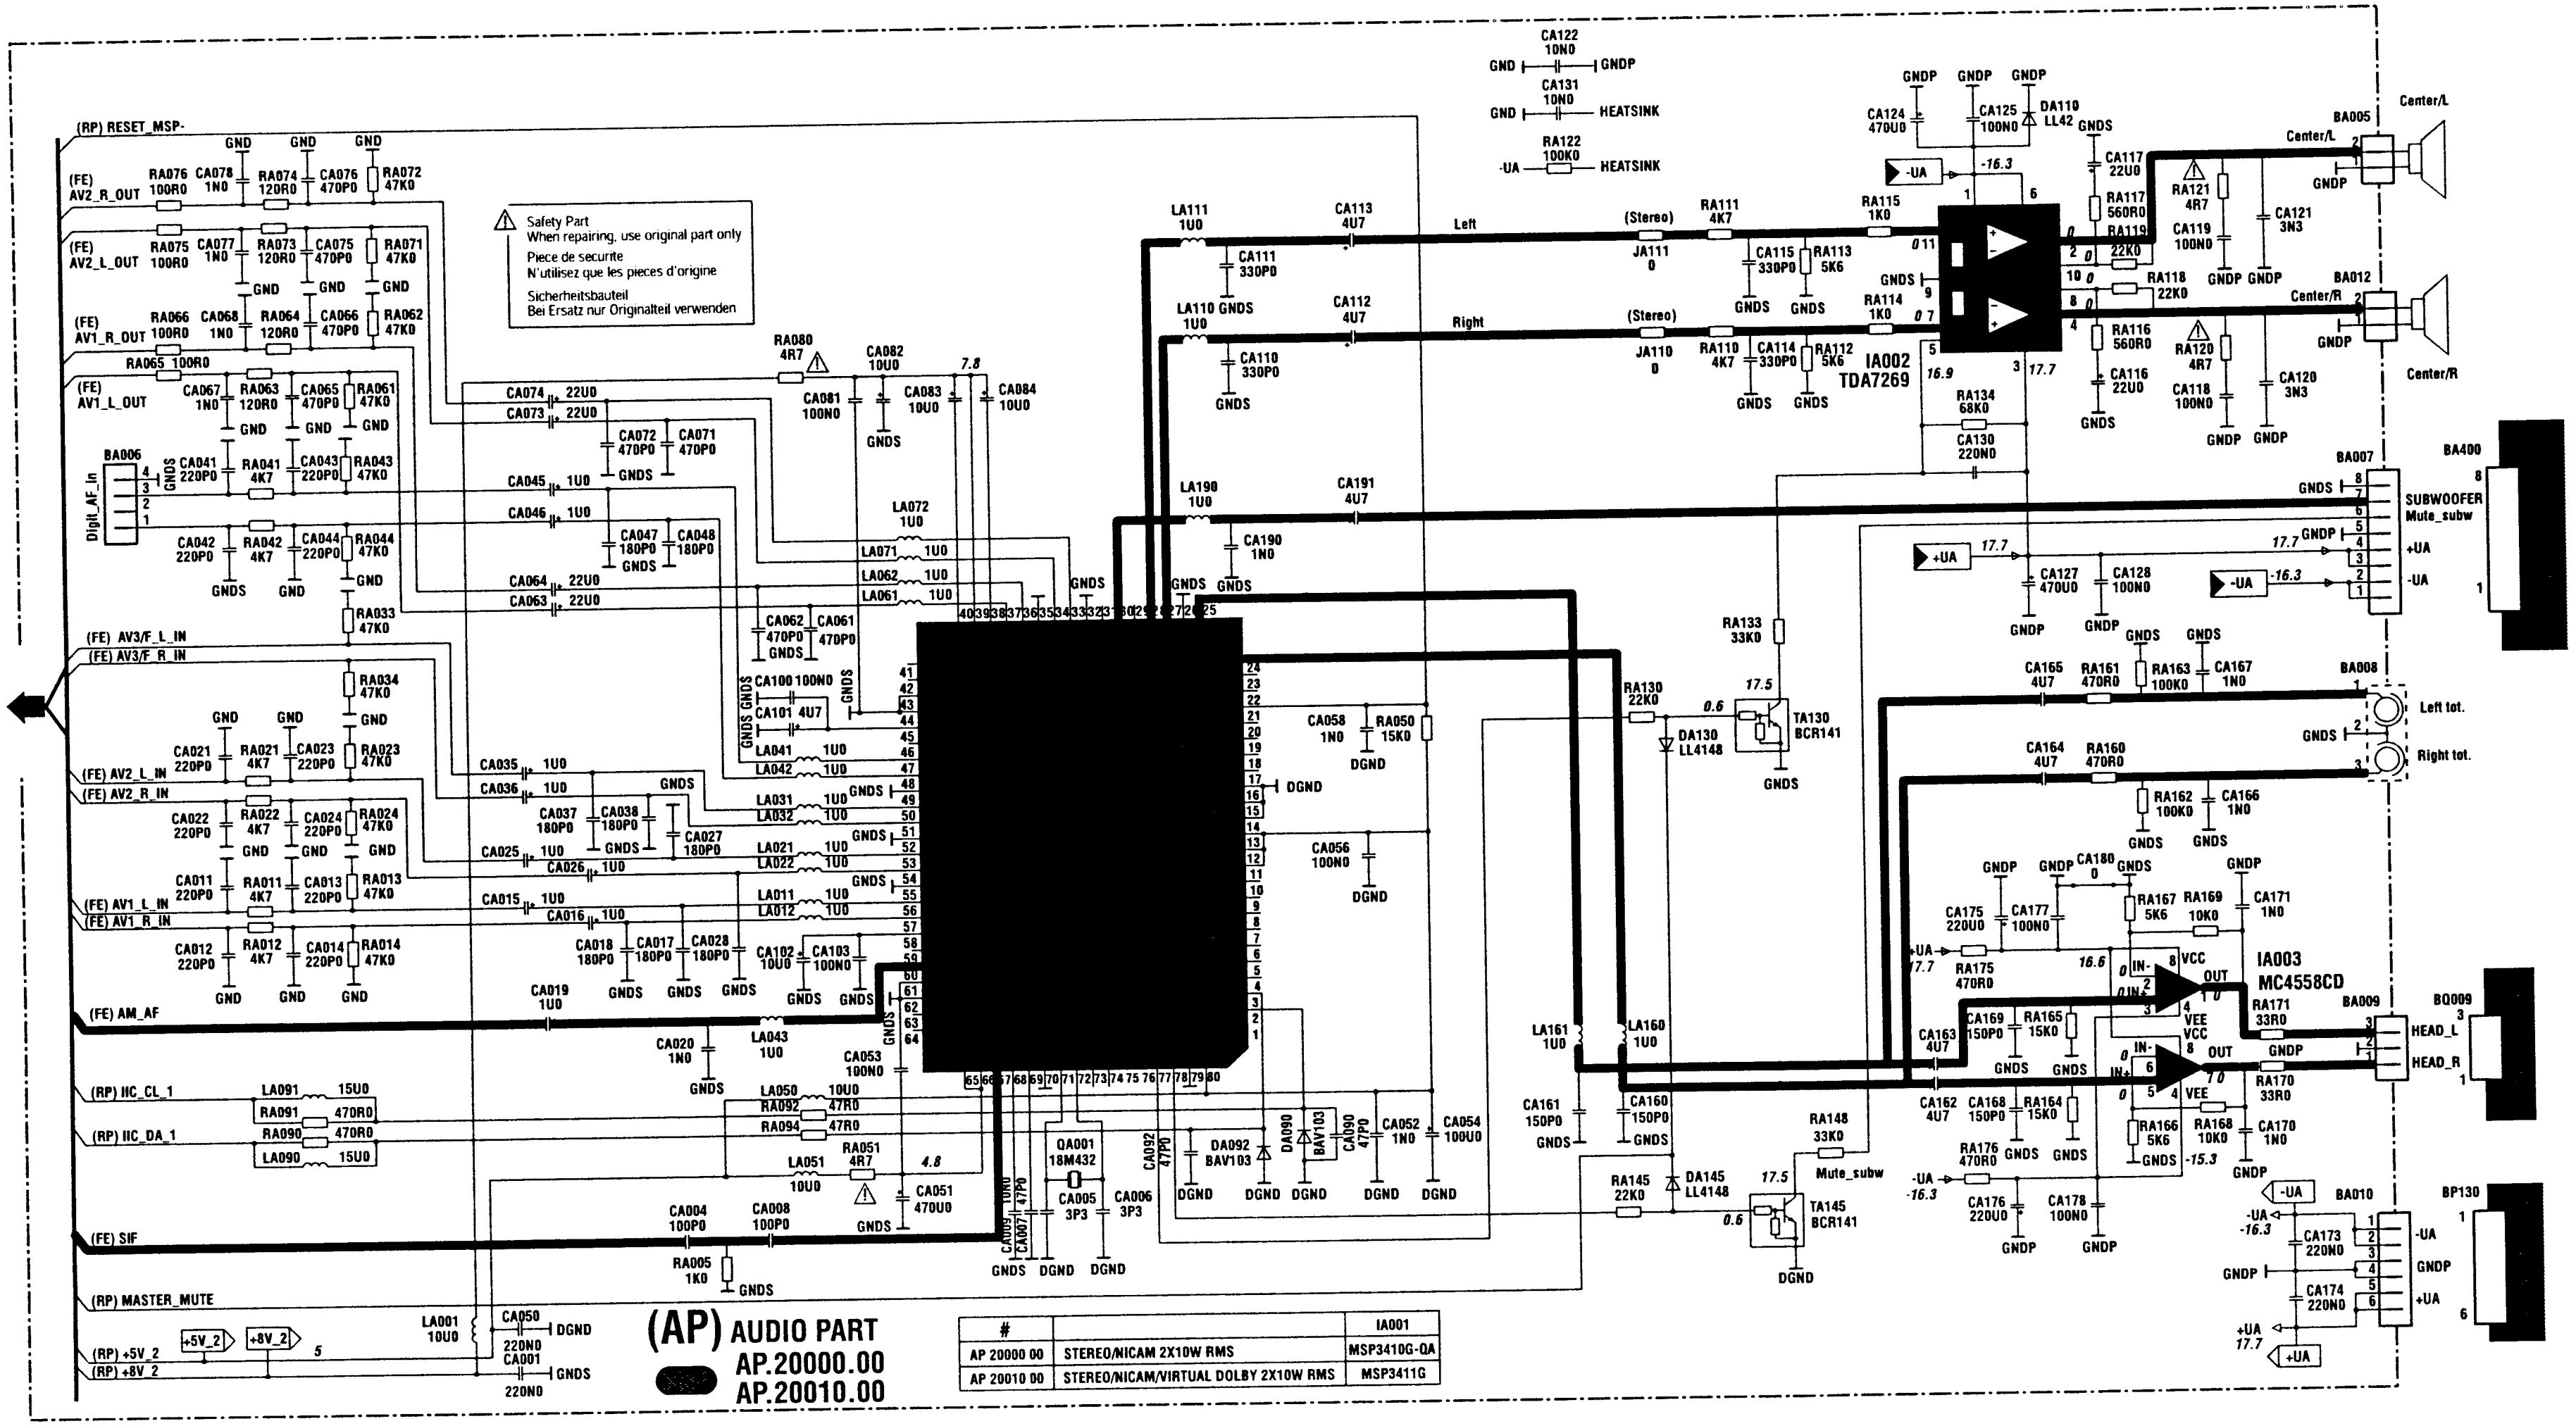
(RP) RESET_MSP-
(FE) AV2_R_OUT
(FE) AV2_L_OUT
(FE) AV1_R_OUT
(FE) AV1_L_OUT
BA006
Digit_AF_In
(FE) AV3/F_L_IN
(FE) AV3/F_R_IN
(FE) AV2_L_IN
(FE) AV2_R_IN
(FE) AV1_L_IN
(FE) AV1_R_IN
(FE) AM_AF
(RP) IIC_CL_1
(RP) IIC_DA_1
(FE) SIF
(RP) MASTER_MUTE
(RP) +5V_2
(RP) +8V_2
+5V_2
+8V_2
LA001 10U0
CA050 220N0
CA001 220N0
QA001 18M432
DA092 BAV103
DA090 BAV103
Left
Right
(Stereo)
JA111
JA110
IA002
TDA7269
TA130 BCR141
DA130 LL4148
TA145 BCR141
DA145 LL4148
Mute_subw
IA003
MC4558CD
BA005
Center/L
BA012
Center/R
BA007
BA400
SUBWOOFER
Mute_subw
+UA
-UA
BA008
Left tot.
Right tot.
BA009
BQ009
HEAD_L
HEAD_R
BA010
BP130
GNDP
+UA
-UA
HEATSINK
17.7
-16.3

Safety Part
When repairing, use original part only
Piece de securite
N'utilisez que les pieces d'origine
Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

(AP) AUDIO PART
AP.20000.00
AP.20010.00

#		IA001
AP 20000 00	STEREO/NICAM 2X10W RMS	MSP3410G-QA
AP 20010 00	STEREO/NICAM/VIRTUAL DOLBY 2X10W RMS	MSP3411G

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

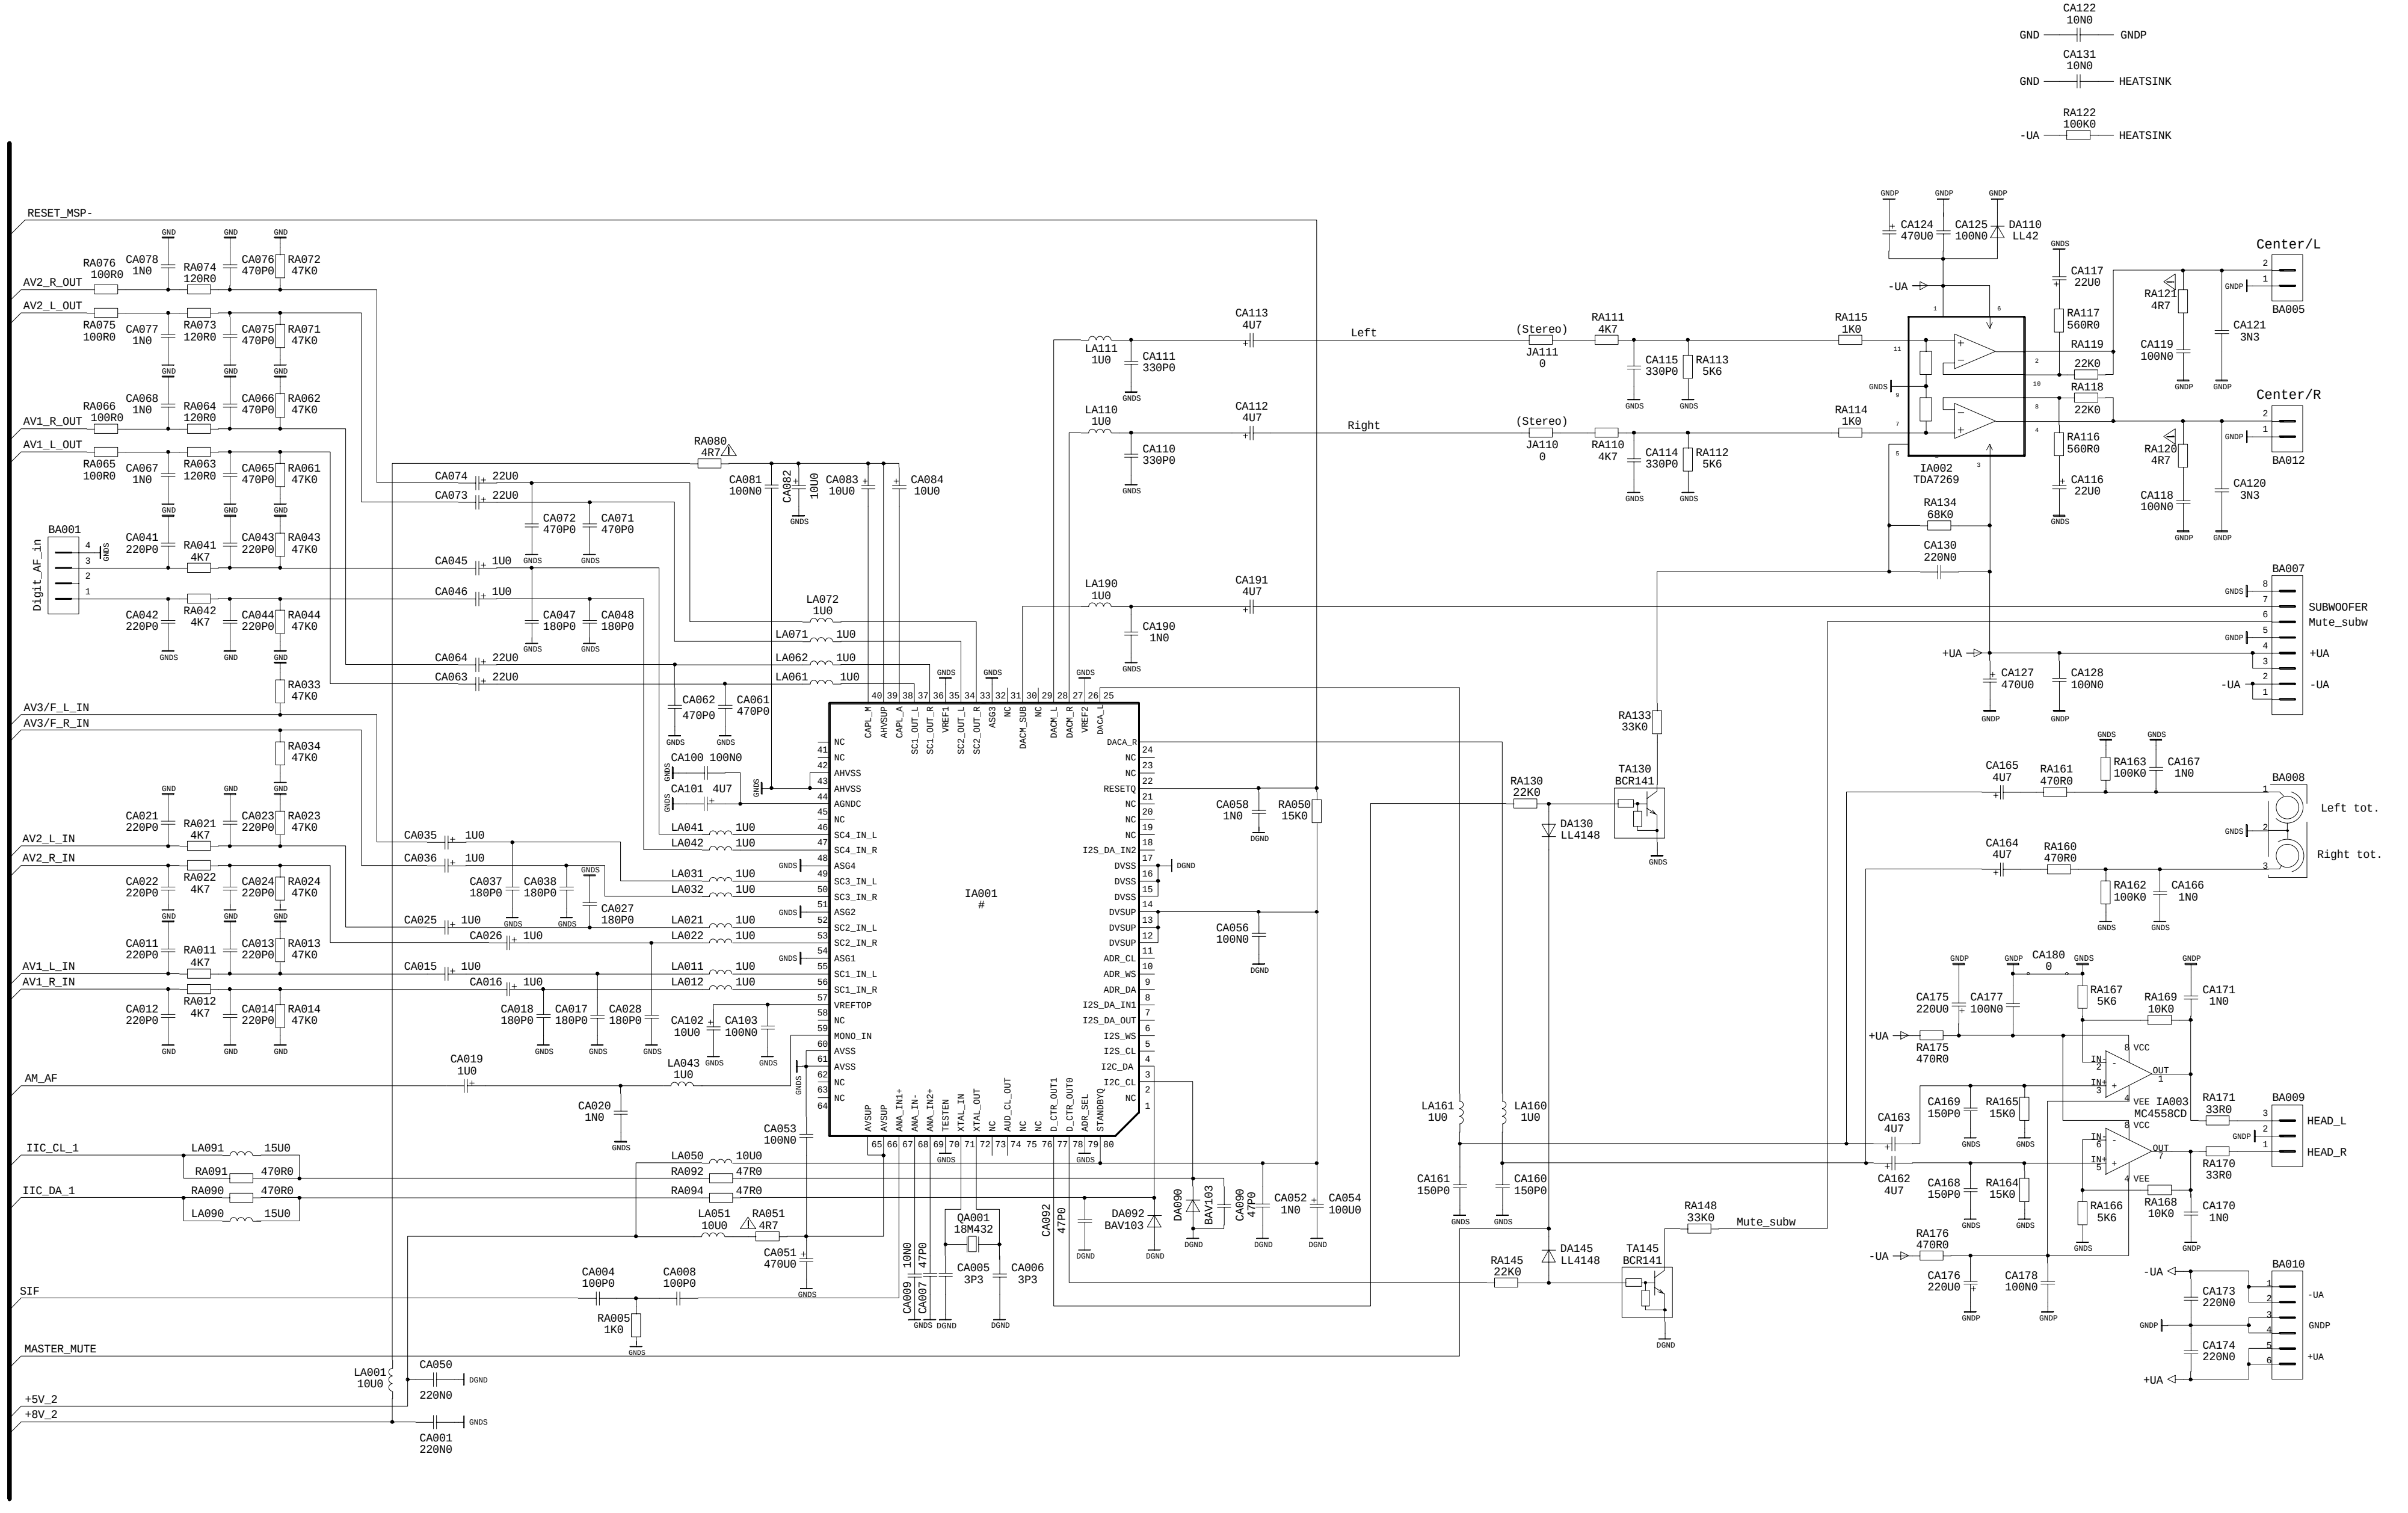
12
11
10
9
8
7
6
5
4
3
2
1
H
G
F
E
D
C
B
A
CA122
10N0
GND
GNDP
CA131
10N0
GND
HEATSINK
RA122
100K0
-UA
HEATSINK
RESET_MSP-
AV2_R_OUT
AV2_L_OUT
AV1_R_OUT
AV1_L_OUT
RA076
100R0
CA078
1N0
RA074
120R0
CA076
470P0
RA072
47K0
RA075
100R0
CA077
1N0
RA073
120R0
CA075
470P0
RA071
47K0
RA066
100R0
CA068
1N0
RA064
120R0
CA066
470P0
RA062
47K0
RA065
100R0
CA067
1N0
RA063
120R0
CA065
470P0
RA061
47K0
BA001
Digit_AF_in
CA041
220P0
RA041
4K7
CA043
220P0
RA043
47K0
CA042
220P0
RA042
4K7
CA044
220P0
RA044
47K0
RA033
47K0
RA034
47K0
AV3/F_L_IN
AV3/F_R_IN
AV2_L_IN
AV2_R_IN
AV1_L_IN
AV1_R_IN
CA021
220P0
RA021
4K7
CA023
220P0
RA023
47K0
CA022
220P0
RA022
4K7
CA024
220P0
RA024
47K0
CA011
220P0
RA011
4K7
CA013
220P0
RA013
47K0
CA012
220P0
RA012
4K7
CA014
220P0
RA014
47K0
AM_AF
IIC_CL_1
IIC_DA_1
LA091
15U0
RA091
470R0
RA090
470R0
LA090
15U0
SIF
MASTER_MUTE
+5V_2
+8V_2
LA001
10U0
CA050
220N0
CA001
220N0
CA074
22U0
CA073
22U0
CA072
470P0
CA071
470P0
CA045
1U0
CA046
1U0
CA047
180P0
CA048
180P0
CA064
22U0
CA063
22U0
RA080
4R7
CA081
100N0
CA082
10U0
CA083
10U0
CA084
10U0
LA072
1U0
LA071
1U0
LA062
1U0
LA061
1U0
CA062
470P0
CA061
470P0
CA100
100N0
CA101
4U7
LA041
1U0
LA042
1U0
LA031
1U0
LA032
1U0
LA021
1U0
LA022
1U0
LA011
1U0
LA012
1U0
CA035
1U0
CA036
1U0
CA037
180P0
CA038
180P0
CA027
180P0
CA025
1U0
CA026
1U0
CA015
1U0
CA016
1U0
CA018
180P0
CA017
180P0
CA028
180P0
CA102
10U0
CA103
100N0
CA019
1U0
LA043
1U0
CA020
1N0
CA053
100N0
LA050
10U0
RA092
47R0
RA094
47R0
LA051
10U0
RA051
4R7
CA051
470U0
CA004
100P0
CA008
100P0
RA005
1K0
CA009
10N0
CA007
47P0
QA001
18M432
CA005
3P3
CA006
3P3
IA001
#
CAPL_M
AHVSUP
CAPL_A
SC1_OUT_L
SC1_OUT_R
VREF1
SC2_OUT_L
SC2_OUT_R
ASG3
NC
DACM_SUB
NC
DACM_L
DACM_R
VREF2
DACA_L
DACA_R
RESETQ
I2S_DA_IN2
DVSS
DVSUP
ADR_CL
ADR_WS
ADR_DA
I2S_DA_IN1
I2S_DA_OUT
I2S_WS
I2S_CL
I2C_DA
I2C_CL
AHVSS
AGNDC
SC4_IN_L
SC4_IN_R
ASG4
SC3_IN_L
SC3_IN_R
ASG2
SC2_IN_L
SC2_IN_R
ASG1
SC1_IN_L
SC1_IN_R
VREFTOP
MONO_IN
AVSS
AVSUP
ANA_IN1+
ANA_IN-
ANA_IN2+
TESTEN
XTAL_IN
XTAL_OUT
AUD_CL_OUT
D_CTR_OUT1
D_CTR_OUT0
ADR_SEL
STANDBYQ
CA058
1N0
RA050
15K0
CA056
100N0
CA092
47P0
DA092
BAV103
DA090
BAV103
CA090
47P0
CA052
1N0
CA054
100U0
LA111
1U0
CA111
330P0
CA113
4U7
Left
LA110
1U0
CA110
330P0
CA112
4U7
Right
LA190
1U0
CA190
1N0
CA191
4U7
(Stereo)
JA111
0
(Stereo)
JA110
0
RA111
4K7
CA115
330P0
RA113
5K6
RA110
4K7
CA114
330P0
RA112
5K6
RA115
1K0
RA114
1K0
IA002
TDA7269
CA124
470U0
CA125
100N0
DA110
LL42
CA117
22U0
RA117
560R0
RA119
22K0
RA118
22K0
RA116
560R0
CA116
22U0
RA121
4R7
CA121
3N3
CA119
100N0
RA120
4R7
CA120
3N3
CA118
100N0
Center/L
BA005
Center/R
BA012
RA134
68K0
CA130
220N0
BA007
SUBWOOFER
Mute_subw
+UA
-UA
CA127
470U0
CA128
100N0
RA133
33K0
RA130
22K0
TA130
BCR141
DA130
LL4148
CA165
4U7
RA161
470R0
RA163
100K0
CA167
1N0
BA008
Left tot.
Right tot.
CA164
4U7
RA160
470R0
RA162
100K0
CA166
1N0
CA180
0
CA175
220U0
CA177
100N0
RA167
5K6
RA169
10K0
CA171
1N0
RA175
470R0
IA003
MC4558CD
VCC
VEE
OUT
RA171
33R0
BA009
HEAD_L
HEAD_R
CA169
150P0
RA165
15K0
LA161
1U0
LA160
1U0
CA163
4U7
CA162
4U7
CA161
150P0
CA160
150P0
CA168
150P0
RA164
15K0
RA166
5K6
RA168
10K0
RA170
33R0
CA170
1N0
RA148
33K0
Mute_subw
DA145
LL4148
TA145
BCR141
RA145
22K0
RA176
470R0
CA176
220U0
CA178
100N0
BA010
CA173
220N0
CA174
220N0
GND
GNDP
GNDS
DGND

#	IA001
AP 20000 00	MSP3410G-QA
AP 20010 00	MSP3451G

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTA_PEDUZZI

INDEX	DATE	NAME	DESCRIPTION
E	28.03.00	J.David	C36930
D	01.12.99	RIEDM.	CORRECTION
C	19.11.99	RIEDM.	C28630/29900 950/30220/270
B	23.08.99	RIEDM.	NR.ADDED 00L2-CORR.
A	11.05.99	RIEDM.	00L1-CORR.

DRAWN
ON: 10.03.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
AP.20000.00	10623730
AP.20010.00	10623930

TV
IC20

PAGE: 1
OF : 1

PCAD FORMAT DIN A1

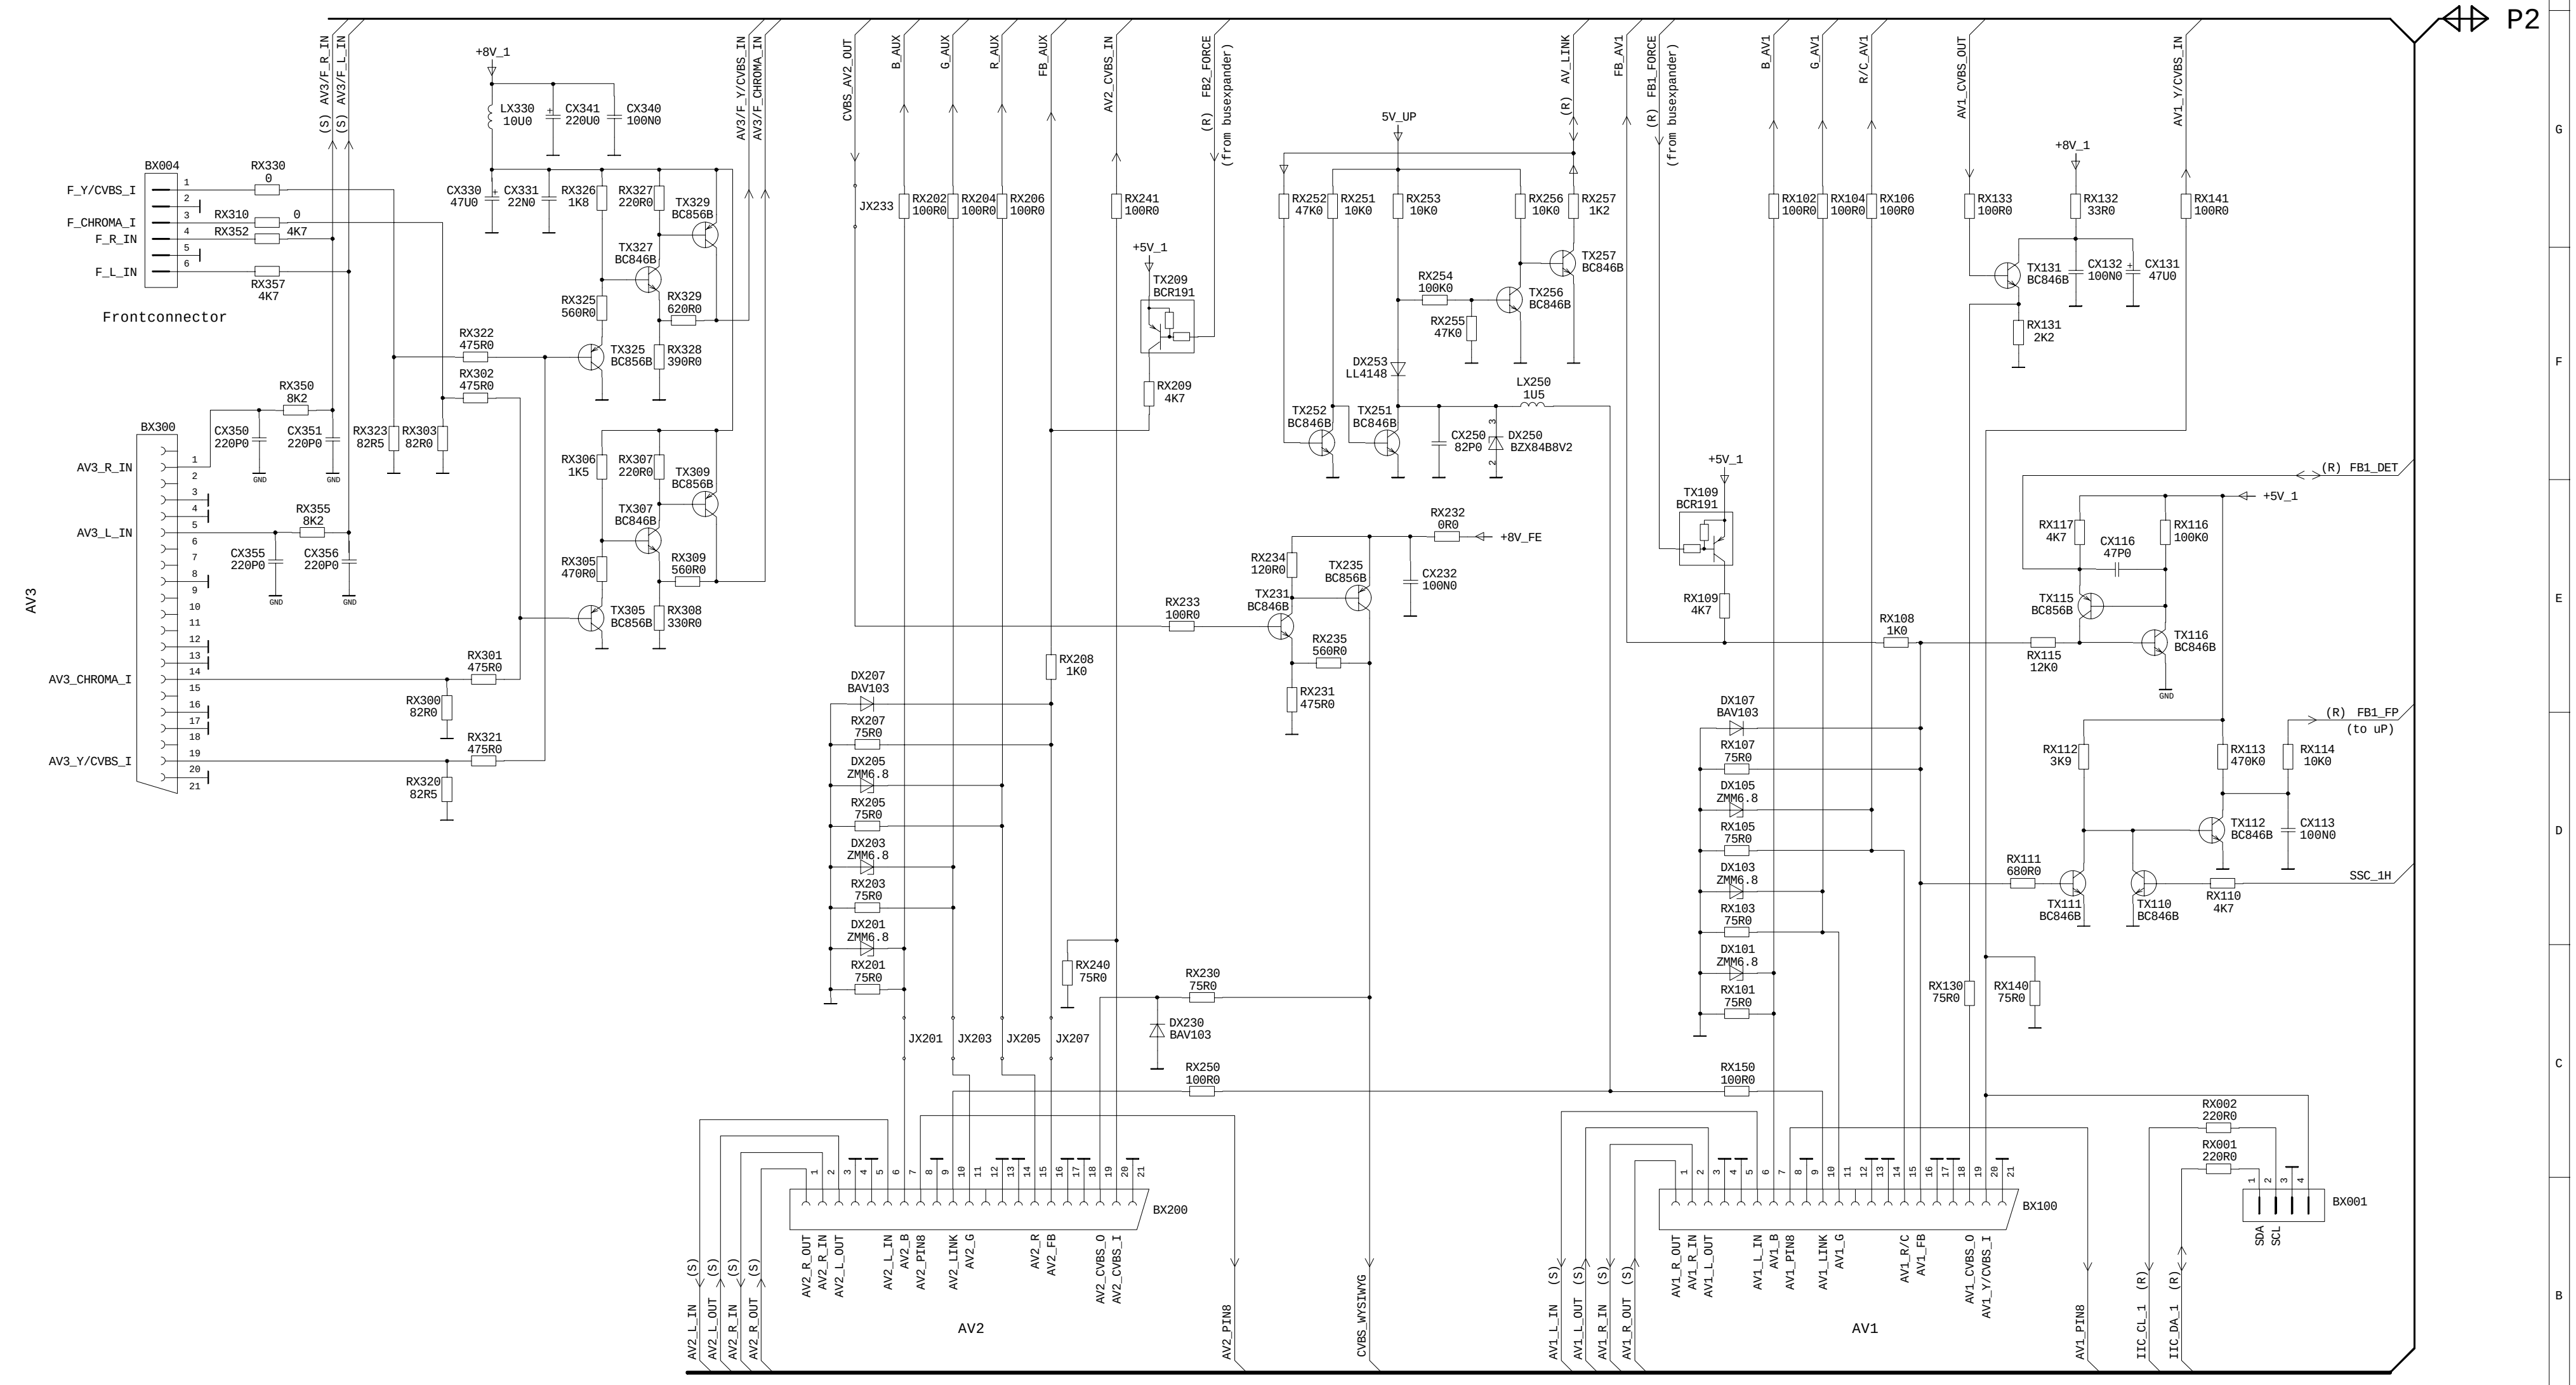
P2
BX004
F_Y/CVBS_I
F_CHROMA_I
F_R_IN
F_L_IN
Frontconnector
RX330 0
RX310 0
RX352 4K7
RX357 4K7
(S) AV3/F_R_IN
(S) AV3/F_L_IN
+8V_1
LX330 10U0
CX341 220U0
CX340 100N0
CX330 47U0
CX331 22N0
RX326 1K8
RX327 220R0
TX329 BC856B
TX327 BC846B
RX325 560R0
RX329 620R0
RX322 475R0
RX302 475R0
TX325 BC856B
RX328 390R0
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
RX350 8K2
CX350 220P0
CX351 220P0
RX323 82R5
RX303 82R0
BX300
AV3_R_IN
AV3_L_IN
RX355 8K2
CX355 220P0
CX356 220P0
AV3
AV3_CHROMA_I
AV3_Y/CVBS_I
RX301 475R0
RX300 82R0
RX321 475R0
RX320 82R5
RX306 1K5
RX307 220R0
TX309 BC856B
TX307 BC846B
RX305 470R0
RX309 560R0
TX305 BC856B
RX308 330R0
GND
CVBS_AV2_OUT
B_AUX
G_AUX
R_AUX
FB_AUX
AV2_CVBS_IN
(R) FB2_FORCE (from busexpander)
JX233
RX202 100R0
RX204 100R0
RX206 100R0
RX241 100R0
+5V_1
TX209 BCR191
RX209 4K7
RX208 1K0
DX207 BAV103
RX207 75R0
DX205 ZMM6.8
RX205 75R0
DX203 ZMM6.8
RX203 75R0
DX201 ZMM6.8
RX201 75R0
RX240 75R0
RX230 75R0
DX230 BAV103
RX250 100R0
JX201
JX203
JX205
JX207
BX200
AV2_R_OUT
AV2_R_IN
AV2_L_OUT
AV2_L_IN
AV2_B
AV2_PIN8
AV2_LINK
AV2_G
AV2_R
AV2_FB
AV2_CVBS_O
AV2_CVBS_I
AV2
(S) AV2_L_IN
(S) AV2_L_OUT
(S) AV2_R_IN
(S) AV2_R_OUT
AV2_PIN8
CVBS_WYSIWYG
5V_UP
(R) AV_LINK
RX252 47K0
RX251 10K0
RX253 10K0
RX256 10K0
RX257 1K2
TX257 BC846B
RX254 100K0
TX256 BC846B
RX255 47K0
DX253 LL4148
LX250 1U5
TX252 BC846B
TX251 BC846B
CX250 82P0
DX250 BZX84B8V2
RX232 0R0
+8V_FE
RX234 120R0
TX235 BC856B
CX232 100N0
TX231 BC846B
RX233 100R0
RX235 560R0
RX231 475R0
FB_AV1
(R) FB1_FORCE (from busexpander)
+5V_1
TX109 BCR191
RX109 4K7
RX108 1K0
B_AV1
G_AV1
R/C_AV1
AV1_CVBS_OUT
AV1_Y/CVBS_IN
RX102 100R0
RX104 100R0
RX106 100R0
RX133 100R0
+8V_1
RX132 33R0
RX141 100R0
TX131 BC846B
CX132 100N0
CX131 47U0
RX131 2K2
(R) FB1_DET
+5V_1
RX117 4K7
CX116 47P0
RX116 100K0
TX115 BC856B
RX115 12K0
TX116 BC846B
(R) FB1_FP (to uP)
DX107 BAV103
RX107 75R0
DX105 ZMM6.8
RX105 75R0
DX103 ZMM6.8
RX103 75R0
DX101 ZMM6.8
RX101 75R0
RX112 3K9
RX113 470K0
RX114 10K0
TX112 BC846B
CX113 100N0
RX111 680R0
TX111 BC846B
TX110 BC856B
RX110 4K7
SSC_1H
RX130 75R0
RX140 75R0
RX150 100R0
RX002 220R0
RX001 220R0
BX100
AV1_R_OUT
AV1_R_IN
AV1_L_OUT
AV1_L_IN
AV1_B
AV1_PIN8
AV1_LINK
AV1_G
AV1_R/C
AV1_FB
AV1_CVBS_O
AV1_Y/CVBS_I
AV1
AV1_L_IN (S)
AV1_L_OUT (S)
AV1_R_IN (S)
AV1_R_OUT (S)
AV1_PIN8
IIC_CL_1 (R)
IIC_DA_1 (R)
BX001
SDA
SCL

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
E	07.02.00	RIEDM.	C31330/34500
D	18.11.99	RIEDM.	C28630/29280 690/710 30250/260
H	04.04.00	J.David	C34650
G	31.03.00	J.David	C37700
F	27.03.00	J.David	C37100

DRAWN
ON: 11.03.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
FE.20000.00	10624110	00

TV
IC20
PAGE: 1
OF : 3

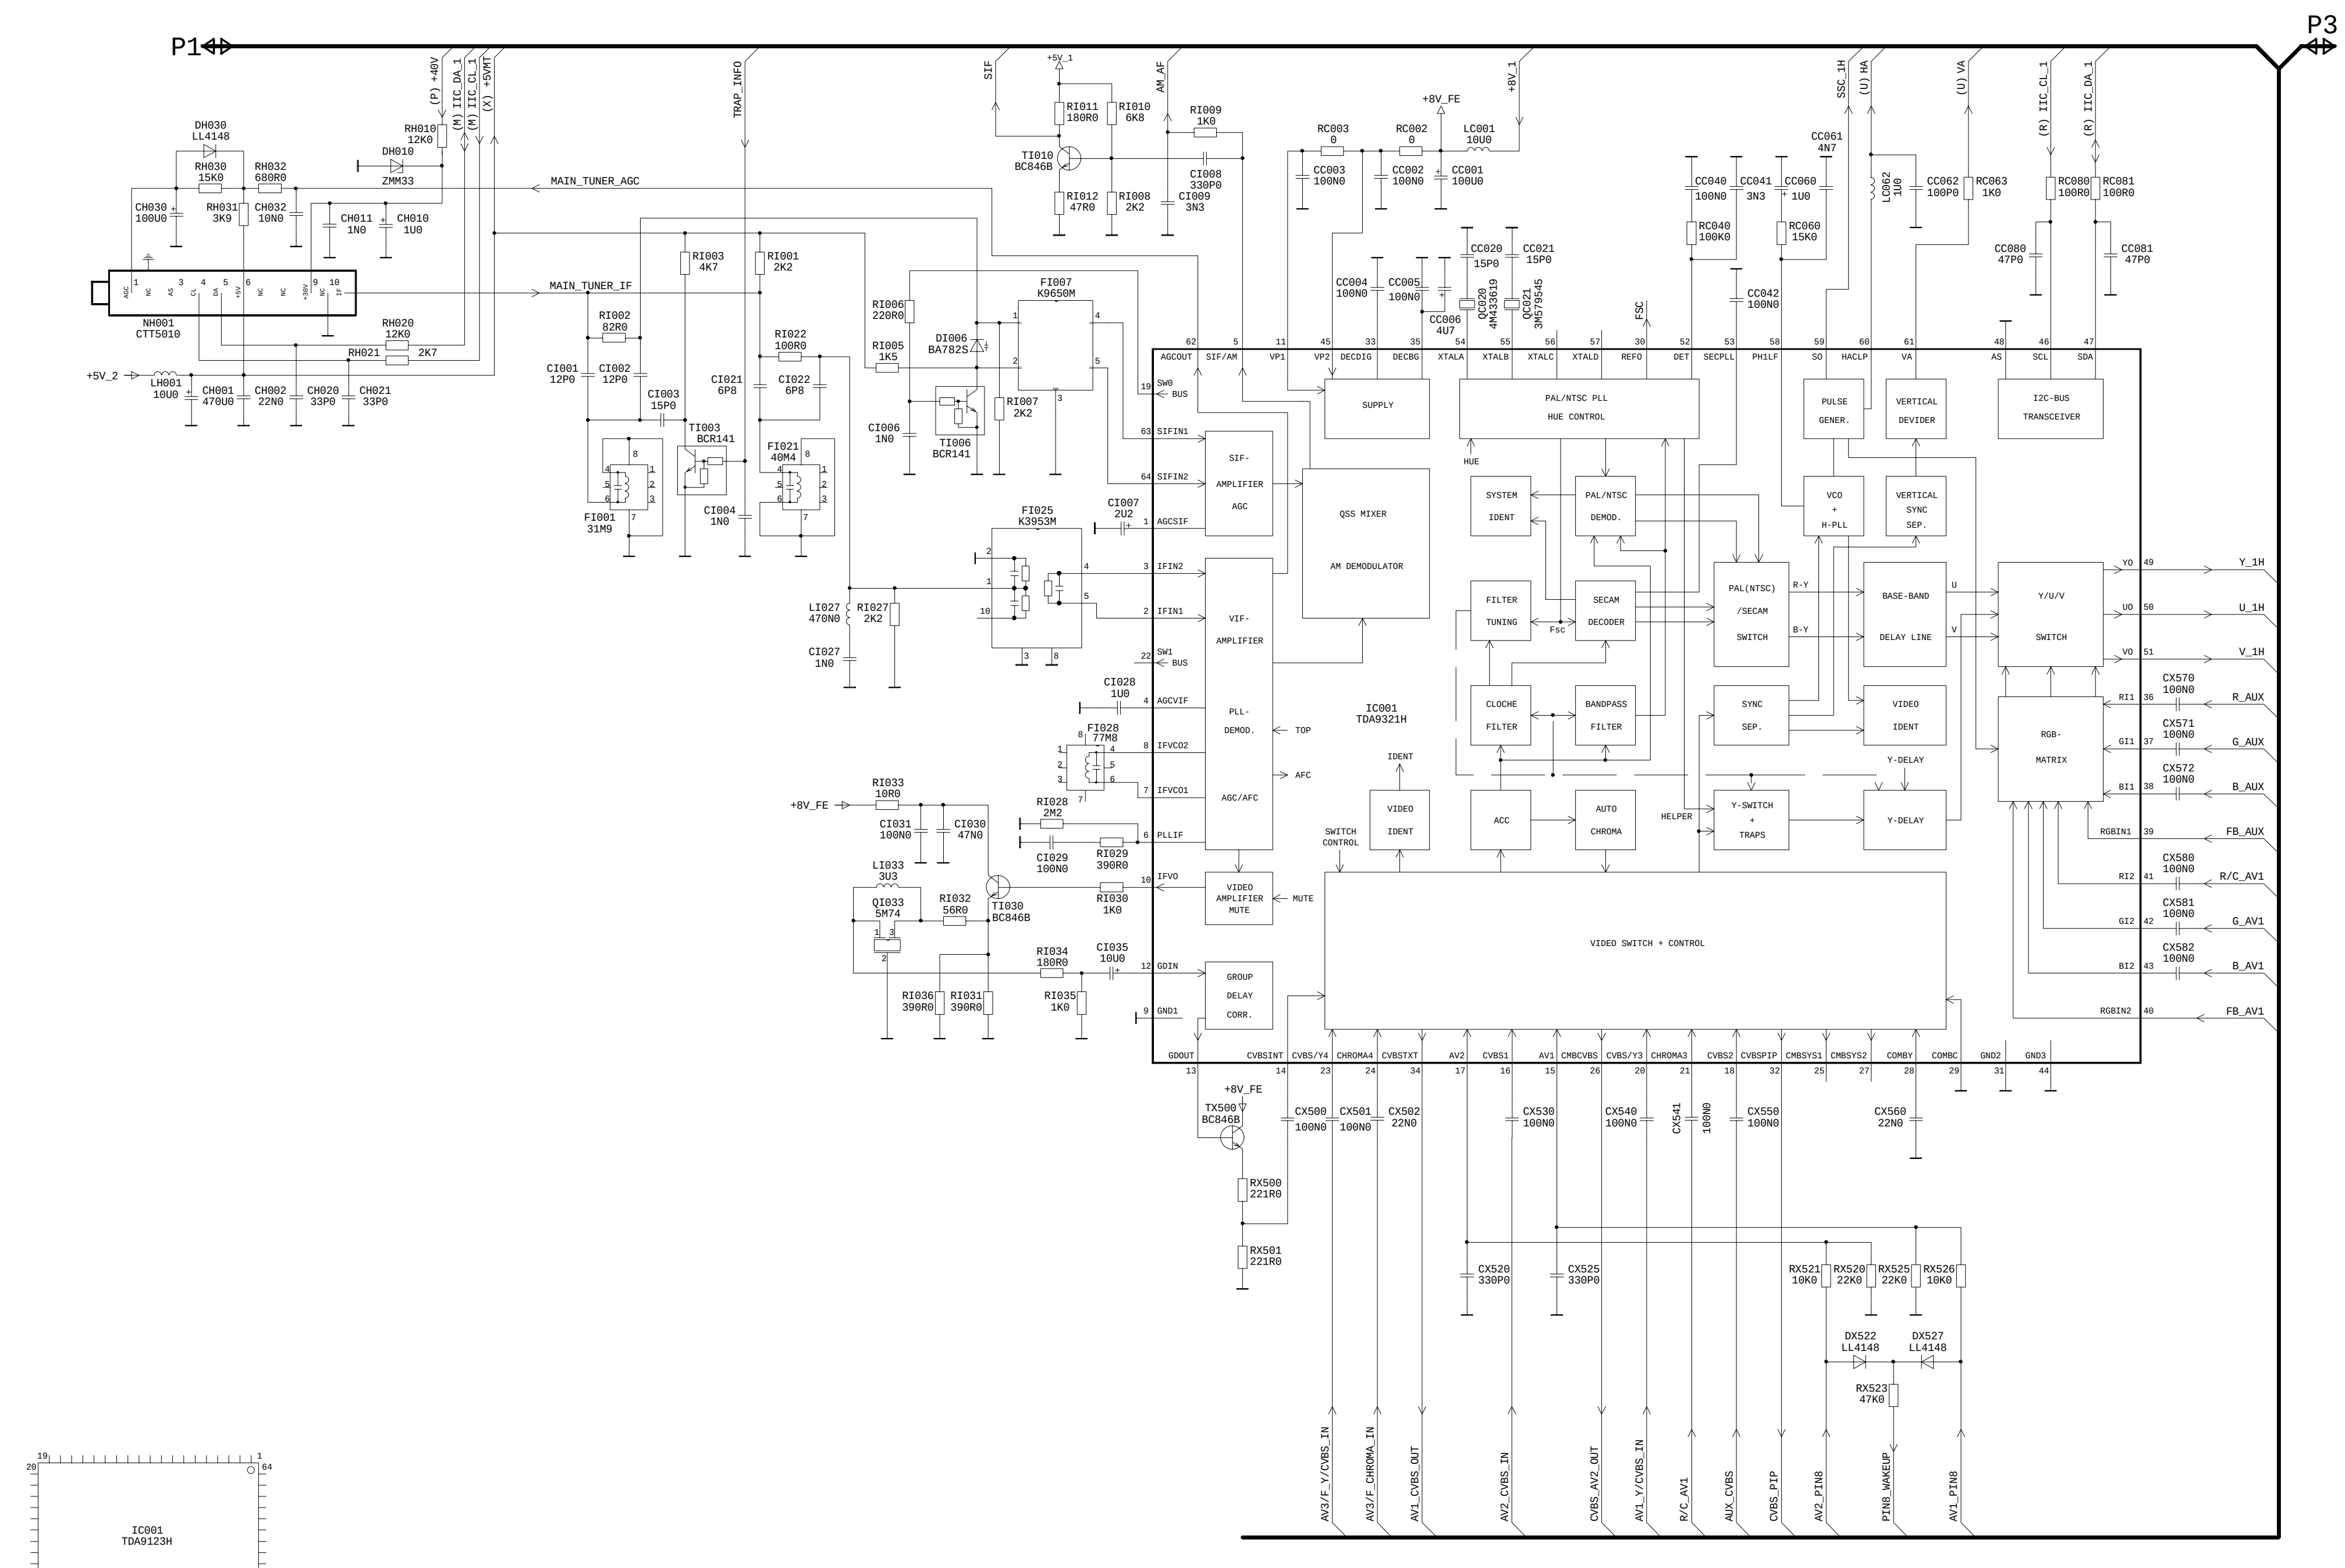
P1
P3
(P) +40V
(M) IIC_DA_1
(M) IIC_CL_1
(X) +5VMT
TRAP_INFO
SIF
+5V_1
AM_AF
+8V_FE
+8V_1
FSC
SSC_1H
(U) HA
(U) VA
(R) IIC_CL_1
(R) IIC_DA_1
MAIN_TUNER_AGC
MAIN_TUNER_IF
NH001
CTT5010
+5V_2
DH030 LL4148
RH030 15K0
RH032 680R0
RH031 3K9
CH030 100U0
CH032 10N0
CH011 1N0
CH010 1U0
DH010 ZMM33
RH010 12K0
RH020 12K0
RH021 2K7
LH001 10U0
CH001 470U0
CH002 22N0
CH020 33P0
CH021 33P0
RI002 82R0
RI003 4K7
RI001 2K2
RI022 100R0
CI001 12P0
CI002 12P0
CI003 15P0
CI021 6P8
CI022 6P8
TI003 BCR141
FI001 31M9
FI021 40M4
CI004 1N0
RI006 220R0
RI005 1K5
DI006 BA782S
FI007 K9650M
RI007 2K2
TI006 BCR141
CI006 1N0
RI011 180R0
RI010 6K8
TI010 BC846B
RI012 47R0
RI008 2K2
RI009 1K0
CI008 330P0
CI009 3N3
FI025 K3953M
CI007 2U2
LI027 470N0
RI027 2K2
CI027 1N0
CI028 1U0
FI028 77M8
RI033 10R0
CI031 100N0
CI030 47N0
RI028 2M2
CI029 100N0
RI029 390R0
LI033 3U3
QI033 5M74
RI032 56R0
TI030 BC846B
RI030 1K0
RI034 180R0
CI035 10U0
RI036 390R0
RI031 390R0
RI035 1K0
RC003 0
RC002 0
LC001 10U0
CC003 100N0
CC002 100N0
CC001 100U0
CC004 100N0
CC005 100N0
CC006 4U7
CC020 15P0
CC021 15P0
QC020 4M433619
QC021 3M579545
CC040 100N0
CC041 3N3
CC060 1U0
RC040 100K0
RC060 15K0
CC042 100N0
CC061 4N7
LC062 1U0
CC062 100P0
RC063 1K0
RC080 100R0
RC081 100R0
CC080 47P0
CC081 47P0
IC001
TDA9321H
AGCOUT
SIF/AM
VP1
VP2
DECDIG
DECBG
XTALA
XTALB
XTALC
XTALD
REFO
DET
SECPLL
PH1LF
SO
HACLP
VA
AS
SCL
SDA
SW0 BUS
SIFIN1
SIFIN2
AGCSIF
IFIN2
IFIN1
SW1 BUS
AGCVIF
IFVCO2
IFVCO1
PLLIF
IFVO
GDIN
GND1
SUPPLY
PAL/NTSC PLL HUE CONTROL
HUE
PULSE GENER.
VERTICAL DEVIDER
I2C-BUS TRANSCEIVER
SIF- AMPLIFIER AGC
QSS MIXER
AM DEMODULATOR
SYSTEM IDENT
PAL/NTSC DEMOD.
VCO + H-PLL
VERTICAL SYNC SEP.
VIF- AMPLIFIER
PLL- DEMOD.
AGC/AFC
TOP
AFC
FILTER TUNING
SECAM DECODER
Fsc
PAL(NTSC) /SECAM SWITCH
R-Y
B-Y
BASE-BAND DELAY LINE
U
V
Y/U/V SWITCH
CLOCHE FILTER
BANDPASS FILTER
SYNC SEP.
VIDEO IDENT
RGB- MATRIX
Y-DELAY
IDENT
VIDEO IDENT
ACC
AUTO CHROMA
HELPER
Y-SWITCH + TRAPS
SWITCH CONTROL
VIDEO AMPLIFIER MUTE
MUTE
GROUP DELAY CORR.
VIDEO SWITCH + CONTROL
YO
UO
VO
RI1
GI1
BI1
RGBIN1
RI2
GI2
BI2
RGBIN2
Y_1H
U_1H
V_1H
CX570 100N0
CX571 100N0
CX572 100N0
R_AUX
G_AUX
B_AUX
FB_AUX
CX580 100N0
CX581 100N0
CX582 100N0
R/C_AV1
G_AV1
B_AV1
FB_AV1
GDOUT
CVBSINT
CVBS/Y4
CHROMA4
CVBSTXT
AV2
CVBS1
AV1
CMBCVBS
CVBS/Y3
CHROMA3
CVBS2
CVBSPIP
CMBSYS1
CMBSYS2
COMBY
COMBC
GND2
GND3
+8V_FE
TX500 BC846B
RX500 221R0
RX501 221R0
CX500 100N0
CX501 100N0
CX502 22N0
CX530 100N0
CX540 100N0
CX541 100N0
CX550 100N0
CX560 22N0
CX520 330P0
CX525 330P0
RX521 10K0
RX520 22K0
RX525 22K0
RX526 10K0
DX522 LL4148
DX527 LL4148
RX523 47K0
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
AV1_CVBS_OUT
AV2_CVBS_IN
CVBS_AV2_OUT
AV1_Y/CVBS_IN
R/C_AV1
AUX_CVBS
CVBS_PIP
AV2_PIN8
PIN8_WAKEUP
AV1_PIN8
IC001
TDA9123H
12
11
10
9
8
7
6
5
4
3
2
1
H
G
F
E
D
C
B
A

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
E	07.02.00	RIEDM.	C31330/34500
D	18.11.99	RIEDM.	C28630/29280 690/710 30250/260
H	04.04.00	J.David	C34650
G	31.03.00	J.David	C37700
F	27.03.00	J.David	C37100

DRAWN
ON: 11.03.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
FE.20000.00	10624110	00	IC20

PAGE: 2
OF : 3

PCAD FORMAT DIN A1

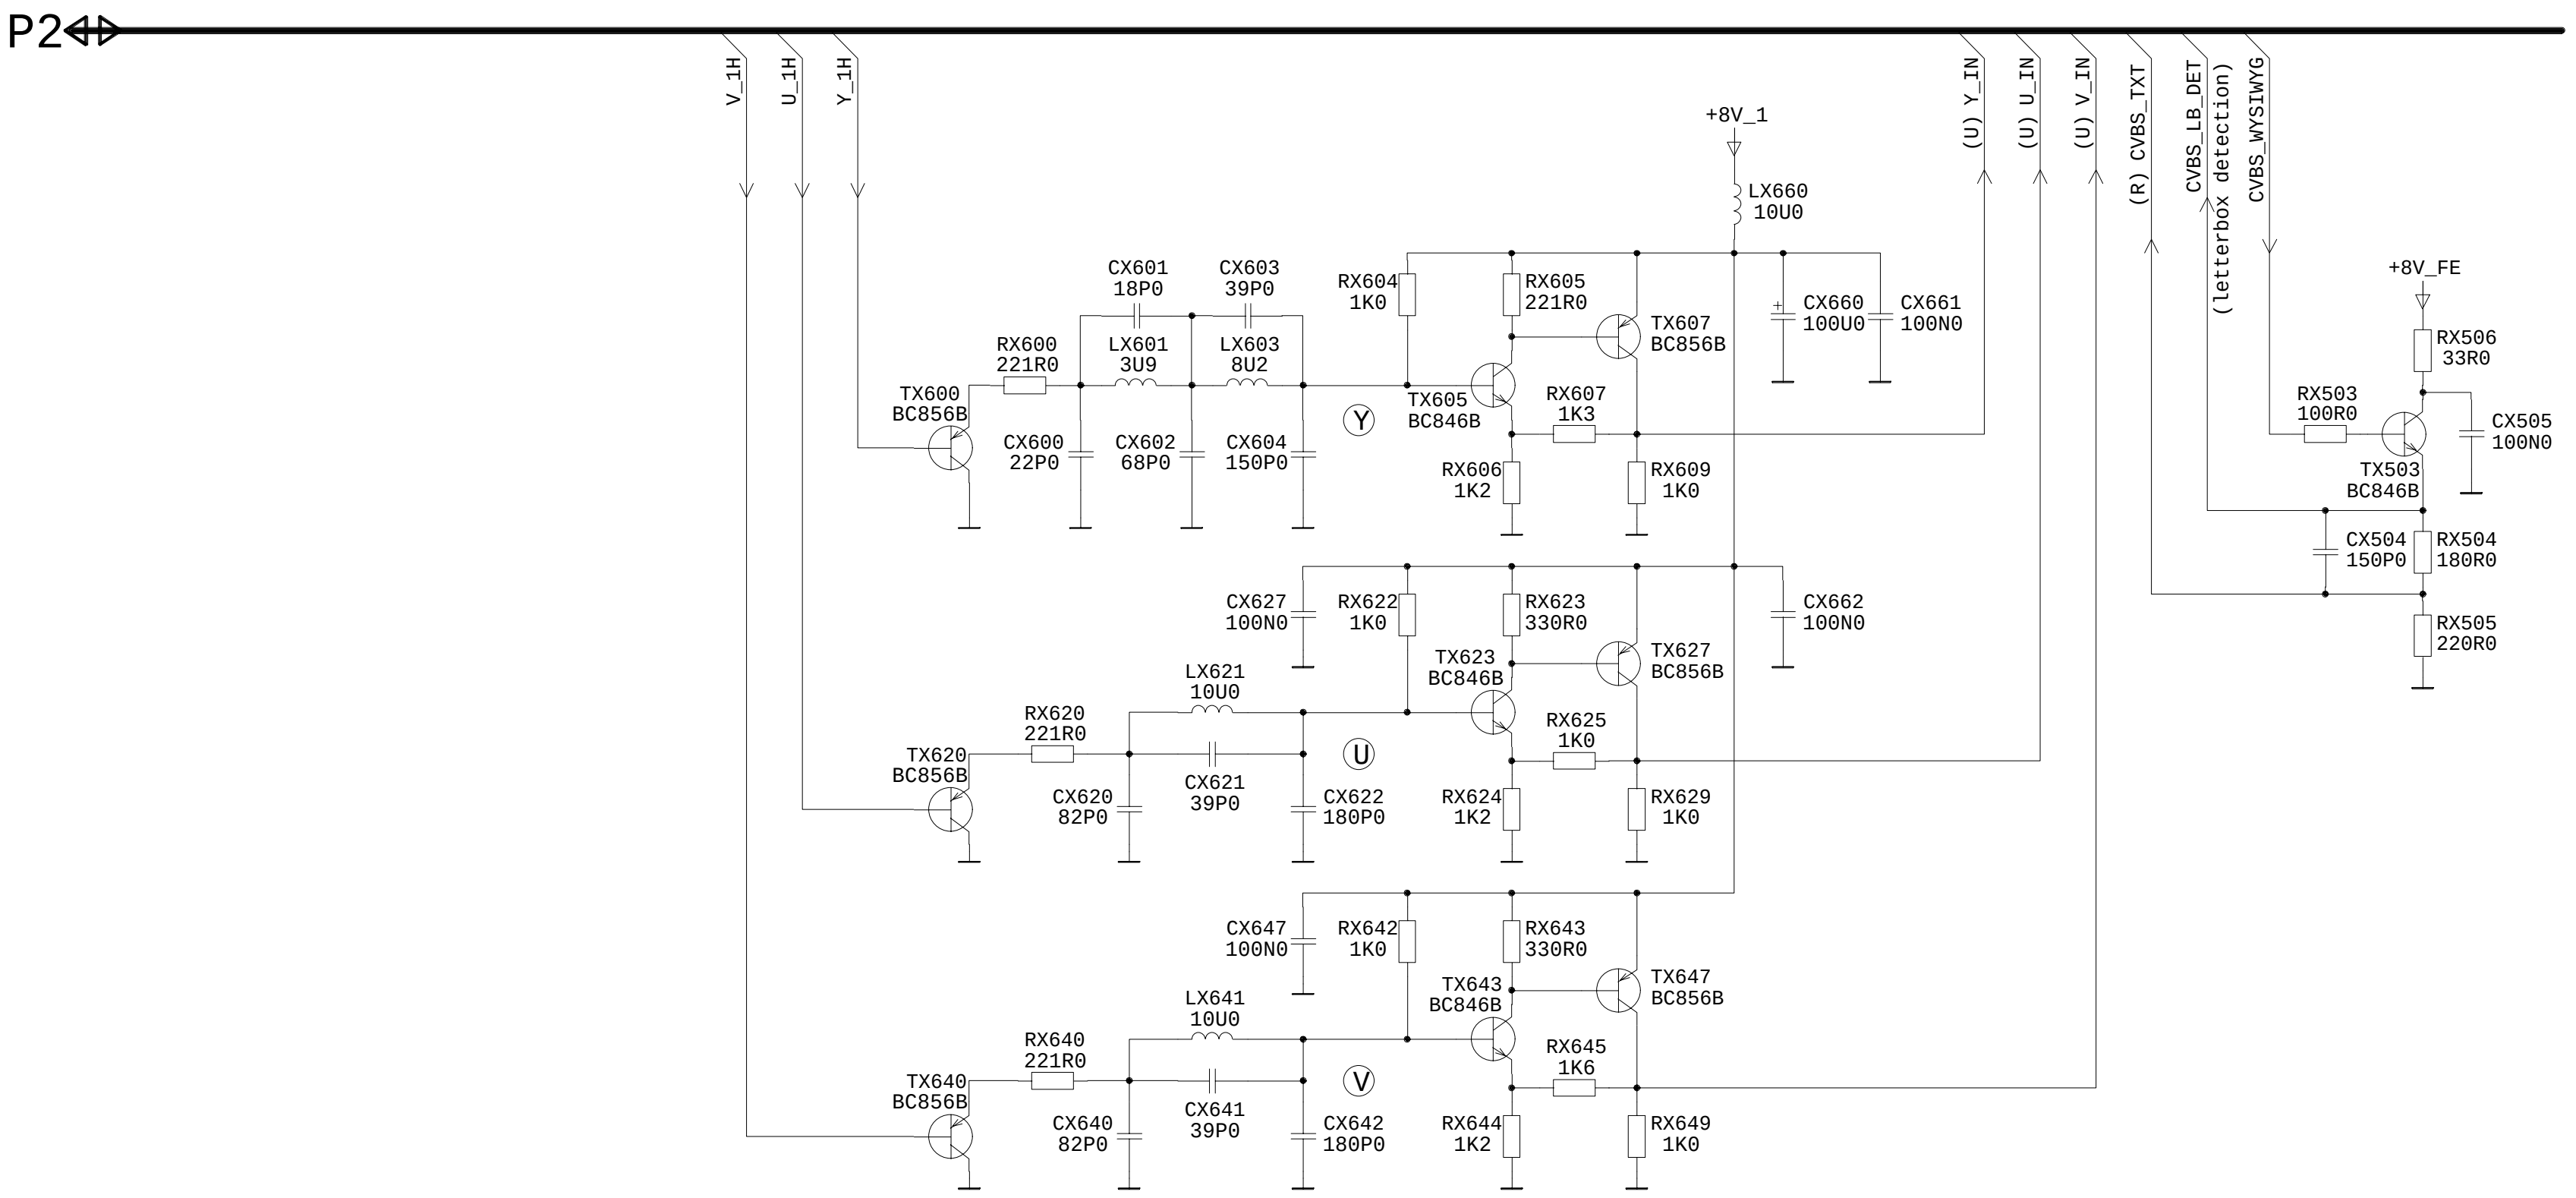
P2
V_1H
U_1H
Y_1H
(U) Y_IN
(U) U_IN
(U) V_IN
(R) CVBS_TXT
CVBS_LB_DET
(letterbox detection)
CVBS_WYSIWYG
+8V_1
LX660
10U0
RX604
1K0
RX605
221R0
TX607
BC856B
CX660
100U0
CX661
100N0
CX601
18P0
CX603
39P0
RX600
221R0
LX601
3U9
LX603
8U2
TX600
BC856B
TX605
BC846B
RX607
1K3
Y
CX600
22P0
CX602
68P0
CX604
150P0
RX606
1K2
RX609
1K0
+8V_FE
RX506
33R0
RX503
100R0
CX505
100N0
TX503
BC846B
CX504
150P0
RX504
180R0
RX505
220R0
CX627
100N0
RX622
1K0
RX623
330R0
CX662
100N0
TX623
BC846B
TX627
BC856B
LX621
10U0
RX620
221R0
RX625
1K0
TX620
BC856B
U
CX620
82P0
CX621
39P0
CX622
180P0
RX624
1K2
RX629
1K0
CX647
100N0
RX642
1K0
RX643
330R0
TX643
BC846B
TX647
BC856B
LX641
10U0
RX640
221R0
RX645
1K6
TX640
BC856B
V
CX640
82P0
CX641
39P0
CX642
180P0
RX644
1K2
RX649
1K0

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
E	07.02.00	RIEDM.	C31330/34500
D	18.11.99	RIEDM.	C28630/29280 690/710 30250/260
H	04.04.00	J.David	C34650
G	31.03.00	J.David	C37700
F	27.03.00	J.David	C37100

DRAWN
ON: 11.03.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
FE.20000.00	10624110	00

TV
IC20
PAGE: 3
OF : 3

PCAD FORMAT DIN A2

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

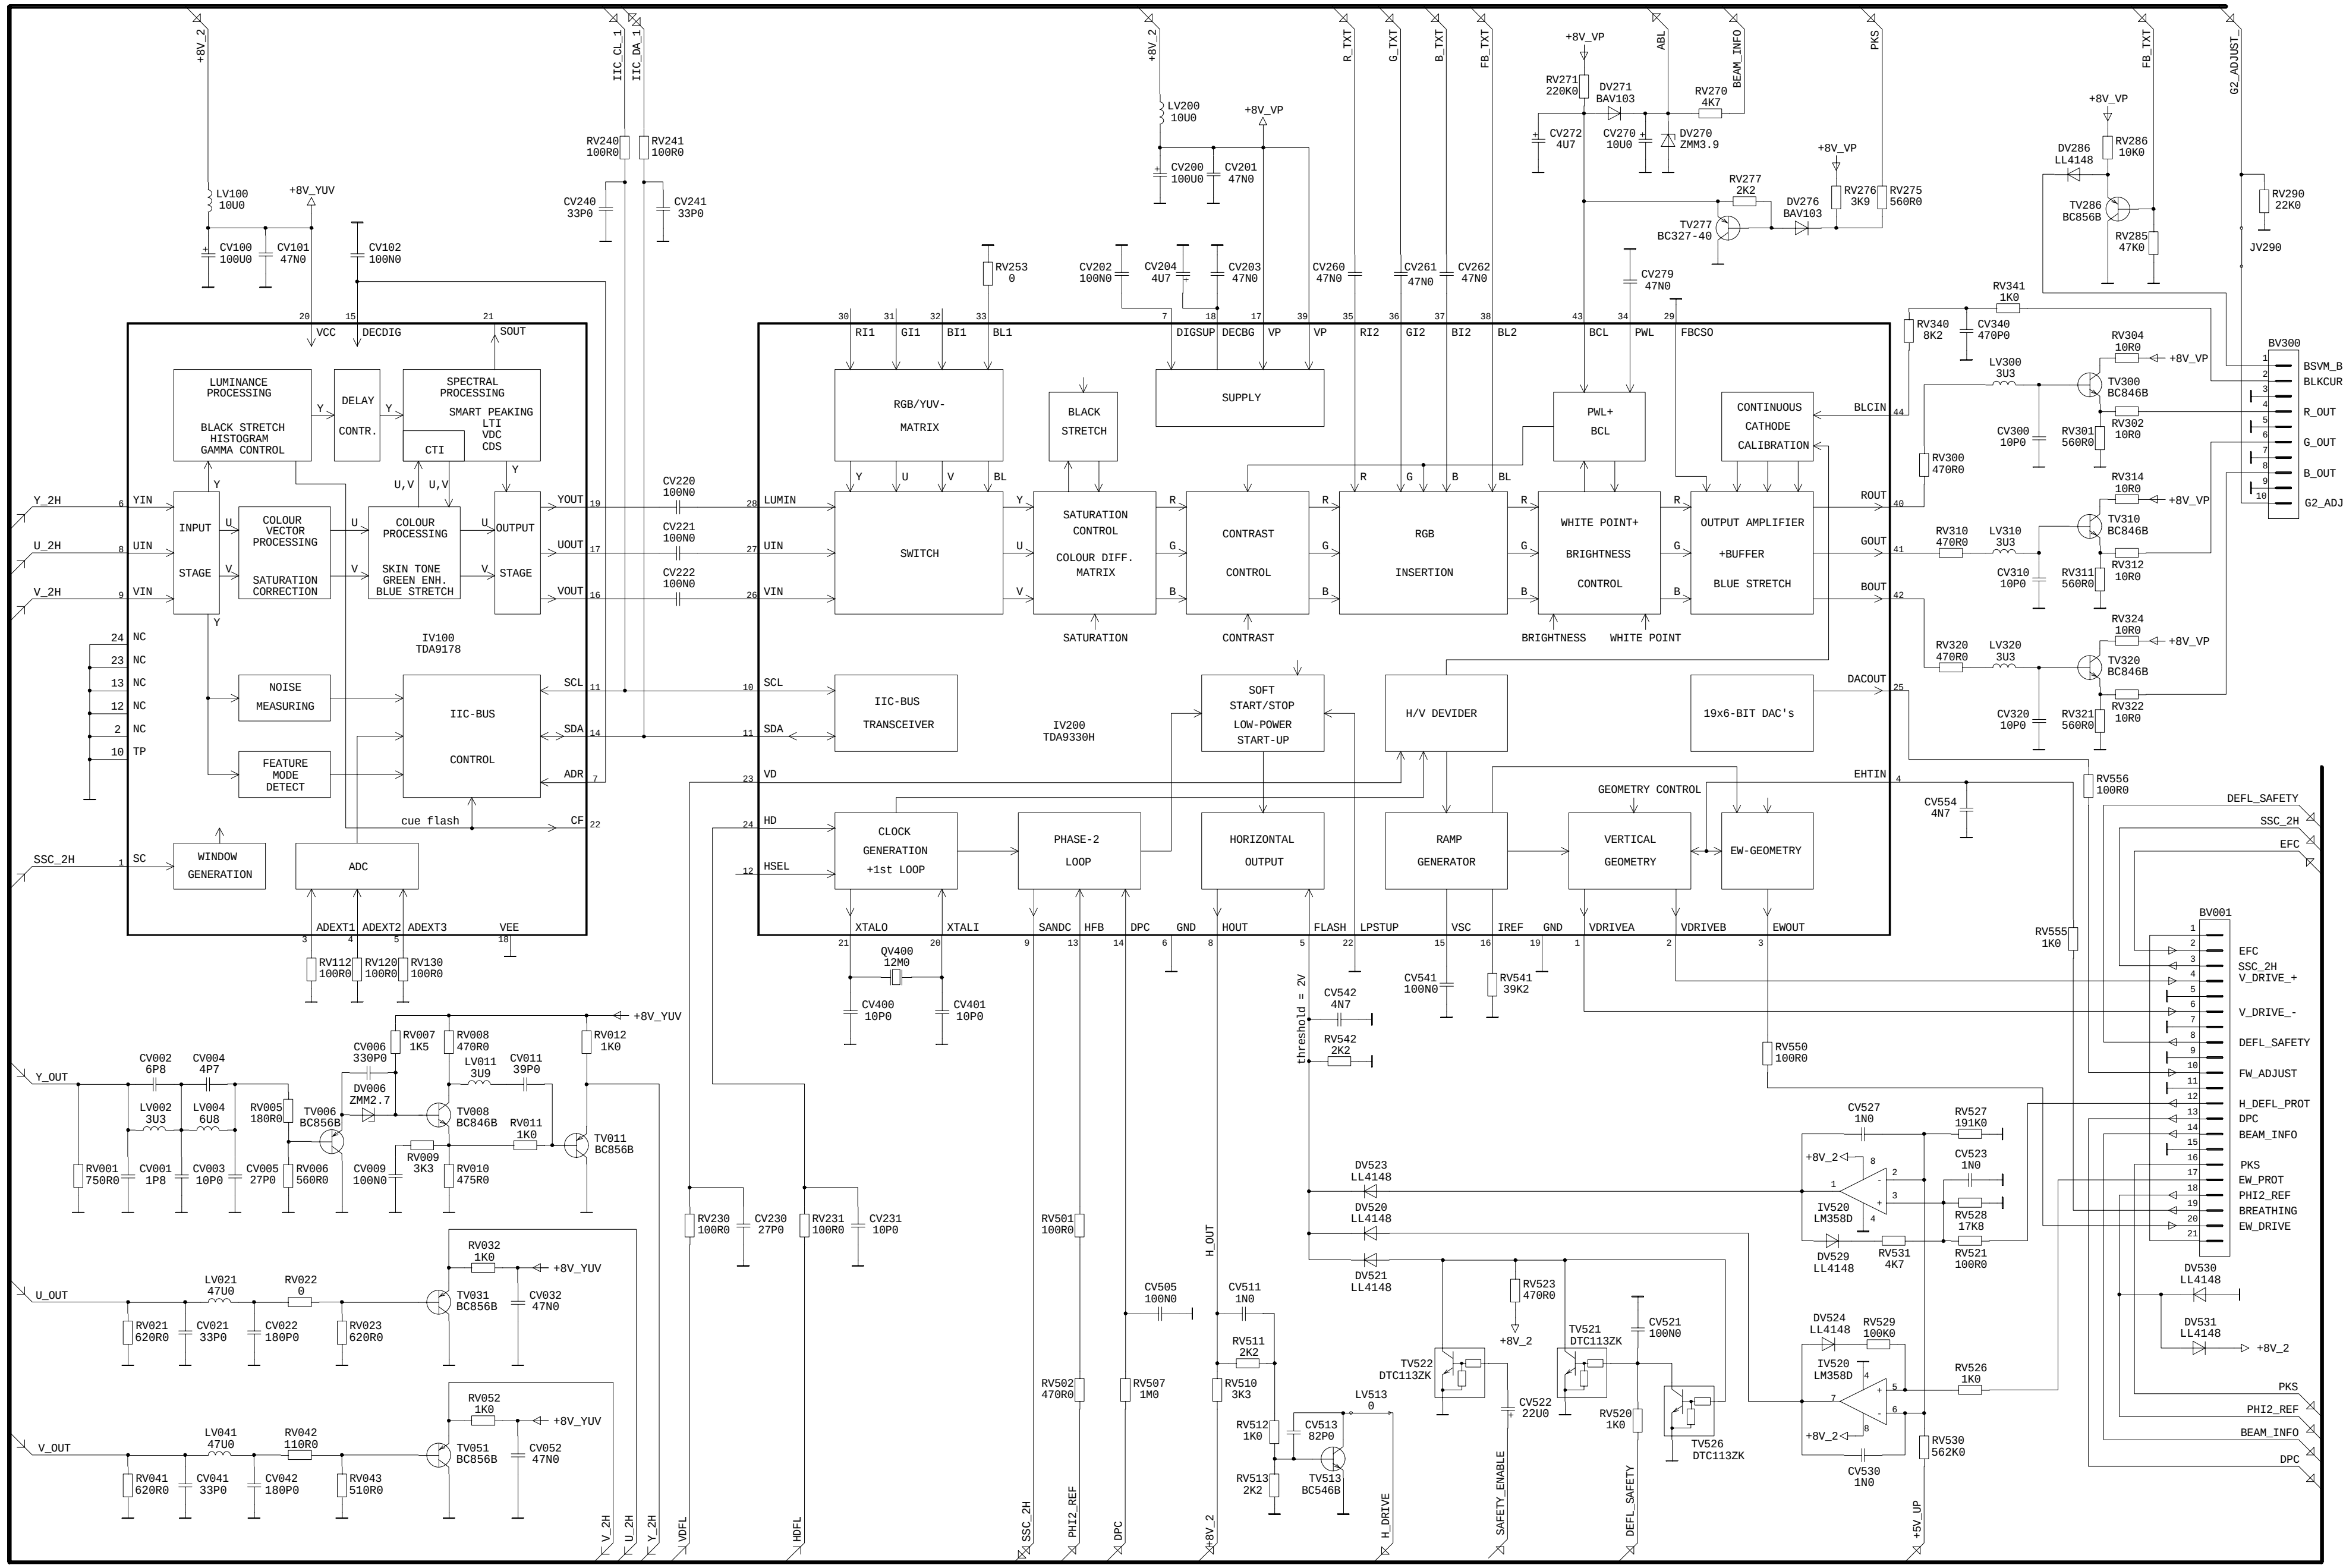
IV100
TDA9178
LUMINANCE PROCESSING
BLACK STRETCH
HISTOGRAM
GAMMA CONTROL
DELAY CONTR.
SPECTRAL PROCESSING
SMART PEAKING
LTI
VDC
CDS
CTI
INPUT STAGE
COLOUR VECTOR PROCESSING
SATURATION CORRECTION
COLOUR PROCESSING
SKIN TONE
GREEN ENH.
BLUE STRETCH
OUTPUT STAGE
NOISE MEASURING
FEATURE MODE DETECT
IIC-BUS CONTROL
WINDOW GENERATION
ADC
cue flash
Y_2H
U_2H
V_2H
SSC_2H
YOUT
UOUT
VOUT
SCL
SDA
ADR
CF
VCC
DECDIG
SOUT
ADEXT1
ADEXT2
ADEXT3
VEE
IV200
TDA9330H
RGB/YUV-MATRIX
BLACK STRETCH
SUPPLY
PWL+ BCL
CONTINUOUS CATHODE CALIBRATION
SWITCH
SATURATION CONTROL
COLOUR DIFF. MATRIX
CONTRAST CONTROL
RGB INSERTION
WHITE POINT+ BRIGHTNESS CONTROL
OUTPUT AMPLIFIER +BUFFER BLUE STRETCH
IIC-BUS TRANSCEIVER
SOFT START/STOP LOW-POWER START-UP
H/V DEVIDER
19x6-BIT DAC's
CLOCK GENERATION +1st LOOP
PHASE-2 LOOP
HORIZONTAL OUTPUT
RAMP GENERATOR
VERTICAL GEOMETRY
EW-GEOMETRY
GEOMETRY CONTROL
SATURATION
CONTRAST
BRIGHTNESS
WHITE POINT
LUMIN
UIN
VIN
VD
HD
HSEL
RI1 GI1 BI1 BL1
DIGSUP DECBG VP
RI2 GI2 BI2 BL2
BCL PWL FBCSO
BLCIN
ROUT
GOUT
BOUT
DACOUT
EHTIN
XTALO XTALI SANDC HFB DPC GND HOUT FLASH LPSTUP VSC IREF GND VDRIVEA VDRIVEB EWOUT
+8V_2
IIC_CL_1
IIC_DA_1
R_TXT
G_TXT
B_TXT
FB_TXT
+8V_VP
ABL
BEAM_INFO
PKS
G2_ADJUST
+8V_YUV
BV300
BSVM_BLANK
BLKCURR
R_OUT
G_OUT
B_OUT
G2_ADJUST
BV001
EFC
SSC_2H
V_DRIVE_+
V_DRIVE_-
DEFL_SAFETY
FW_ADJUST
H_DEFL_PROT
DPC
BEAM_INFO
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
TV300 BC846B
TV310 BC846B
TV320 BC846B
TV286 BC856B
TV277 BC327-40
QV400 12M0
IV520 LM358D
TV006 BC856B
TV008 BC846B
TV011 BC856B
TV031 BC856B
TV051 BC856B
TV513 BC546B
TV521 DTC113ZK
TV522 DTC113ZK
TV526 DTC113ZK
Y_OUT
U_OUT
V_OUT
V_2H U_2H Y_2H VDFL HDFL SSC_2H PHI2_REF DPC +8V_2 H_DRIVE SAFETY_ENABLE DEFL_SAFETY +5V_UP
threshold = 2V
H_OUT

THOMSON MULTI MEDIA	INDEX	DATE	NAME	DESCRIPTION
	J	30.11.99	RIEDM.	C30790/890
	I	17.11.99	RIEDM.	C28630/700 29330/450/460 710
	M	31.03.00	J.David	CORRECTION
	L	30.03.00	J.David	C35790/37270 C37290
	K	25.02.00	RIEDM.	C30940/32640 C34520/880

tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_LUEBCKE

DRAWN
ON: 04.11.98
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION: VP.20000.00
TOCOM-NUMBER: 10626010

TV
IC20

PAGE: 1
OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

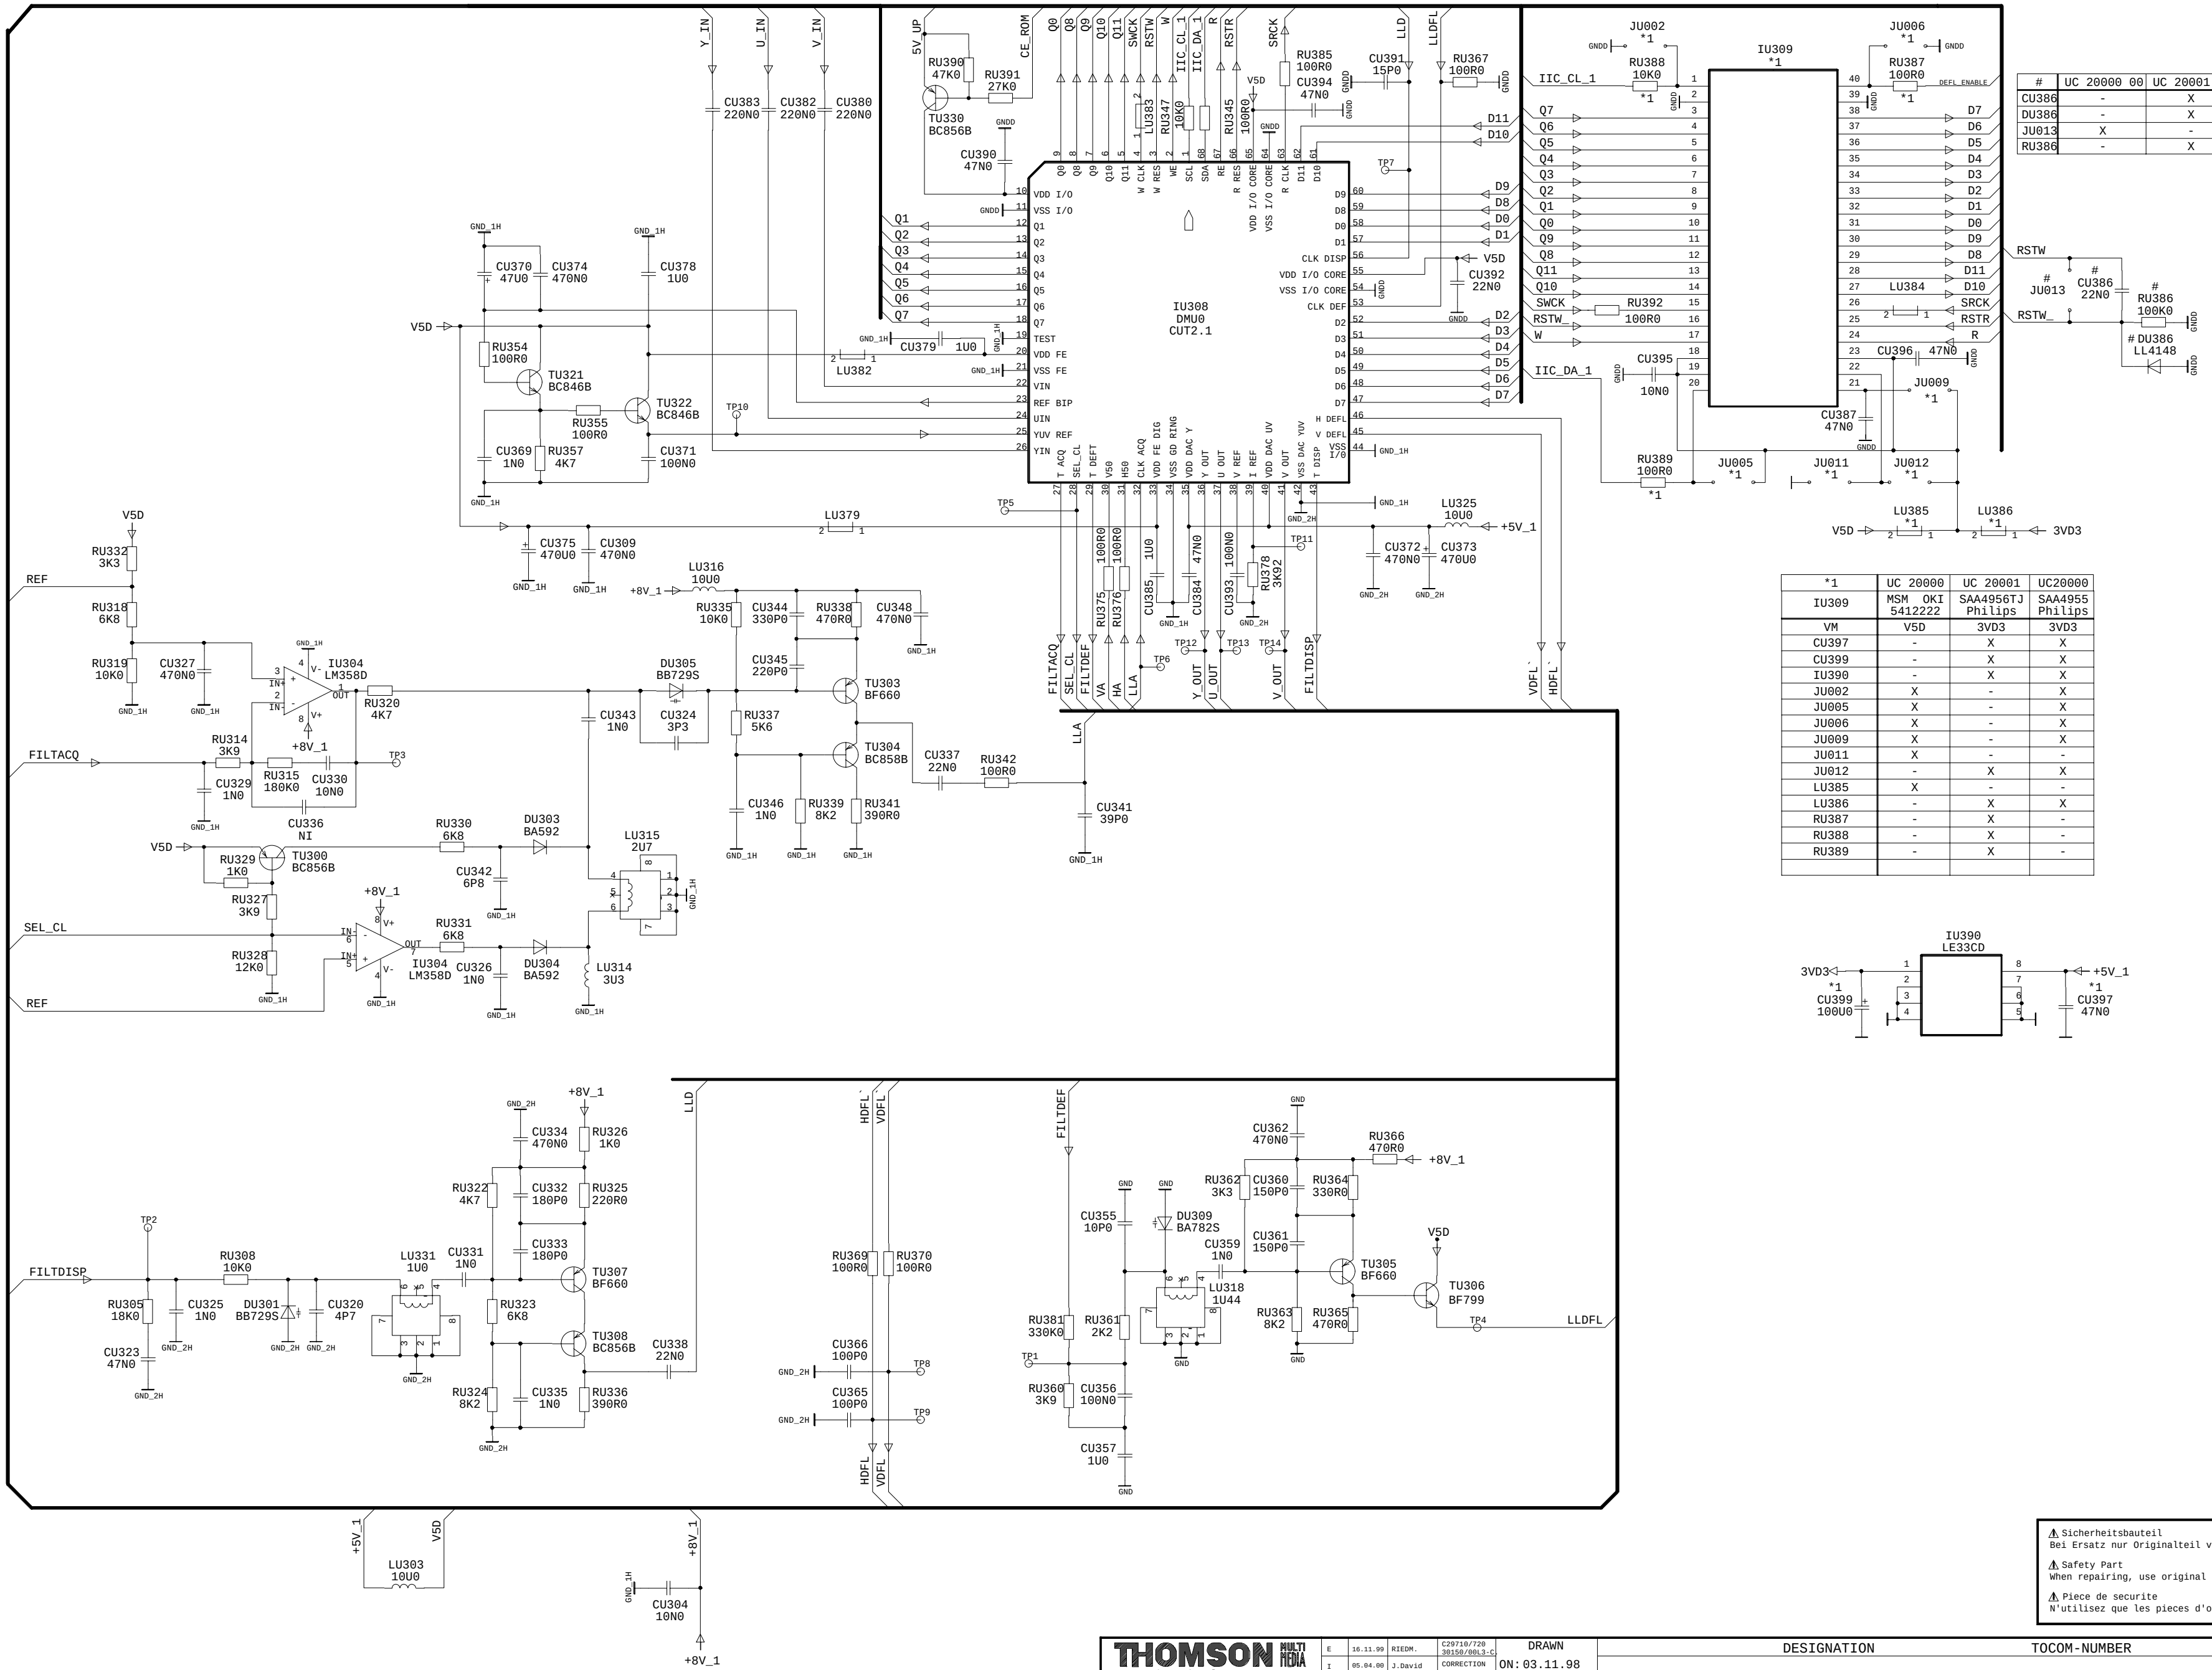
Y_IN
U_IN
V_IN
5V_UP
CE_ROM
Q8 Q8 Q9 Q10 Q11 SWCK RSTW W IIC_CL_1 IIC_DA_1 R RSTR SRCK LLD LLDFL
RU390 47K0
RU391 27K0
TU330 BC856B
CU390 47N0
CU383 220N0
CU382 220N0
CU380 220N0
LU383
RU347 10K0
RU345 100R0
RU385 100R0
CU394 47N0
CU391 15P0
RU367 100R0
V5D
IU308 DMU0 CUT2.1
VDD I/O
VSS I/O
Q1 Q2 Q3 Q4 Q5 Q6 Q7
TEST
VDD FE
VSS FE
VIN
REF BIP
UIN
YUV REF
YIN
D9 D8 D0 D1
CLK DISP
VDD I/O CORE
VSS I/O CORE
CLK DEF
D2 D3 D4 D5 D6 D7
H DEFL
V DEFL
VSS I/O
T ACQ
SEL_CL
T DEFT
V50
H50
CLK ACQ
VDD FE DIG
VSS GD DIG
VDD DAC Y
Y OUT
U OUT
I REF
V REF
VDD DAC UV
V OUT
VSS DAC YUV
T DISP
W CLK
W RES
WE
SCL
SDA
RE
R RES
R CLK
D11
D10
TP7
CU392 22N0
CU379 1U0
LU382
GND_1H
GNDD
CU370 47U0
CU374 470N0
CU378 1U0
RU354 100R0
TU321 BC846B
TU322 BC846B
RU355 100R0
CU369 1N0
RU357 4K7
CU371 100N0
TP10
TP5
LU379
CU375 470U0
CU309 470N0
RU375 100R0
RU376 100R0
CU385 1U0
CU384 47N0
CU393 100N0
RU378 3K92
TP11
TP12 TP13 TP14 TP6
LU325 10U0
+5V_1
CU372 470N0
CU373 470U0
GND_2H
FILTACQ
SEL_CL
FILTDEF
VA
HA
LLA
Y_OUT
U_OUT
V_OUT
FILTDISP
VDFL`
HDFL`
IU309 *1
JU002 *1
RU388 10K0 *1
JU006 *1
RU387 100R0 *1
DEFL_ENABLE
IIC_CL_1
IIC_DA_1
Q7 Q6 Q5 Q4 Q3 Q2 Q1 Q0 Q9 Q8 Q11 Q10
SWCK
RSTW_
W
RU392 100R0
LU384
CU396 47N0
CU395 10N0
JU009 *1
CU387 47N0
RU389 100R0 *1
JU005 *1
JU011 *1
JU012 *1
LU385 *1
LU386 *1
3VD3
RSTW
# JU013
# CU386 22N0
# RU386 100K0
# DU386 LL4148
IU390 LE33CD
*1 CU399 100U0
*1 CU397 47N0
REF
RU332 3K3
RU318 6K8
RU319 10K0
CU327 470N0
IU304 LM358D
RU320 4K7
+8V_1
LU316 10U0
RU335 10K0
CU344 330P0
RU338 470R0
CU348 470N0
DU305 BB729S
CU345 220P0
TU303 BF660
CU343 1N0
CU324 3P3
RU337 5K6
TU304 BC858B
CU337 22N0
RU342 100R0
CU341 39P0
CU346 1N0
RU339 8K2
RU341 390R0
RU314 3K9
RU315 180K0
CU329 1N0
CU330 10N0
TP3
CU336 NI
RU330 6K8
DU303 BA592
LU315 2U7
RU329 1K0
TU300 BC856B
CU342 6P8
RU327 3K9
RU331 6K8
DU304 BA592
LU314 3U3
RU328 12K0
CU326 1N0
LLD
CU334 470N0
RU326 1K0
RU322 4K7
CU332 180P0
RU325 220R0
CU333 180P0
TU307 BF660
TP2
RU308 10K0
LU331 1U0
CU331 1N0
RU323 6K8
TU308 BC856B
CU338 22N0
RU305 18K0
CU325 1N0
DU301 BB729S
CU320 4P7
CU323 47N0
RU324 8K2
CU335 1N0
RU336 390R0
HDFL
VDFL
RU369 100R0
RU370 100R0
CU366 100P0
CU365 100P0
TP8 TP9
CU362 470N0
RU366 470R0
CU355 10P0
DU309 BA782S
RU362 3K3
CU360 150P0
RU364 330R0
CU361 150P0
CU359 1N0
LU318 1U44
TU305 BF660
TU306 BF799
RU381 330K0
RU361 2K2
RU363 8K2
RU365 470R0
TP4
LLDFL
TP1
RU360 3K9
CU356 100N0
CU357 1U0
GND
LU303 10U0
CU304 10N0
+8V_1

#	UC 20000 00	UC 20001 00
CU386	-	X
DU386	-	X
JU013	X	-
RU386	-	X

*1	UC 20000	UC 20001	UC20000
IU309	MSM OKI 5412222	SAA4956TJ Philips	SAA4955 Philips
VM	V5D	3VD3	3VD3
CU397	-	X	X
CU399	-	X	X
IU390	-	X	X
JU002	X	-	X
JU005	X	-	X
JU006	X	-	X
JU009	X	-	X
JU011	X	-	-
JU012	-	X	X
LU385	X	-	-
LU386	-	X	X
RU387	-	X	-
RU388	-	X	-
RU389	-	X	-

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CDH_SEEBURGER

INDEX	DATE	NAME	DESCRIPTION
E	16.11.99	RIEDM.	C29710/720 30150/00L3-C
I	05.04.00	J.David	CORRECTION
H	27.03.00	J.David	C37190
G	09.03.00	RIEDM.	C35590
F	24.02.00	RIEDM.	C30910/33010 34040/34740

DRAWN
ON: 03.11.98
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
UC.20000.00	10626020	00
UC.20001.00	10649920	

TV
IC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A1

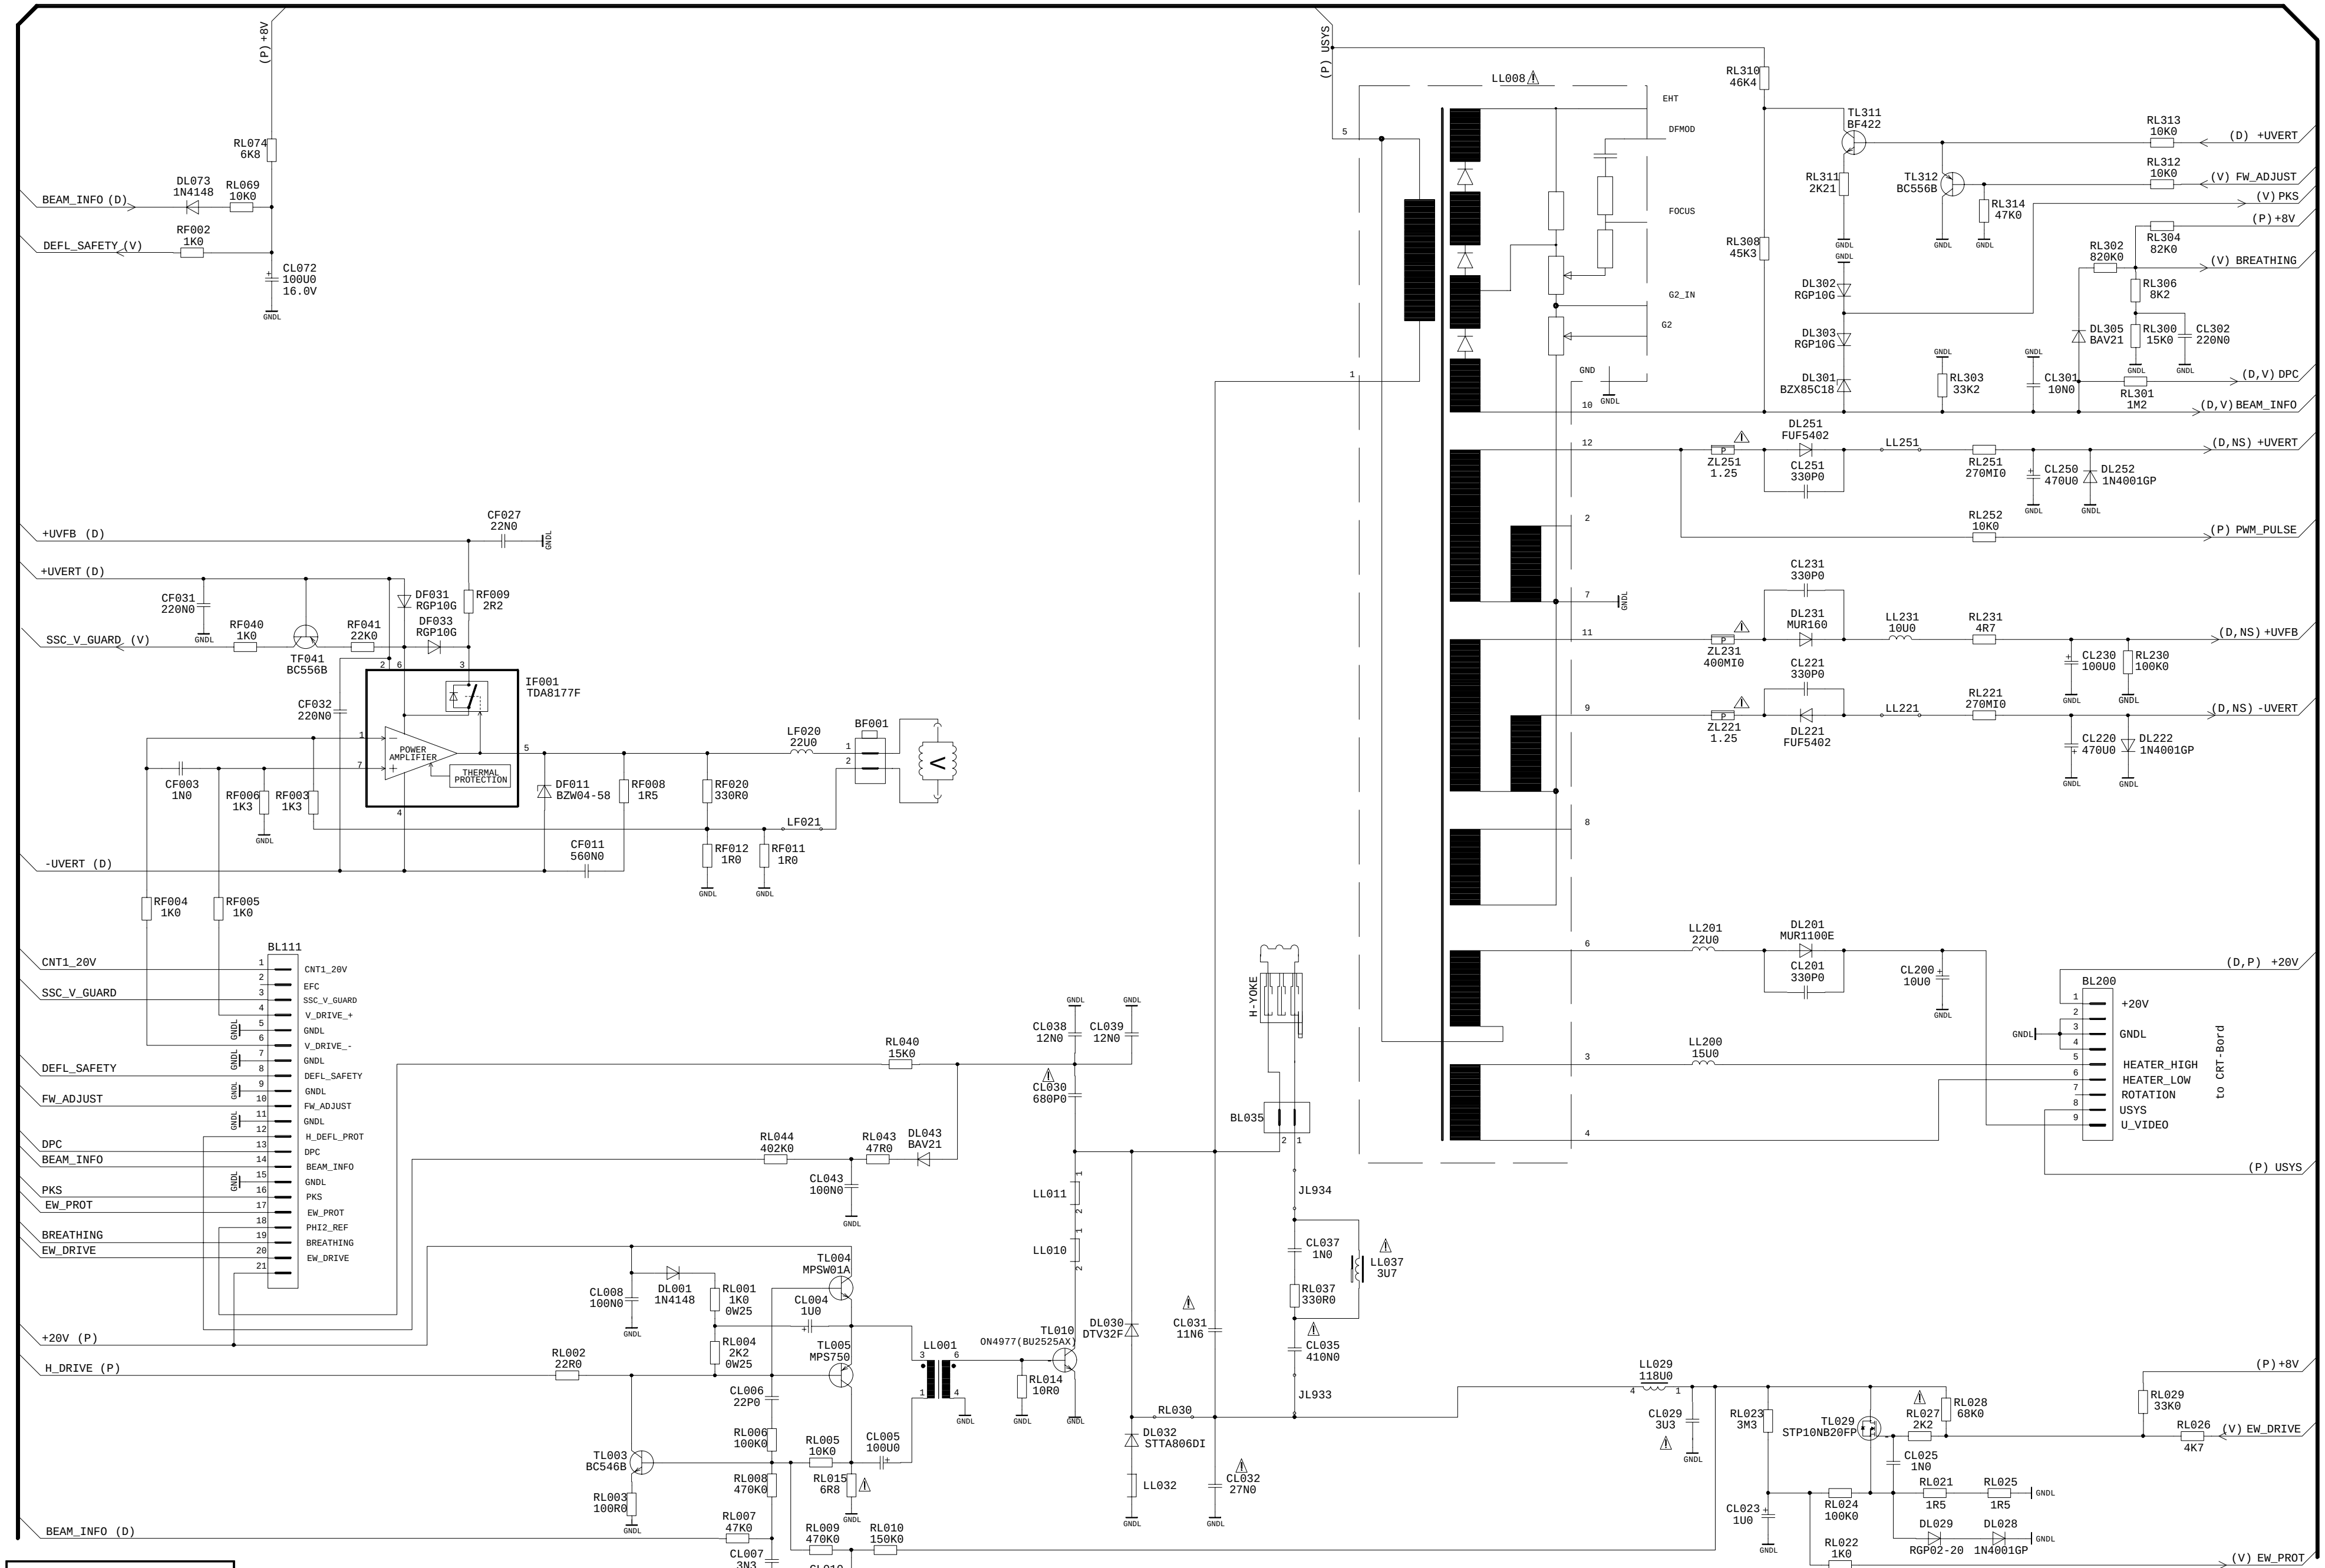

(P) +8V
RL074 6K8
DL073 1N4148
RL069 10K0
BEAM_INFO (D)
RF002 1K0
DEFL_SAFETY (V)
CL072 100U0 16.0V
GNDL
(P) USYS
LL008
EHT
DFMOD
FOCUS
G2_IN
G2
GND
RL310 46K4
TL311 BF422
RL311 2K21
TL312 BC556B
RL314 47K0
RL313 10K0
(D) +UVERT
RL312 10K0
(V) FW_ADJUST
(V) PKS
(P) +8V
RL308 45K3
RL304 82K0
RL302 820K0
(V) BREATHING
RL306 8K2
DL302 RGP10G
DL303 RGP10G
DL305 BAV21
RL300 15K0
CL302 220N0
DL301 BZX85C18
RL303 33K2
CL301 10N0
RL301 1M2
(D,V) DPC
(D,V) BEAM_INFO
ZL251 1.25
DL251 FUF5402
CL251 330P0
LL251
RL251 270MI0
CL250 470U0
DL252 1N4001GP
(D,NS) +UVERT
RL252 10K0
(P) PWM_PULSE
CL231 330P0
DL231 MUR160
ZL231 400MI0
LL231 10U0
RL231 4R7
CL230 100U0
RL230 100K0
(D,NS) +UVFB
CL221 330P0
DL221 FUF5402
ZL221 1.25
LL221
RL221 270MI0
CL220 470U0
DL222 1N4001GP
(D,NS) -UVERT
+UVFB (D)
CF027 22N0
+UVERT (D)
CF031 220N0
DF031 RGP10G
RF009 2R2
DF033 RGP10G
SSC_V_GUARD (V)
RF040 1K0
TF041 BC556B
RF041 22K0
IF001 TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
CF032 220N0
CF003 1N0
RF006 1K3
RF003 1K3
DF011 BZW04-58
RF008 1R5
RF020 330R0
LF020 22U0
BF001
LF021
RF012 1R0
RF011 1R0
CF011 560N0
-UVERT (D)
RF004 1K0
RF005 1K0
BL111
CNT1_20V
EFC
SSC_V_GUARD
V_DRIVE_+
V_DRIVE_-
DEFL_SAFETY
FW_ADJUST
H_DEFL_PROT
DPC
BEAM_INFO
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
+20V (P)
H_DRIVE (P)
H-YOKE
BL035
LL201 22U0
DL201 MUR1100E
CL201 330P0
CL200 10U0
(D,P) +20V
BL200
+20V
GNDL
HEATER_HIGH
HEATER_LOW
ROTATION
USYS
U_VIDEO
to CRT-Bord
LL200 15U0
(P) USYS
RL040 15K0
CL038 12N0
CL039 12N0
CL030 680P0
RL044 402K0
RL043 47R0
DL043 BAV21
CL043 100N0
LL011
LL010
JL934
CL037 1N0
LL037 3U7
RL037 330R0
CL035 410N0
JL933
TL004 MPSW01A
CL008 100N0
DL001 1N4148
RL001 1K0 0W25
CL004 1U0
RL004 2K2 0W25
TL005 MPS750
LL001
TL010 ON4977(BU2525AX)
RL014 10R0
DL030 DTV32F
CL031 11N6
RL002 22R0
CL006 22P0
RL006 100K0
RL005 10K0
CL005 100U0
TL003 BC546B
RL008 470K0
RL015 6R8
RL003 100R0
RL007 47K0
CL007 3N3
RL009 470K0
RL010 150K0
CL010 100N0
RL030
DL032 STTA806DI
LL032
CL032 27N0
LL029 118U0
CL029 3U3
(P) +8V
RL023 3M3
TL029 STP10NB20FP
RL027 2K2
RL028 68K0
RL029 33K0
RL026 4K7
(V) EW_DRIVE
CL025 1N0
RL021 1R5
RL025 1R5
CL023 1U0
RL024 100K0
DL029 RGP02-20
DL028 1N4001GP
RL022 1K0
(V) EW_PROT

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CLT_LAEUFER

INDEX	DATE	NAME	DESCRIPTION
J	07.02.00	RIEDM.	C32460/33040 130/720/760
I	30.11.99	RIEDM.	C28630/29450 60/890/31310
H	18.10.99	RIEDM.	C28140
G	22.09.99	RIEDM.	CORRECTION
K	30.03.00	J.David	C35790/36340 C36360/560 C36920/37290

DRAWN
ON: 28.04.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
DP.20100.34	10626050	00	IC20
			PAGE: 1
			OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

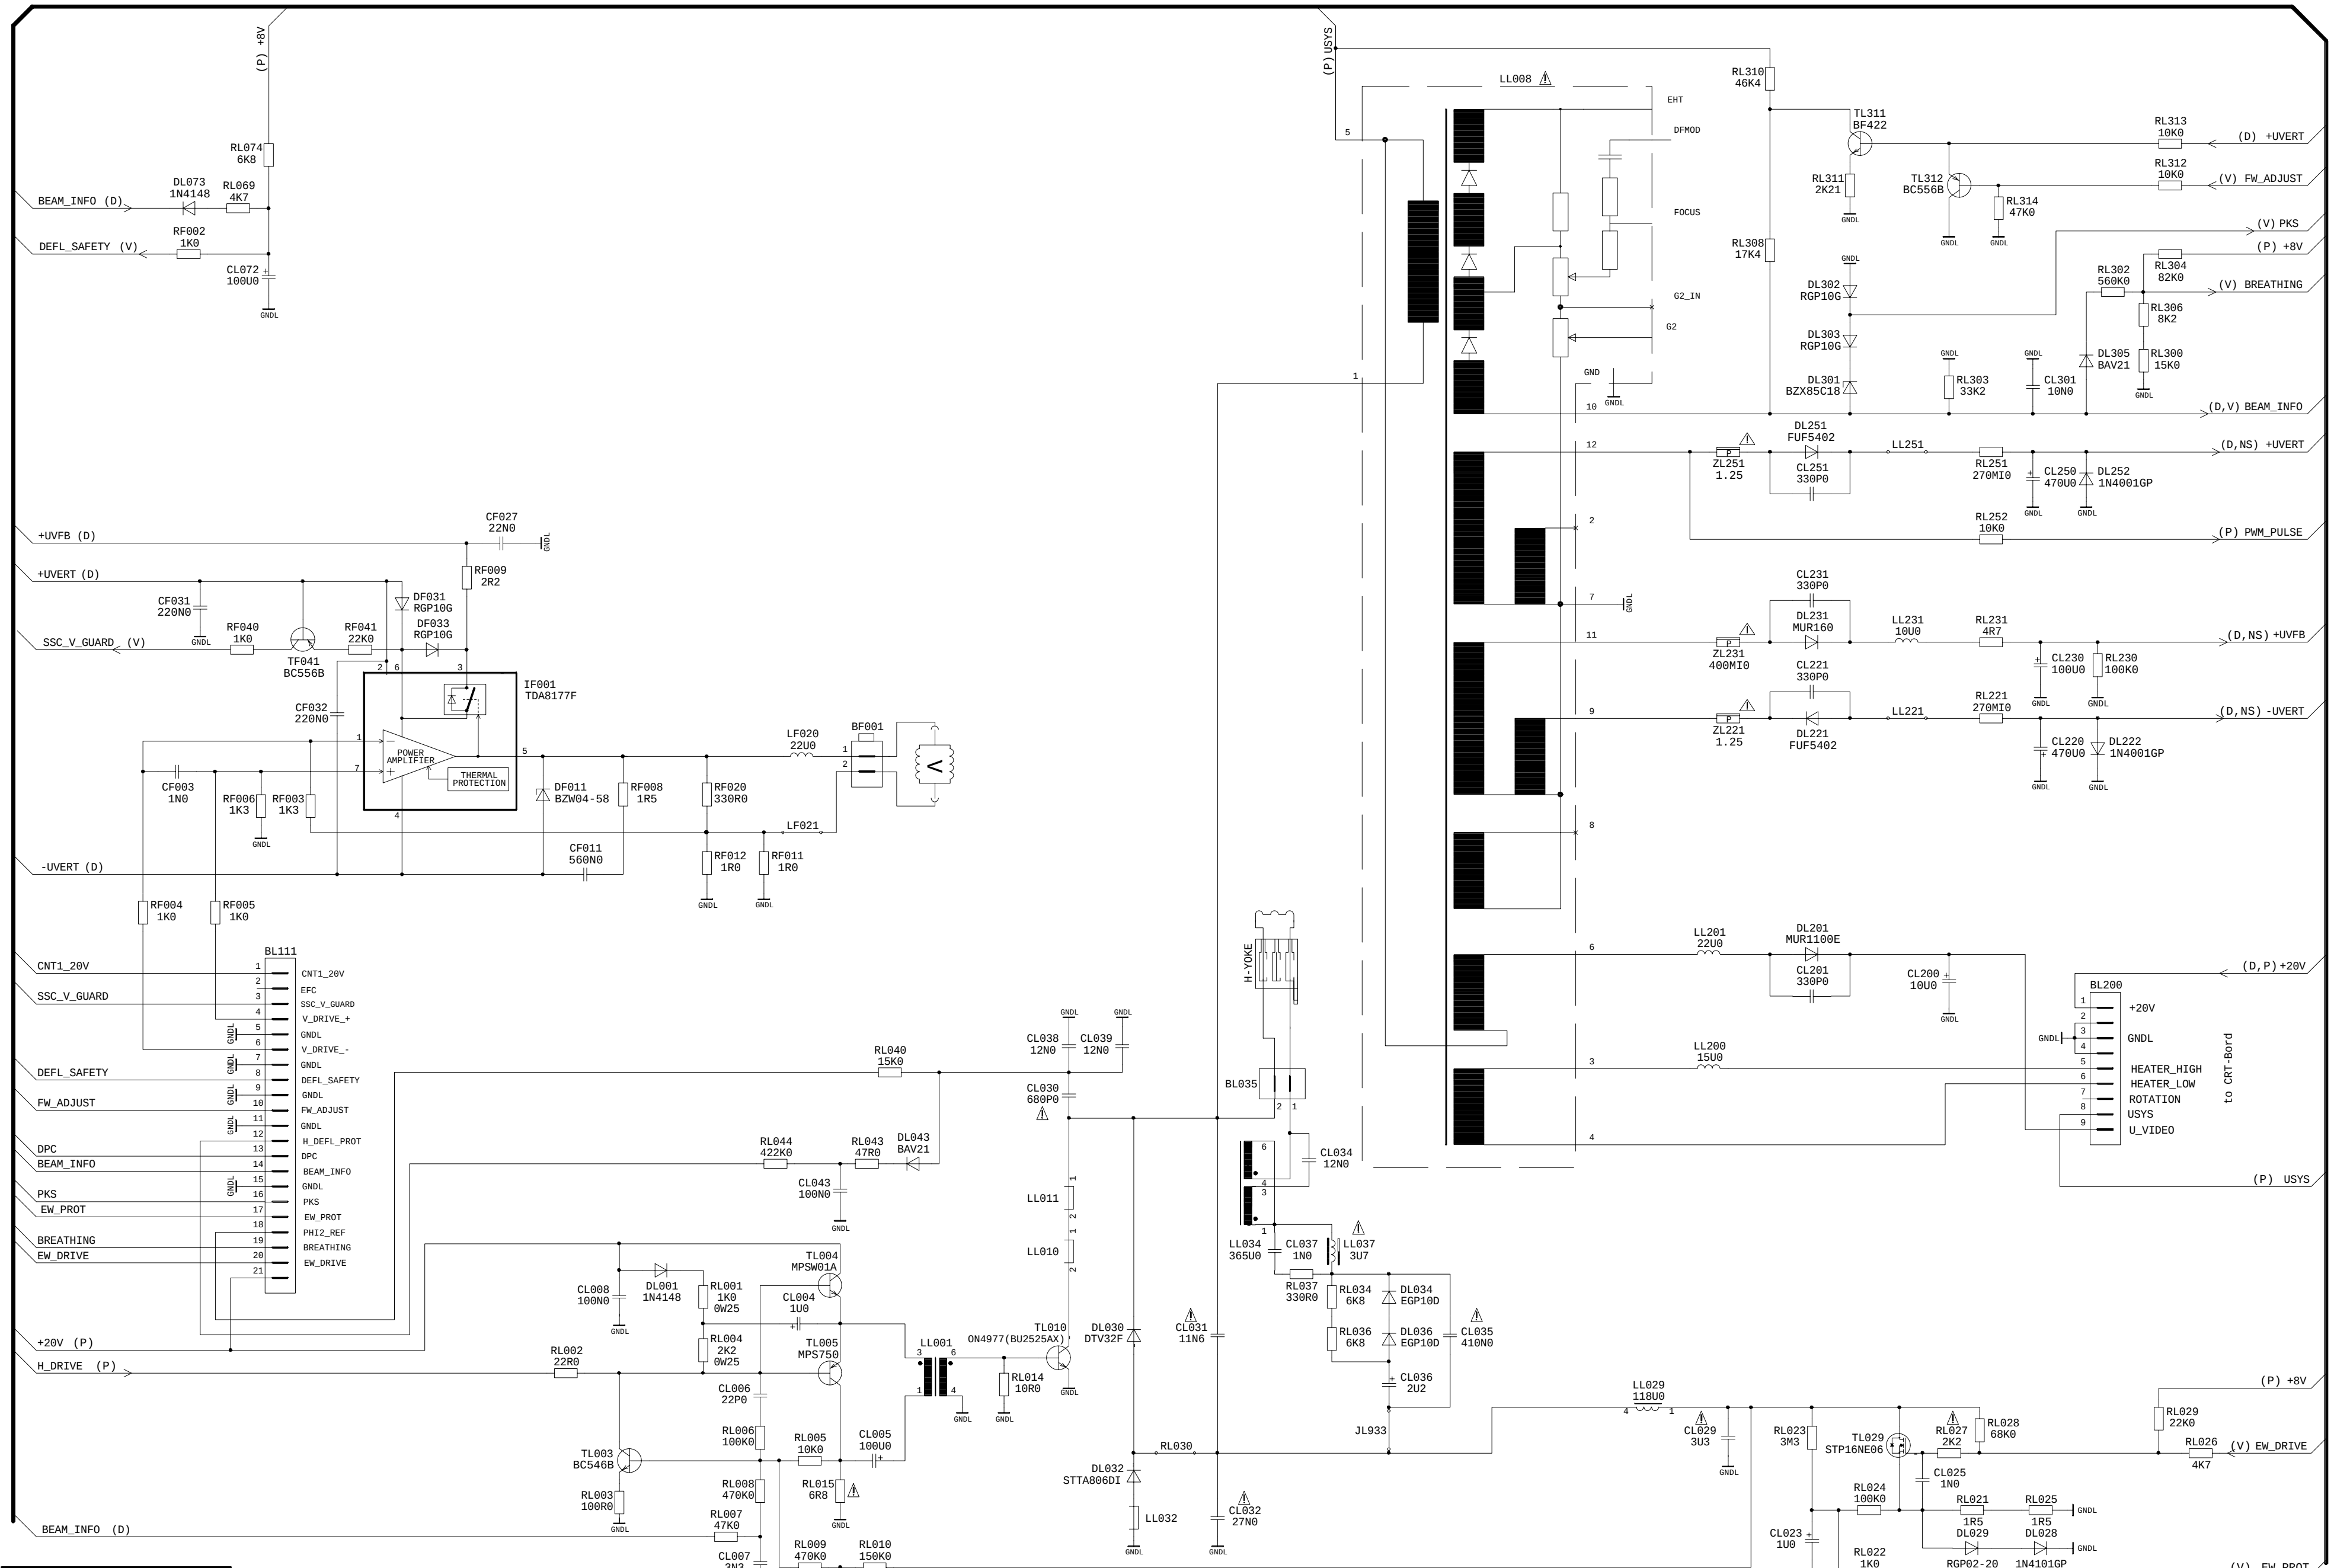
(P) +8V
RL074 6K8
DL073 1N4148
RL069 4K7
BEAM_INFO (D)
RF002 1K0
DEFL_SAFETY (V)
CL072 100U0
GNDL
+UVFB (D)
CF027 22N0
+UVERT (D)
RF009 2R2
DF031 RGP10G
DF033 RGP10G
CF031 220N0
SSC_V_GUARD (V)
RF040 1K0
TF041 BC556B
RF041 22K0
IF001 TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
CF032 220N0
CF003 1N0
RF006 1K3
RF003 1K3
DF011 BZW04-58
RF008 1R5
RF020 330R0
LF020 22U0
BF001
LF021
RF012 1R0
RF011 1R0
CF011 560N0
-UVERT (D)
RF004 1K0
RF005 1K0
BL111
CNT1_20V
SSC_V_GUARD
DEFL_SAFETY
FW_ADJUST
DPC
BEAM_INFO
PKS
EW_PROT
BREATHING
EW_DRIVE
CNT1_20V
EFC
SSC_V_GUARD
V_DRIVE_+
GNDL
V_DRIVE_-
GNDL
DEFL_SAFETY
GNDL
FW_ADJUST
GNDL
H_DEFL_PROT
DPC
BEAM_INFO
GNDL
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
RL040 15K0
CL038 12N0
CL039 12N0
CL030 680P0
RL044 422K0
RL043 47R0
DL043 BAV21
CL043 100N0
LL011
LL010
CL008 100N0
DL001 1N4148
RL001 1K0 0W25
TL004 MPSW01A
CL004 1U0
RL004 2K2 0W25
TL005 MPS750
LL001
TL010 ON4977(BU2525AX)
RL014 10R0
DL030 DTV32F
CL031 11N6
+20V (P)
H_DRIVE (P)
RF002 22R0
CL006 22P0
RL006 100K0
RL005 10K0
CL005 100U0
TL003 BC546B
RL003 100R0
RL008 470K0
RL015 6R8
RL007 47K0
CL007 3N3
RL009 470K0
RL010 150K0
CL010 100N0
RL030
DL032 STTA806DI
LL032
CL032 27N0
BEAM_INFO (D)
H-YOKE
BL035
CL034 12N0
LL034 365U0
CL037 1N0
LL037 3U7
RL037 330R0
RL034 6K8
RL036 6K8
DL034 EGP10D
DL036 EGP10D
CL035 410N0
CL036 2U2
JL933
(P) USYS
LL008
EHT
DFMOD
FOCUS
G2_IN
G2
GND
RL310 46K4
TL311 BF422
RL311 2K21
TL312 BC556B
RL314 47K0
RL313 10K0
RL312 10K0
(D) +UVERT
(V) FW_ADJUST
(V) PKS
(P) +8V
RL304 82K0
RL302 560K0
(V) BREATHING
RL308 17K4
DL302 RGP10G
DL303 RGP10G
DL301 BZX85C18
RL303 33K2
CL301 10N0
RL306 8K2
DL305 BAV21
RL300 15K0
(D,V) BEAM_INFO
ZL251 1.25
DL251 FUF5402
CL251 330P0
LL251
RL251 270MI0
CL250 470U0
DL252 1N4001GP
(D,NS) +UVERT
RL252 10K0
(P) PWM_PULSE
CL231 330P0
DL231 MUR160
ZL231 400MI0
LL231 10U0
RL231 4R7
CL230 100U0
RL230 100K0
(D,NS) +UVFB
CL221 330P0
ZL221 1.25
DL221 FUF5402
LL221
RL221 270MI0
CL220 470U0
DL222 1N4001GP
(D,NS) -UVERT
LL201 22U0
DL201 MUR1100E
CL201 330P0
CL200 10U0
(D,P) +20V
BL200
+20V
GNDL
HEATER_HIGH
HEATER_LOW
ROTATION
USYS
U_VIDEO
to CRT-Bord
LL200 15U0
(P) USYS
LL029 118U0
CL029 3U3
RL023 3M3
TL029 STP16NE06
RL027 2K2
RL028 68K0
RL029 22K0
(P) +8V
RL026 4K7
(V) EW_DRIVE
CL025 1N0
RL024 100K0
RL021 1R5
RL025 1R5
DL029 RGP02-20
DL028 1N4101GP
CL023 1U0
RL022 1K0
(V) EW_PROT

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CLT_LAEUFER

INDEX	DATE	NAME	DESCRIPTION
J	22.09.99	RIEDM.	CORRECTION
N	30.03.00	J.David	C35190/35790 C35340/60/36560 C36920/37290
M	07.02.00	RIEDM.	C32460/33040 130/170/240/ 720/760
L	30.11.99	RIEDM.	C28630/29440 50/60/890/30750 /940/50/31310
K	18.10.99	RIEDM.	C28140

DRAWN
ON: 22.01.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
DP.20101.37	10626060	00	IC20
			PAGE: 1
			OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

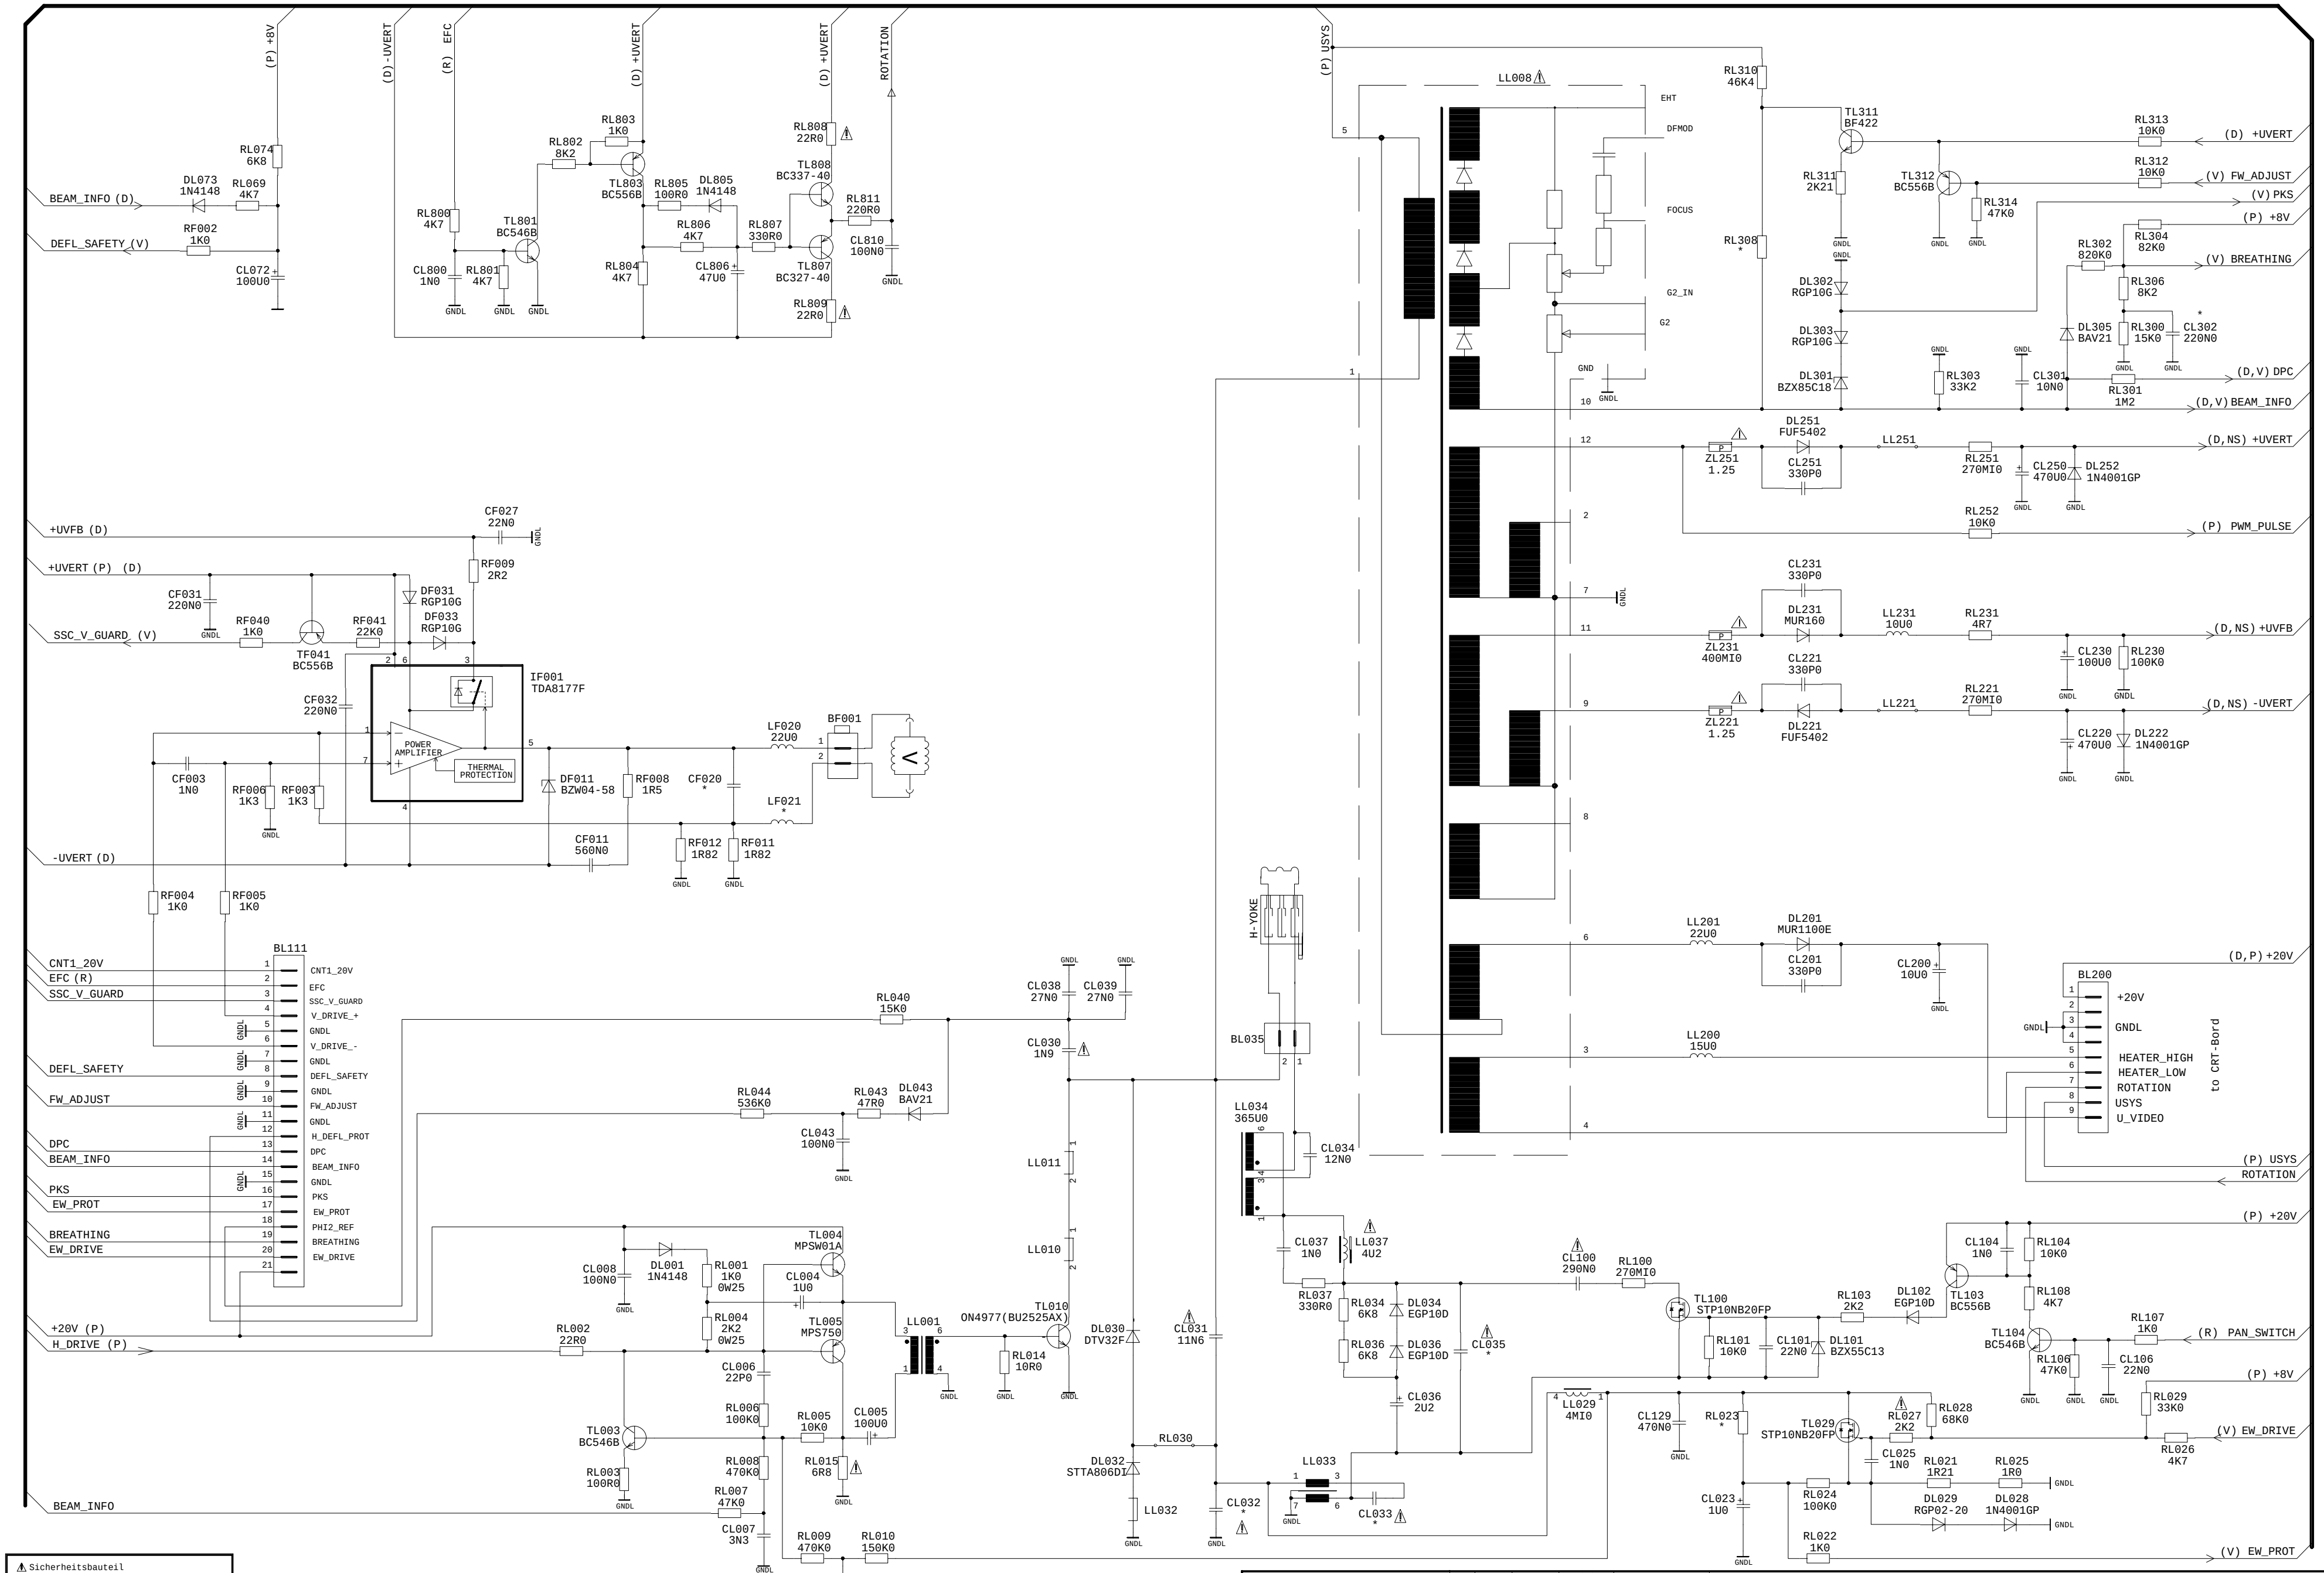
(P) +8V
(D)-UVERT
(R) EFC
(D) +UVERT
(D) +UVERT
ROTATION
(P) USYS
BEAM_INFO (D)
DEFL_SAFETY (V)
DL073 1N4148
RL069 4K7
RL074 6K8
RF002 1K0
CL072 100U0
RL800 4K7
CL800 1N0
RL801 4K7
TL801 BC546B
RL802 8K2
RL803 1K0
TL803 BC556B
RL805 100R0
DL805 1N4148
RL806 4K7
RL804 4K7
CL806 47U0
RL807 330R0
RL808 22R0
TL808 BC337-40
TL807 BC327-40
RL809 22R0
RL811 220R0
CL810 100N0
GNDL
LL008
EHT
DFMOD
FOCUS
G2_IN
G2
GND
RL310 46K4
TL311 BF422
RL311 2K21
TL312 BC556B
RL314 47K0
RL308 *
RL313 10K0
RL312 10K0
(D) +UVERT
(V) FW_ADJUST
(V) PKS
(P) +8V
RL304 82K0
RL302 820K0
(V) BREATHING
RL306 8K2
DL302 RGP10G
DL303 RGP10G
DL301 BZX85C18
DL305 BAV21
RL300 15K0
CL302 220N0
RL303 33K2
CL301 10N0
RL301 1M2
(D,V) DPC
(D,V) BEAM_INFO
ZL251 1.25
DL251 FUF5402
CL251 330P0
LL251
RL251 270MI0
CL250 470U0
DL252 1N4001GP
(D,NS) +UVERT
RL252 10K0
(P) PWM_PULSE
CL231 330P0
DL231 MUR160
ZL231 400MI0
LL231 10U0
RL231 4R7
CL230 100U0
RL230 100K0
(D,NS) +UVFB
CL221 330P0
ZL221 1.25
DL221 FUF5402
LL221
RL221 270MI0
CL220 470U0
DL222 1N4001GP
(D,NS) -UVERT
+UVFB (D)
CF027 22N0
+UVERT (P) (D)
RF009 2R2
CF031 220N0
DF031 RGP10G
DF033 RGP10G
SSC_V_GUARD (V)
RF040 1K0
TF041 BC556B
RF041 22K0
IF001 TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
CF032 220N0
CF003 1N0
RF006 1K3
RF003 1K3
DF011 BZW04-58
RF008 1R5
CF020 *
LF020 22U0
BF001
LF021 *
CF011 560N0
RF012 1R82
RF011 1R82
-UVERT (D)
RF004 1K0
RF005 1K0
BL111
CNT1_20V
EFC (R)
SSC_V_GUARD
DEFL_SAFETY
FW_ADJUST
DPC
BEAM_INFO
PKS
EW_PROT
BREATHING
EW_DRIVE
CNT1_20V
EFC
SSC_V_GUARD
V_DRIVE_+
GNDL
V_DRIVE_-
GNDL
DEFL_SAFETY
GNDL
FW_ADJUST
GNDL
H_DEFL_PROT
DPC
BEAM_INFO
GNDL
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
RL040 15K0
CL038 27N0
CL039 27N0
CL030 1N9
RL044 536K0
RL043 47R0
DL043 BAV21
CL043 100N0
H-YOKE
BL035
LL034 365U0
CL034 12N0
LL011
LL010
LL201 22U0
DL201 MUR1100E
CL201 330P0
CL200 10U0
(D,P) +20V
BL200
+20V
GNDL
HEATER_HIGH
HEATER_LOW
ROTATION
USYS
U_VIDEO
to CRT-Bord
LL200 15U0
(P) USYS
ROTATION
(P) +20V
CL008 100N0
DL001 1N4148
RL001 1K0 0W25
TL004 MPSW01A
CL004 1U0
RL004 2K2 0W25
TL005 MPS750
+20V (P)
H_DRIVE (P)
RL002 22R0
CL006 22P0
LL001
TL010 ON4977(BU2525AX)
RL014 10R0
DL030 DTV32F
CL031 11N6
CL037 1N0
LL037 4U2
RL037 330R0
RL034 6K8
DL034 EGP10D
RL036 6K8
DL036 EGP10D
CL035 *
CL036 2U2
CL100 290N0
RL100 270MI0
TL100 STP10NB20FP
RL101 10K0
CL101 22N0
DL101 BZX55C13
RL103 2K2
DL102 EGP10D
TL103 BC556B
CL104 1N0
RL104 10K0
RL108 4K7
RL107 1K0
(R) PAN_SWITCH
TL104 BC546B
RL106 47K0
CL106 22N0
(P) +8V
RL029 33K0
(V) EW_DRIVE
RL026 4K7
TL003 BC546B
RL003 100R0
RL006 100K0
RL005 10K0
CL005 100U0
RL008 470K0
RL015 6R8
RL007 47K0
CL007 3N3
RL009 470K0
RL010 150K0
CL010 100N0
BEAM_INFO
DL032 STTA806DI
RL030
LL032
CL032 *
LL033
CL033 *
LL029 4MI0
CL129 470N0
RL023 *
TL029 STP10NB20FP
RL027 2K2
RL028 68K0
CL025 1N0
RL021 1R21
RL025 1R0
CL023 1U0
RL024 100K0
DL029 RGP02-20
DL028 1N4001GP
RL022 1K0
(V) EW_PROT

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

*	CF020	CL032	CL033	CL035	CL302	LF021	LL008	RL023	RL308
DP 20110 37	-	33N0	680N0	560N0	X	JUMP	10649030	3M3	17K4
DP 20112 37	100N0	27N0	510N0	510N0	-	22U0	10675710	3M9	15K0

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CPS_LAEUFER LOESLE

INDEX	DATE	NAME	DESCRIPTION
J	07.02.00	RIEDM.	C32420/60/90 33040/130/170 240/720/760
I	30.11.99	RIEDM.	C28450/630/29450 /60/890/930/30- 750/940/50/31310
M	02.05.00	RIEDM.	C39120
L	14.04.00	RIEDM.	C38320
K	31.03.00	J.David	C35190/790/36110 /340/360/560/630 /920/37290

DRAWN
ON: 28.04.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
DP.20110.37	10626070	00
DP.20112.37	10675120	

TV
IC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A1

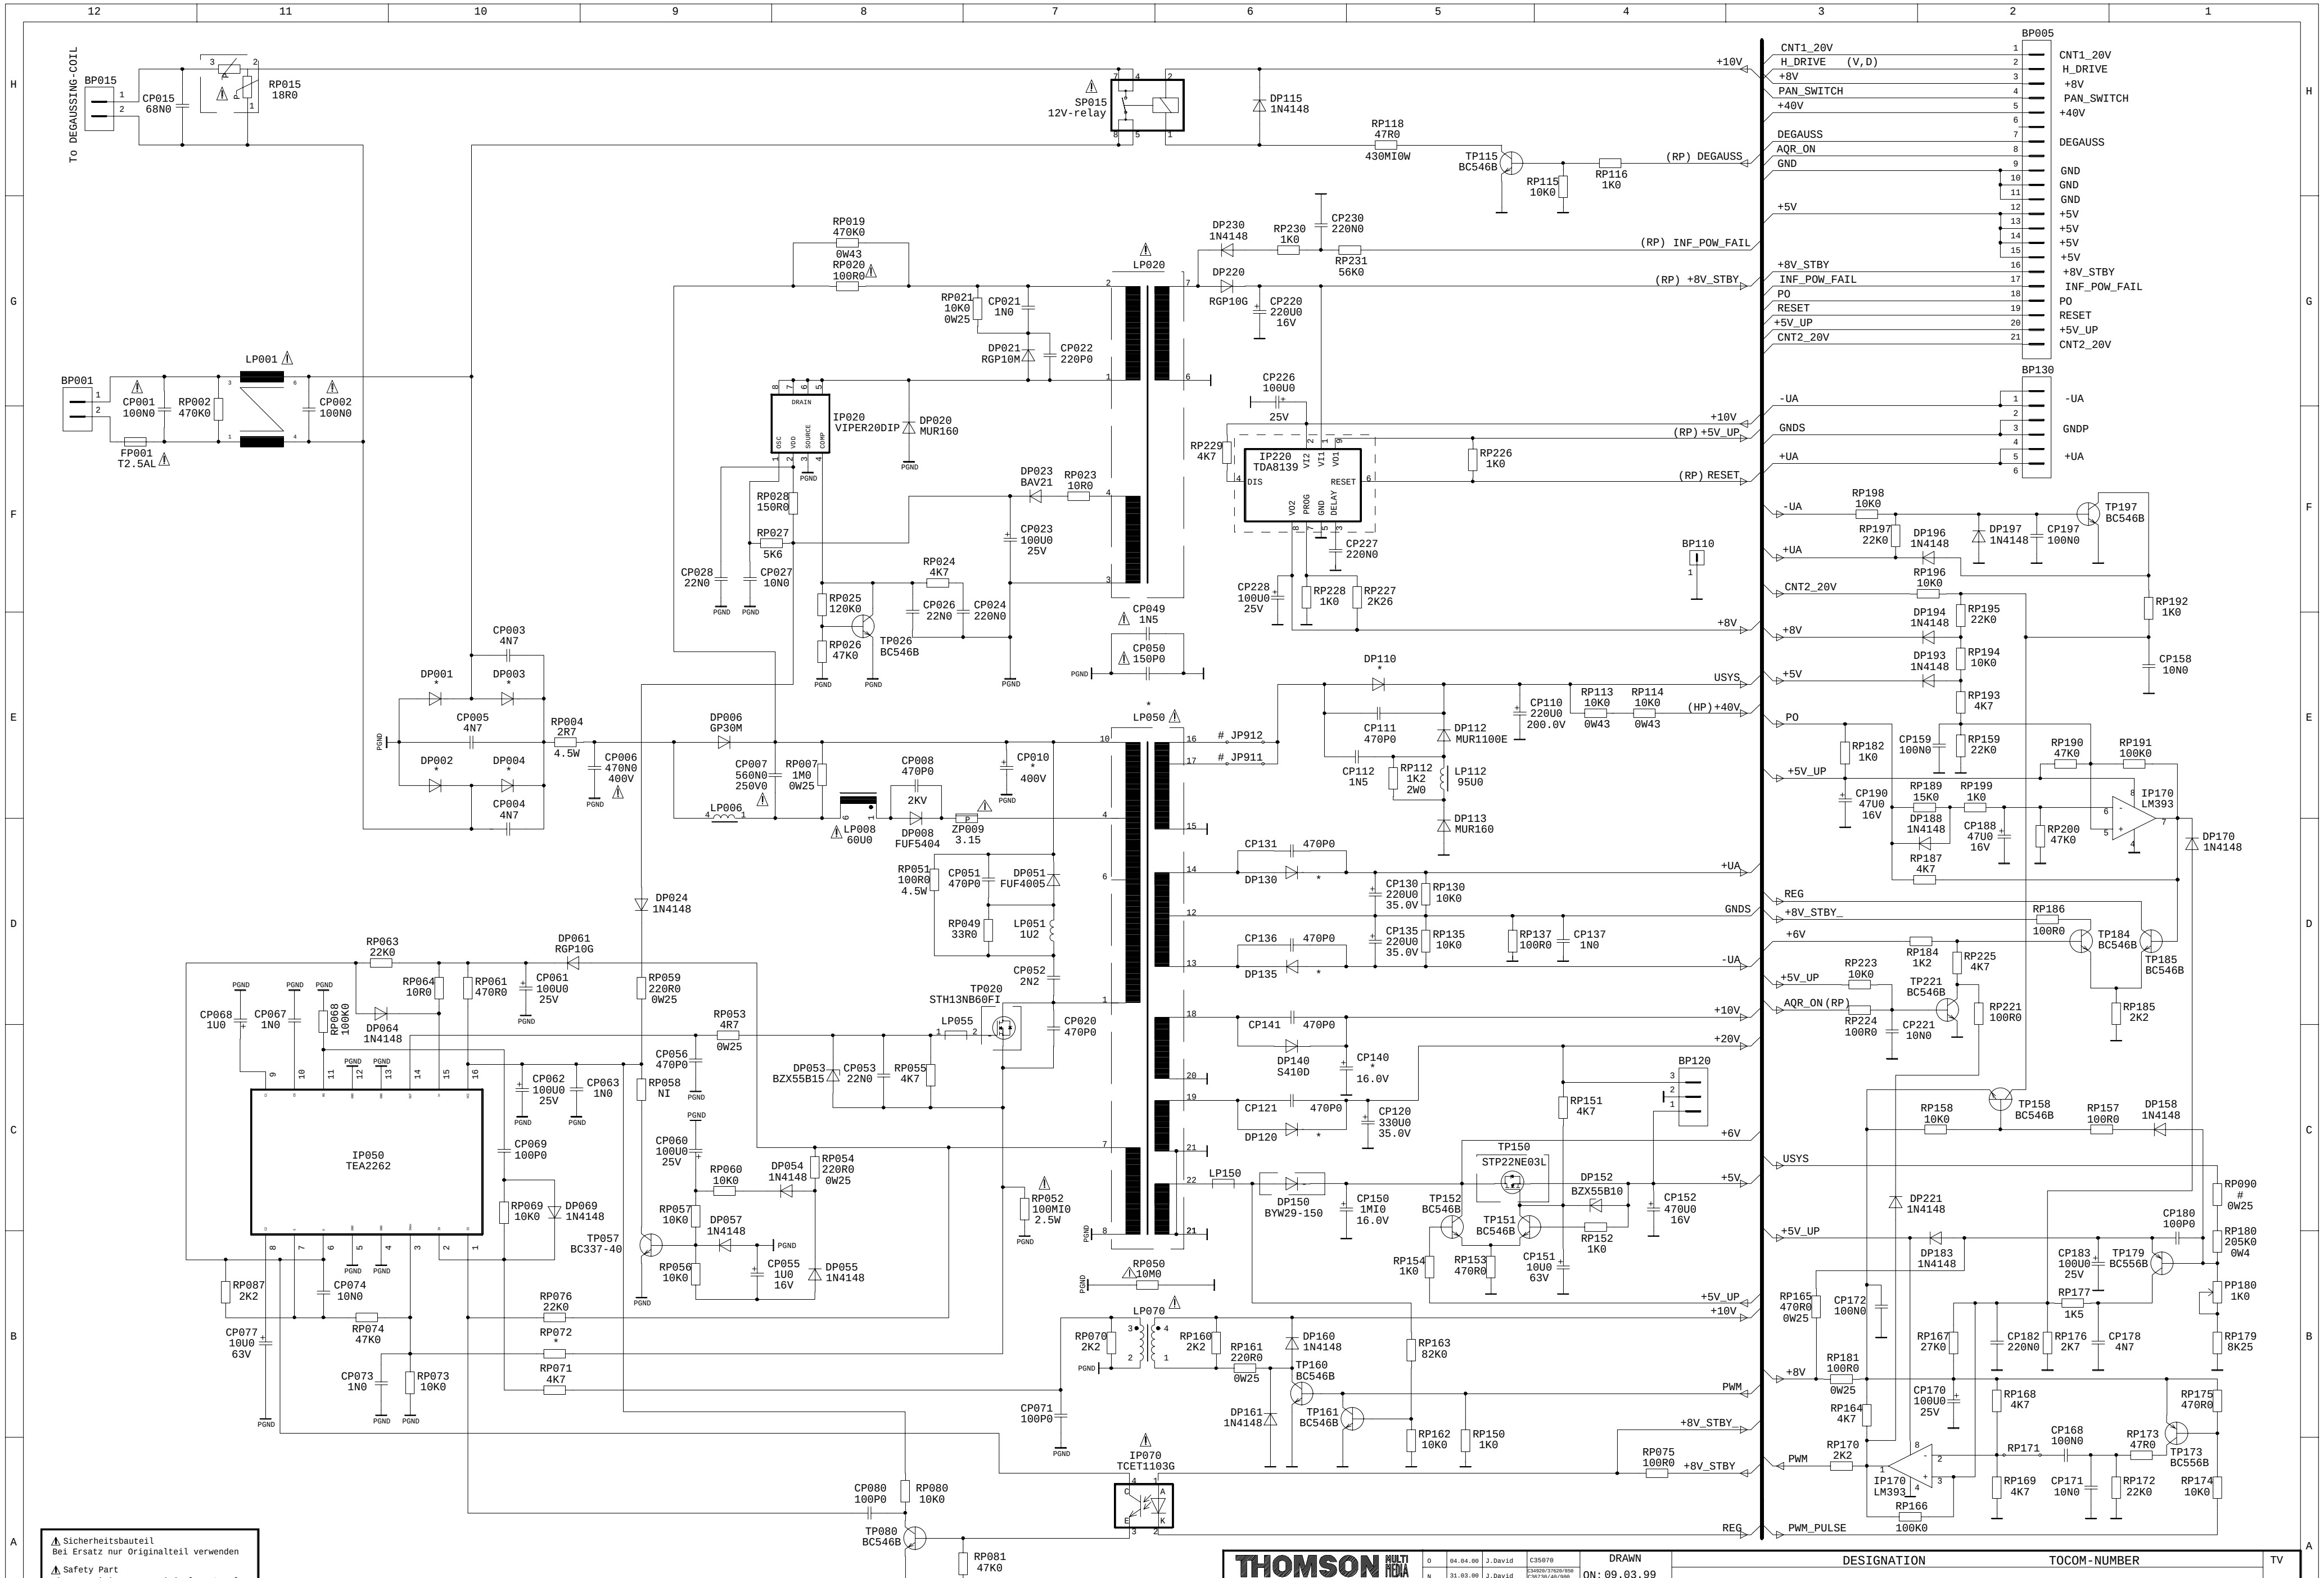
To DEGAUSSING-COIL
BP015
CP015 68N0
RP015 18R0
BP001
CP001 100N0
RP002 470K0
LP001
CP002 100N0
FP001 T2.5AL
SP015 12V-relay
DP115 1N4148
RP118 47R0 430MI0W
TP115 BC546B
RP115 10K0
RP116 1K0
(RP) DEGAUSS
RP019 470K0 0W43
RP020 100R0
DP230 1N4148
RP230 1K0
CP230 220N0
RP231 56K0
(RP) INF_POW_FAIL
DP220 RGP10G
CP220 220U0 16V
(RP) +8V_STBY
LP020
RP021 10K0 0W25
CP021 1N0
DP021 RGP10M
CP022 220P0
IP020 VIPER20DIP
DP020 MUR160
CP226 100U0 25V
RP229 4K7
IP220 TDA8139
RP226 1K0
+10V
(RP) +5V_UP
(RP) RESET
RP028 150R0
RP027 5K6
DP023 BAV21
RP023 10R0
CP023 100U0 25V
CP028 22N0
CP027 10N0
RP025 120K0
RP026 47K0
TP026 BC546B
RP024 4K7
CP026 22N0
CP024 220N0
CP227 220N0
CP228 100U0 25V
RP228 1K0
RP227 2K26
BP110
+8V
CP049 1N5
CP050 150P0
CP003 4N7
DP001
DP003
CP005 4N7
DP002
DP004
CP004 4N7
RP004 2R7 4.5W
CP006 470N0 400V
DP006 GP30M
CP007 560N0 250V0
RP007 1M0 0W25
CP008 470P0 2KV
CP010 400V
LP006
LP008 60U0
DP008 FUF5404
ZP009 3.15
LP050
# JP912
# JP911
DP110
CP110 220U0 200.0V
RP113 10K0 0W43
RP114 10K0 0W43
USYS
(HP)+40V
CP111 470P0
DP112 MUR1100E
CP112 1N5
RP112 1K2 2W0
LP112 95U0
DP113 MUR160
CP131 470P0
DP130
CP130 220U0 35.0V
RP130 10K0
+UA
GNDS
CP136 470P0
DP135
CP135 220U0 35.0V
RP135 10K0
RP137 100R0
CP137 1N0
-UA
CP141 470P0
DP140 S410D
CP140 16.0V
+20V
BP120
CP121 470P0
DP120
CP120 330U0 35.0V
RP151 4K7
+6V
TP150 STP22NE03L
DP152 BZX55B10
CP152 470U0 16V
+5V
LP150
DP150 BYW29-150
CP150 1MI0 16.0V
TP152 BC546B
TP151 BC546B
RP152 1K0
RP154 1K0
RP153 470R0
CP151 10U0 63V
DP024 1N4148
RP051 100R0 4.5W
CP051 470P0
DP051 FUF4005
RP049 33R0
LP051 1U2
CP052 2N2
CP020 470P0
TP020 STH13NB60FI
LP055
RP053 4R7 0W25
DP053 BZX55B15
CP053 22N0
RP055 4K7
RP052 100MI0 2.5W
RP063 22K0
DP061 RGP10G
RP064 10R0
RP061 470R0
CP061 100U0 25V
RP059 220R0 0W25
CP068 1U0
CP067 1N0
RP068 100K0
DP064 1N4148
IP050 TEA2262
CP062 100U0 25V
CP063 1N0
CP056 470P0
RP058 NI
CP069 100P0
RP069 10K0
DP069 1N4148
CP060 100U0 25V
RP060 10K0
DP054 1N4148
RP054 220R0 0W25
RP057 10K0
DP057 1N4148
TP057 BC337-40
RP056 10K0
CP055 1U0 16V
DP055 1N4148
RP087 2K2
CP074 10N0
CP077 10U0 63V
RP074 47K0
RP076 22K0
RP072
RP071 4K7
CP073 1N0
RP073 10K0
CP071 100P0
CP080 100P0
RP080 10K0
TP080 BC546B
RP081 47K0
IP070 TCET1103G
RP050 10M0
LP070
RP070 2K2
RP160 2K2
RP161 220R0 0W25
DP160 1N4148
TP160 BC546B
DP161 1N4148
TP161 BC546B
RP163 82K0
RP162 10K0
RP150 1K0
PWM
RP075 100R0
+8V_STBY
REG
BP005
CNT1_20V
H_DRIVE (V,D)
+8V
PAN_SWITCH
+40V
DEGAUSS
AQR_ON
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
+5V_UP
CNT2_20V
BP130
-UA
GNDS
GNDP
+UA
RP198 10K0
RP197 22K0
DP196 1N4148
DP197 1N4148
CP197 100N0
TP197 BC546B
RP196 10K0
RP192 1K0
DP194 1N4148
RP195 22K0
DP193 1N4148
RP194 10K0
CP158 10N0
RP193 4K7
RP182 1K0
CP159 100N0
RP159 22K0
RP190 47K0
RP191 100K0
IP170 LM393
CP190 47U0 16V
RP189 15K0
RP199 1K0
DP188 1N4148
CP188 47U0 16V
RP200 47K0
DP170 1N4148
RP187 4K7
+8V_STBY_
RP186 100R0
RP184 1K2
RP225 4K7
TP184 BC546B
TP185 BC546B
RP223 10K0
TP221 BC546B
RP221 100R0
AQR_ON(RP)
RP224 100R0
CP221 10N0
RP185 2K2
TP158 BC546B
RP158 10K0
RP157 100R0
DP158 1N4148
DP221 1N4148
RP090 0W25
CP180 100P0
RP180 205K0 0W4
DP183 1N4148
CP183 100U0 25V
TP179 BC556B
RP165 470R0 0W25
CP172 100N0
RP177 1K5
RP180 1K0
RP167 27K0
CP182 220N0
RP176 2K7
CP178 4N7
RP179 8K25
RP181 100R0 0W25
CP170 100U0 25V
RP168 4K7
RP175 470R0
RP164 4K7
CP168 100N0
RP173 47R0
TP173 BC556B
RP170 2K2
RP171
RP169 4K7
CP171 10N0
RP172 22K0
RP174 10K0
RP166 100K0
PWM_PULSE
PGND

Sicherheitsbauteil
⚠ Sicherheitsbauteil Bei Ersatz nur Originalteil verwenden

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

*	CP010	DP001-004	DP110	DP120	DP130+135	LP050	RP072	CP140
PP 20000 00	220U0	GP20M	RGP50M	RGP15G	RGP15G	10670390	3K3	1MI0
PP 20100 00	390U0	GP30M	BYT08PI-1000	S410D	MUR420	10643540	5K6	4MI7

# = value see DP 2.... partlists

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231
DEVELOPMENT DEPT: CPS_RIEDLINGER ELGERT

INDEX	DATE	NAME	DESCRIPTION
O	04.04.00	J.David	C35070
N	31.03.00	J.David	C34920/37620/850 C36730/40/900 C37000/140/220
M	07.02.00	RIEDM.	C31320/32010/40 210/490/33140/ 660/830/950
L	29.11.99	RIEDM.	C30760
K	18.11.99	RIEDM.	C28800/910/29- 600/850/30020 140/240/610

DRAWN
ON: 09.03.99
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
PP.20000.00	10626080	00
PP.20100.00	10626090	

TV
IC20
PAGE: 1
OF : 1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

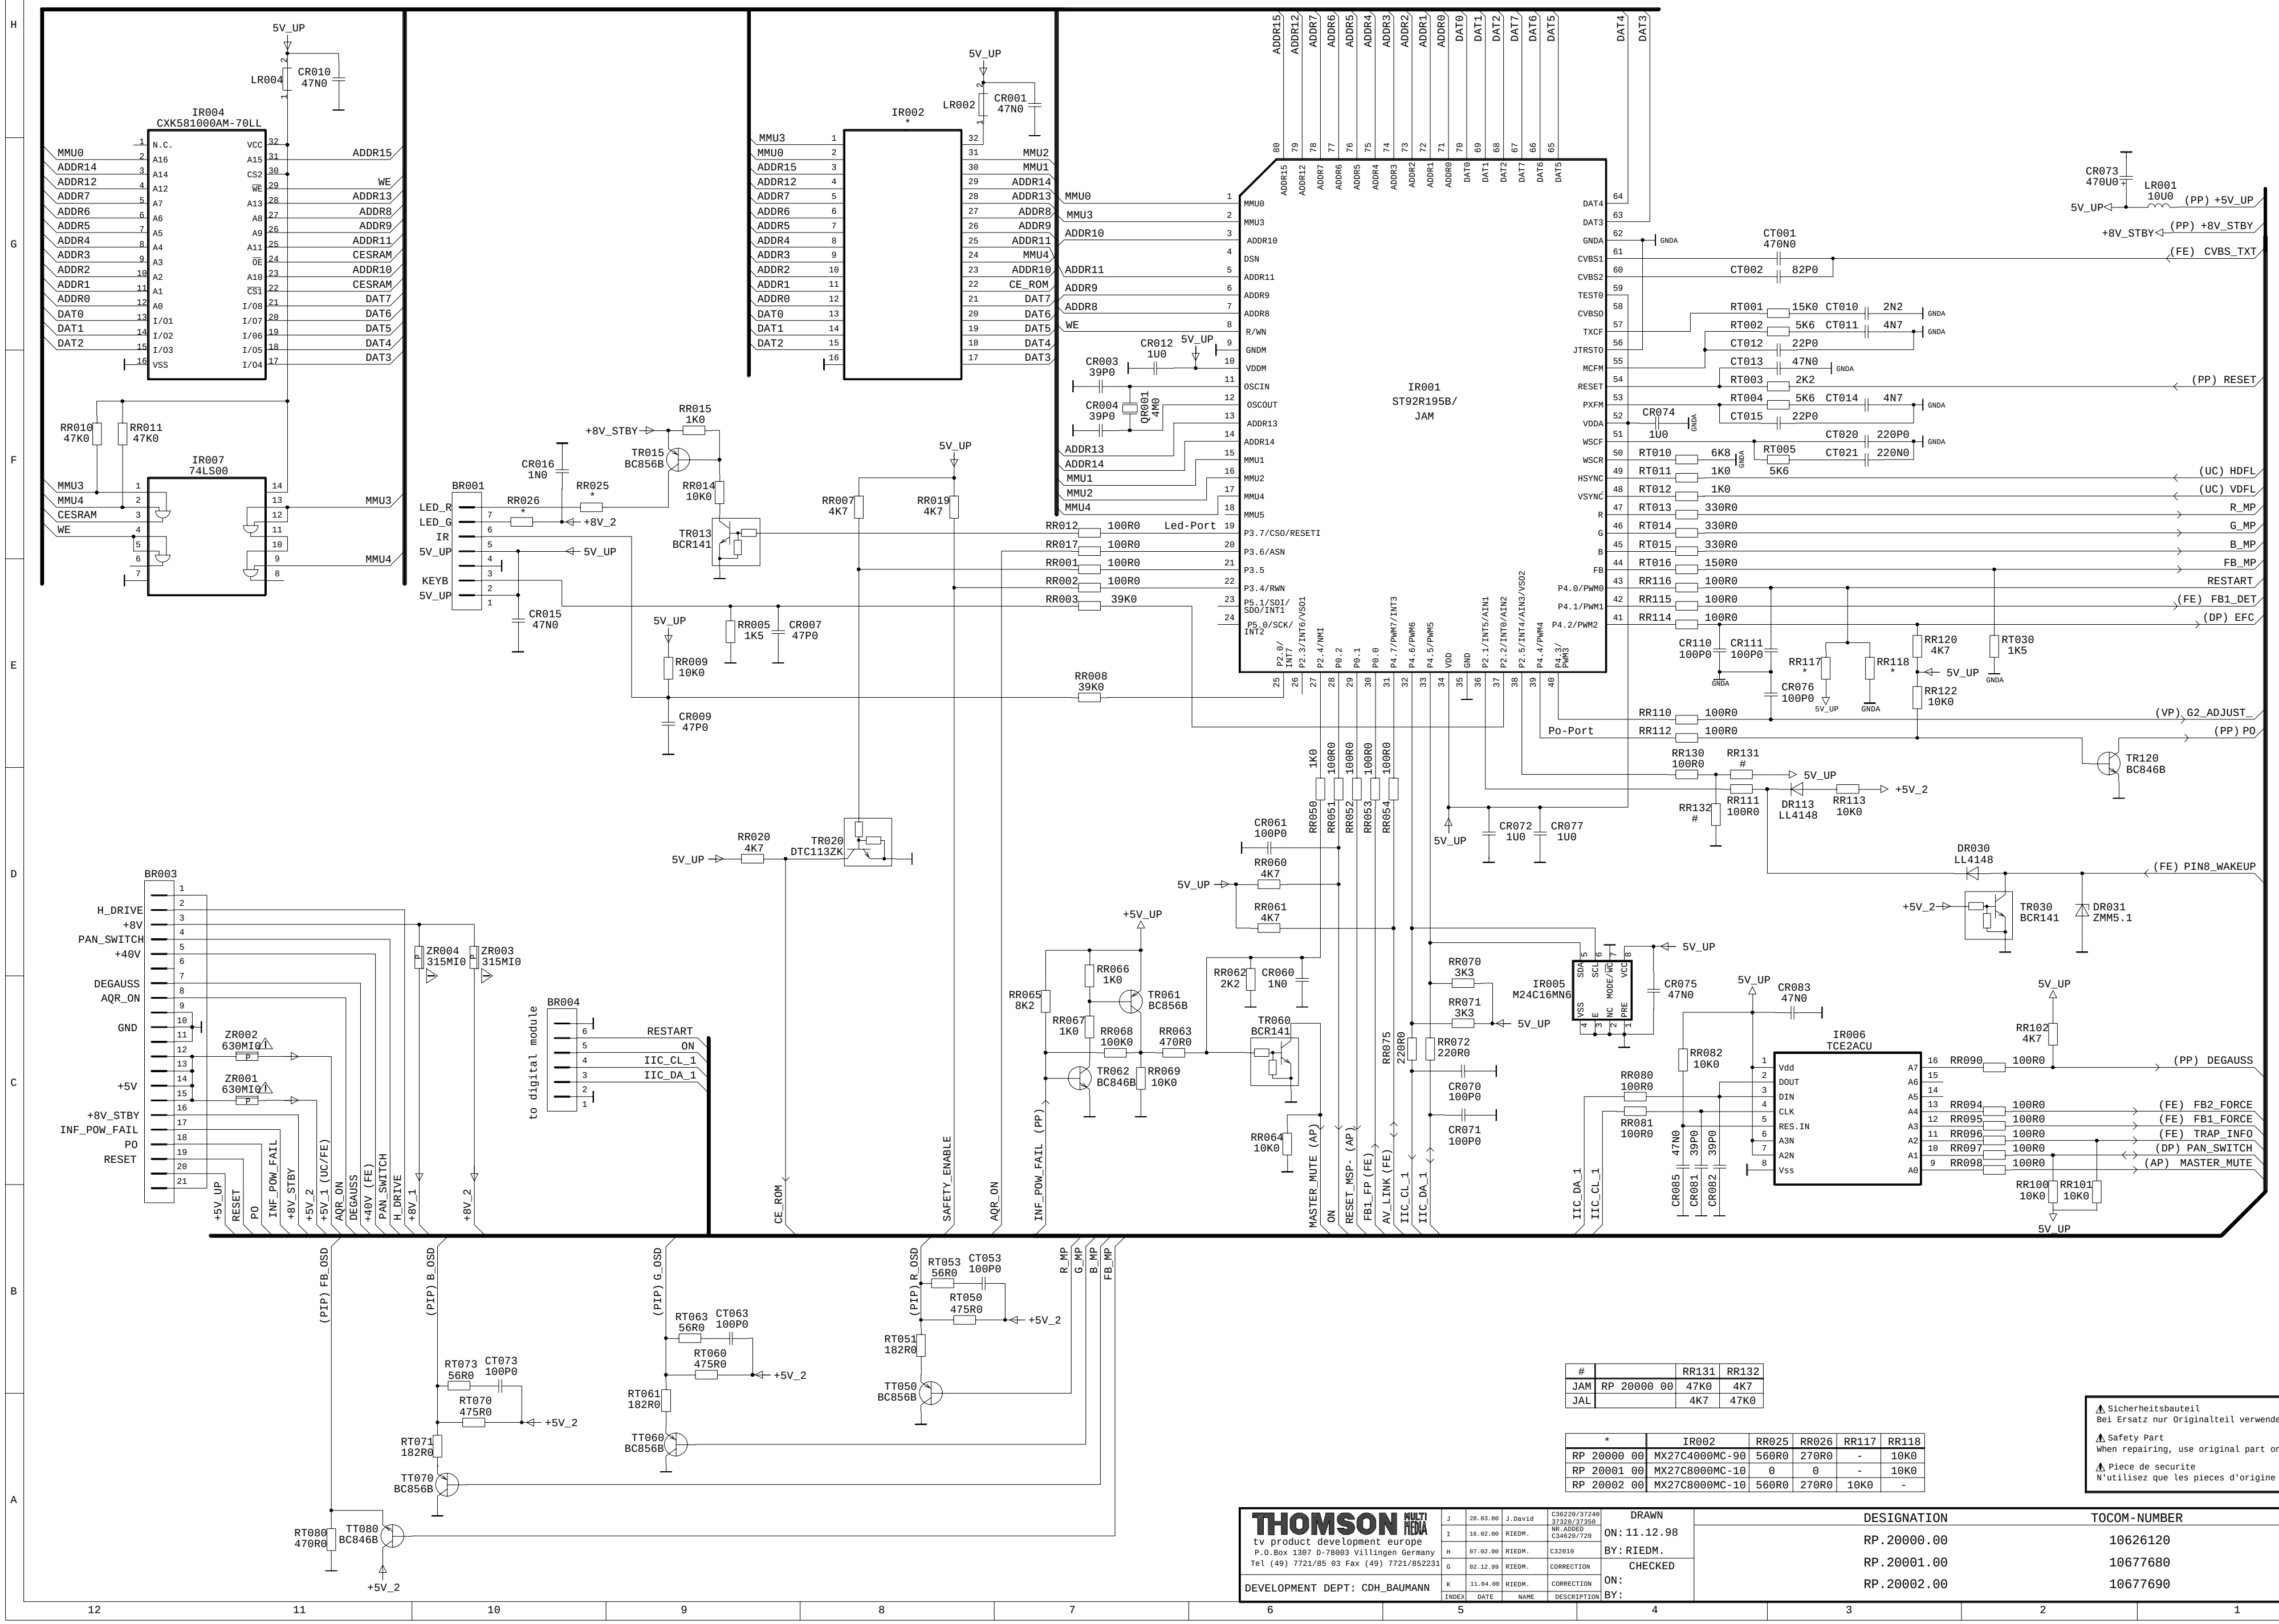
IR004
CXK581000AM-70LL
IR002
IR007
74LS00
IR001
ST92R195B/
JAM
IR005
M24C16MN6
IR006
TCE2ACU
BR001
BR003
BR004
to digital module
RESTART
ON
IIC_CL_1
IIC_DA_1
5V_UP
+8V_STBY
+5V_2
LR004
CR010
47N0
LR002
CR001
47N0
LR001
10U0
CR073
470U0
(PP) +5V_UP
(PP) +8V_STBY
(FE) CVBS_TXT
(PP) RESET
(UC) HDFL
(UC) VDFL
R_MP
G_MP
B_MP
FB_MP
RESTART
(FE) FB1_DET
(DP) EFC
(VP) G2_ADJUST_
(PP) PO
(FE) PIN8_WAKEUP
(PP) DEGAUSS
(FE) FB2_FORCE
(FE) FB1_FORCE
(FE) TRAP_INFO
(DP) PAN_SWITCH
(AP) MASTER_MUTE
QR001
4M0
TR015
BC856B
TR013
BCR141
TR020
DTC113ZK
TR120
BC846B
TR030
BCR141
DR030
LL4148
DR031
ZMM5.1
DR113
LL4148
TR061
BC856B
TR062
BC846B
TR060
BCR141
ZR002
630MI0
ZR001
630MI0
ZR004
315MI0
ZR003
315MI0
H_DRIVE
+8V
PAN_SWITCH
+40V
DEGAUSS
AQR_ON
GND
+5V
+8V_STBY
INF_POW_FAIL
PO
RESET
CE_ROM
SAFETY_ENABLE
AQR_ON
INF_POW_FAIL (PP)
MASTER_MUTE (AP)
RESET_MSP- (AP)
FB1_FP (FE)
AV_LINK (FE)
IIC_CL_1
IIC_DA_1
Led-Port
Po-Port
(PIP) FB_OSD
(PIP) B_OSD
(PIP) G_OSD
(PIP) R_OSD
TT080
BC846B
TT070
BC856B
TT060
BC856B
TT050
BC856B

#		RR131	RR132
JAM	RP 20000 00	47K0	4K7
JAL		4K7	47K0

*	IR002	RR025	RR026	RR117	RR118
RP 20000 00	MX27C4000MC-90	560R0	270R0	-	10K0
RP 20001 00	MX27C8000MC-10	0	0	-	10K0
RP 20002 00	MX27C8000MC-10	560R0	270R0	10K0	-

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CDH_BAUMANN

INDEX	DATE	NAME	DESCRIPTION
J	28.03.00	J.David	C36220/37240 37320/37350
I	16.02.00	RIEDM.	NR.ADDED C34620/720
H	07.02.00	RIEDM.	C32010
G	02.12.99	RIEDM.	CORRECTION
K	11.04.00	RIEDM.	CORRECTION

DRAWN
ON: 11.12.98
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
RP.20000.00	10626120
RP.20001.00	10677680
RP.20002.00	10677690

TV
IC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

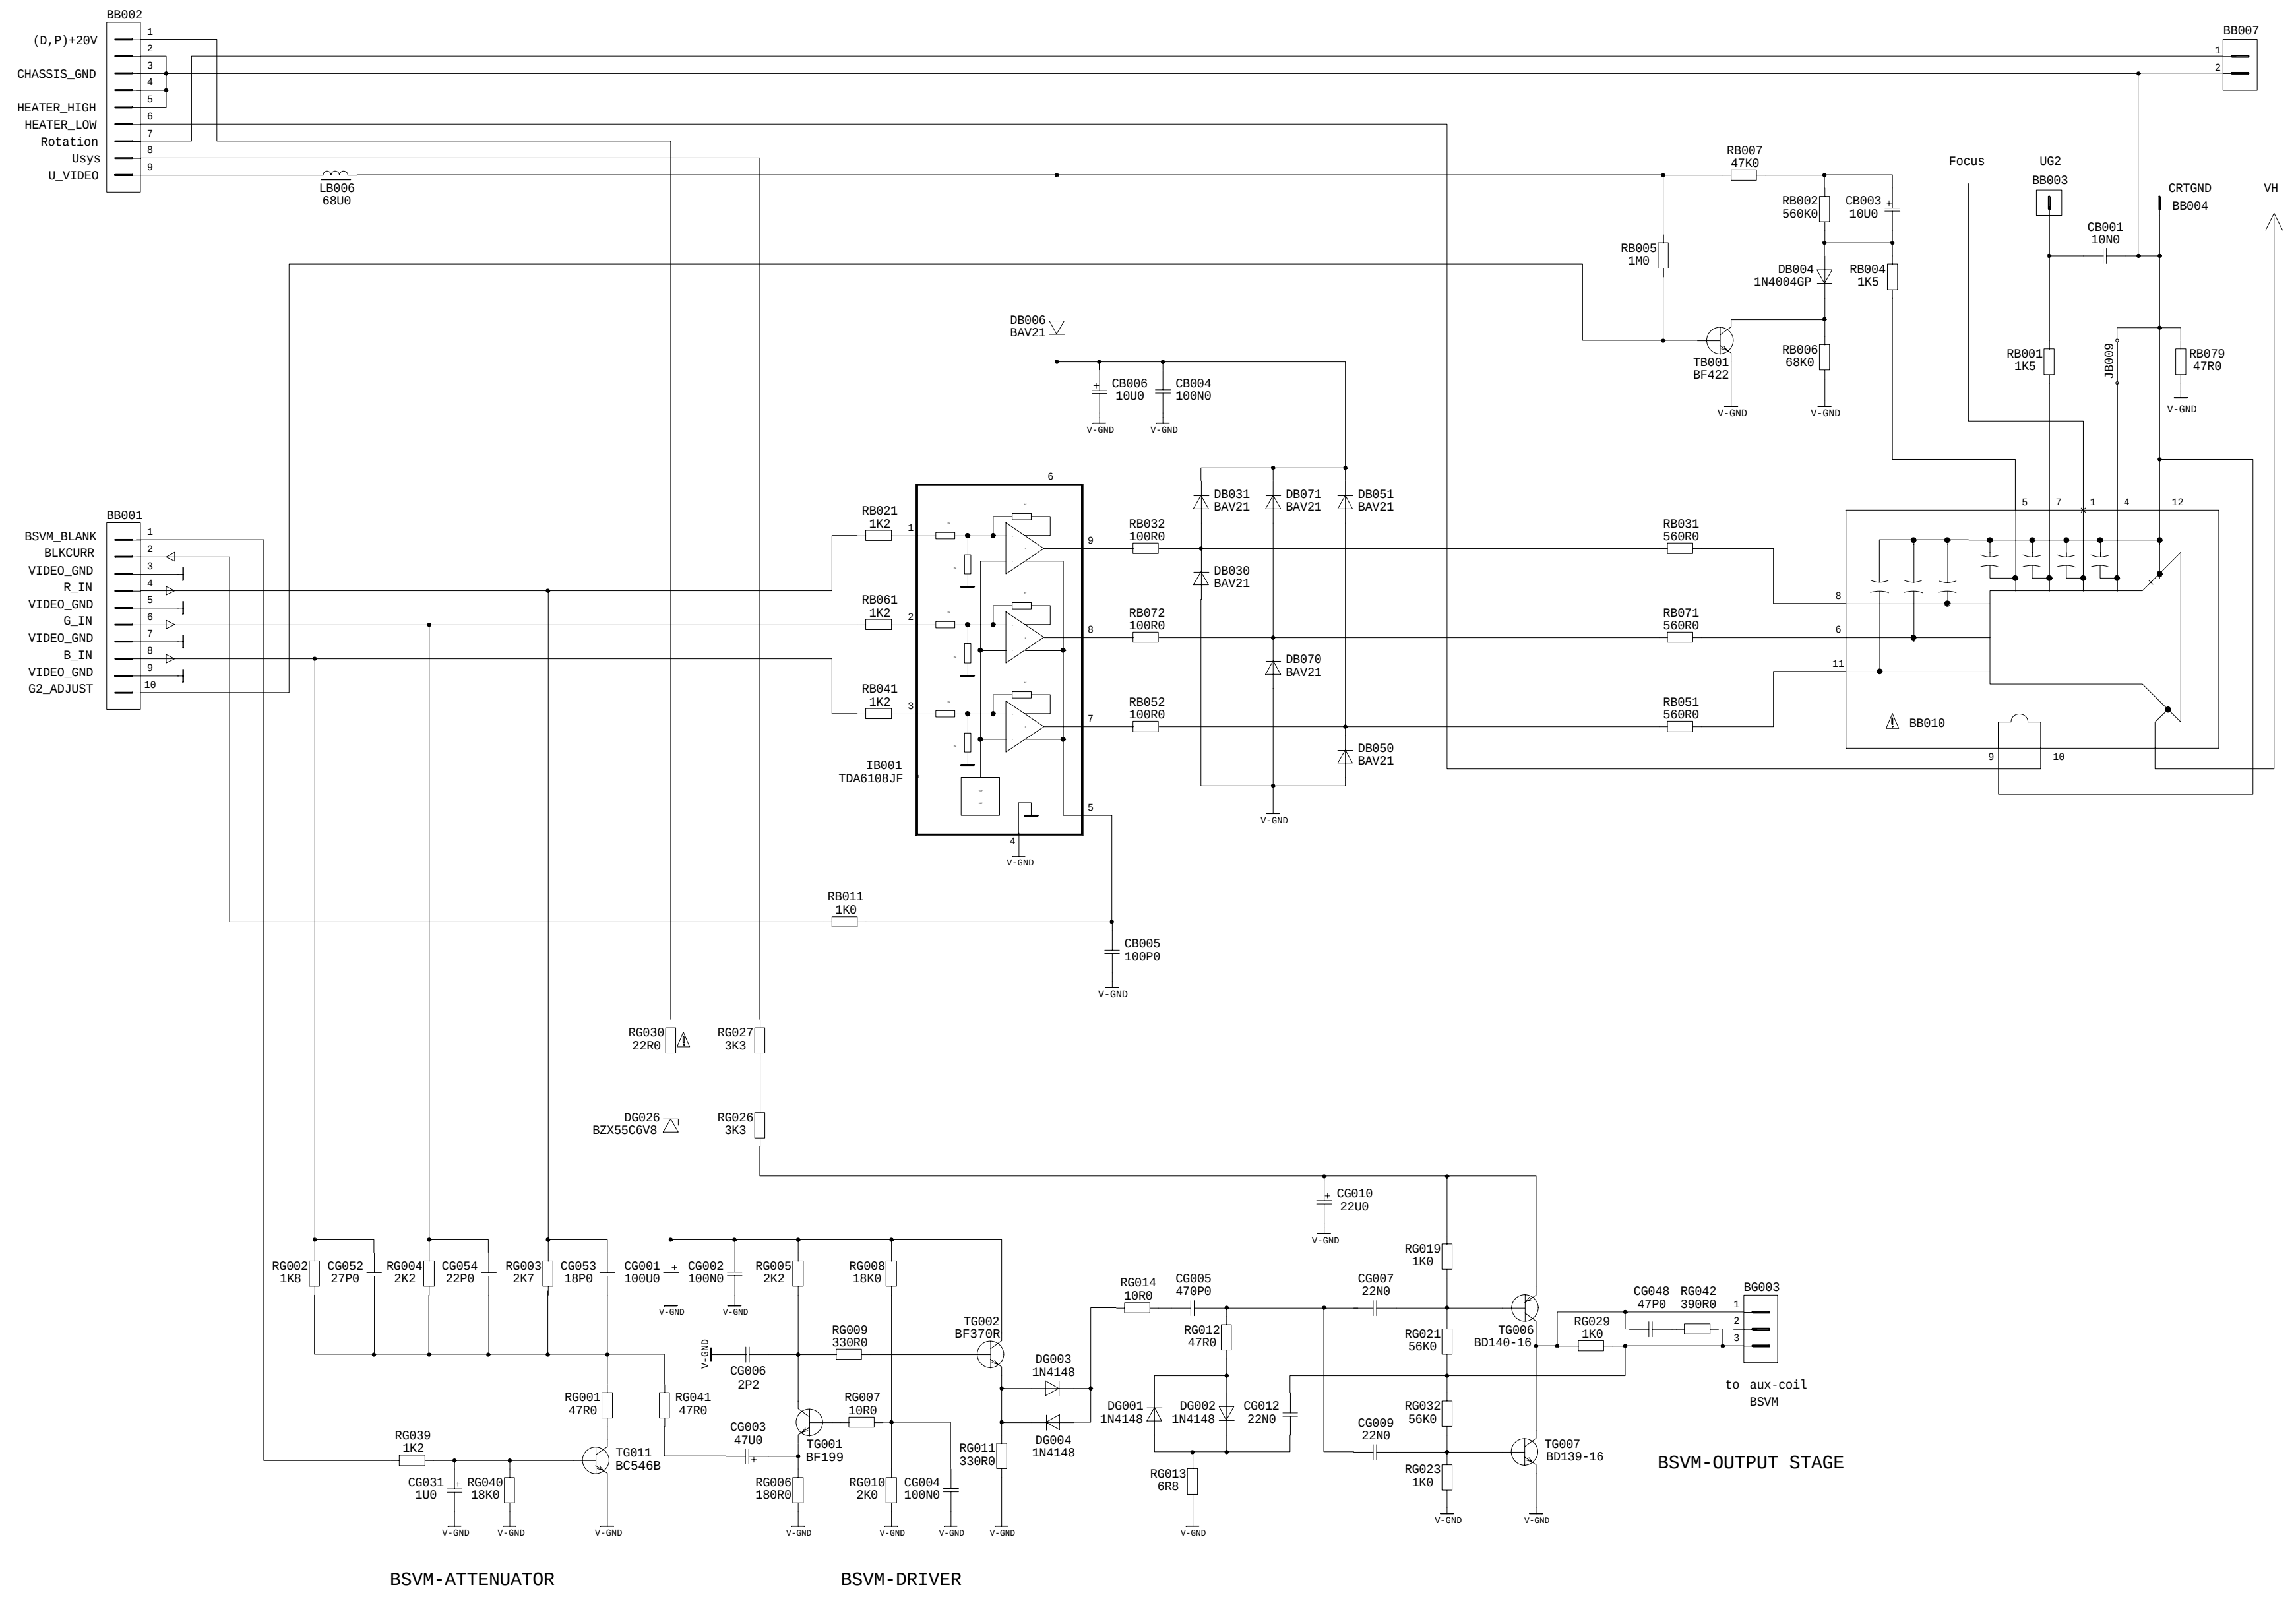

BB002
(D,P)+20V
CHASSIS_GND
HEATER_HIGH
HEATER_LOW
Rotation
Usys
U_VIDEO
1
2
3
4
5
6
7
8
9
LB006
68U0
BB007
1
2
RB007
47K0
RB002
560K0
CB003
10U0
RB005
1M0
DB004
1N4004GP
RB004
1K5
TB001
BF422
RB006
68K0
V-GND
Focus
UG2
BB003
CRTGND
BB004
VH
CB001
10N0
RB001
1K5
JB009
RB079
47R0
DB006
BAV21
CB006
10U0
CB004
100N0
BB001
BSVM_BLANK
BLKCURR
VIDEO_GND
R_IN
VIDEO_GND
G_IN
VIDEO_GND
B_IN
VIDEO_GND
G2_ADJUST
10
RB021
1K2
RB061
1K2
RB041
1K2
IB001
TDA6108JF
RB032
100R0
RB072
100R0
RB052
100R0
DB031
BAV21
DB071
BAV21
DB051
BAV21
DB030
BAV21
DB070
BAV21
DB050
BAV21
RB031
560R0
RB071
560R0
RB051
560R0
12
11
BB010
RB011
1K0
CB005
100P0
RG030
22R0
RG027
3K3
DG026
BZX55C6V8
RG026
3K3
CG010
22U0
RG002
1K8
CG052
27P0
RG004
2K2
CG054
22P0
RG003
2K7
CG053
18P0
CG001
100U0
CG002
100N0
RG005
2K2
RG008
18K0
CG006
2P2
RG009
330R0
TG002
BF370R
DG003
1N4148
RG014
10R0
CG005
470P0
RG012
47R0
CG007
22N0
RG019
1K0
RG021
56K0
TG006
BD140-16
CG048
47P0
RG042
390R0
RG029
1K0
BG003
to aux-coil
BSVM
RG001
47R0
RG041
47R0
CG003
47U0
TG001
BF199
RG007
10R0
DG004
1N4148
RG011
330R0
DG001
1N4148
DG002
1N4148
CG012
22N0
CG009
22N0
RG032
56K0
TG007
BD139-16
RG039
1K2
CG031
1U0
RG040
18K0
TG011
BC546B
RG006
180R0
RG010
2K0
CG004
100N0
RG013
6R8
RG023
1K0
BSVM-ATTENUATOR
BSVM-DRIVER
BSVM-OUTPUT STAGE

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_FEY

INDEX	DATE	NAME	DESCRIPTION
E	17.09.99	RIEDM.	CORRECTION
I	24.03.00	J.David	C36460
H	08.02.00	RIEDM.	C33100
G	02.12.99	RIEDM.	CORRECTION
F	18.11.99	RIEDM.	C28630/30200

DRAWN
ON: 23.12.98
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
CRT.BS20100.00	10626280

TV
ICC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

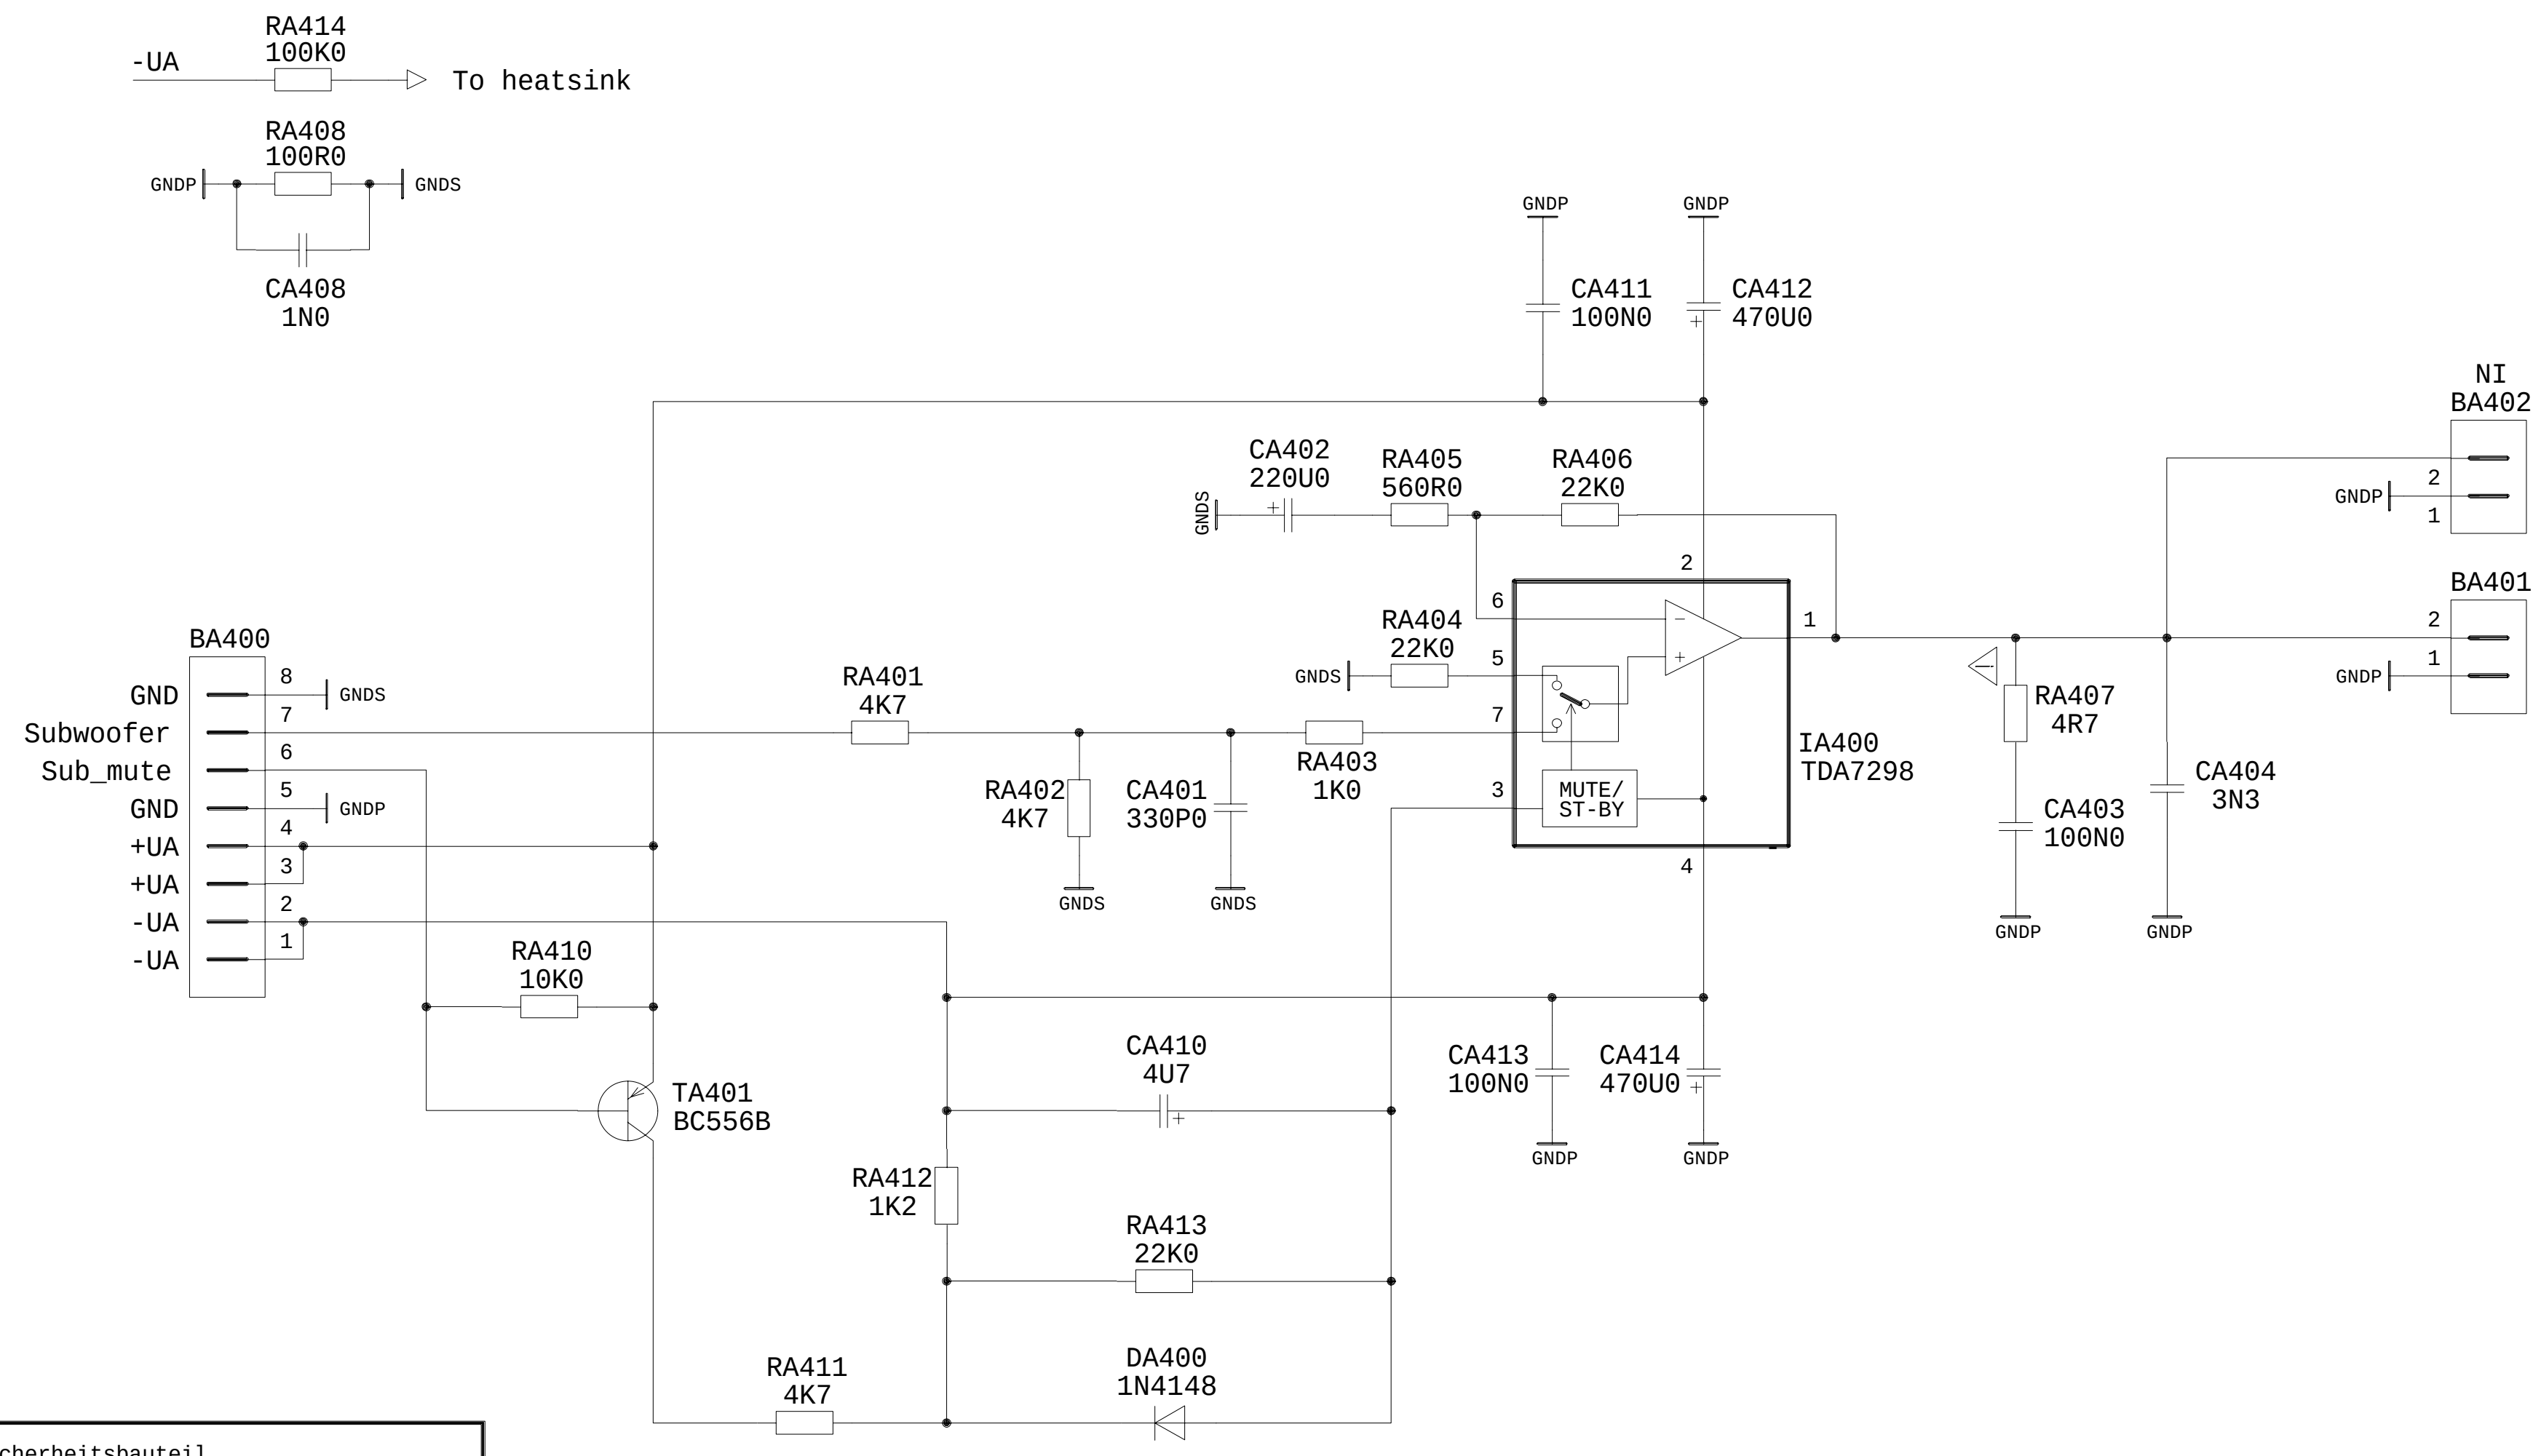
-UA
RA414
100K0
To heatsink
RA408
100R0
GNDP
GNDS
CA408
1N0
GNDP
GNDP
CA411
100N0
CA412
470U0
NI
BA402
CA402
220U0
RA405
560R0
RA406
22K0
GNDS
GNDP
2
1
BA401
2
1
GNDP
BA400
GND
Subwoofer
Sub_mute
GND
+UA
+UA
-UA
-UA
8
7
6
5
4
3
2
1
GNDS
GNDP
RA401
4K7
RA404
22K0
GNDS
RA403
1K0
RA402
4K7
CA401
330P0
GNDS
GNDS
2
6
5
7
3
1
4
MUTE/
ST-BY
IA400
TDA7298
RA407
4R7
CA403
100N0
CA404
3N3
GNDP
GNDP
RA410
10K0
TA401
BC556B
CA410
4U7
CA413
100N0
CA414
470U0
GNDP
GNDP
RA412
1K2
RA413
22K0
RA411
4K7
DA400
1N4148

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTA_PEDUZZI

INDEX	DATE	NAME	DESCRIPTION
E	16.03.00	J.David	CORRECTION
D	30.11.99	RIEDM.	CORRECTION
C	15.11.99	RIEDM.	C28630/29920
B	11.06.99	LM	CORRECTION
A	06.05.99	RIEDM.	CORRECTION

DRAWN
ON: 26.04.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION: PA/SW.20000.00

TOCOM-NUMBER: 10626290

TV
IC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A3

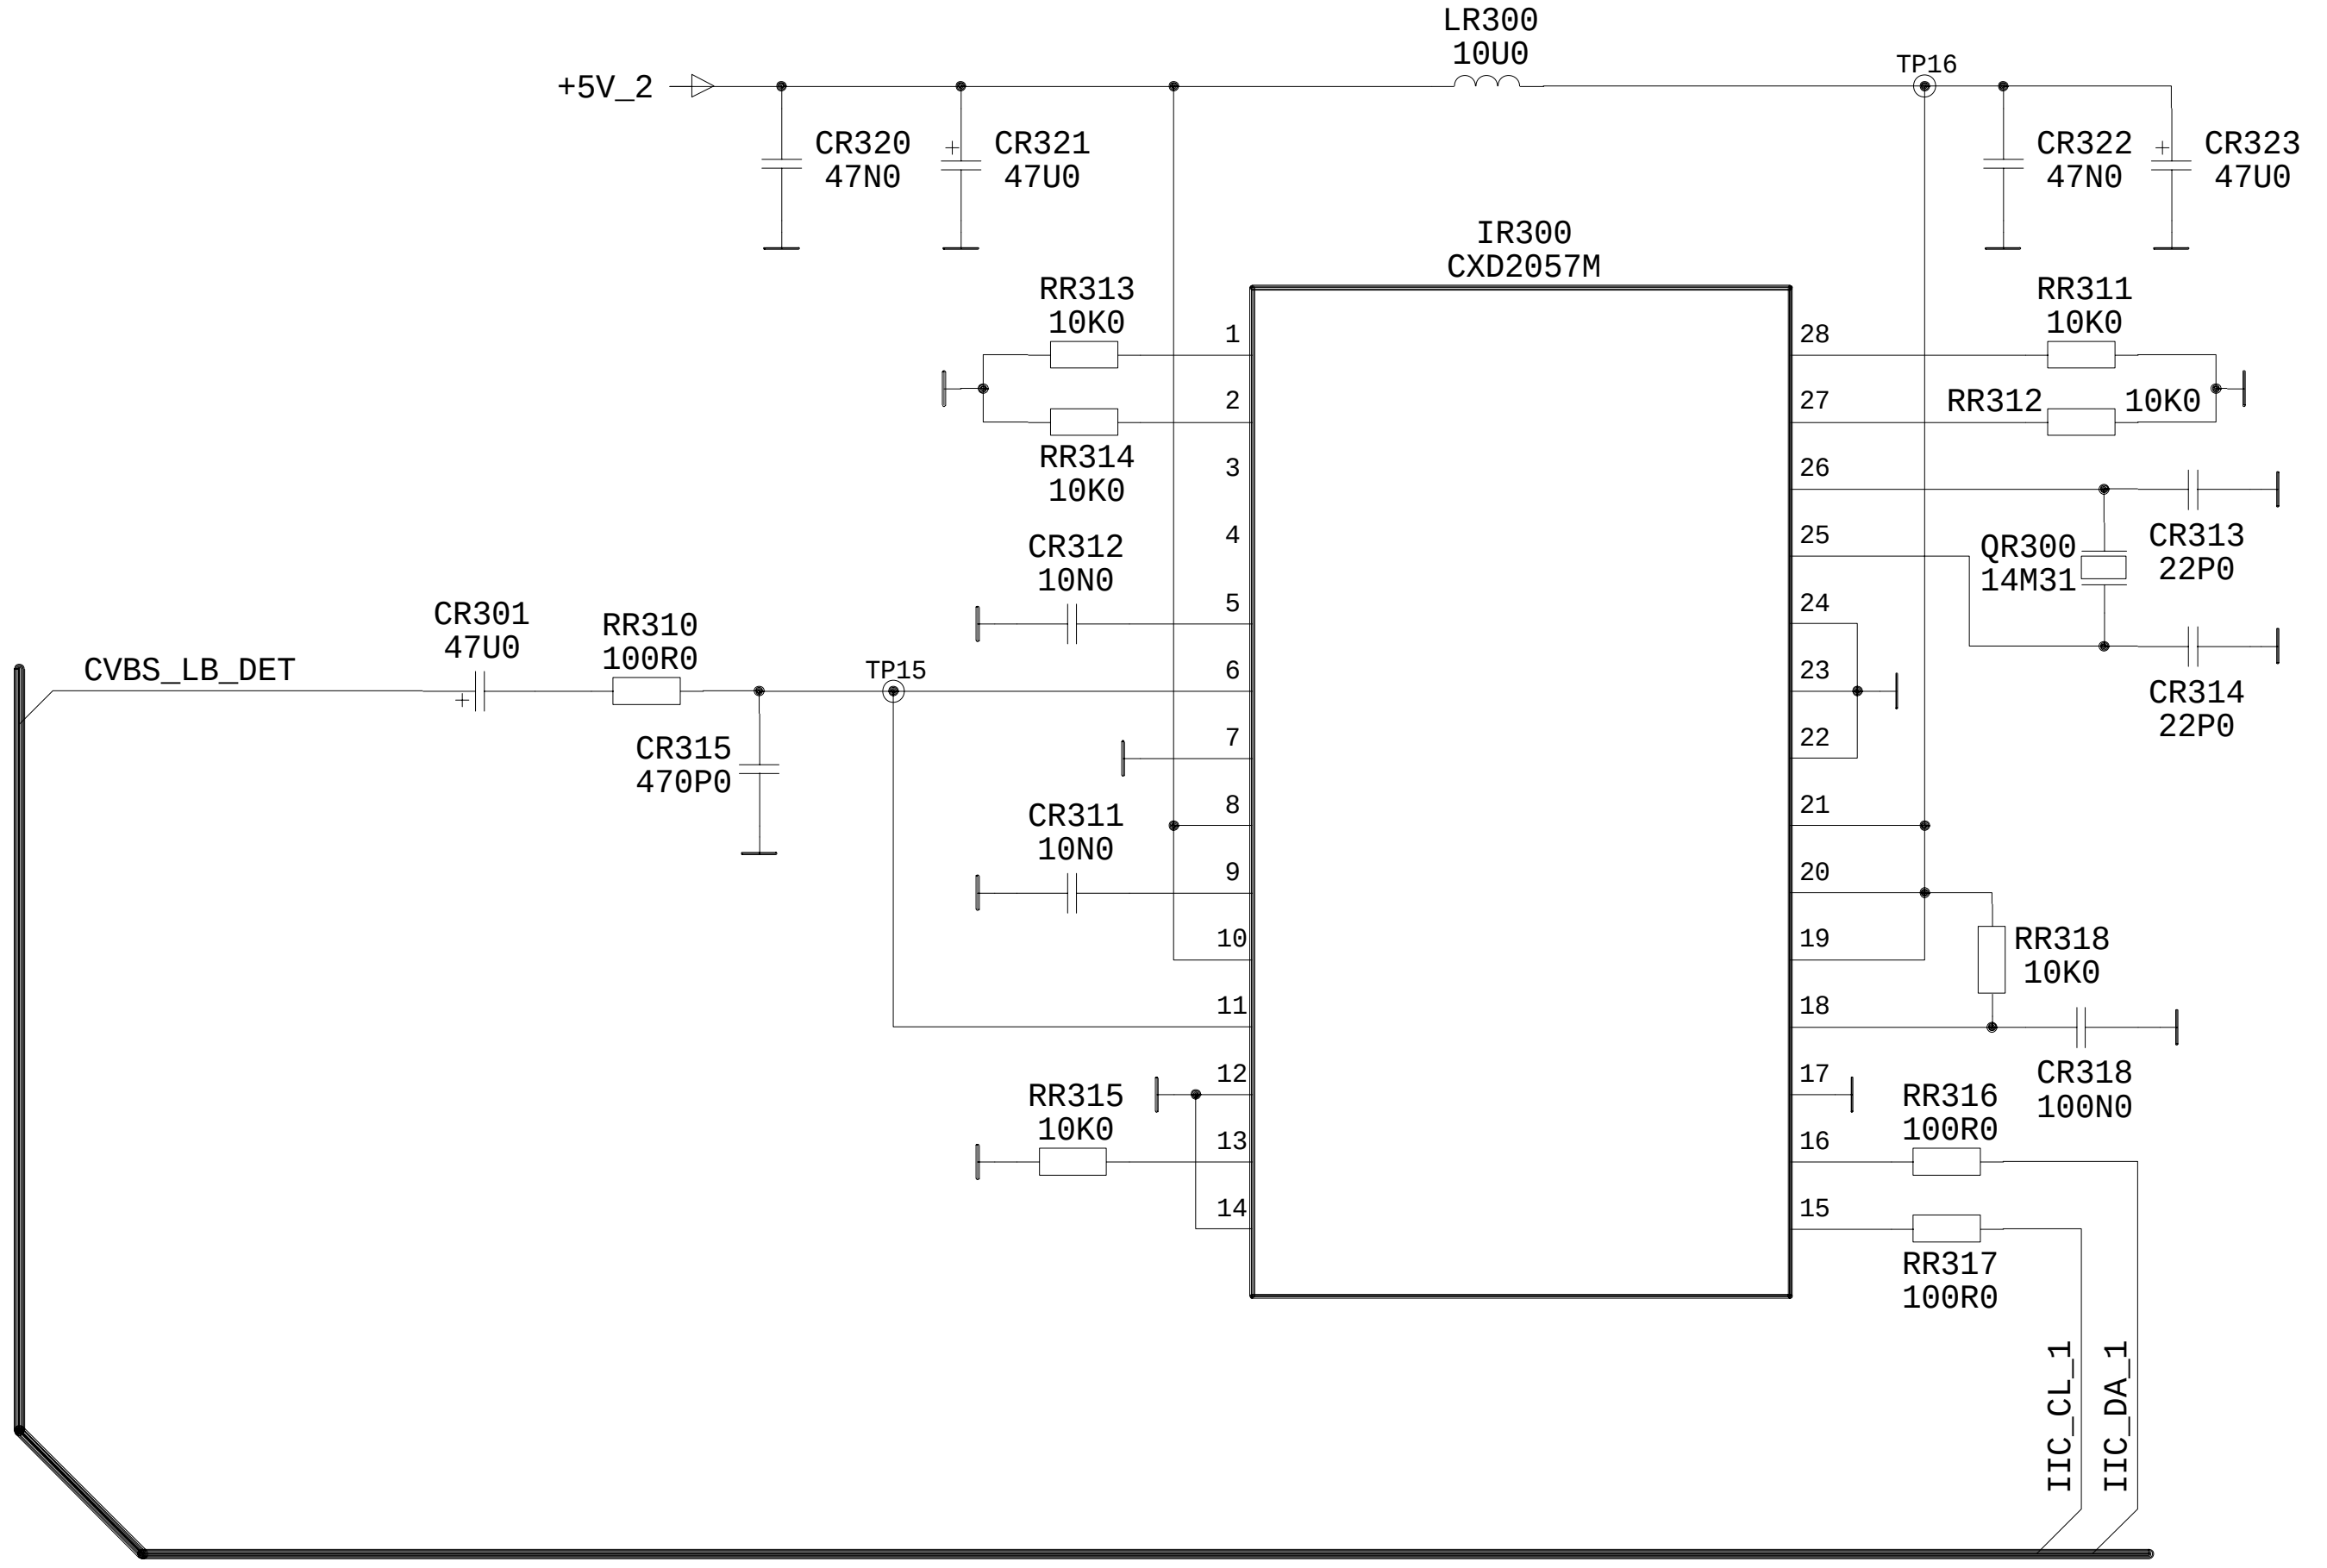
LR300
10U0
+5V_2
TP16
CR320
47N0
CR321
47U0
CR322
47N0
CR323
47U0
IR300
CXD2057M
RR313
10K0
RR314
10K0
RR311
10K0
RR312
10K0
QR300
14M31
CR313
22P0
CR314
22P0
CR312
10N0
CR301
47U0
RR310
100R0
TP15
CVBS_LB_DET
CR315
470P0
CR311
10N0
RR318
10K0
CR318
100N0
RR315
10K0
RR316
100R0
RR317
100R0
IIC_CL_1
IIC_DA_1
1
2
3
4
5
6
7
8
9
10
11
12
13
14
28
27
26
25
24
23
22
21
20
19
18
17
16
15

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CDH_WEHRLEIN

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
D	16.11.99	RIEDM.	00L3-CORR. C29710
C	27.05.99	RIEDM.	CORRECTION
B	10.05.99	RIEDM.	CORRECTION
A	22.04.99	RIEDM.	00L1-CORR.

DRAWN
ON: 11.12.98
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
LBD.20000.00	10628350	00L3	IC20

PAGE: 1
OF : 1

PCAD FORMAT DIN A3

Breakable

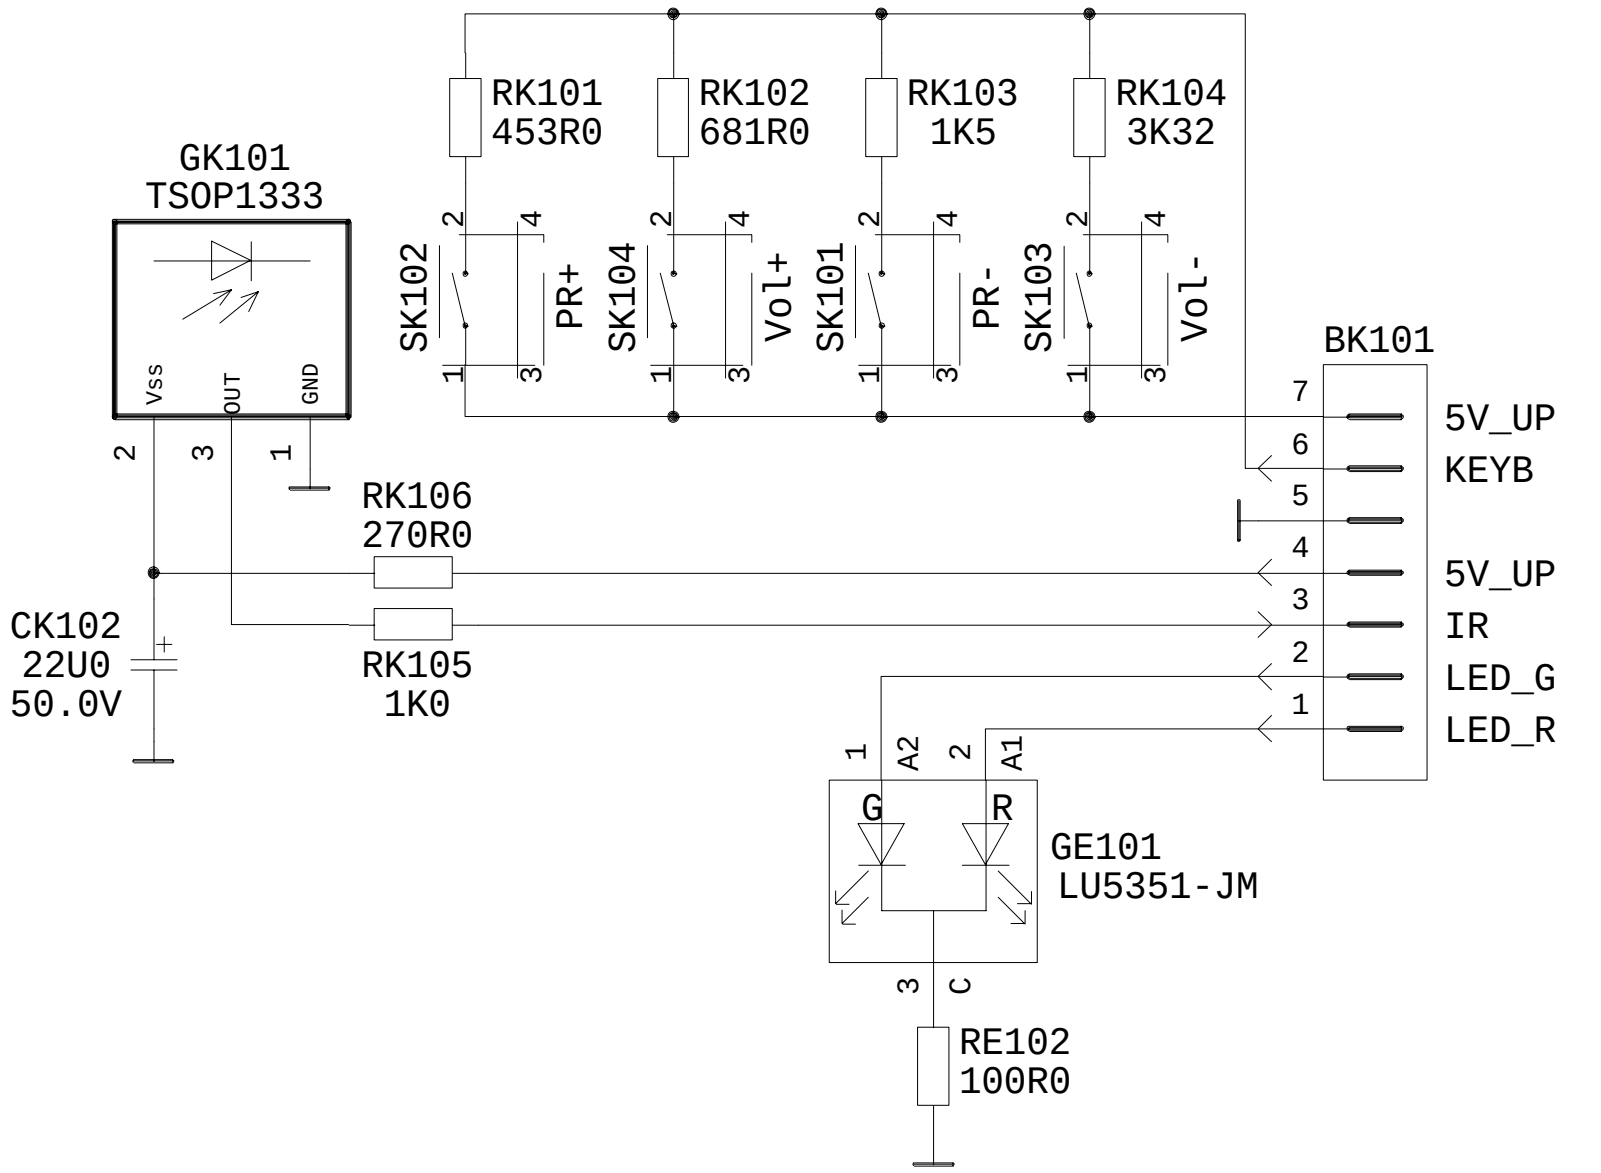
GK101
TSOP1333
Vss
OUT
GND
2
3
1
RK101
453R0
RK102
681R0
RK103
1K5
RK104
3K32
SK102
PR+
SK104
Vol+
SK101
PR-
SK103
Vol-
BK101
7
6
5
4
3
2
1
5V_UP
KEYB
5V_UP
IR
LED_G
LED_R
RK106
270R0
RK105
1K0
CK102
22U0
50.0V
1
A2
2
A1
G
R
GE101
LU5351-JM
3
C
RE102
100R0

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CDH_BAUMANN

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
...	.._.._..	....	....
C	03.12.99	RIEDM.	CORRECTION
B	01.09.99	RIEDM.	00L2-CORR.
A	20.04.99	H.RUF	CORRECTION

DRAWN
ON: 15.04.99
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
KB.20000.00	10636860

TV
IC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A3

Breakable

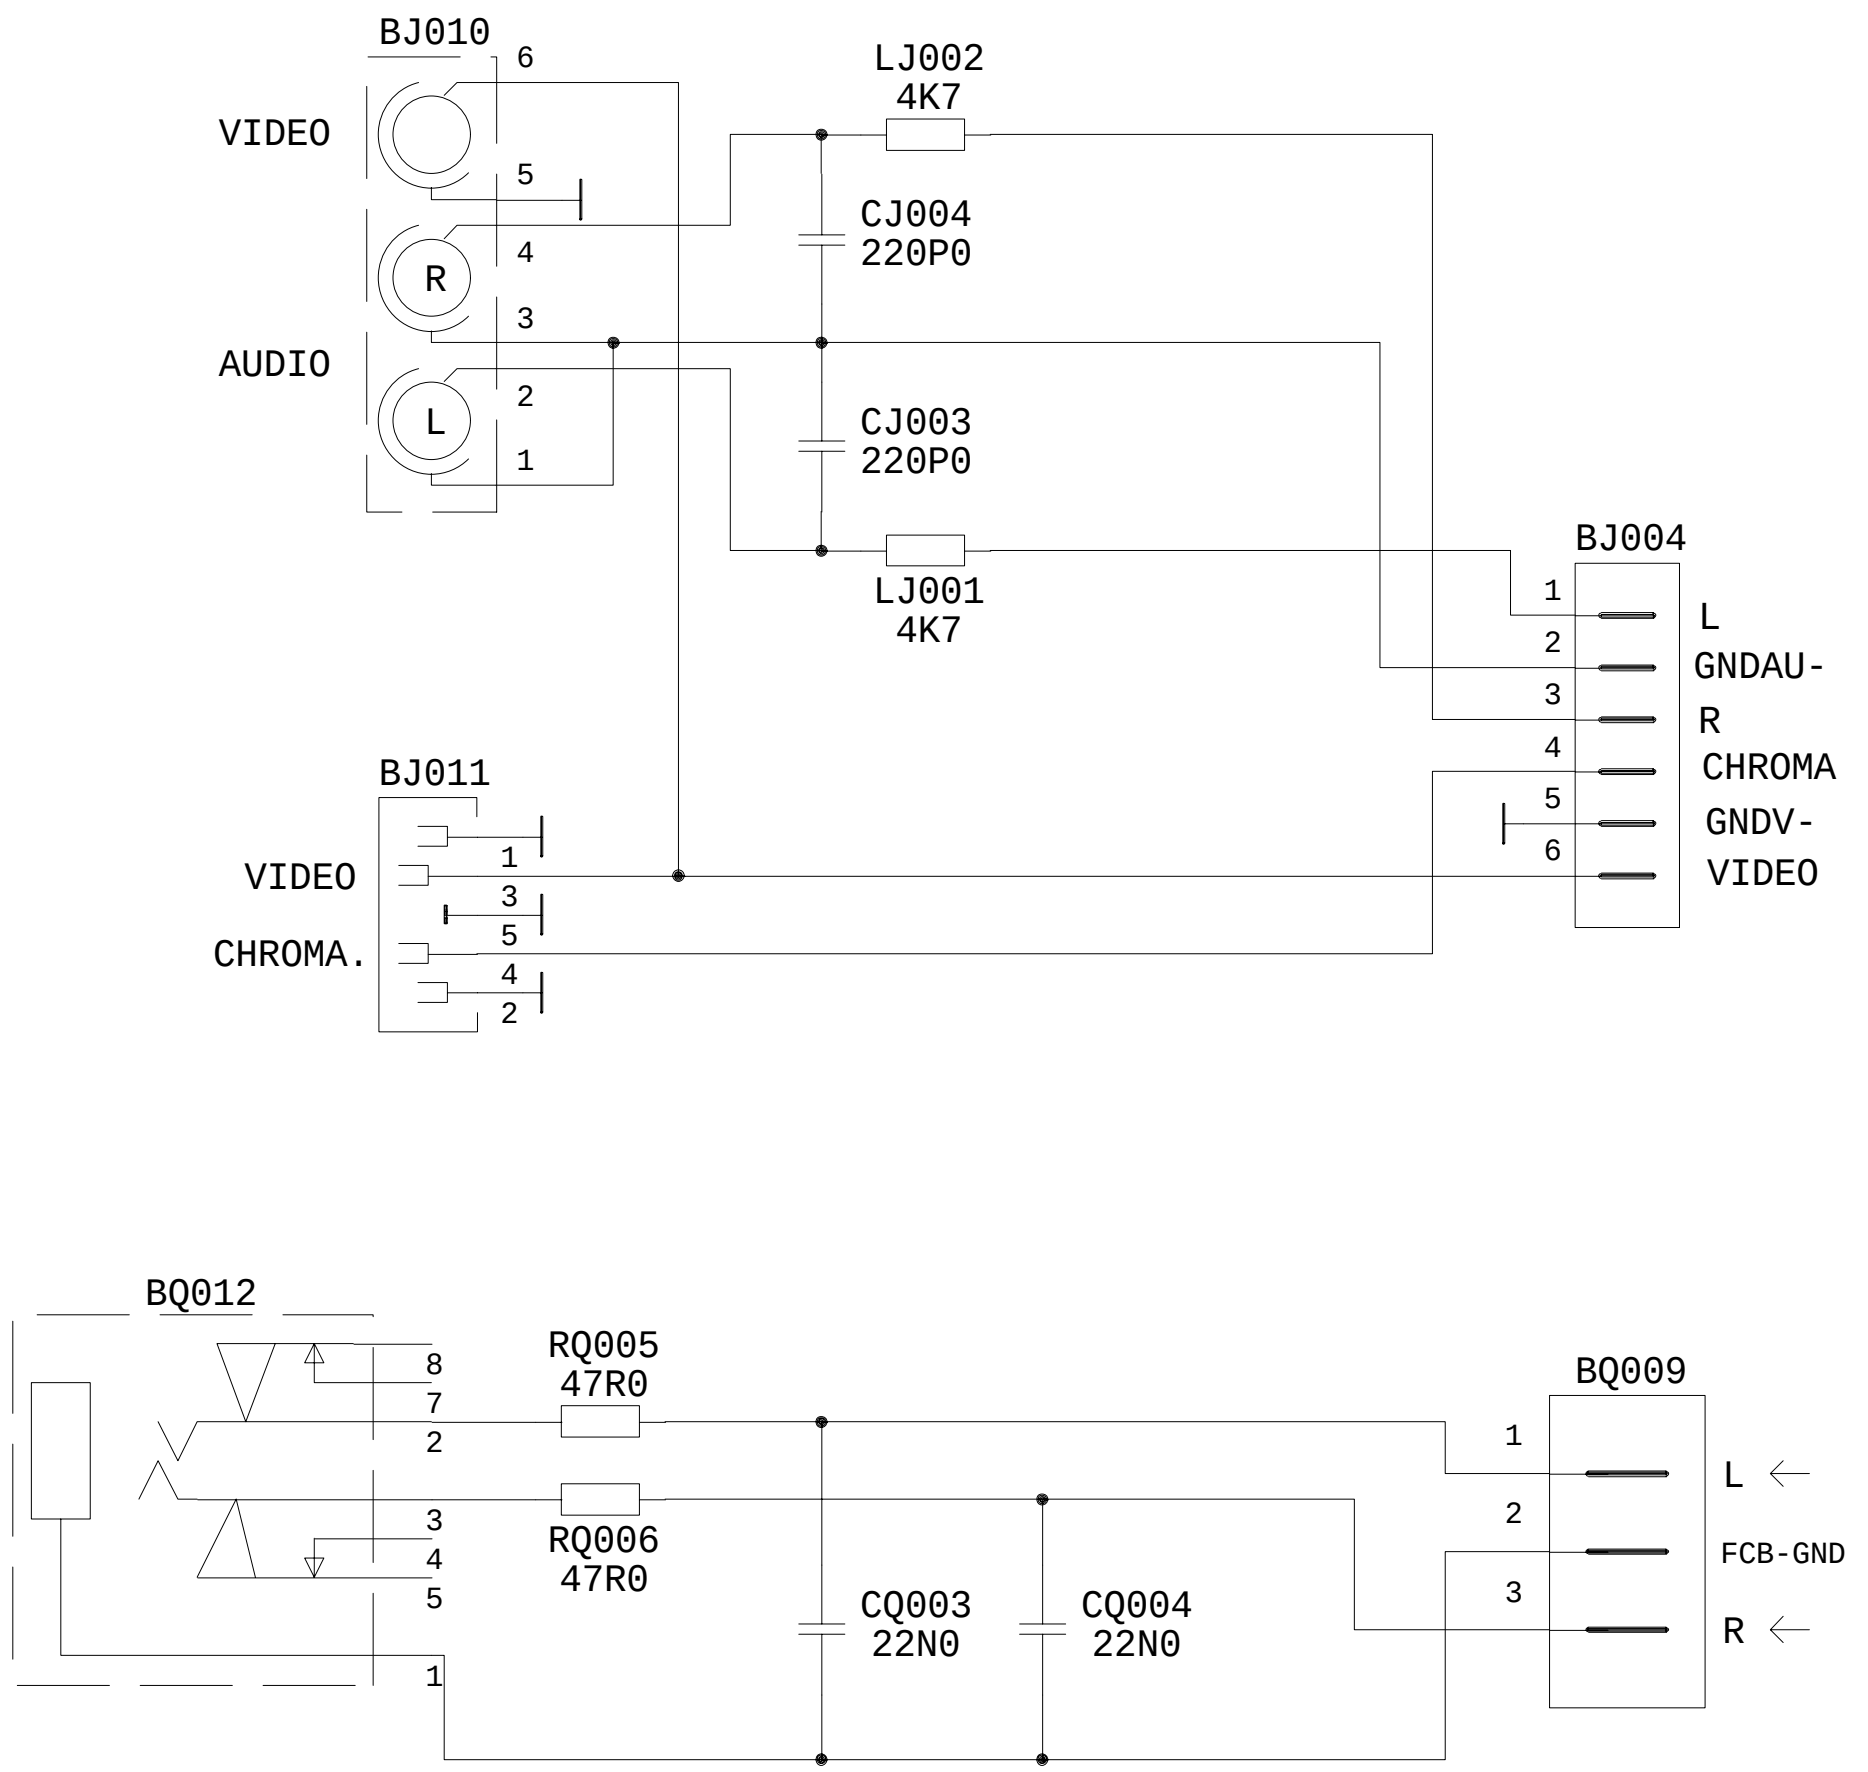
BJ010
6
VIDEO
5
4
R
AUDIO
3
2
L
1
LJ002
4K7
CJ004
220P0
CJ003
220P0
LJ001
4K7
BJ004
1
L
2
GNDAU-
3
R
4
CHROMA
5
GNDV-
6
VIDEO
BJ011
VIDEO
1
3
5
CHROMA.
4
2
BQ012
8
7
2
3
4
5
1
RQ005
47R0
RQ006
47R0
CQ003
22N0
CQ004
22N0
BQ009
1
L
2
FCB-GND
3
R

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTA-PEDUZZI
CTV-MIKA

INDEX	DATE	NAME	DESCRIPTION
...	..-..-..	....	....
...	..-..-..	....	....
C	25.02.00	RIEDM.	C31330
B	05.08.99	RIEDM.	00L2-CORR.
A	07.04.99	RIEDM.	CORRECTION

DRAWN
ON: 22.12.98
BY: J.DAVID
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
FCB.20000.00	10636870

TV
ICC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A3

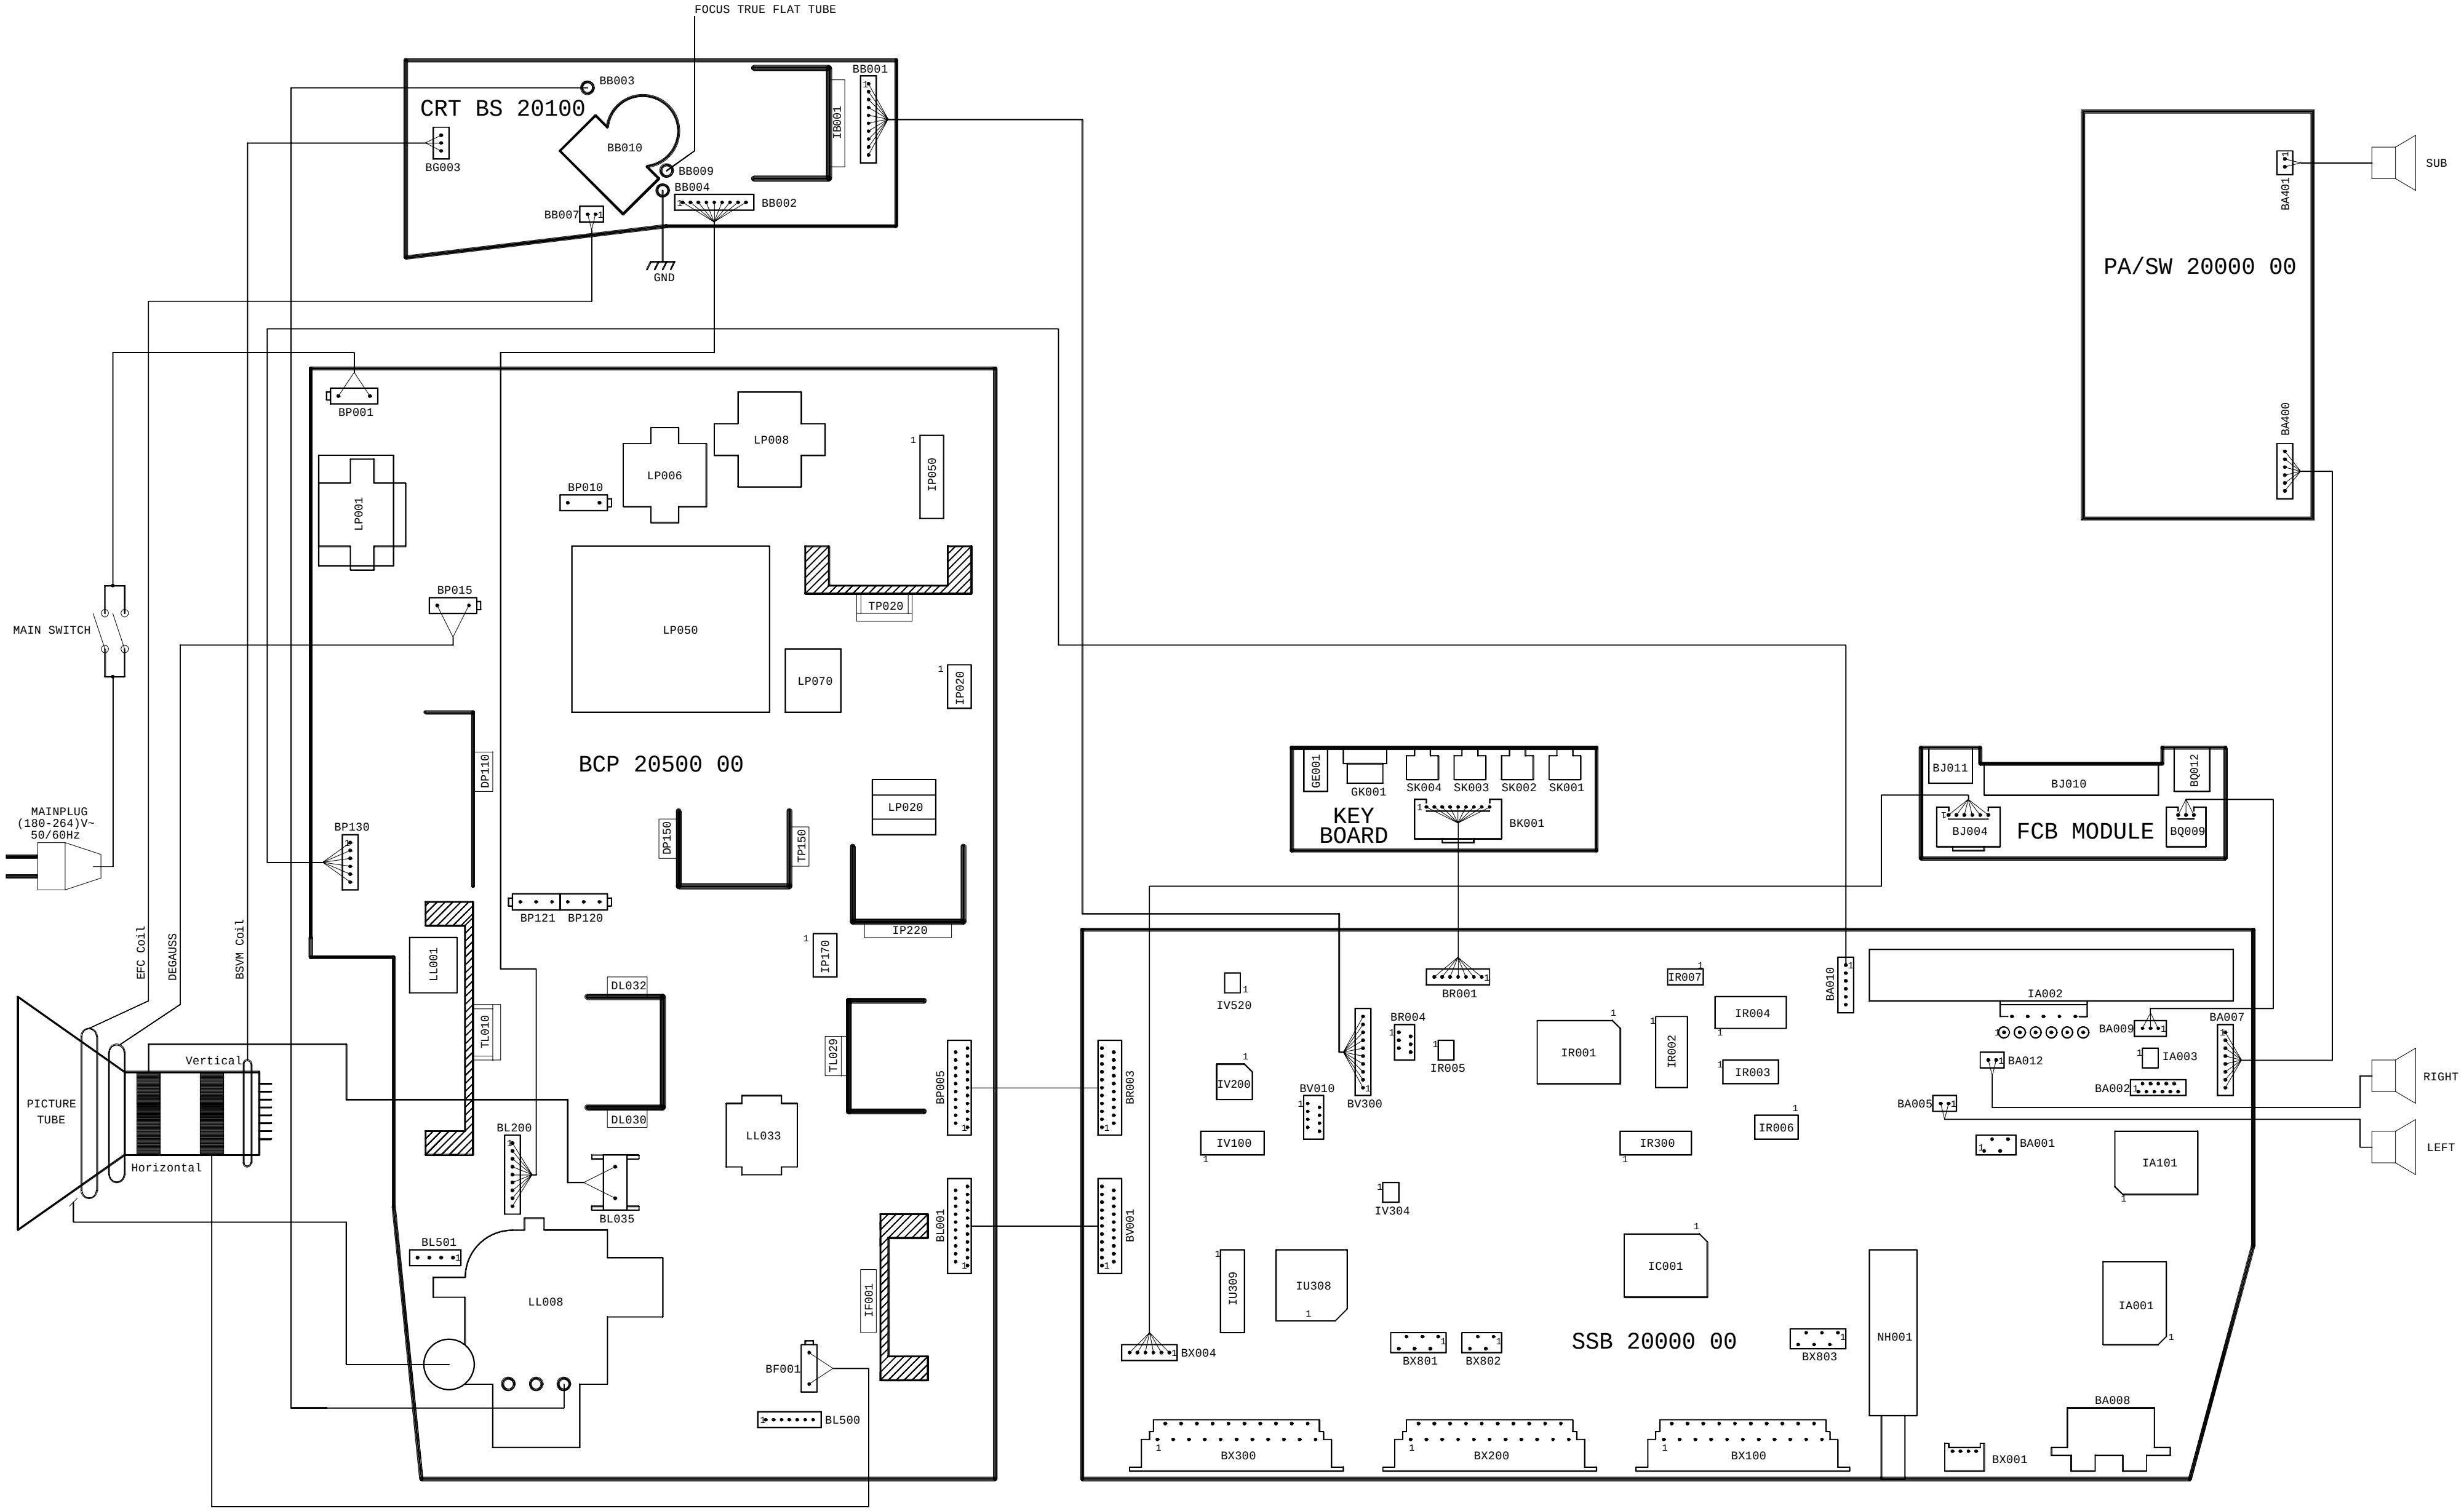
FOCUS TRUE FLAT TUBE
CRT BS 20100
BB003
BB001
IB001
BB010
BB009
BB004
BB002
BG003
BB007
GND
PA/SW 20000 00
BA401
SUB
BA400
BP001
LP008
LP006
BP010
IP050
LP001
BP015
LP050
TP020
LP070
IP020
MAIN SWITCH
BCP 20500 00
DP110
MAINPLUG
(180-264)V~
50/60Hz
BP130
DP150
TP150
LP020
BP121
BP120
IP220
IP170
LL001
TL010
DL032
EFC Coil
DEGAUSS
BSVM Coil
PICTURE
TUBE
Vertical
Horizontal
TL029
BP005
LL033
BL200
BL035
DL030
BL501
LL008
BL001
IF001
BF001
BL500
KEY
BOARD
GE001
GK001
SK004
SK003
SK002
SK001
BK001
FCB MODULE
BJ011
BJ010
BQ012
BJ004
BQ009
SSB 20000 00
BR001
IR007
BA010
IA002
IV520
BR004
IR004
IR001
IR002
BA009
BA007
BV300
IR005
IR003
IA003
BR003
IV200
BV010
BA012
BA002
RIGHT
LEFT
BA005
IV100
IR300
IR006
BA001
IA101
IV304
BV001
IC001
IU309
IU308
IA001
NH001
BX004
BX801
BX802
BX803
BA008
BX300
BX200
BX100
BX001

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CAT_DUFFNER

INDEX	DATE	NAME	DESCRIPTION
...	..-..-..	....	....
...	..-..-..	....	....
...	..-..-..	....	....
B	03.05.00	J.David	CORRECTION
A	14-03-00	J.David	....

DRAWN
ON: 22.02.00
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
ICC20_TV_WIRING_DIAGRAM	10638090

TV
IC20
PAGE: 1
OF : 2

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

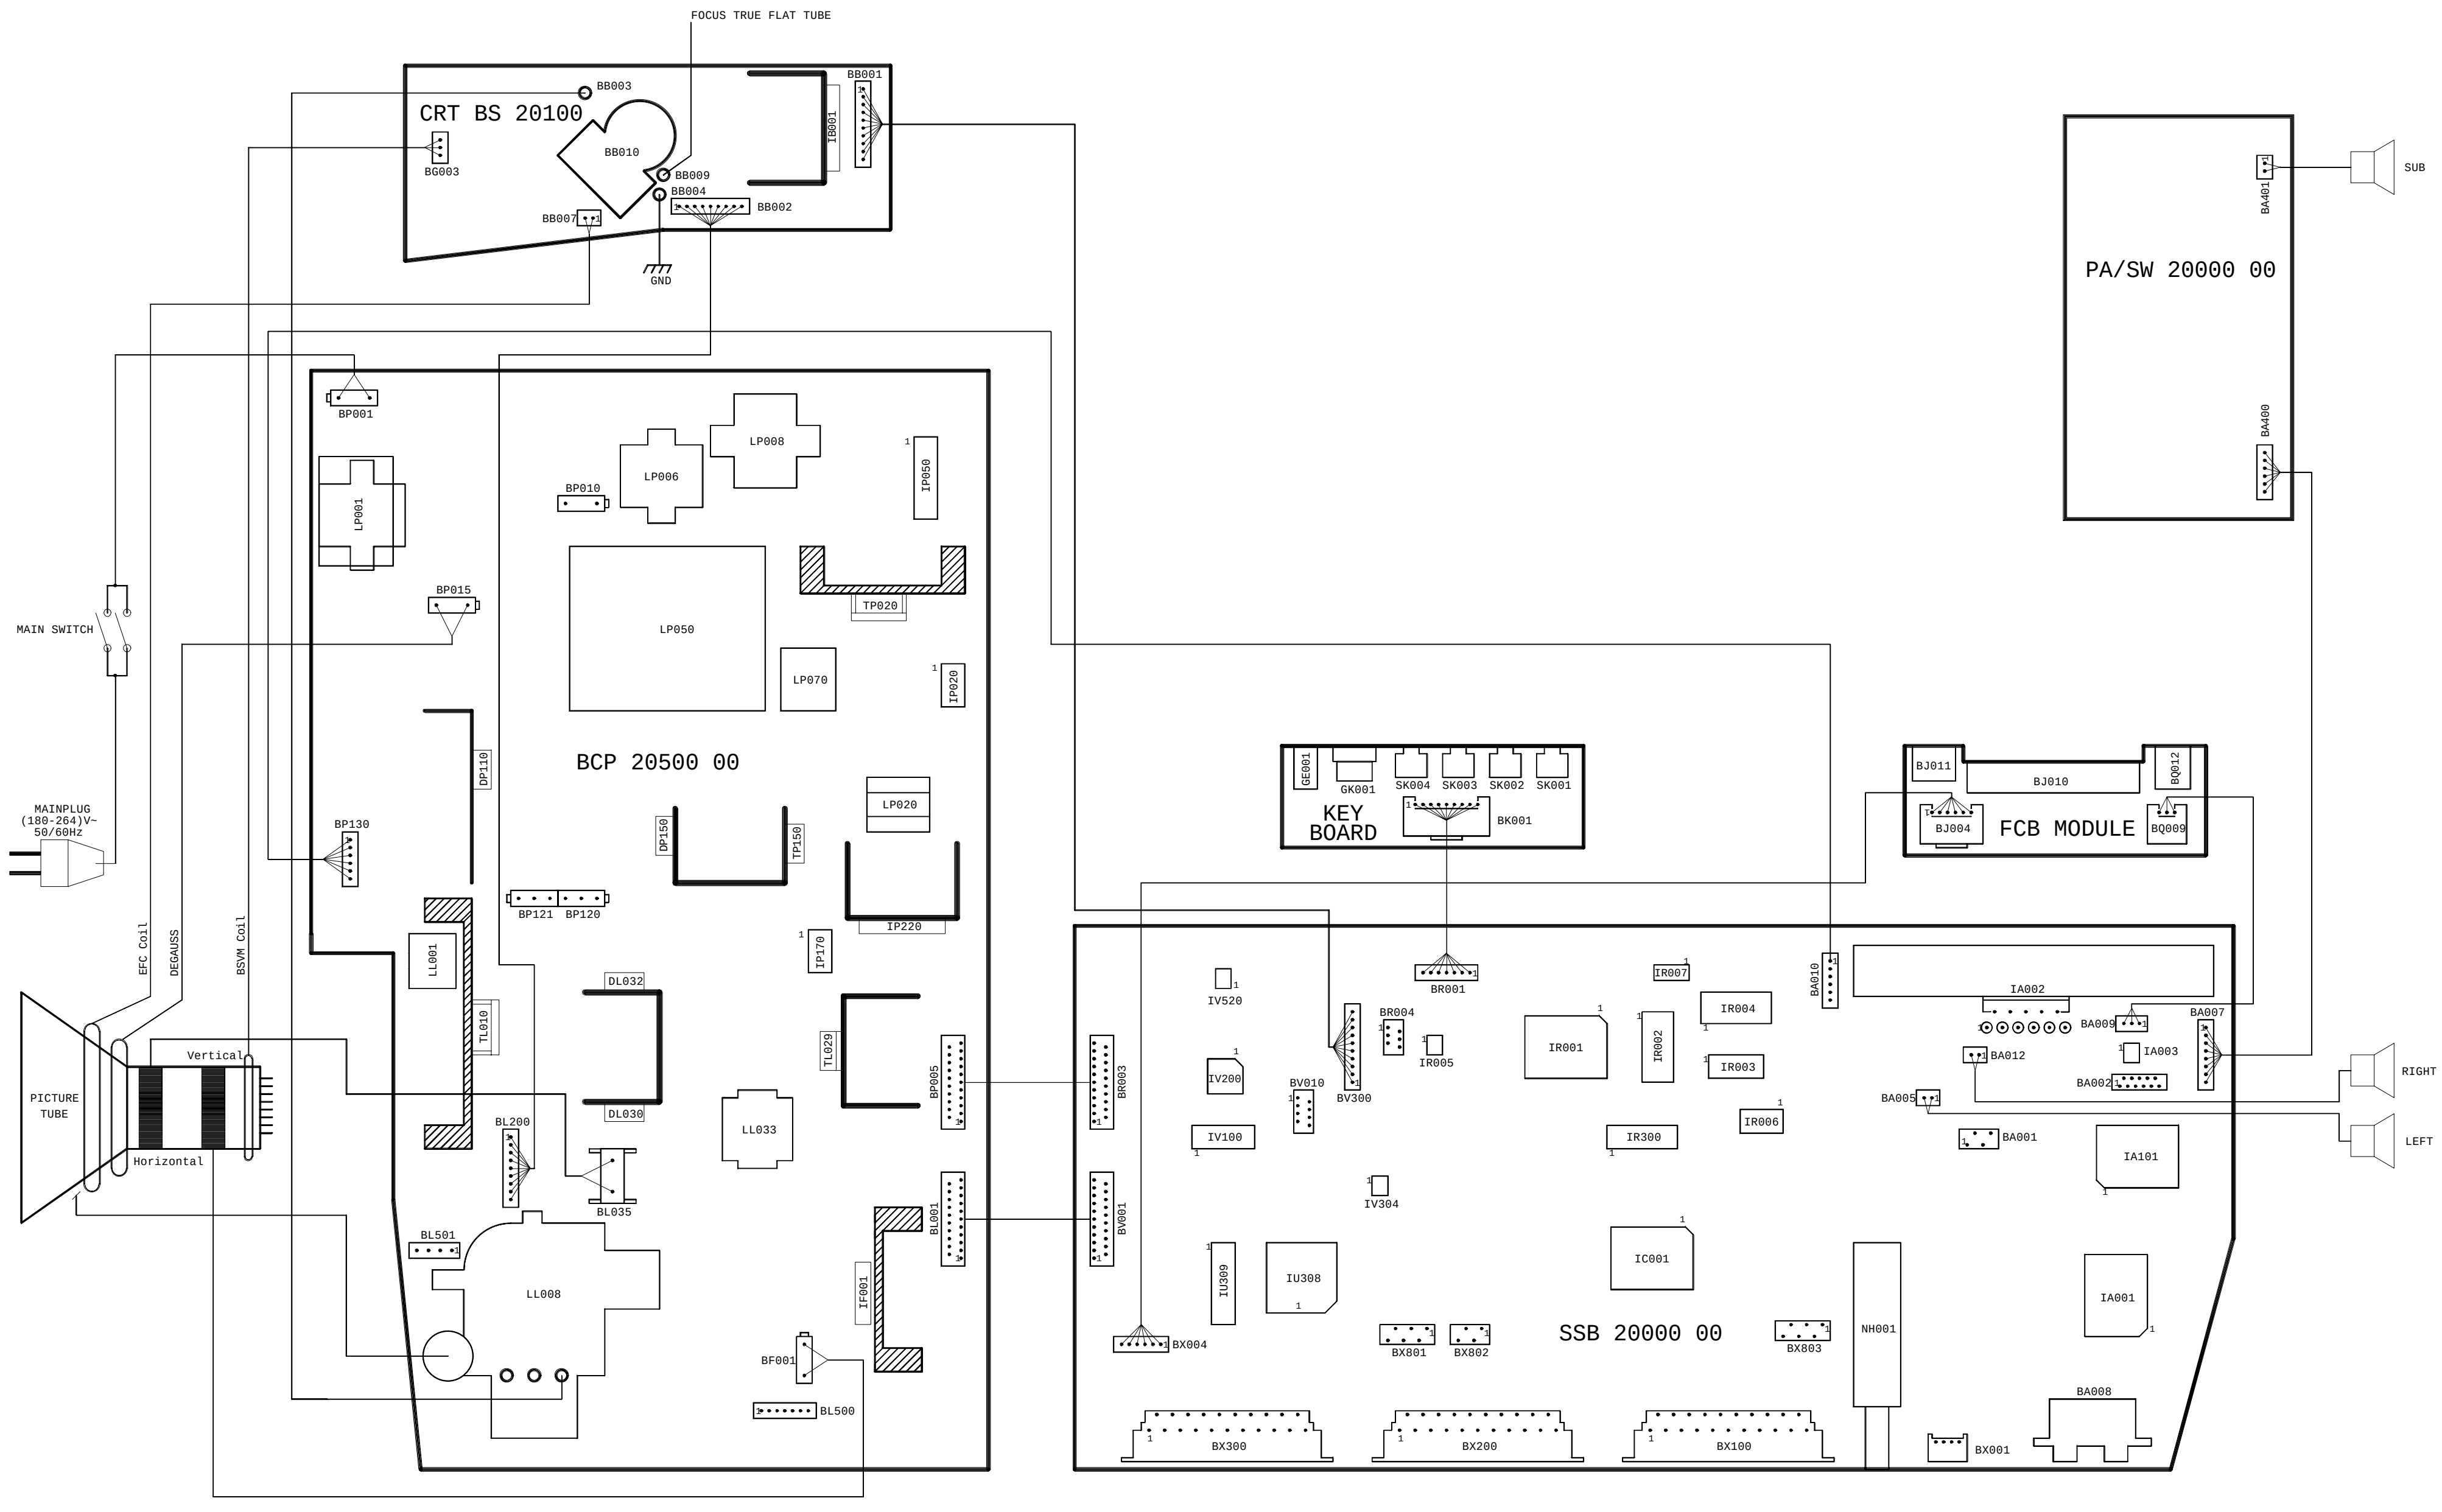
FOCUS TRUE FLAT TUBE
CRT BS 20100
BB003
BB001
BB010
IB001
BG003
BB009
BB004
BB007
BB002
GND
PA/SW 20000 00
BA401
SUB
BA400
BP001
LP008
LP006
BP010
IP050
LP001
BP015
TP020
LP050
MAIN SWITCH
LP070
IP020
DP110
BCP 20500 00
MAINPLUG
(180-264)V~
50/60Hz
BP130
DP150
TP150
LP020
BP121
BP120
IP220
EFC Coil
DEGAUSS
BSVM Coil
LL001
IP170
DL032
TL010
PICTURE
TUBE
Vertical
Horizontal
TL029
BP005
LL033
DL030
BL200
BL035
BL501
LL008
BL001
IF001
BF001
BL500
GE001
GK001
SK004
SK003
SK002
SK001
KEY
BOARD
BK001
BJ011
BJ010
BQ012
BJ004
FCB MODULE
BQ009
BR001
IR007
BA010
IA002
IV520
BR004
IR004
BA009
BA007
IV200
IR005
IR001
IR002
IR003
BA012
IA003
BR003
BV010
BV300
BA002
RIGHT
BA005
LEFT
IV100
IR300
IR006
BA001
IA101
BV001
IV304
IC001
IU309
IU308
IA001
NH001
SSB 20000 00
BX004
BX801
BX802
BX803
BA008
BX300
BX200
BX100
BX001

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CAT_DUFFNER

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....
B	03.05.00	J.David	CORRECTION
A	14-03-00	J.David	....

DRAWN
ON: 22.02.00
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	TV
ICC20_TV_WIRING_DIAGRAM	10638090	IC20
		PAGE: 1
		OF : 2

PCAD FORMAT DIN A1

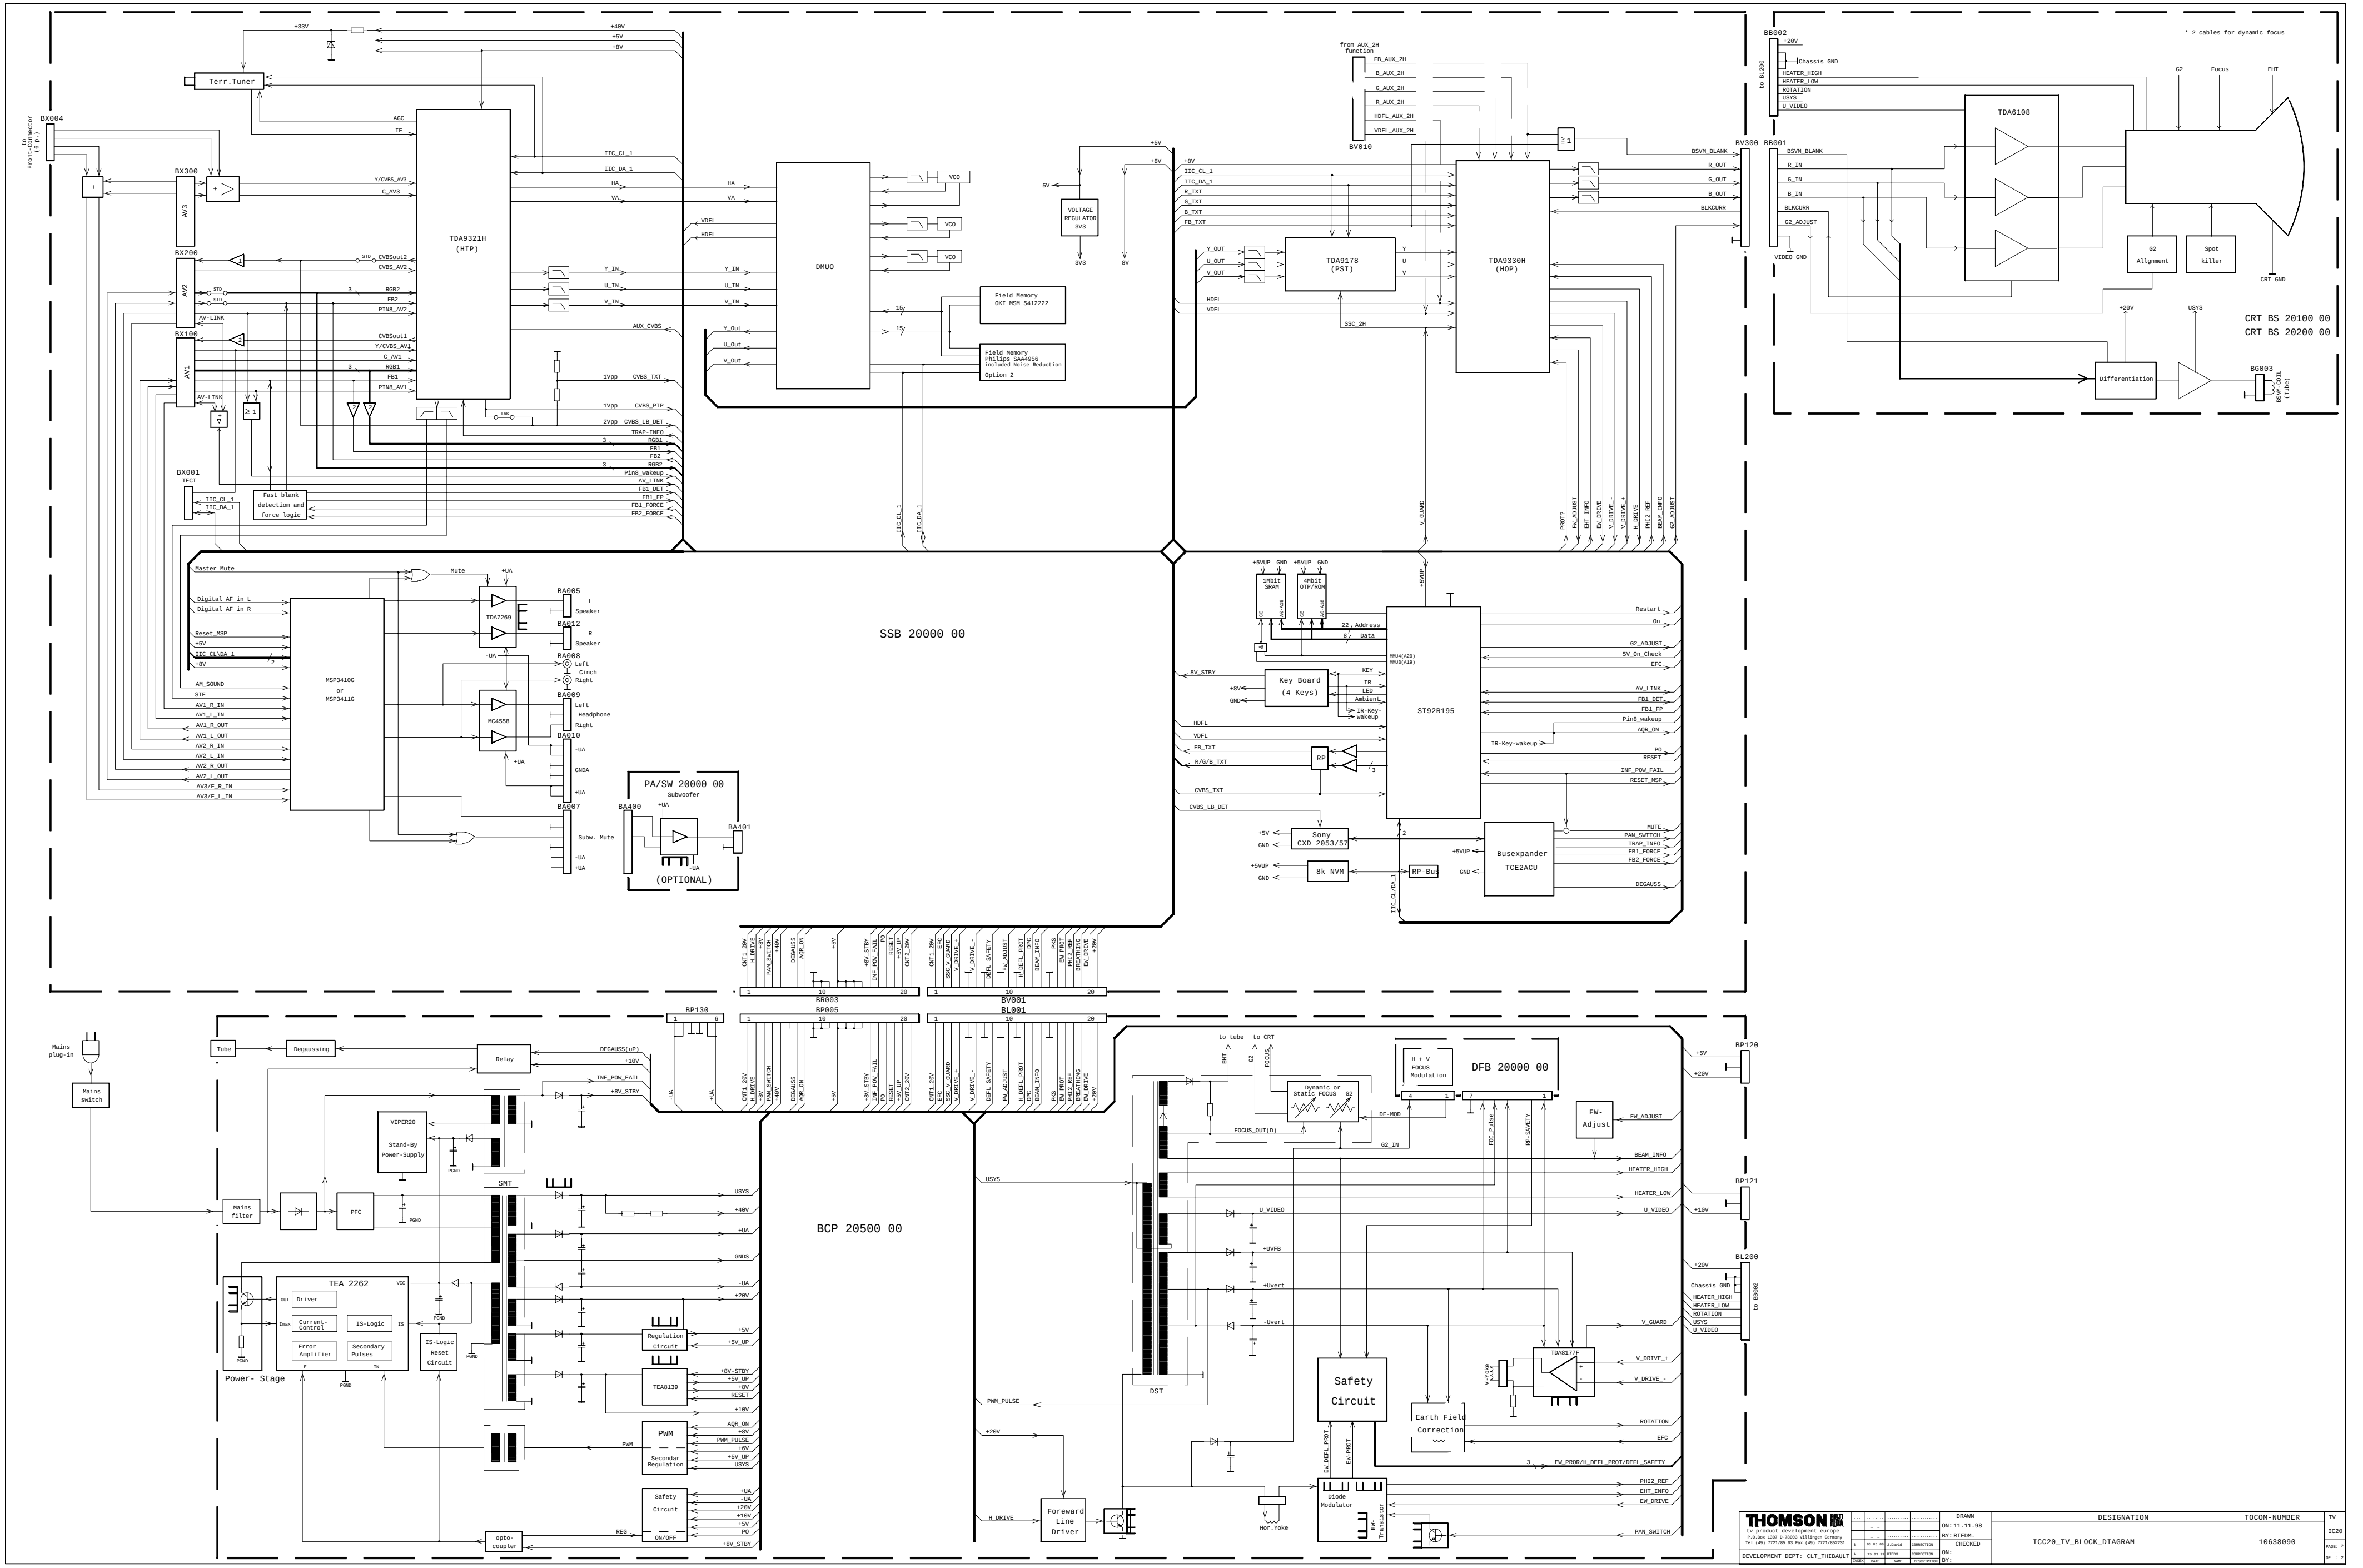
Terr.Tuner
TDA9321H (HIP)
DMUO
Field Memory OKI MSM 5412222
Field Memory Philips SAA4956 included Noise Reduction Option 2
VOLTAGE REGULATOR 3V3
TDA9178 (PSI)
TDA9330H (HOP)
TDA6108
G2 Allgnment
Spot killer
Differentiation
CRT BS 20100 00
CRT BS 20200 00
* 2 cables for dynamic focus
SSB 20000 00
MSP3410G or MSP3411G
TDA7269
MC4558
PA/SW 20000 00
Subwoofer
(OPTIONAL)
Fast blank detection and force logic
Key Board (4 Keys)
ST92R195
1Mbit SRAM
4Mbit OTP/ROM
Sony CXD 2053/57
8k NVM
RP-Bus
Busexpander TCE2ACU
BCP 20500 00
Mains plug-in
Mains switch
Mains filter
PFC
Tube
Degaussing
Relay
VIPER20 Stand-By Power-Supply
SMT
TEA 2262
Driver
Current-Control
IS-Logic
Error Amplifier
Secondary Pulses
IS-Logic Reset Circuit
Power- Stage
Regulation Circuit
TEA8139
PWM Secondar Regulation
Safety Circuit
opto-coupler
DFB 20000 00
H + V FOCUS Modulation
Dynamic or Static FOCUS
FW-Adjust
DST
Safety Circuit
Earth Field Correction
TDA8177F
Diode Modulator
Forward Line Driver
Hor.Yoke
BX004
BX300
BX200
BX100
BX001
BV010
BV300
BB001
BB002
BG003
BA005
BA012
BA008
BA009
BA010
BA007
BA400
BA401
BR003
BP005
BV001
BL001
BP130
BP120
BP121
BL200

THOMSON MULTI MEDIA tv product development europe P.O.Box 1307 D-78003 Villingen Germany Tel (49) 7721/85 03 Fax (49) 7721/852231	INDEX	DATE	NAME	DESCRIPTION	DRAWN	DESIGNATION	TOCOM-NUMBER	TV
	B	03.05.00	J.David	CORRECTION	ON: 11.11.98 BY: RIEDM.	ICC20_TV_BLOCK_DIAGRAM	10638090	IC20
DEVELOPMENT DEPT: CLT_THIBAULT	A	15.03.99	RIEDM.	CORRECTION	CHECKED ON: BY:			PAGE: 2 OF : 2

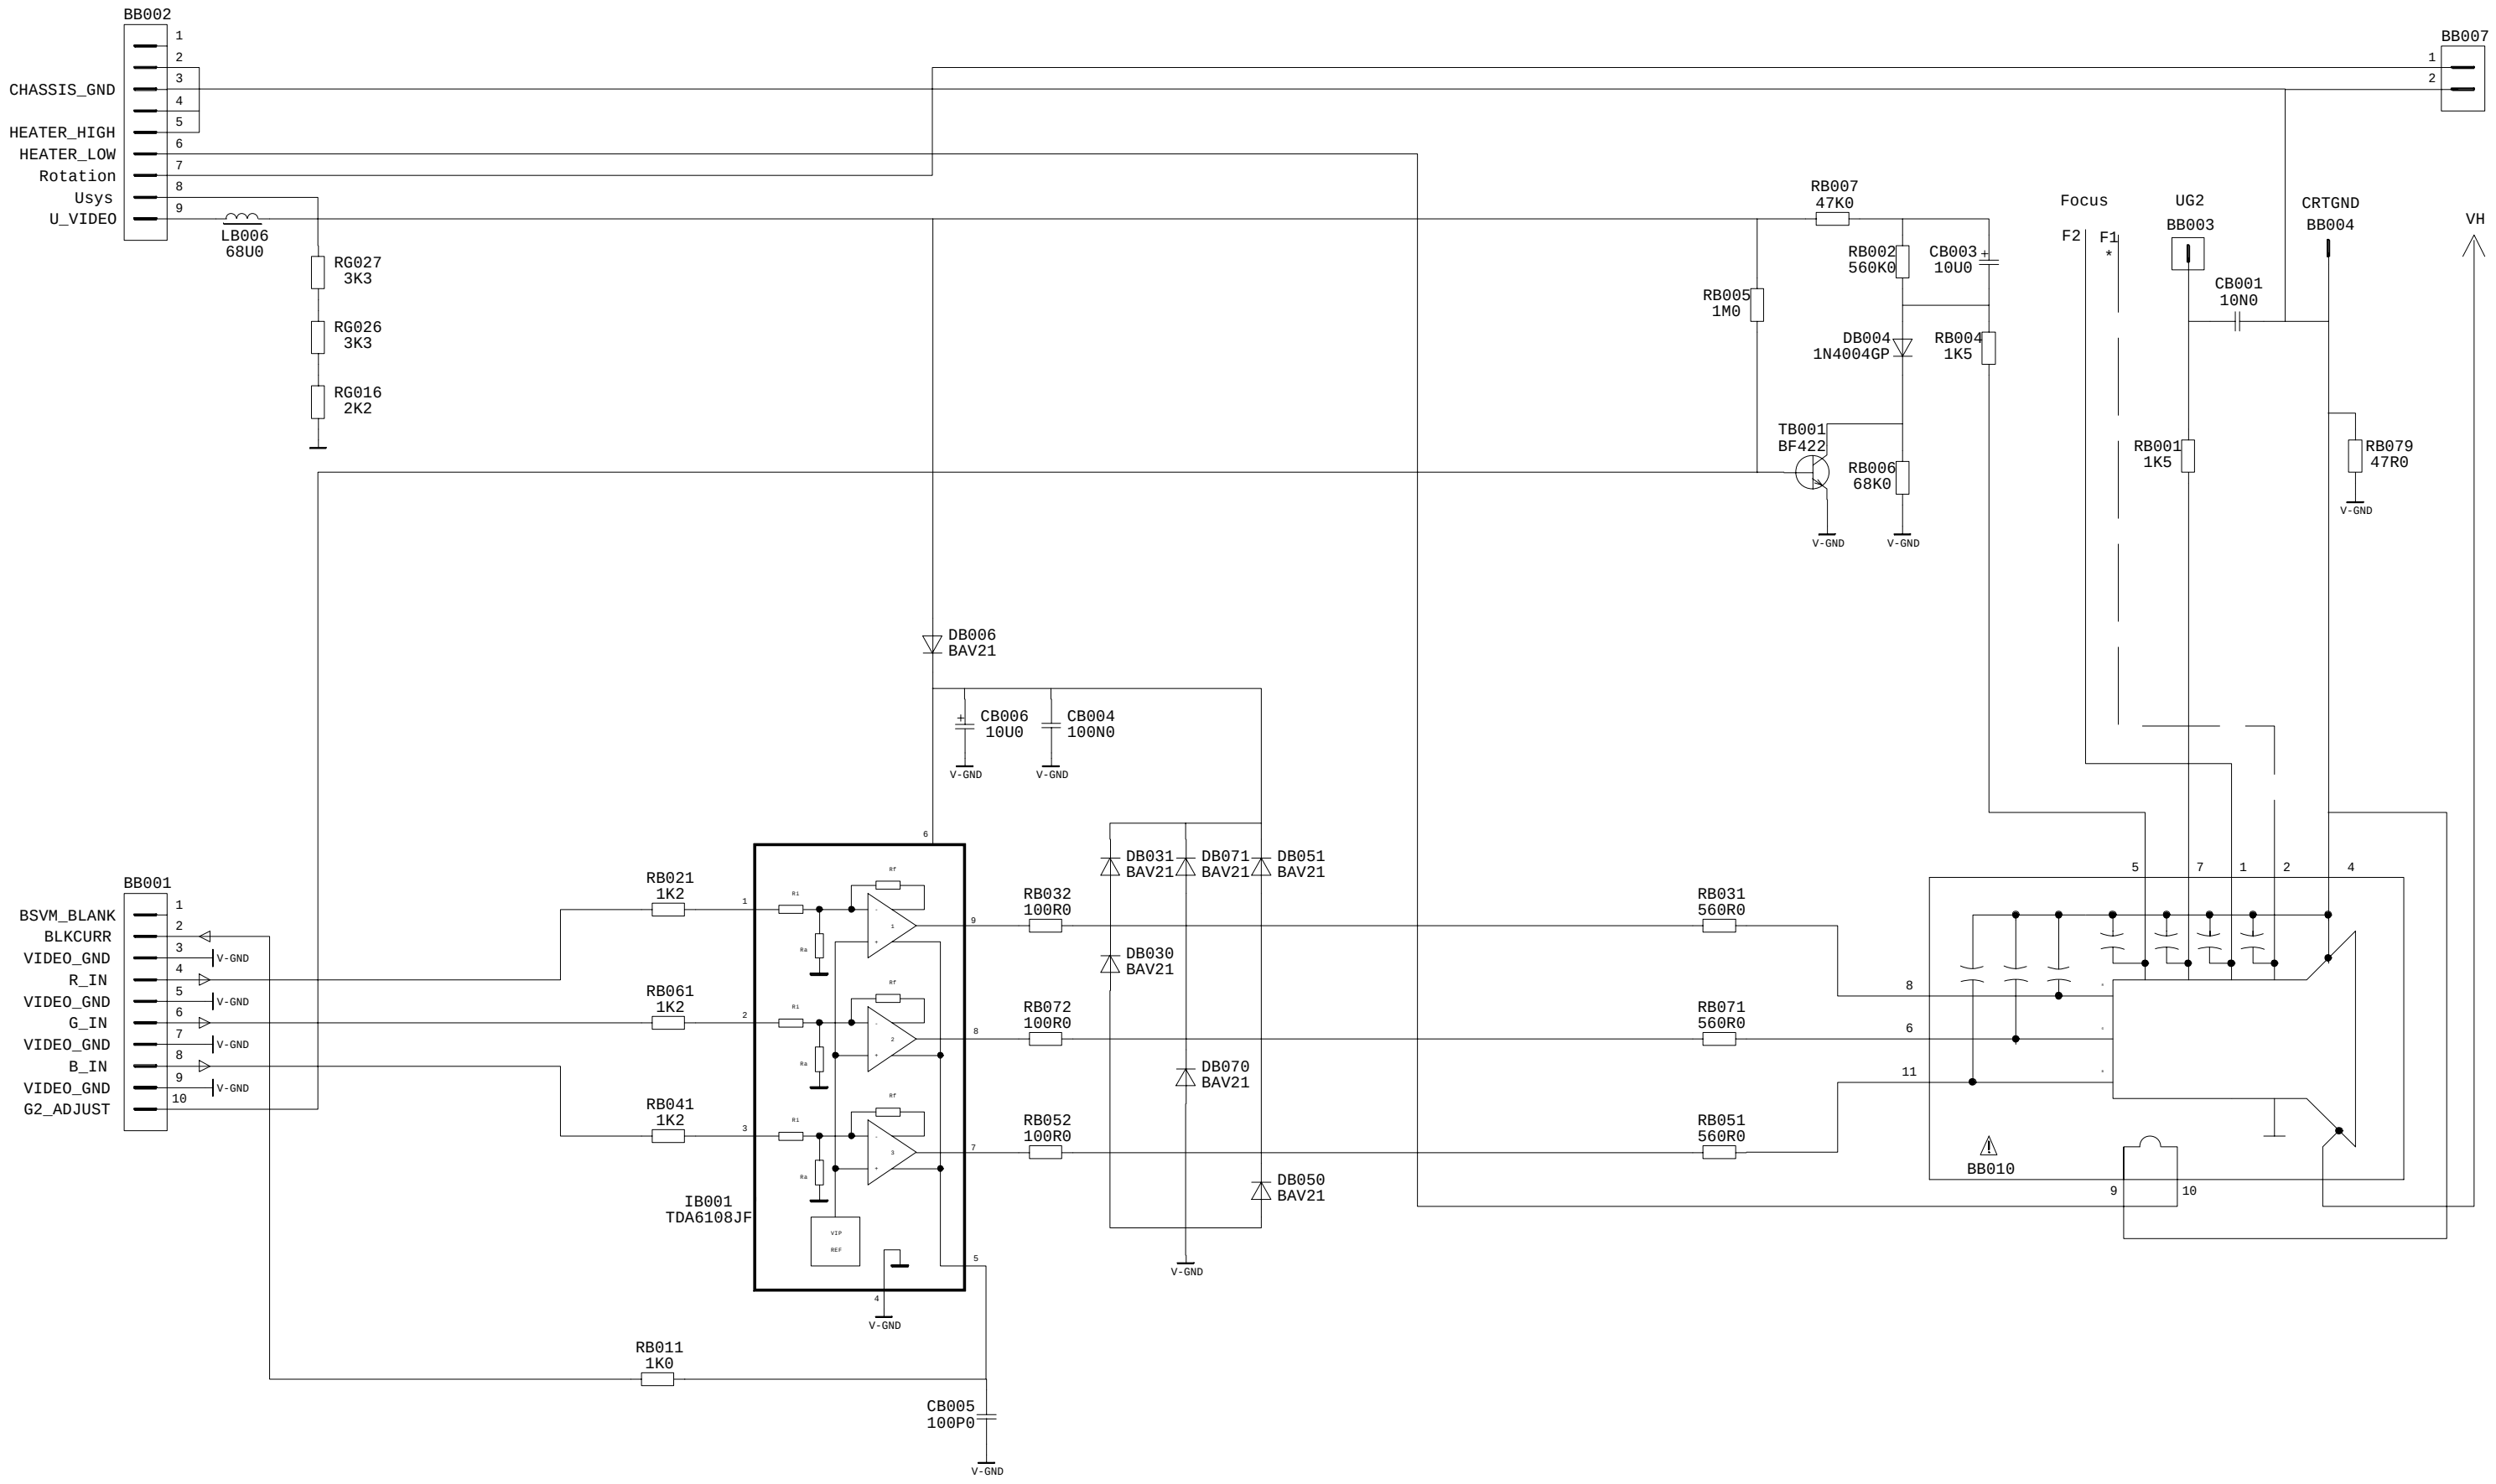
BB002
CHASSIS_GND
HEATER_HIGH
HEATER_LOW
Rotation
Usys
U_VIDEO
LB006
68U0
RG027
3K3
RG026
3K3
RG016
2K2
BB007
RB007
47K0
RB002
560K0
CB003
10U0
RB005
1M0
DB004
1N4004GP
RB004
1K5
TB001
BF422
RB006
68K0
V-GND
Focus
F2
F1
UG2
BB003
CB001
10N0
CRTGND
BB004
VH
RB001
1K5
RB079
47R0
DB006
BAV21
CB006
10U0
CB004
100N0
BB001
BSVM_BLANK
BLKCURR
VIDEO_GND
R_IN
VIDEO_GND
G_IN
VIDEO_GND
B_IN
VIDEO_GND
G2_ADJUST
RB021
1K2
RB061
1K2
RB041
1K2
IB001
TDA6108JF
RB032
100R0
RB072
100R0
RB052
100R0
DB031
BAV21
DB071
BAV21
DB051
BAV21
DB030
BAV21
DB070
BAV21
DB050
BAV21
RB031
560R0
RB071
560R0
RB051
560R0
BB010
RB011
1K0
CB005
100P0

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_FEY

INDEX	DATE	NAME	DESCRIPTION
E	18.11.99	RIEDM.	C30200
D	17.09.99	RIEDM.	CORRECTION
H	04.04.00	J.David	C34730
G	08.02.00	RIEDM.	C33100/680
F	02.12.99	RIEDM.	CORRECTION

DRAWN
ON: 23.12.98
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
CRT.20000.00	10638180

TV
ICC20
PAGE: 1
OF : 1

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

8 7 6 5 4 3 2 1

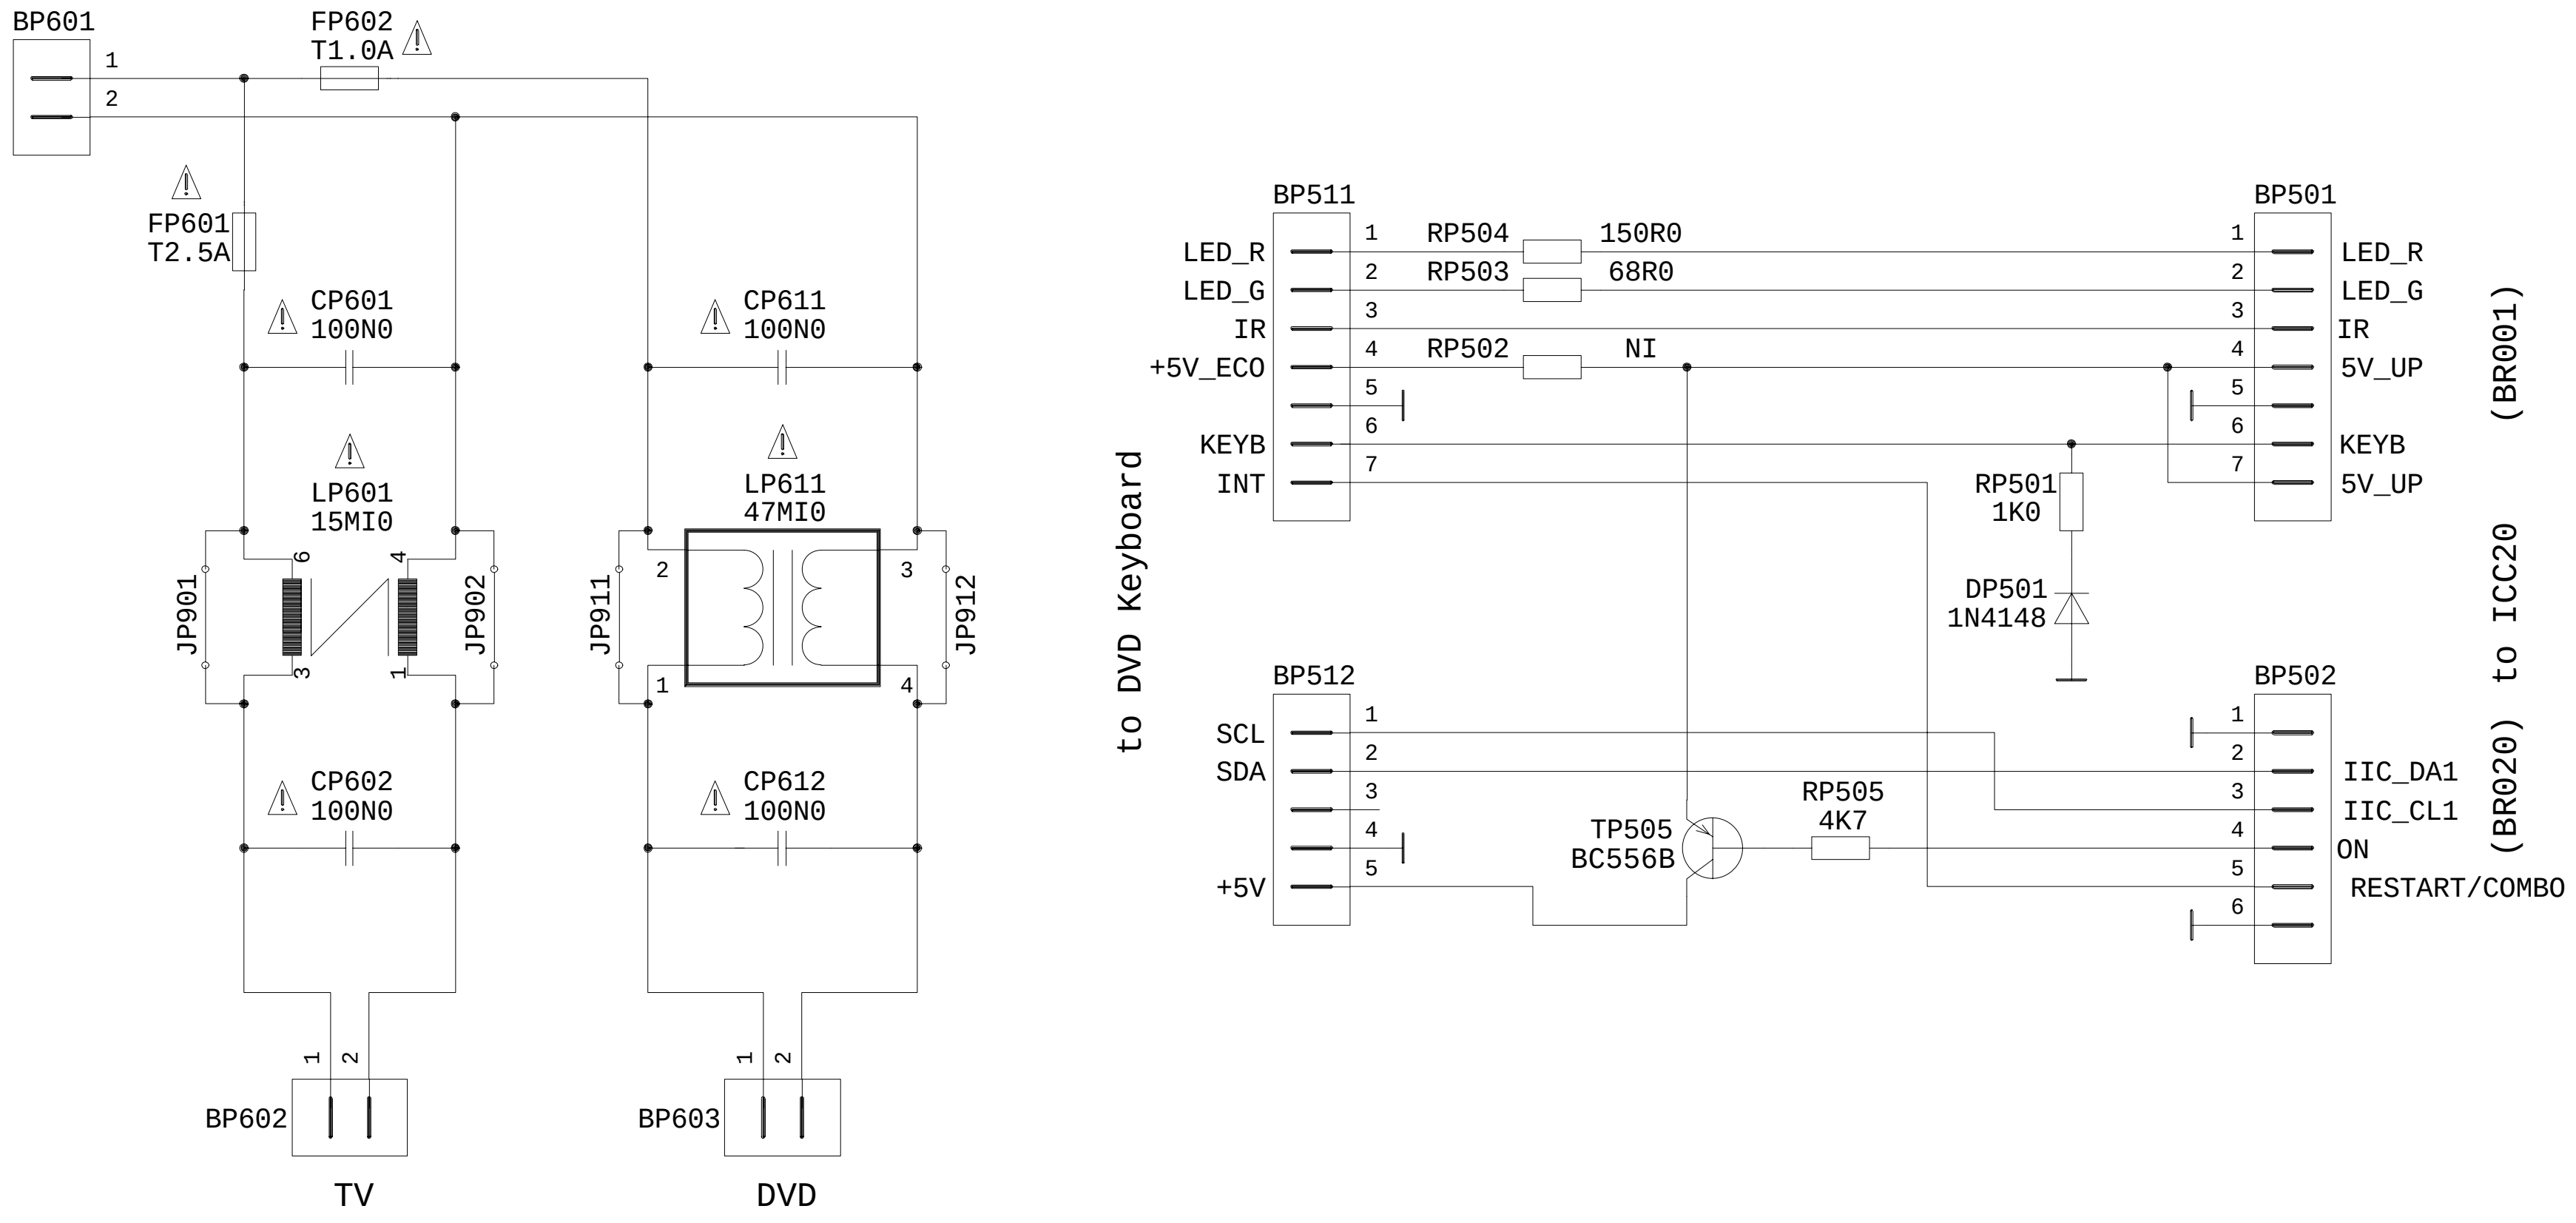
BP601
1
2
FP602
T1.0A
⚠
FP601
T2.5A
CP601
100N0
CP611
100N0
LP601
15MI0
LP611
47MI0
JP901
JP902
JP911
JP912
6
4
3
1
2
3
1
4
CP602
100N0
CP612
100N0
1
2
BP602
TV
1
2
BP603
DVD
to DVD Keyboard
BP511
LED_R
LED_G
IR
+5V_ECO
KEYB
INT
1
2
3
4
5
6
7
RP504
150R0
RP503
68R0
RP502
NI
BP501
LED_R
LED_G
IR
5V_UP
KEYB
5V_UP
(BR001)
RP501
1K0
DP501
1N4148
BP512
SCL
SDA
+5V
1
2
3
4
5
TP505
BC556B
RP505
4K7
BP502
IIC_DA1
IIC_CL1
ON
RESTART/COMBO
(BR020) to ICC20

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CPS_THIBAULT

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....

DRAWN
ON: 24.01.00
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
PD.DVD.20000.00	10673240

TV
IC20
PAGE: 1
OF : 1

8 7 6 5 4 3 2 1

PCAD FORMAT DIN A3

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

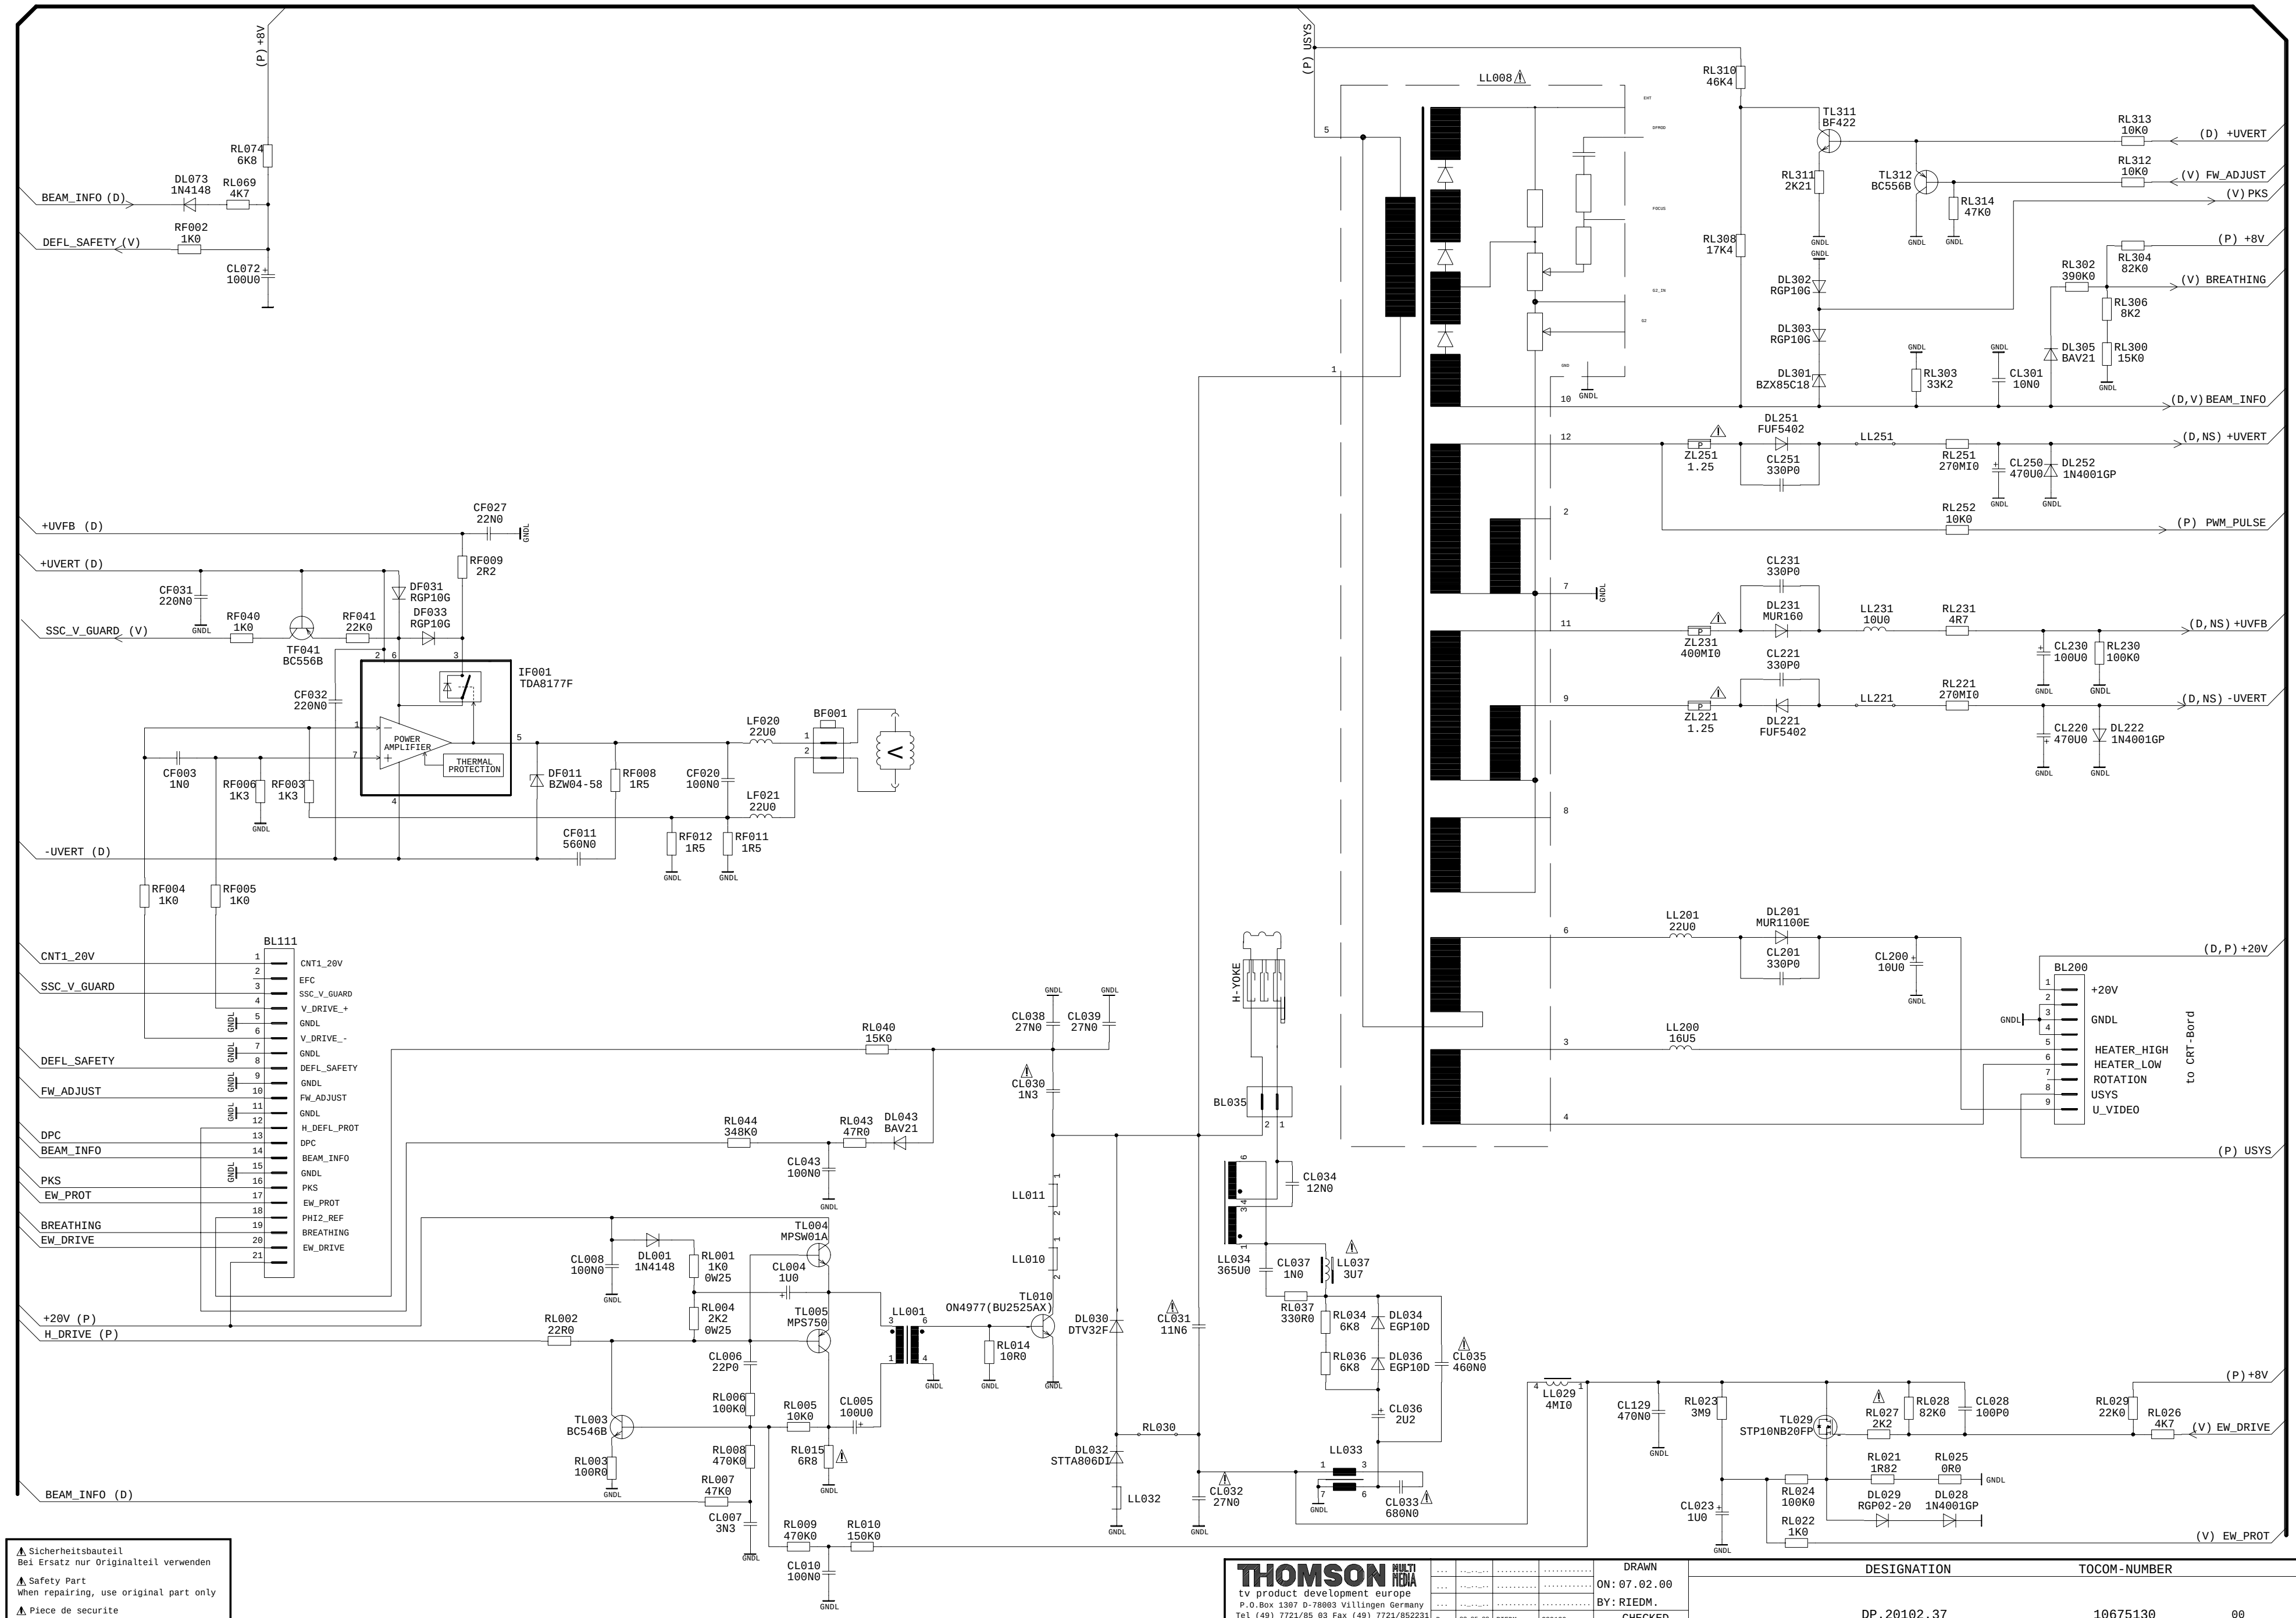
(P) +8V
RL074 6K8
DL073 1N4148
RL069 4K7
BEAM_INFO (D)
RF002 1K0
DEFL_SAFETY (V)
CL072 100U0
+UVFB (D)
CF027 22N0
RF009 2R2
+UVERT (D)
CF031 220N0
DF031 RGP10G
DF033 RGP10G
SSC_V_GUARD (V)
RF040 1K0
TF041 BC556B
RF041 22K0
IF001 TDA8177F
POWER AMPLIFIER
THERMAL PROTECTION
CF032 220N0
CF003 1N0
RF006 1K3
RF003 1K3
DF011 BZW04-58
RF008 1R5
CF020 100N0
LF020 22U0
LF021 22U0
BF001
CF011 560N0
RF012 1R5
RF011 1R5
-UVERT (D)
RF004 1K0
RF005 1K0
BL111
CNT1_20V
EFC
SSC_V_GUARD
V_DRIVE_+
GNDL
V_DRIVE_-
DEFL_SAFETY
FW_ADJUST
H_DEFL_PROT
DPC
BEAM_INFO
PKS
EW_PROT
PHI2_REF
BREATHING
EW_DRIVE
+20V (P)
H_DRIVE (P)
RL040 15K0
RL044 348K0
RL043 47R0
DL043 BAV21
CL043 100N0
CL008 100N0
DL001 1N4148
RL001 1K0 0W25
RL004 2K2 0W25
CL004 1U0
TL004 MPSW01A
TL005 MPS750
RL002 22R0
CL006 22P0
TL003 BC546B
RL006 100K0
RL005 10K0
CL005 100U0
RL003 100R0
RL008 470K0
RL015 6R8
RL007 47K0
CL007 3N3
RL009 470K0
RL010 150K0
CL010 100N0
LL001
TL010 ON4977(BU2525AX)
RL014 10R0
CL038 27N0
CL039 27N0
CL030 1N3
LL011
LL010
DL030 DTV32F
CL031 11N6
RL030
DL032 STTA806DI
LL032
CL032 27N0
H-YOKE
BL035
LL034 365U0
CL034 12N0
CL037 1N0
LL037 3U7
RL037 330R0
RL034 6K8
RL036 6K8
DL034 EGP10D
DL036 EGP10D
CL035 460N0
CL036 2U2
LL033
CL033 680N0
GNDL
(P) USYS
LL008
RL310 46K4
RL308 17K4
TL311 BF422
RL311 2K21
TL312 BC556B
RL314 47K0
RL313 10K0
RL312 10K0
(D) +UVERT
(V) FW_ADJUST
(V) PKS
(P) +8V
RL304 82K0
RL302 390K0
(V) BREATHING
RL306 8K2
DL302 RGP10G
DL303 RGP10G
DL301 BZX85C18
RL303 33K2
CL301 10N0
DL305 BAV21
RL300 15K0
(D,V) BEAM_INFO
ZL251 1.25
DL251 FUF5402
CL251 330P0
LL251
RL251 270MI0
CL250 470U0
DL252 1N4001GP
(D,NS) +UVERT
RL252 10K0
(P) PWM_PULSE
CL231 330P0
DL231 MUR160
ZL231 400MI0
LL231 10U0
RL231 4R7
CL230 100U0
RL230 100K0
(D,NS) +UVFB
CL221 330P0
ZL221 1.25
DL221 FUF5402
LL221
RL221 270MI0
CL220 470U0
DL222 1N4001GP
(D,NS) -UVERT
LL201 22U0
DL201 MUR1100E
CL201 330P0
CL200 10U0
(D,P) +20V
LL200 16U5
BL200
+20V
GNDL
HEATER_HIGH
HEATER_LOW
ROTATION
USYS
U_VIDEO
to CRT-Bord
(P) USYS
(P) +8V
LL029 4MI0
CL129 470N0
RL023 3M9
TL029 STP10NB20FP
RL027 2K2
RL028 82K0
CL028 100P0
RL029 22K0
RL026 4K7
(V) EW_DRIVE
RL021 1R82
RL025 0R0
RL024 100K0
DL029 RGP02-20
DL028 1N4001GP
CL023 1U0
RL022 1K0
(V) EW_PROT

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden

⚠ Safety Part
When repairing, use original part only

⚠ Piece de securite
N'utilisez que les pieces d'origine

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CPS_LOESLE LAEUFER

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....
B	02.05.00	RIEDM.	C39120
A	31.03.00	J.David	C35190/790 C35340/60/36560 C36920/290/950

DRAWN
ON: 07.02.00
BY: RIEDM.

CHECKED
ON:
BY:

DESIGNATION
DP.20102.37

TOCOM-NUMBER
10675130 00

TV
IC20
PAGE: 1
OF : 1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

PCAD FORMAT DIN A1

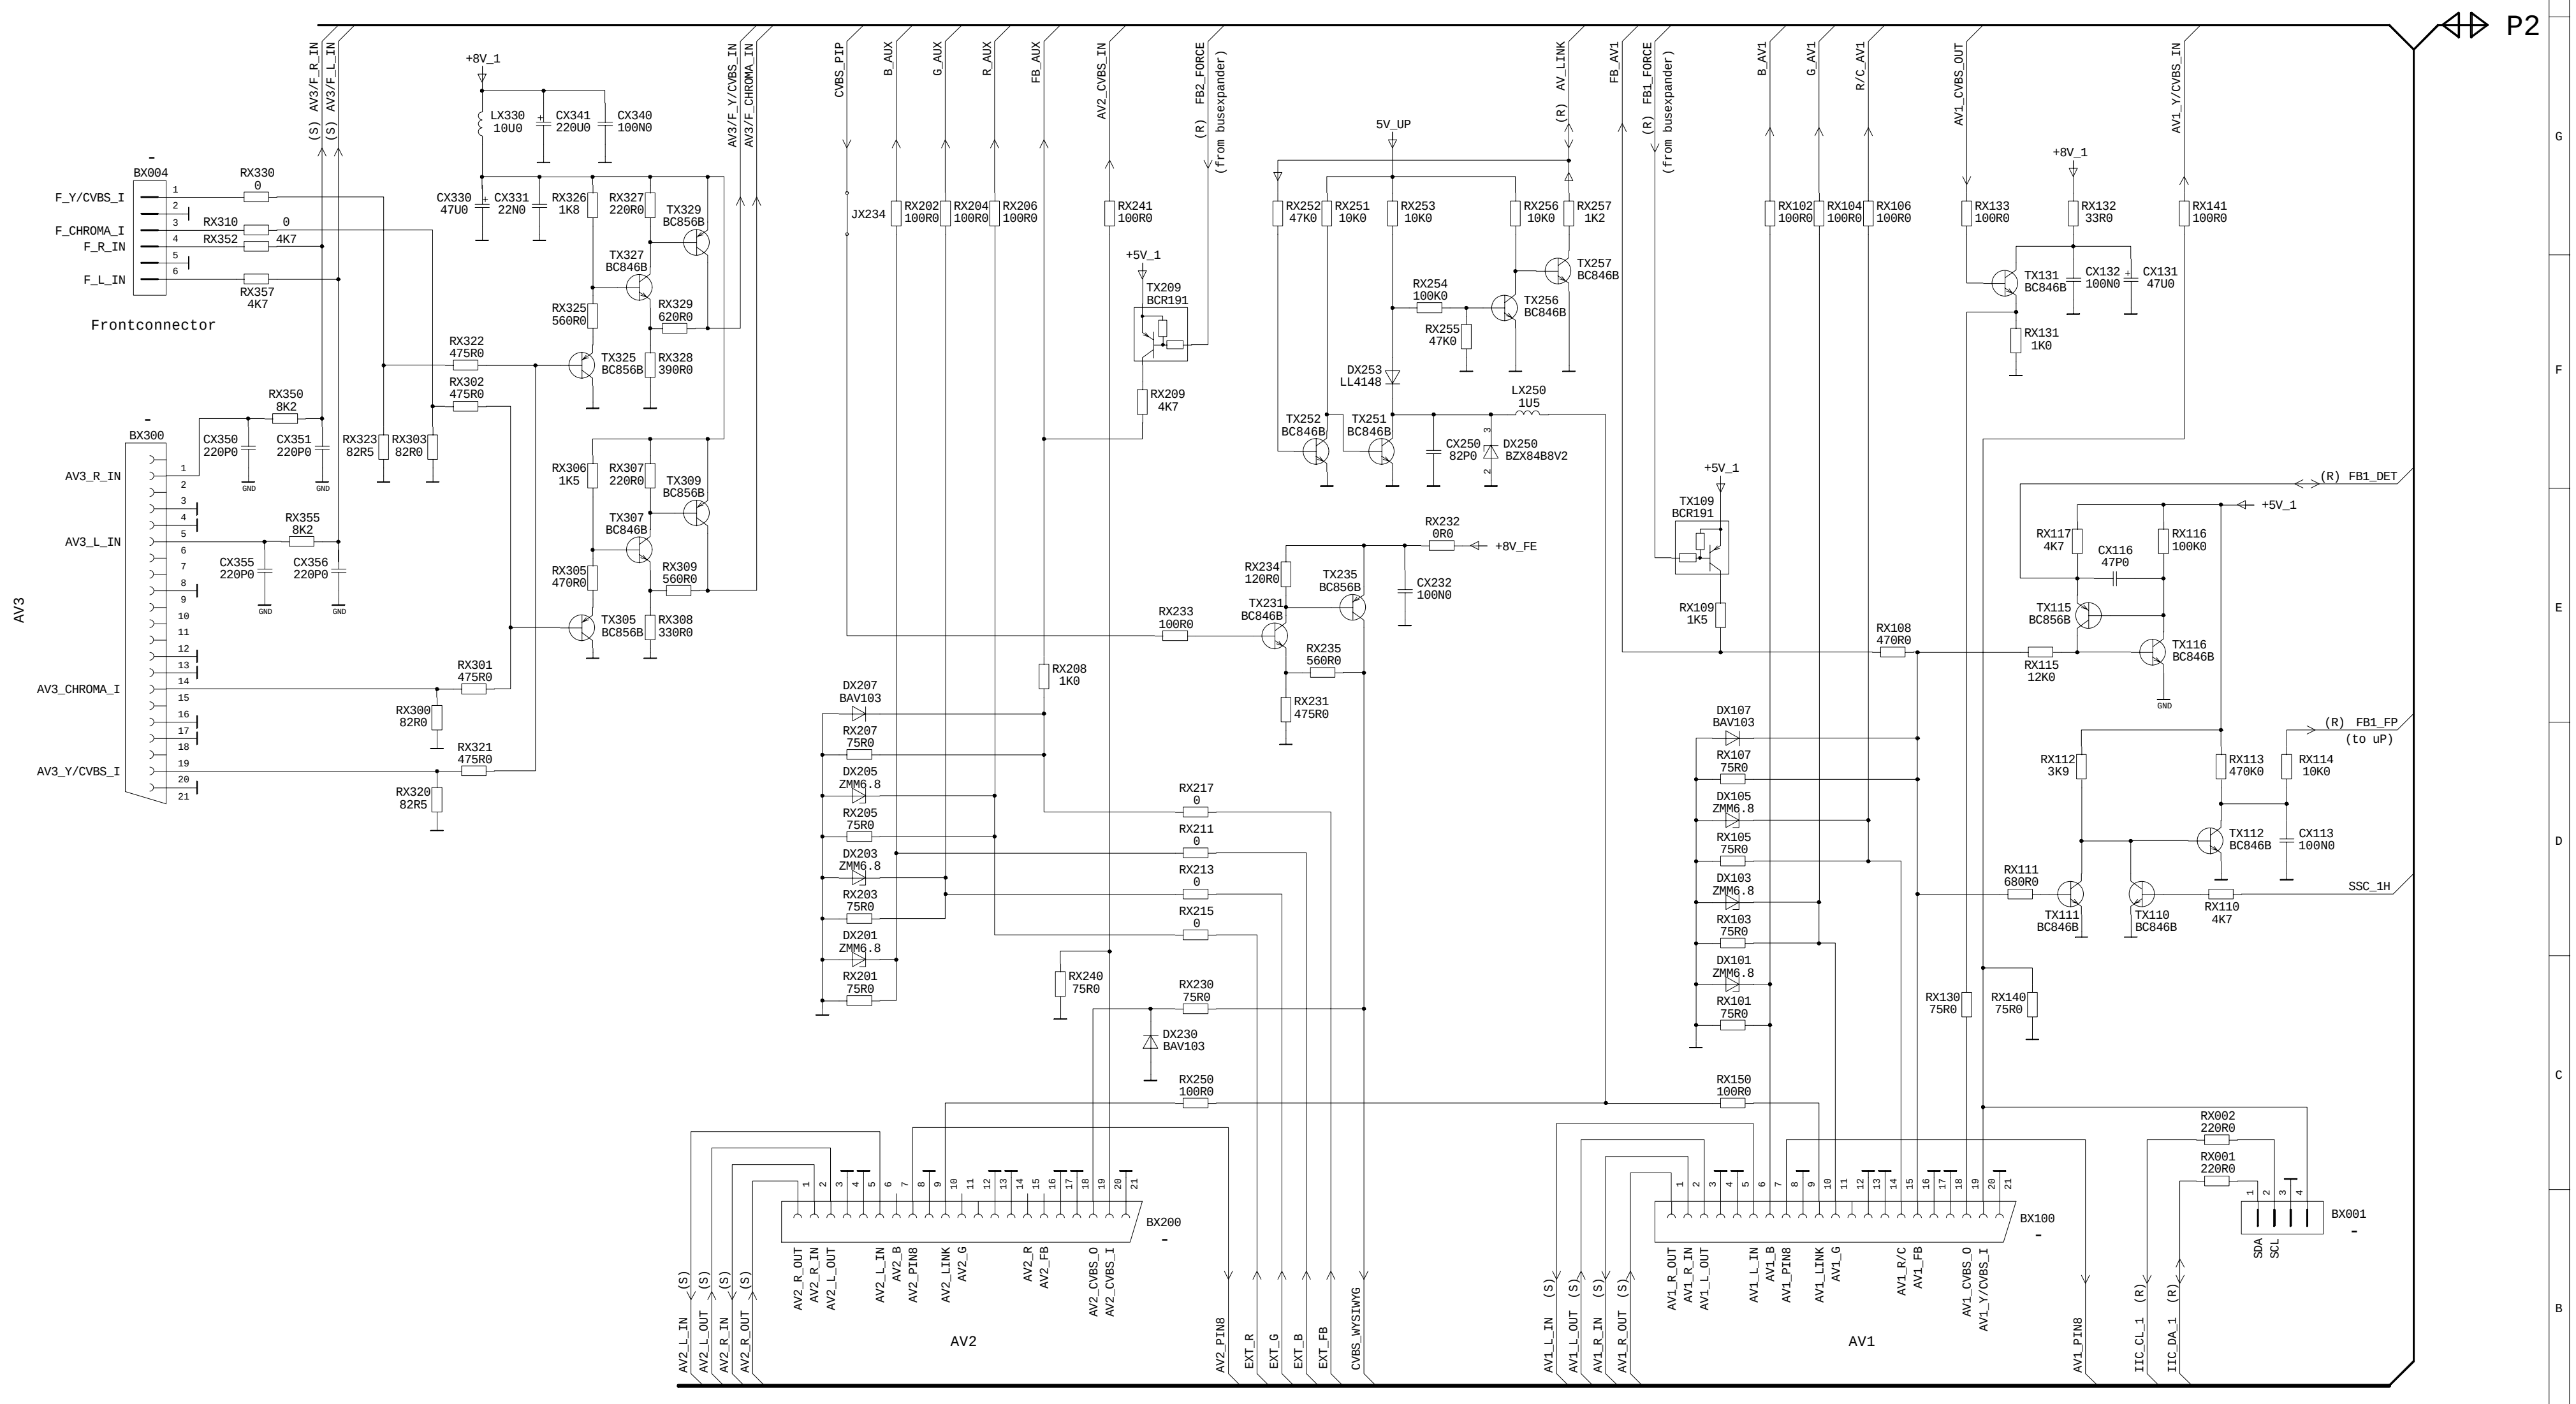
P2
BX004
F_Y/CVBS_I
F_CHROMA_I
F_R_IN
F_L_IN
Frontconnector
RX330 0
RX310 0
RX352 4K7
RX357 4K7
BX300
AV3
AV3_R_IN
AV3_L_IN
AV3_CHROMA_I
AV3_Y/CVBS_I
RX350 8K2
RX355 8K2
CX350 220P0
CX351 220P0
CX355 220P0
CX356 220P0
GND
RX323 82R5
RX303 82R0
RX322 475R0
RX302 475R0
RX301 475R0
RX321 475R0
RX300 82R0
RX320 82R5
(S) AV3/F_R_IN
(S) AV3/F_L_IN
+8V_1
LX330 10U0
CX341 220U0
CX340 100N0
CX330 47U0
CX331 22N0
RX326 1K8
RX327 220R0
TX329 BC856B
TX327 BC846B
RX325 560R0
RX329 620R0
TX325 BC856B
RX328 390R0
RX306 1K5
RX307 220R0
TX309 BC856B
TX307 BC846B
RX305 470R0
RX309 560R0
TX305 BC856B
RX308 330R0
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
CVBS_PIP
B_AUX
G_AUX
R_AUX
FB_AUX
AV2_CVBS_IN
(R) FB2_FORCE (from busexpander)
JX234
RX202 100R0
RX204 100R0
RX206 100R0
RX241 100R0
+5V_1
TX209 BCR191
RX209 4K7
RX208 1K0
DX207 BAV103
RX207 75R0
DX205 ZMM6.8
RX205 75R0
DX203 ZMM6.8
RX203 75R0
DX201 ZMM6.8
RX201 75R0
RX217 0
RX211 0
RX213 0
RX215 0
RX240 75R0
RX230 75R0
DX230 BAV103
RX250 100R0
RX233 100R0
TX231 BC846B
RX234 120R0
TX235 BC856B
RX235 560R0
RX231 475R0
RX232 0R0
+8V_FE
CX232 100N0
5V_UP
RX252 47K0
RX251 10K0
RX253 10K0
RX254 100K0
RX255 47K0
TX256 BC846B
RX256 10K0
RX257 1K2
TX257 BC846B
DX253 LL4148
TX252 BC846B
TX251 BC846B
CX250 82P0
DX250 BZX84B8V2
LX250 1U5
(R) AV_LINK
FB_AV1
(R) FB1_FORCE (from busexpander)
TX109 BCR191
RX109 1K5
B_AV1
G_AV1
R/C_AV1
RX102 100R0
RX104 100R0
RX106 100R0
RX108 470R0
DX107 BAV103
RX107 75R0
DX105 ZMM6.8
RX105 75R0
DX103 ZMM6.8
RX103 75R0
DX101 ZMM6.8
RX101 75R0
RX150 100R0
AV1_CVBS_OUT
AV1_Y/CVBS_IN
+8V_1
RX133 100R0
RX132 33R0
RX141 100R0
TX131 BC846B
CX132 100N0
CX131 47U0
RX131 1K0
(R) FB1_DET
+5V_1
RX117 4K7
CX116 47P0
RX116 100K0
TX115 BC856B
RX115 12K0
TX116 BC846B
(R) FB1_FP (to uP)
RX112 3K9
RX113 470K0
RX114 10K0
TX112 BC846B
CX113 100N0
RX111 680R0
TX111 BC846B
TX110 BC856B
RX110 4K7
SSC_1H
RX130 75R0
RX140 75R0
RX002 220R0
RX001 220R0
BX001
SDA
SCL
BX200
AV2
AV2_R_OUT
AV2_R_IN
AV2_L_OUT
AV2_L_IN
AV2_B
AV2_PIN8
AV2_LINK
AV2_G
AV2_R
AV2_FB
AV2_CVBS_O
AV2_CVBS_I
(S) AV2_L_IN
(S) AV2_L_OUT
(S) AV2_R_IN
(S) AV2_R_OUT
AV2_PIN8
EXT_R
EXT_G
EXT_B
EXT_FB
CVBS_WYSIWYG
BX100
AV1
AV1_R_OUT
AV1_R_IN
AV1_L_OUT
AV1_L_IN
AV1_B
AV1_PIN8
AV1_LINK
AV1_G
AV1_R/C
AV1_FB
AV1_CVBS_O
AV1_Y/CVBS_I
AV1_L_IN (S)
AV1_L_OUT (S)
AV1_R_IN (S)
AV1_R_OUT (S)
AV1_PIN8
IIC_CL_1 (R)
IIC_DA_1 (R)

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..

DRAWN
ON: 07.04.00
BY: J.David
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
FE.20001.00	10677100	00	IC20 PAGE: 1 OF : 3

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

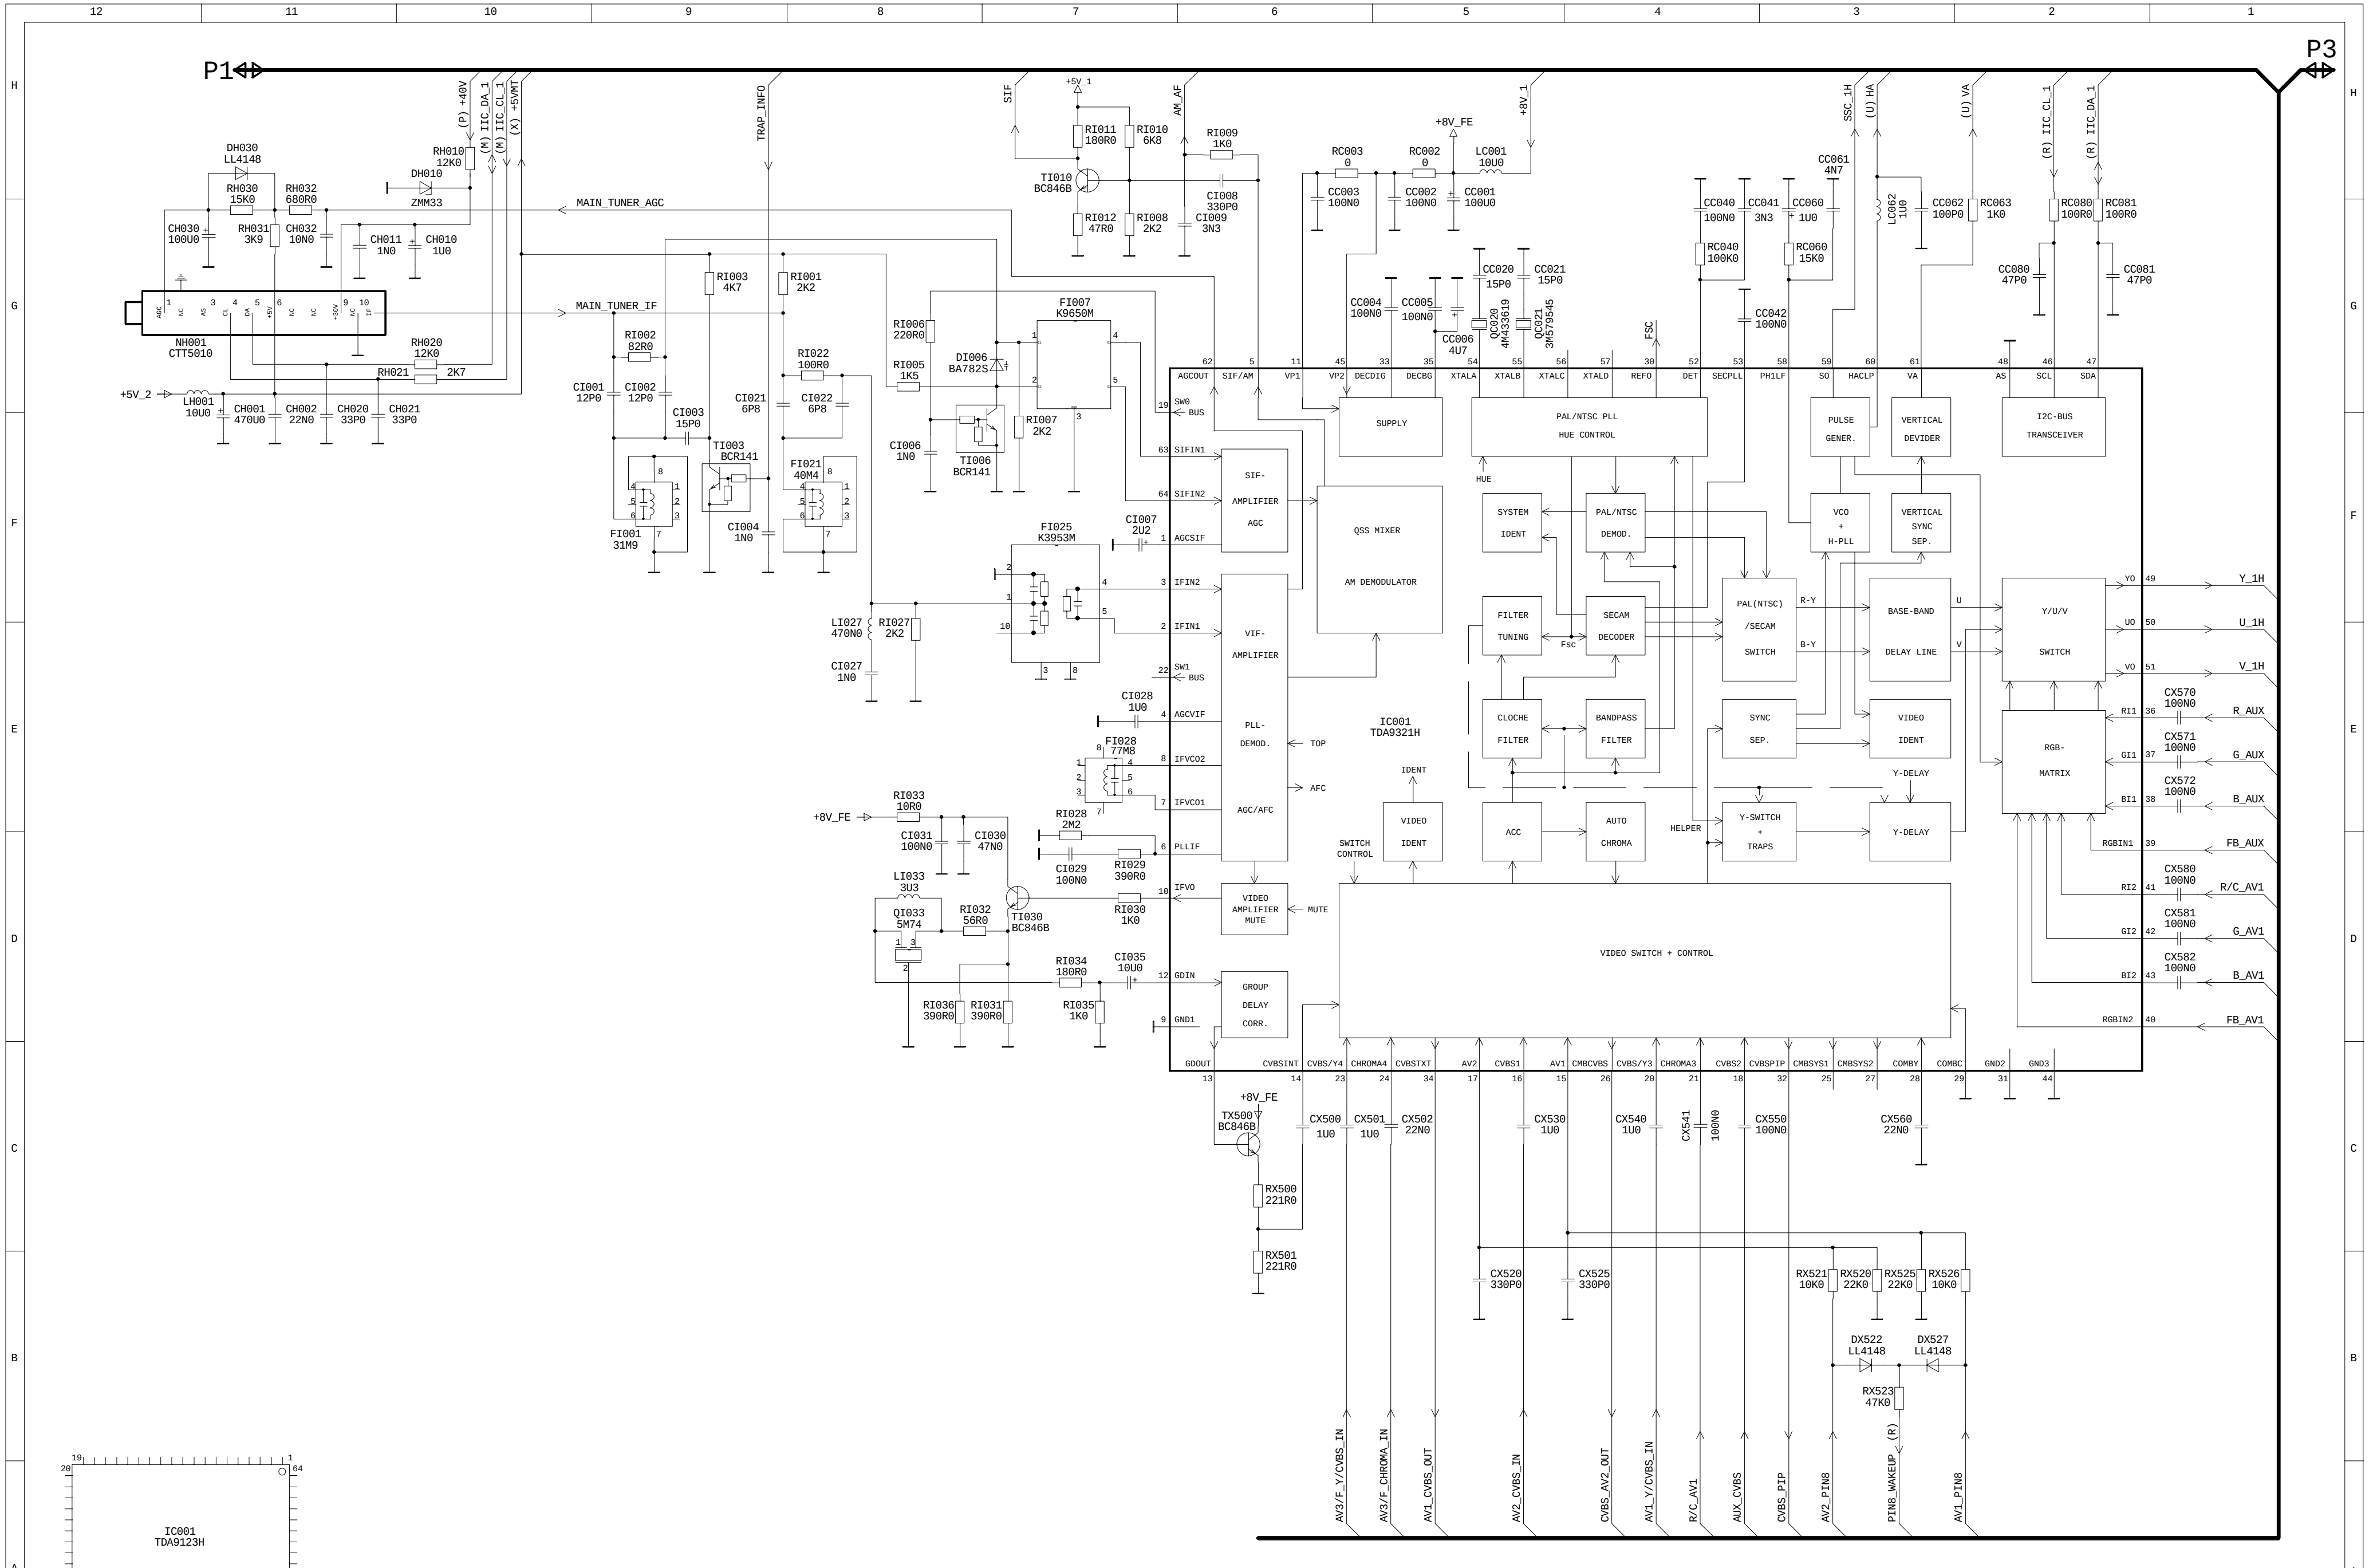
P1
P3
(P) +40V
(M) IIC_DA_1
(M) IIC_CL_1
(X) +5VMT
TRAP_INFO
SIF
+5V_1
AM_AF
+8V_FE
+8V_1
SSC_1H
(U) HA
(U) VA
(R) IIC_CL_1
(R) IIC_DA_1
DH030 LL4148
RH030 15K0
RH032 680R0
RH010 12K0
DH010 ZMM33
CH030 100U0
RH031 3K9
CH032 10N0
CH011 1N0
CH010 1U0
MAIN_TUNER_AGC
MAIN_TUNER_IF
NH001 CTT5010
AGC NC AS CL DA +5V NC NC +30V NC IF
RH020 12K0
RH021 2K7
+5V_2
LH001 10U0
CH001 470U0
CH002 22N0
CH020 33P0
CH021 33P0
RI003 4K7
RI001 2K2
RI002 82R0
RI022 100R0
CI001 12P0
CI002 12P0
CI003 15P0
CI021 6P8
CI022 6P8
TI003 BCR141
FI001 31M9
FI021 40M4
CI004 1N0
RI011 180R0
RI010 6K8
TI010 BC846B
RI012 47R0
RI008 2K2
RI009 1K0
CI008 330P0
CI009 3N3
RI006 220R0
RI005 1K5
DI006 BA782S
FI007 K9650M
CI006 1N0
TI006 BCR141
RI007 2K2
FI025 K3953M
CI007 2U2
LI027 470N0
RI027 2K2
CI027 1N0
CI028 1U0
FI028 77M8
RI033 10R0
CI031 100N0
CI030 47N0
RI028 2M2
CI029 100N0
RI029 390R0
LI033 3U3
QI033 5M74
RI032 56R0
TI030 BC846B
RI030 1K0
RI034 180R0
CI035 10U0
RI036 390R0
RI031 390R0
RI035 1K0
RC003 0
RC002 0
LC001 10U0
CC003 100N0
CC002 100N0
CC001 100U0
CC004 100N0
CC005 100N0
CC006 4U7
CC020 15P0
CC021 15P0
QC020 4M433619
QC021 3M579545
FSC
CC040 100N0
CC041 3N3
CC060 1U0
CC061 4N7
LC062 1U0
CC062 100P0
RC063 1K0
RC040 100K0
RC060 15K0
CC042 100N0
RC080 100R0
RC081 100R0
CC080 47P0
CC081 47P0
IC001 TDA9321H
AGCOUT SIF/AM VP1 VP2 DECDIG DEC8G XTALA XTALB XTALC XTALD REFO DET SECPLL PH1LF SO HACLP VA AS SCL SDA
62 5 11 45 33 35 54 55 56 57 30 52 53 58 59 60 61 48 46 47
SW0 BUS
SIFIN1
SIFIN2
AGCSIF
IFIN2
IFIN1
SW1 BUS
AGCVIF
IFVCO2
IFVCO1
PLLIF
IFVO
GDIN
GND1
SIF-AMPLIFIER AGC
QSS MIXER AM DEMODULATOR
VIF-AMPLIFIER
PLL-DEMOD.
AGC/AFC
TOP
AFC
VIDEO AMPLIFIER MUTE
MUTE
GROUP DELAY CORR.
SUPPLY
PAL/NTSC PLL HUE CONTROL
HUE
SYSTEM IDENT
PAL/NTSC DEMOD.
FILTER TUNING
SECAM DECODER
Fsc
CLOCHE FILTER
BANDPASS FILTER
ACC
AUTO CHROMA
VIDEO IDENT
IDENT
SWITCH CONTROL
PAL(NTSC) /SECAM SWITCH
R-Y
B-Y
SYNC SEP.
HELPER
Y-SWITCH + TRAPS
PULSE GENER.
VERTICAL DEVIDER
VCO + H-PLL
VERTICAL SYNC SEP.
I2C-BUS TRANSCEIVER
BASE-BAND DELAY LINE
U
V
VIDEO IDENT
Y-DELAY
Y/U/V SWITCH
RGB-MATRIX
VIDEO SWITCH + CONTROL
YO 49 Y_1H
UO 50 U_1H
VO 51 V_1H
RI1 36 CX570 100N0 R_AUX
GI1 37 CX571 100N0 G_AUX
BI1 38 CX572 100N0 B_AUX
RGBIN1 39 FB_AUX
RI2 41 CX580 100N0 R/C_AV1
GI2 42 CX581 100N0 G_AV1
BI2 43 CX582 100N0 B_AV1
RGBIN2 40 FB_AV1
GDOUT CVBSINT CVBS/Y4 CHROMA4 CVBSTXT AV2 CVBS1 AV1 CMBCVBS CVBS/Y3 CHROMA3 CVBS2 CVBSPIP CMBSYS1 CMBSYS2 COMBY COMBC GND2 GND3
13 14 23 24 34 17 16 15 26 20 21 18 32 25 27 28 29 31 44
+8V_FE
TX500 BC846B
RX500 221R0
RX501 221R0
CX500 1U0
CX501 1U0
CX502 22N0
CX530 1U0
CX540 1U0
CX541 100N0
CX550 100N0
CX560 22N0
CX520 330P0
CX525 330P0
RX521 10K0
RX520 22K0
RX525 22K0
RX526 10K0
DX522 LL4148
DX527 LL4148
RX523 47K0
AV3/F_Y/CVBS_IN
AV3/F_CHROMA_IN
AV1_CVBS_OUT
AV2_CVBS_IN
CVBS_AV2_OUT
AV1_Y/CVBS_IN
R/C_AV1
AUX_CVBS
CVBS_PIP
AV2_PIN8
PIN8_WAKEUP (R)
AV1_PIN8
IC001 TDA9123H
19 1 20 64 32 52 33 51
12 11 10 9 8 7 6 5 4 3 2 1
H G F E D C B A

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..

DRAWN
ON: 07.04.00
BY: J.David
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER	
FE.20001.00	10677100	00

TV
IC20
PAGE: 2
OF : 3

PCAD FORMAT DIN A1

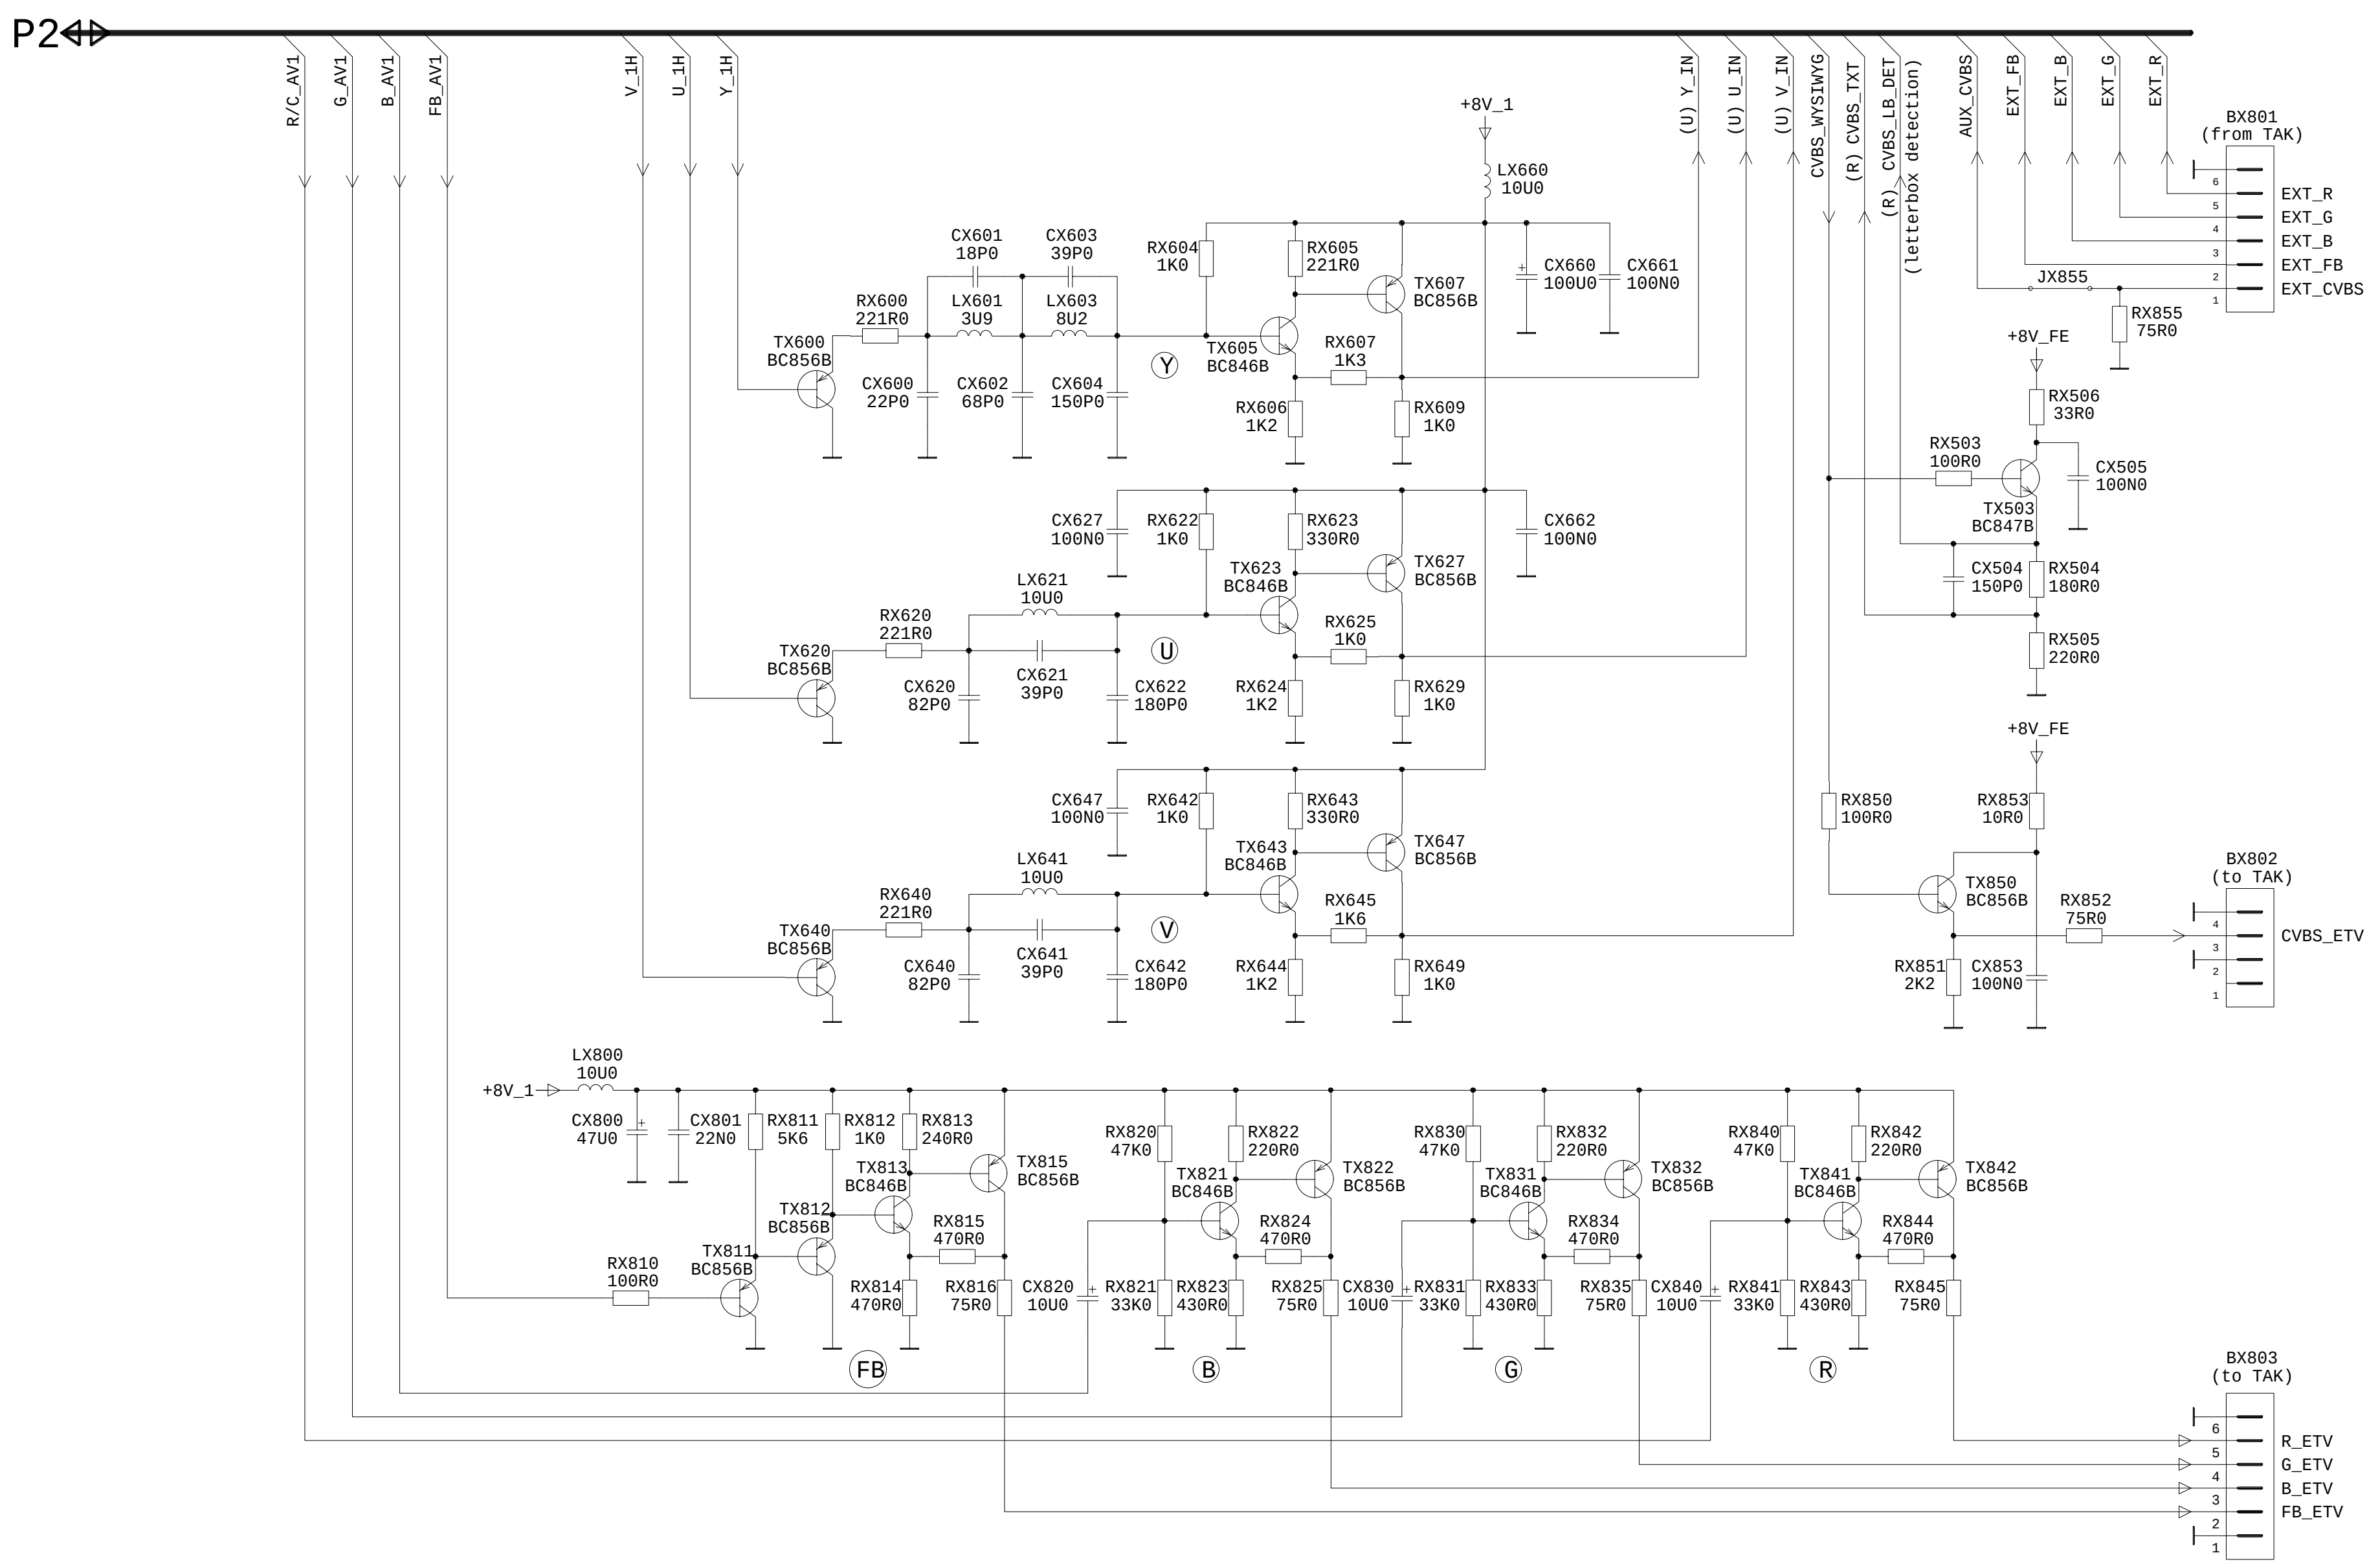
P2
R/C_AV1
G_AV1
B_AV1
FB_AV1
V_1H
U_1H
Y_1H
(U) Y_IN
(U) U_IN
(U) V_IN
CVBS_WYSIWYG
(R) CVBS_TXT
(R) CVBS_LB_DET (letterbox detection)
AUX_CVBS
EXT_FB
EXT_B
EXT_G
EXT_R
BX801 (from TAK)
EXT_R
EXT_G
EXT_B
EXT_FB
EXT_CVBS
JX855
RX855 75R0
+8V_1
LX660 10U0
CX660 100U0
CX661 100N0
CX601 18P0
CX603 39P0
RX600 221R0
LX601 3U9
LX603 8U2
TX600 BC856B
CX600 22P0
CX602 68P0
CX604 150P0
Y
RX604 1K0
RX605 221R0
TX605 BC846B
TX607 BC856B
RX607 1K3
RX606 1K2
RX609 1K0
CX627 100N0
RX622 1K0
RX623 330R0
TX623 BC846B
TX627 BC856B
CX662 100N0
LX621 10U0
RX620 221R0
TX620 BC856B
CX620 82P0
CX621 39P0
CX622 180P0
U
RX625 1K0
RX624 1K2
RX629 1K0
CX647 100N0
RX642 1K0
RX643 330R0
TX643 BC846B
TX647 BC856B
LX641 10U0
RX640 221R0
TX640 BC856B
CX640 82P0
CX641 39P0
CX642 180P0
V
RX645 1K6
RX644 1K2
RX649 1K0
+8V_FE
RX506 33R0
RX503 100R0
TX503 BC847B
CX505 100N0
CX504 150P0
RX504 180R0
RX505 220R0
+8V_FE
RX850 100R0
RX853 10R0
TX850 BC856B
RX852 75R0
RX851 2K2
CX853 100N0
BX802 (to TAK)
CVBS_ETV
LX800 10U0
+8V_1
CX800 47U0
CX801 22N0
RX811 5K6
RX812 1K0
RX813 240R0
TX813 BC846B
TX815 BC856B
TX812 BC856B
RX815 470R0
TX811 BC856B
RX810 100R0
RX814 470R0
RX816 75R0
FB
RX820 47K0
RX822 220R0
TX821 BC846B
TX822 BC856B
RX824 470R0
CX820 10U0
RX821 33K0
RX823 430R0
RX825 75R0
B
RX830 47K0
RX832 220R0
TX831 BC846B
TX832 BC856B
RX834 470R0
CX830 10U0
RX831 33K0
RX833 430R0
RX835 75R0
G
RX840 47K0
RX842 220R0
TX841 BC846B
TX842 BC856B
RX844 470R0
CX840 10U0
RX841 33K0
RX843 430R0
RX845 75R0
R
BX803 (to TAK)
R_ETV
G_ETV
B_ETV
FB_ETV

THOMSON MULTI MEDIA

tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CTV_MIKA

INDEX	DATE	NAME	DESCRIPTION
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..
..	..	..	..

DRAWN
ON: 07.04.00
BY: J.David
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER		TV
FE.20001.00	10677100	00	IC20

PAGE: 3
OF : 3

PCAD FORMAT DIN A2

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

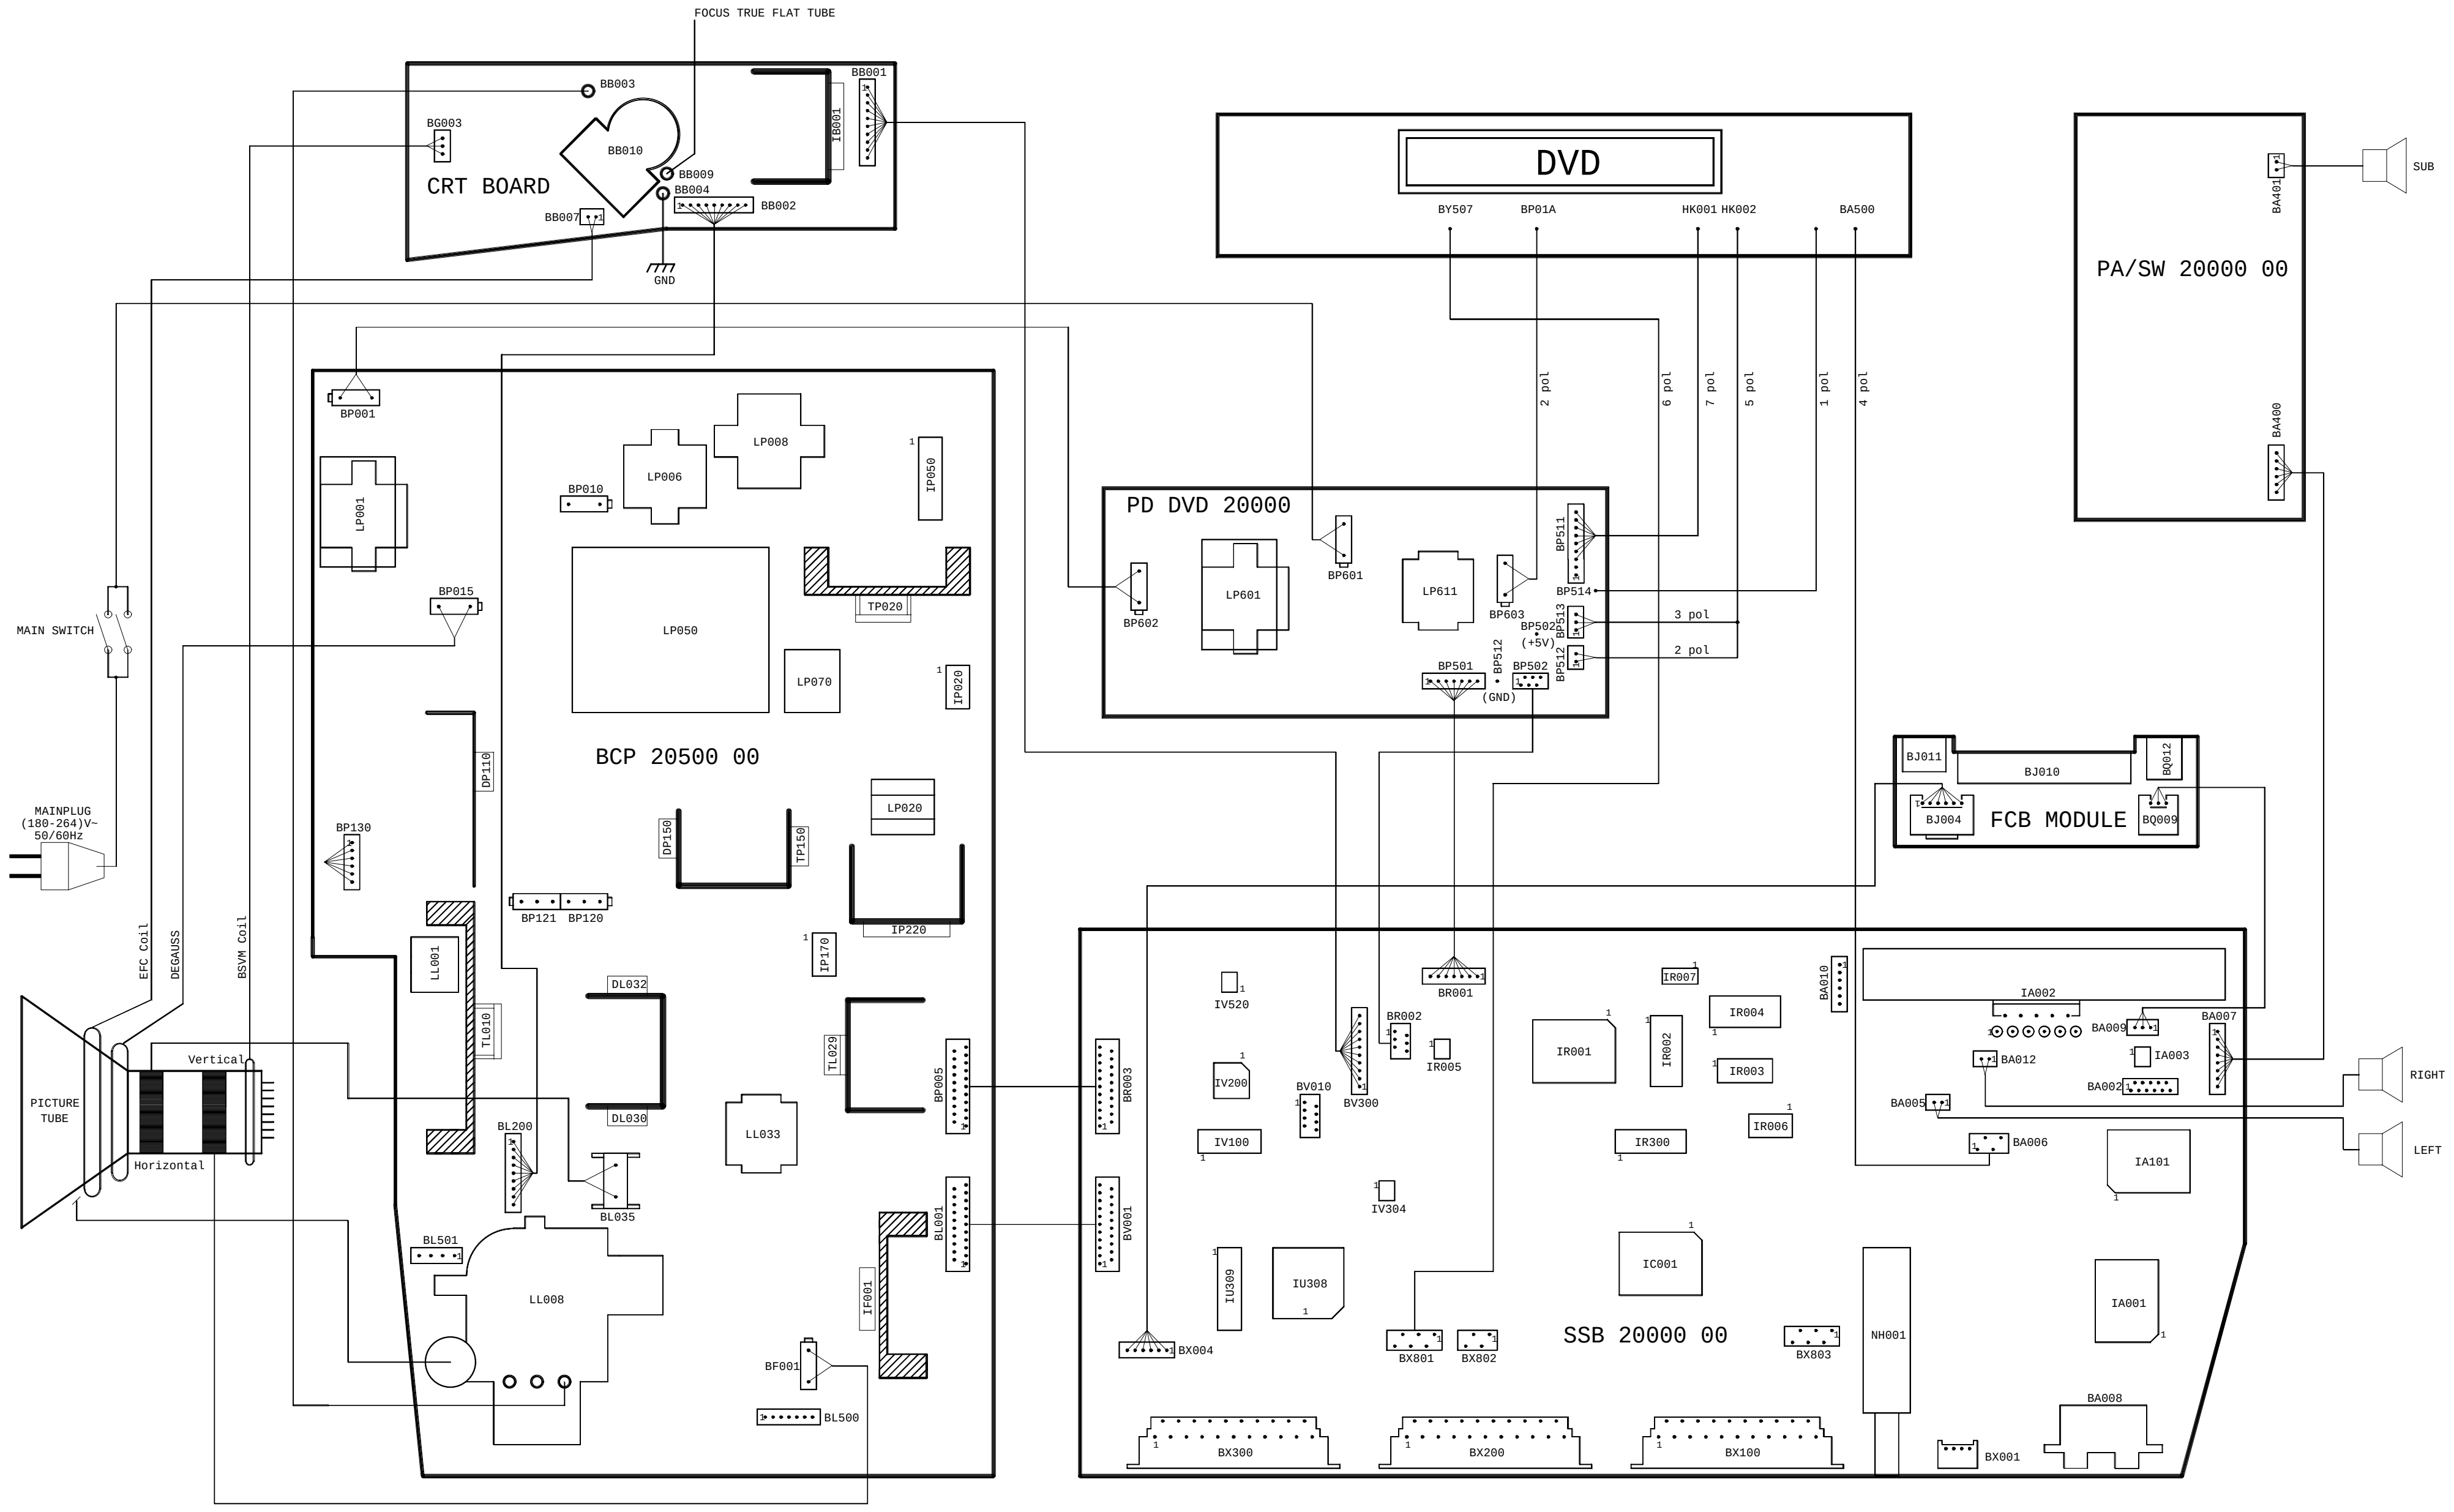
FOCUS TRUE FLAT TUBE
CRT BOARD
BB003
BG003
BB010
BB001
IB001
BB009
BB004
BB007
BB002
GND
DVD
BY507
BP01A
HK001
HK002
BA500
PA/SW 20000 00
BA401
SUB
BA400
2 pol
6 pol
7 pol
5 pol
1 pol
4 pol
3 pol
2 pol
PD DVD 20000
BP602
LP601
BP601
LP611
BP603
BP511
BP514
BP513
BP502 (+5V)
BP512
BP501
BP502
(GND)
BCP 20500 00
BP001
LP001
BP010
LP006
LP008
IP050
TP020
LP050
LP070
IP020
BP015
MAIN SWITCH
MAINPLUG (180-264)V~ 50/60Hz
DP110
BP130
DP150
TP150
LP020
IP220
BP121
BP120
IP170
LL001
TL010
DL032
DL030
LL033
TL029
BP005
BL200
BL035
BL001
BL501
LL008
IF001
BF001
BL500
EFC Coil
DEGAUSS
BSVM Coil
PICTURE TUBE
Vertical
Horizontal
FCB MODULE
BJ011
BJ010
BQ012
BJ004
BQ009
SSB 20000 00
BR001
IR007
BA010
IV520
BR002
IR004
IA002
BA007
IR005
IR001
IR002
BA009
BA012
IA003
IV200
BV010
BR003
BV300
IR003
BA002
RIGHT
BA005
IR006
IV100
IR300
BA006
LEFT
IA101
BV001
IV304
IC001
IU309
IU308
IA001
NH001
BX004
BX801
BX802
BX803
BA008
BX300
BX200
BX100
BX001

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CAT_DUFFNER

INDEX	DATE	NAME	DESCRIPTION
A	03.05.00	J.David	CORRECTION

DRAWN
ON: 14-03-00
BY: J.David
CHECKED
ON:
BY:

DESIGNATION: ICC20_DVD_WIRING_DIAGRAM
TOCOM-NUMBER: 10684580

TV
IC20
PAGE: 1
OF : 2

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

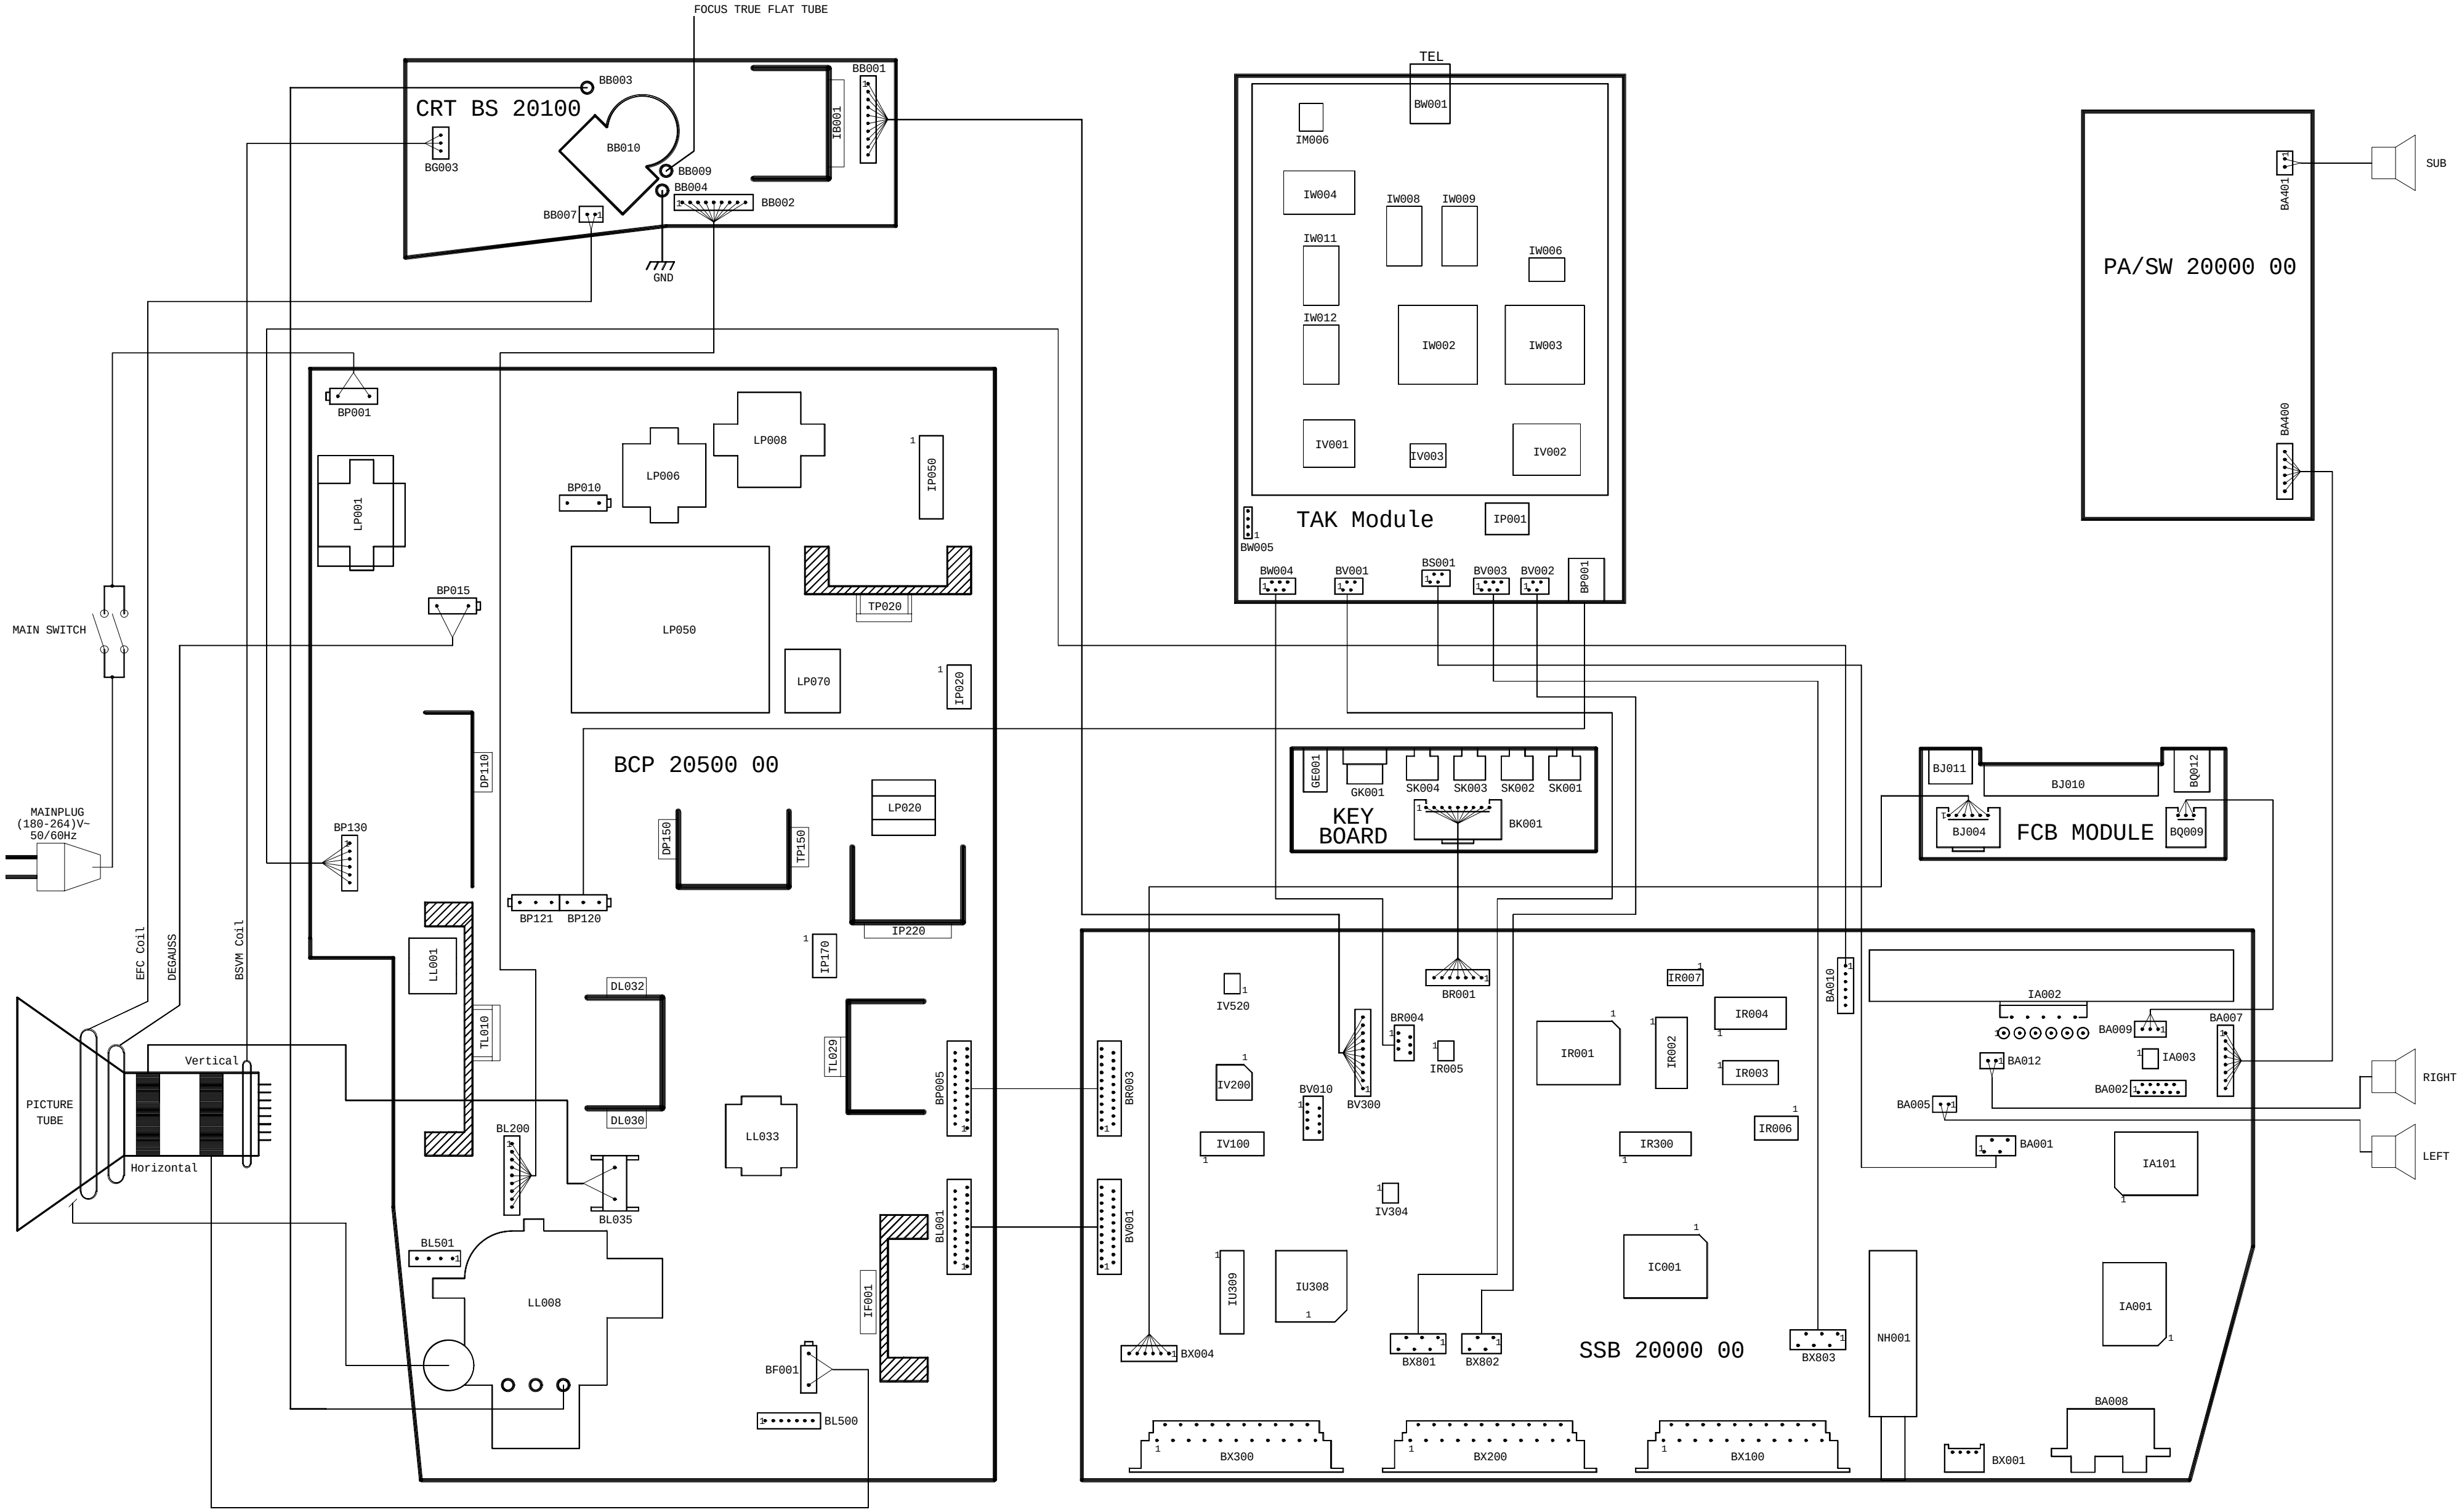
FOCUS TRUE FLAT TUBE
CRT BS 20100
BB003
BB001
IB001
BG003
BB010
BB009
BB004
BB007
BB002
GND
TEL
BW001
IM006
IW004
IW008
IW009
IW011
IW006
IW012
IW002
IW003
IV001
IV003
IV002
TAK Module
IP001
BW005
BW004
BV001
BS001
BV003
BV002
BP001
PA/SW 20000 00
BA401
SUB
BA400
BP001
LP001
LP006
LP008
BP010
IP050
LP050
TP020
LP070
IP020
BP015
MAIN SWITCH
DP110
BCP 20500 00
LP020
DP150
TP150
BP130
MAINPLUG
(180-264)V~
50/60Hz
BP121
BP120
IP220
IP170
LL001
TL010
DL032
DL030
TL029
BP005
LL033
EFC Coil
DEGAUSS
BSVM Coil
PICTURE
TUBE
Vertical
Horizontal
BL200
BL035
BL501
LL008
BL001
IF001
BF001
BL500
GE001
GK001
SK004
SK003
SK002
SK001
KEY
BOARD
BK001
BJ011
BJ010
BQ012
BJ004
FCB MODULE
BQ009
BR001
BR003
BV001
IV520
IV200
BR004
BV010
BV300
IR005
IR007
IR004
IR001
IR002
IR003
IR006
IV100
IR300
IV304
BA010
IA002
BA009
BA007
BA012
IA003
BA002
BA005
BA001
RIGHT
LEFT
IA101
IU309
IU308
IC001
BX004
BX801
BX802
SSB 20000 00
BX803
NH001
IA001
BA008
BX300
BX200
BX100
BX001

THOMSON MULTI MEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CAT_DUFFNER

INDEX	DATE	NAME	DESCRIPTION
...	.._.._..	....	....
...	.._.._..	....	....
...	.._.._..	....	....
B	03.05.00	J.David	CORRECTION
A	14-03-00	J.David	....

DRAWN
ON: 22.02.00
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION	TOCOM-NUMBER
ICC20_TAK_WIRING_DIAGRAM	10684890

TV
IC20
PAGE: 1
OF : 2

PCAD FORMAT DIN A1

THIS DRAWING CANNOT BE COMMUNICATED TO UNAUTHORIZED PERSONS COPIED UNLESS PERMITTED IN WRITING

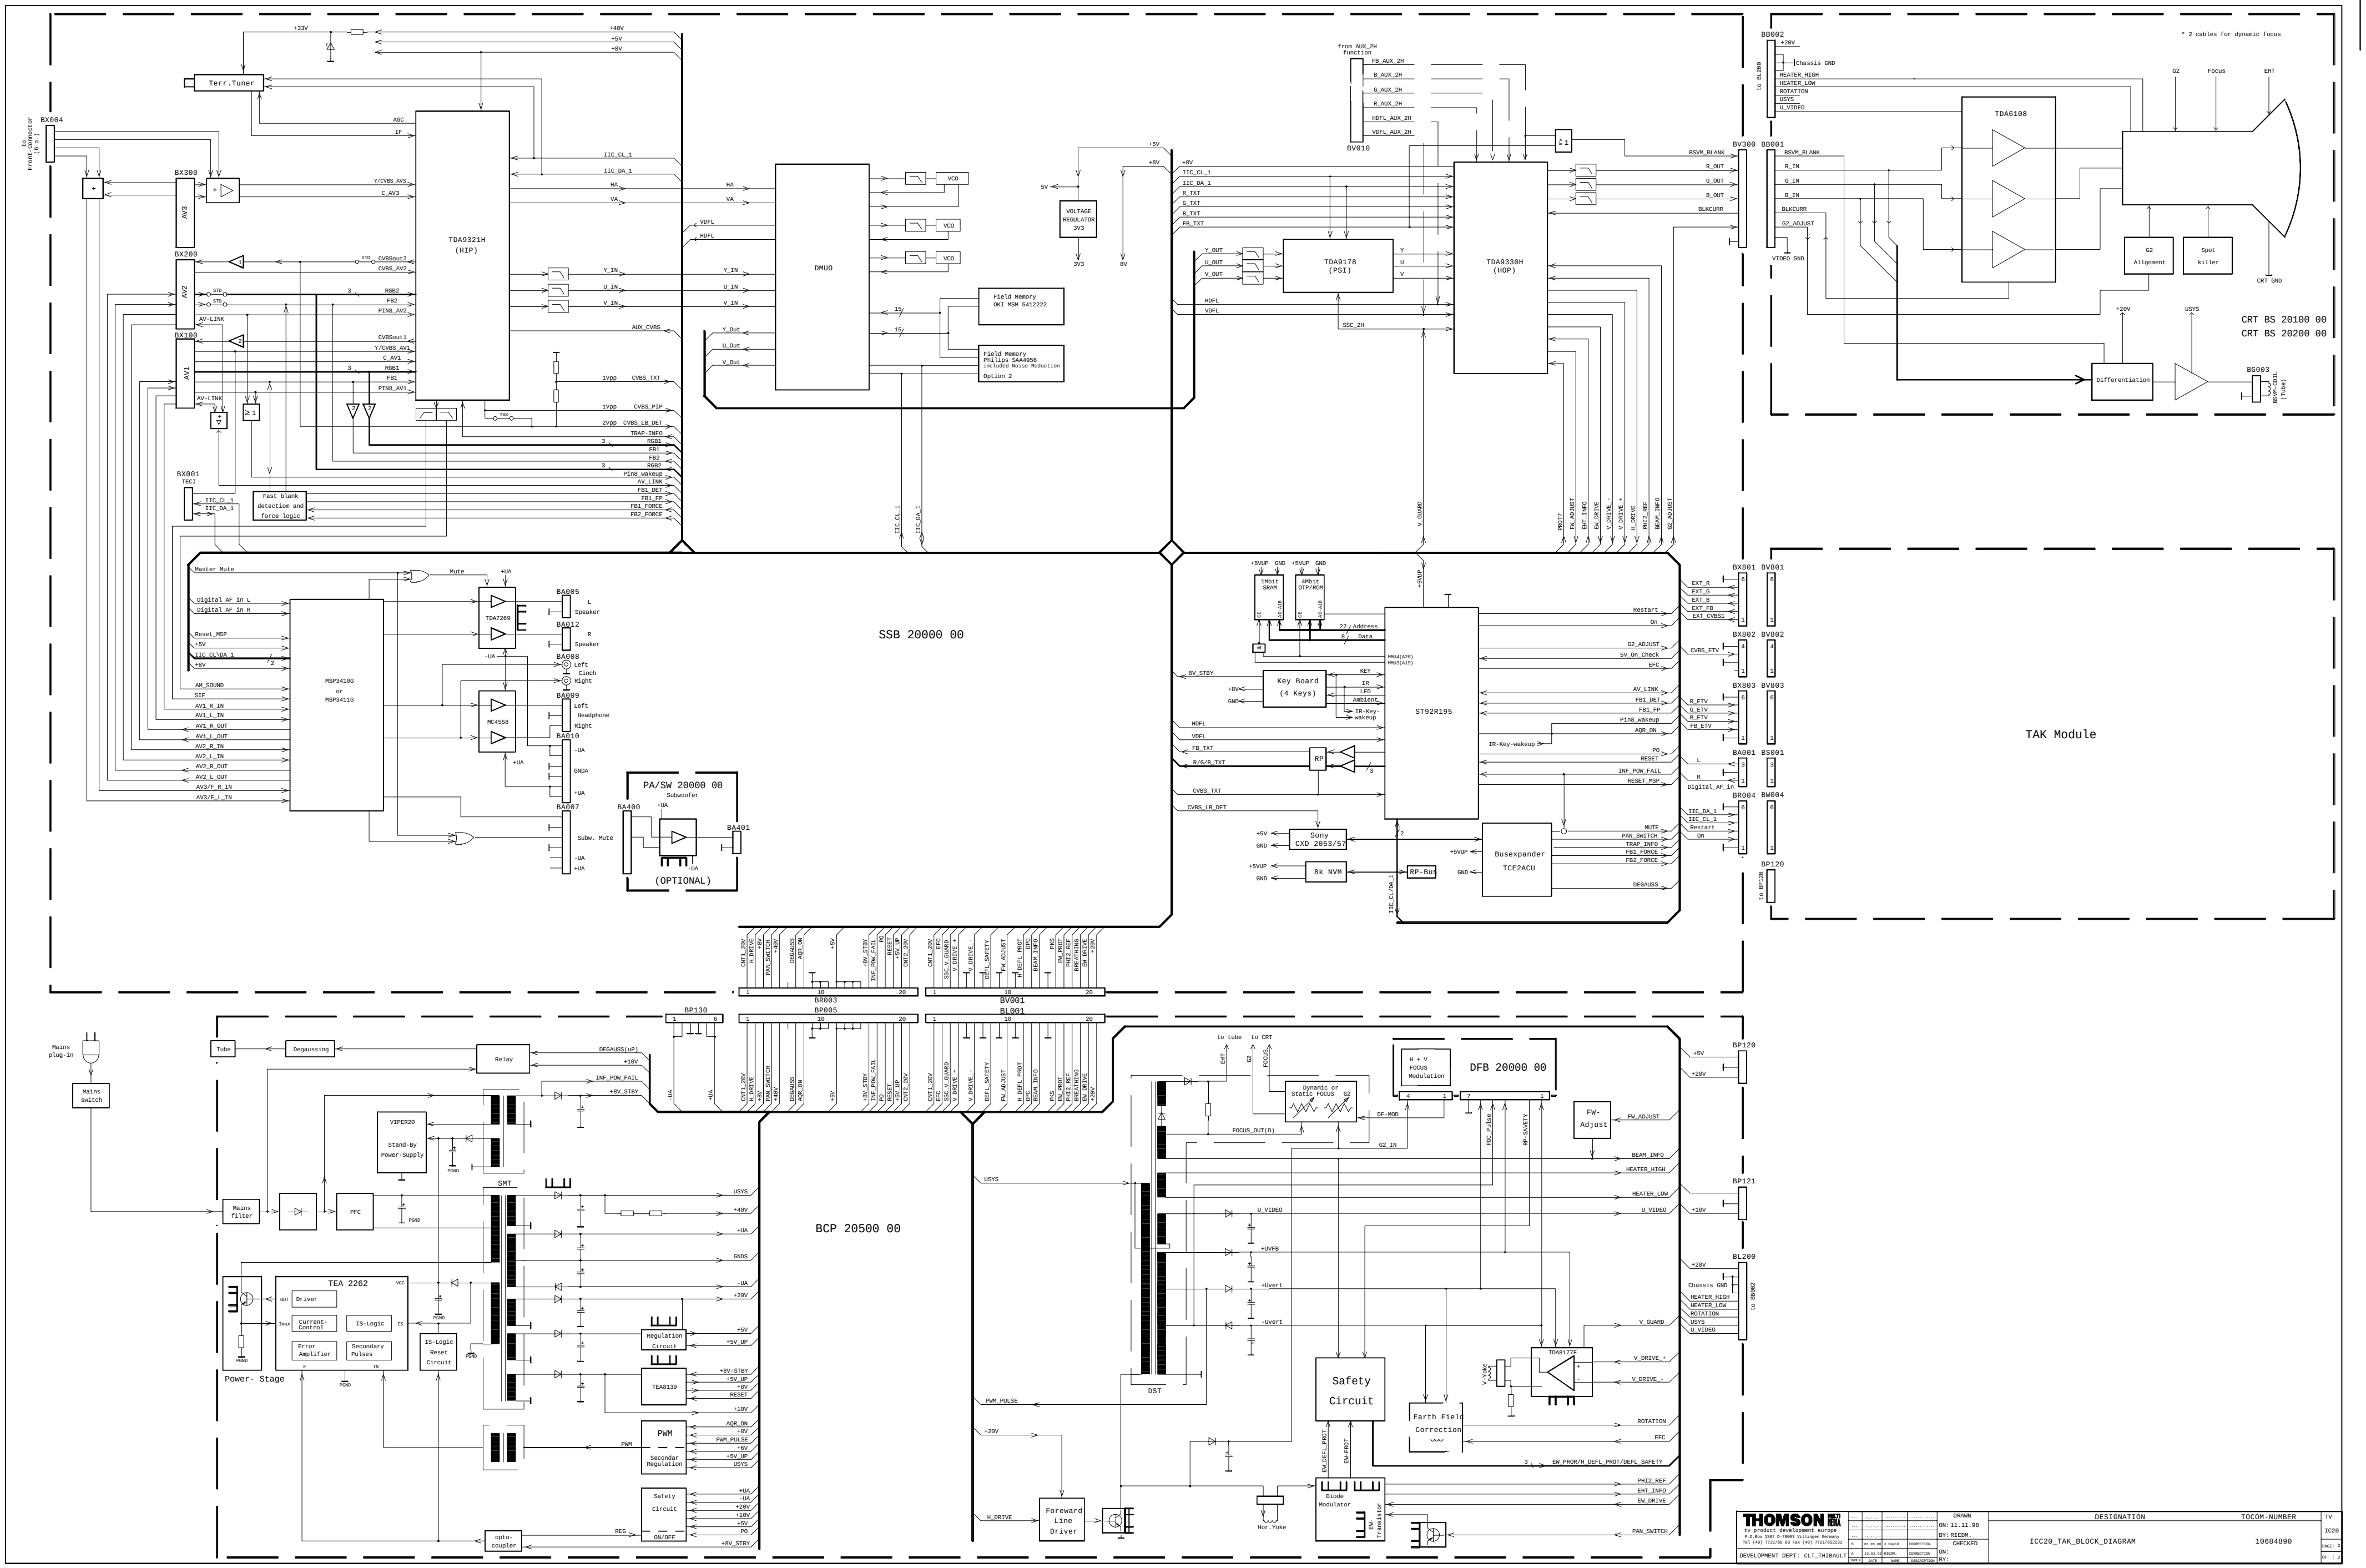
SSB 20000 00
TAK Module
CRT BS 20100 00
CRT BS 20200 00
BCP 20500 00
DFB 20000 00
PA/SW 20000 00
Subwoofer
(OPTIONAL)
Terr.Tuner
TDA9321H
(HIP)
DMUO
Field Memory
OKI MSM 5412222
Field Memory
Philips SAA4956
included Noise Reduction
Option 2
VOLTAGE
REGULATOR
3V3
TDA9178
(PSI)
TDA9330H
(HOP)
TDA6108
G2
Alignment
Spot
killer
Differentiation
MSP3410G
or
MSP3411G
TDA7269
MC4558
ST92R195
Key Board
(4 Keys)
Sony
CXD 2053/57
8k NVM
Busexpander
TCE2ACU
Fast blank
detection and
force logic
Degaussing
Relay
Mains
switch
Mains
filter
PFC
VIPER20
Stand-By
Power-Supply
SMT
TEA 2262
Driver
Current-
Control
IS-Logic
Error
Amplifier
Secondary
Pulses
Power- Stage
IS-Logic
Reset
Circuit
Regulation
Circuit
TEA6139
PWM
Secondar
Regulation
Safety
Circuit
ON/OFF
opto-
coupler
DST
Safety
Circuit
Earth Field
Correction
TDA8177F
Diode
Modulator
Foreward
Line
Driver
Hor.Yoke
Dynamic or
Static FOCUS
H + V
FOCUS
Modulation
FW-
Adjust
* 2 cables for dynamic focus
Mains
plug-in
Tube

THOMSON MULTIMEDIA
tv product development europe
P.O.Box 1307 D-78003 Villingen Germany
Tel (49) 7721/85 03 Fax (49) 7721/852231

DEVELOPMENT DEPT: CLT_THIBAULT

INDEX	DATE	NAME	DESCRIPTION
B	03.05.00	J.David	CORRECTION
A	15.03.99	RIEDM.	CORRECTION

DRAWN
ON: 11.11.98
BY: RIEDM.
CHECKED
ON:
BY:

DESIGNATION: ICC20_TAK_BLOCK_DIAGRAM

TOCOM-NUMBER: 10684890

TV IC20

PAGE: 2
OF : 2

AV INTERFACE SCHEMATIC DIAGRAM - SCHEMA DE LA PLATINE INTERFACE AV - SCHALTBILD INTERFACE AV - SCHEMA DEI CIRCUITI INTERFACE AV - ESQUEMA DE LOS CIRCUITOS INTERFACE AV

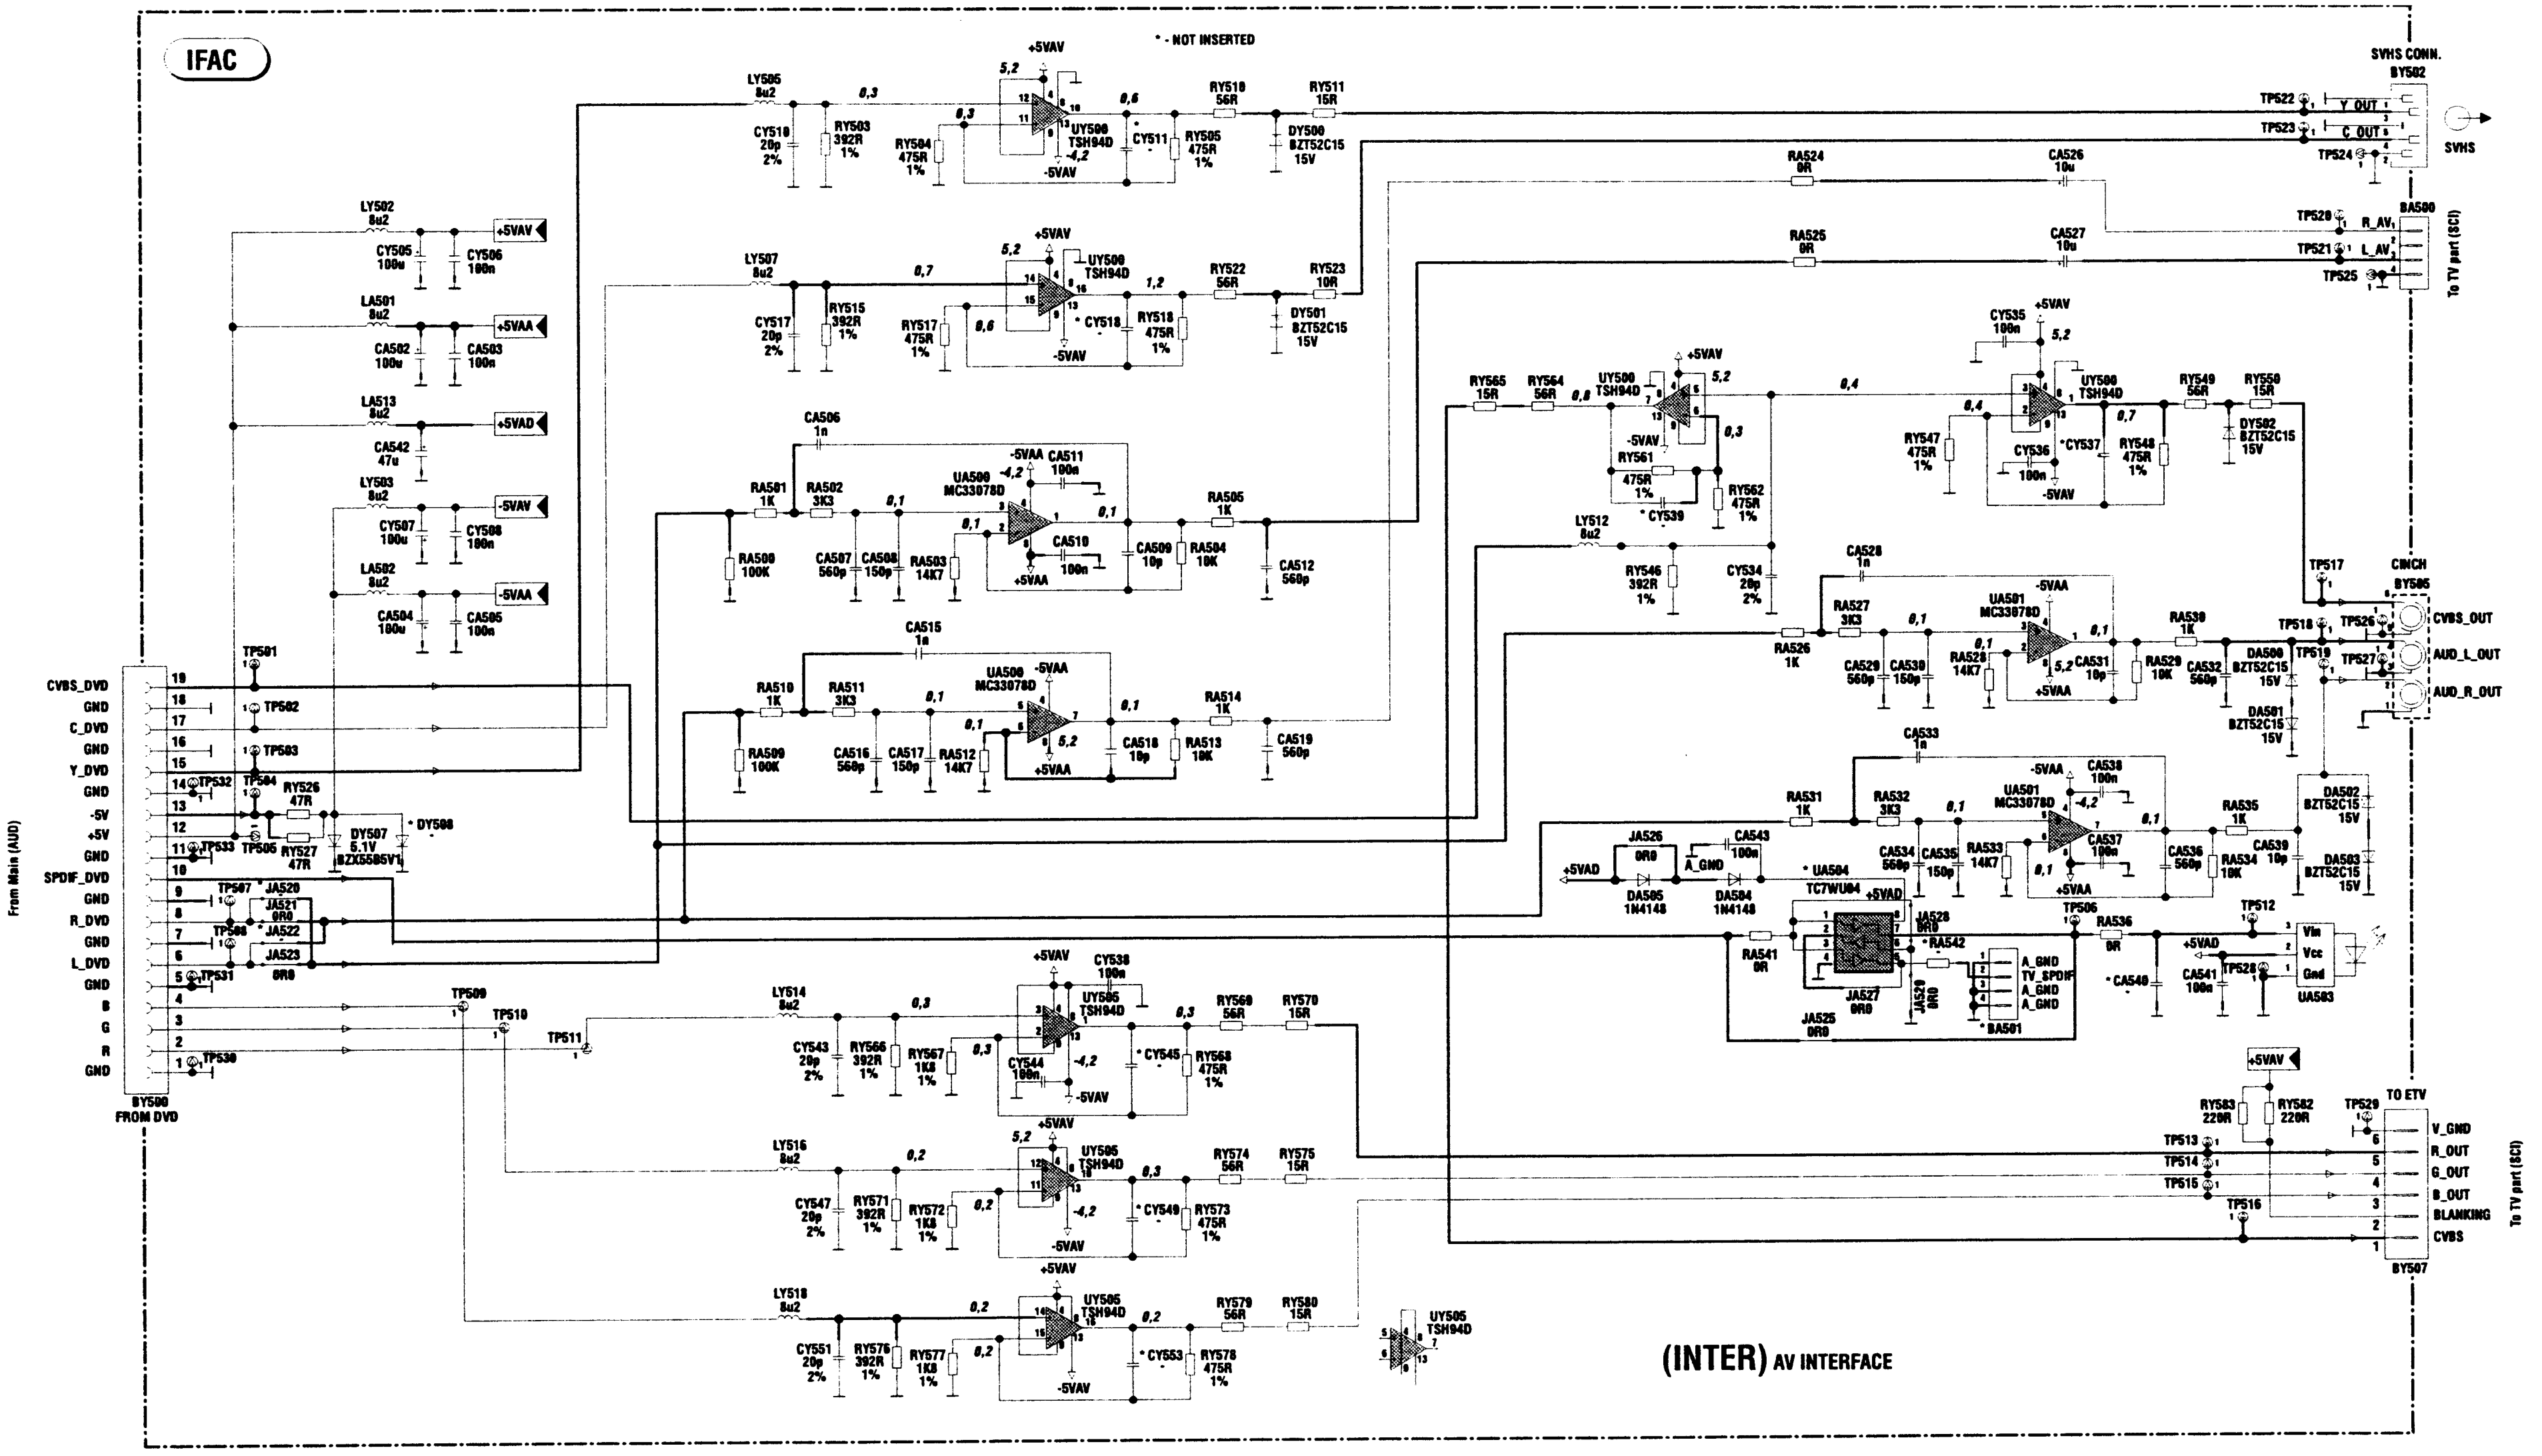
IFAC
* - NOT INSERTED
+5VAV
-5VAV
+5VAA
-5VAA
+5VAD
SVHS CONN.
BY502
Y_OUT
C_OUT
SVHS
TP522
TP523
TP524
BA500
R_AV
L_AV
TP520
TP521
TP525
To TV part (SCI)
CINCH
BY505
CVBS_OUT
AUD_L_OUT
AUD_R_OUT
TO ETV
V_GND
R_OUT
G_OUT
B_OUT
BLANKING
CVBS
BY507
CVBS_DVD
GND
C_DVD
GND
Y_DVD
GND
-5V
+5V
GND
SPDIF_DVD
GND
R_DVD
GND
L_DVD
GND
B
G
R
GND
BY500
FROM DVD
From Main (AUD)
UY500 TSH94D
UA500 MC33078D
UA501 MC33078D
UY505 TSH94D
UA504 TC7WU04
UA503
A_GND
TV_SPDIF
BA501
(INTER) AV INTERFACE

SECONDARY SAFETY VOLTAGES MEASUREMENTS

ON MODE

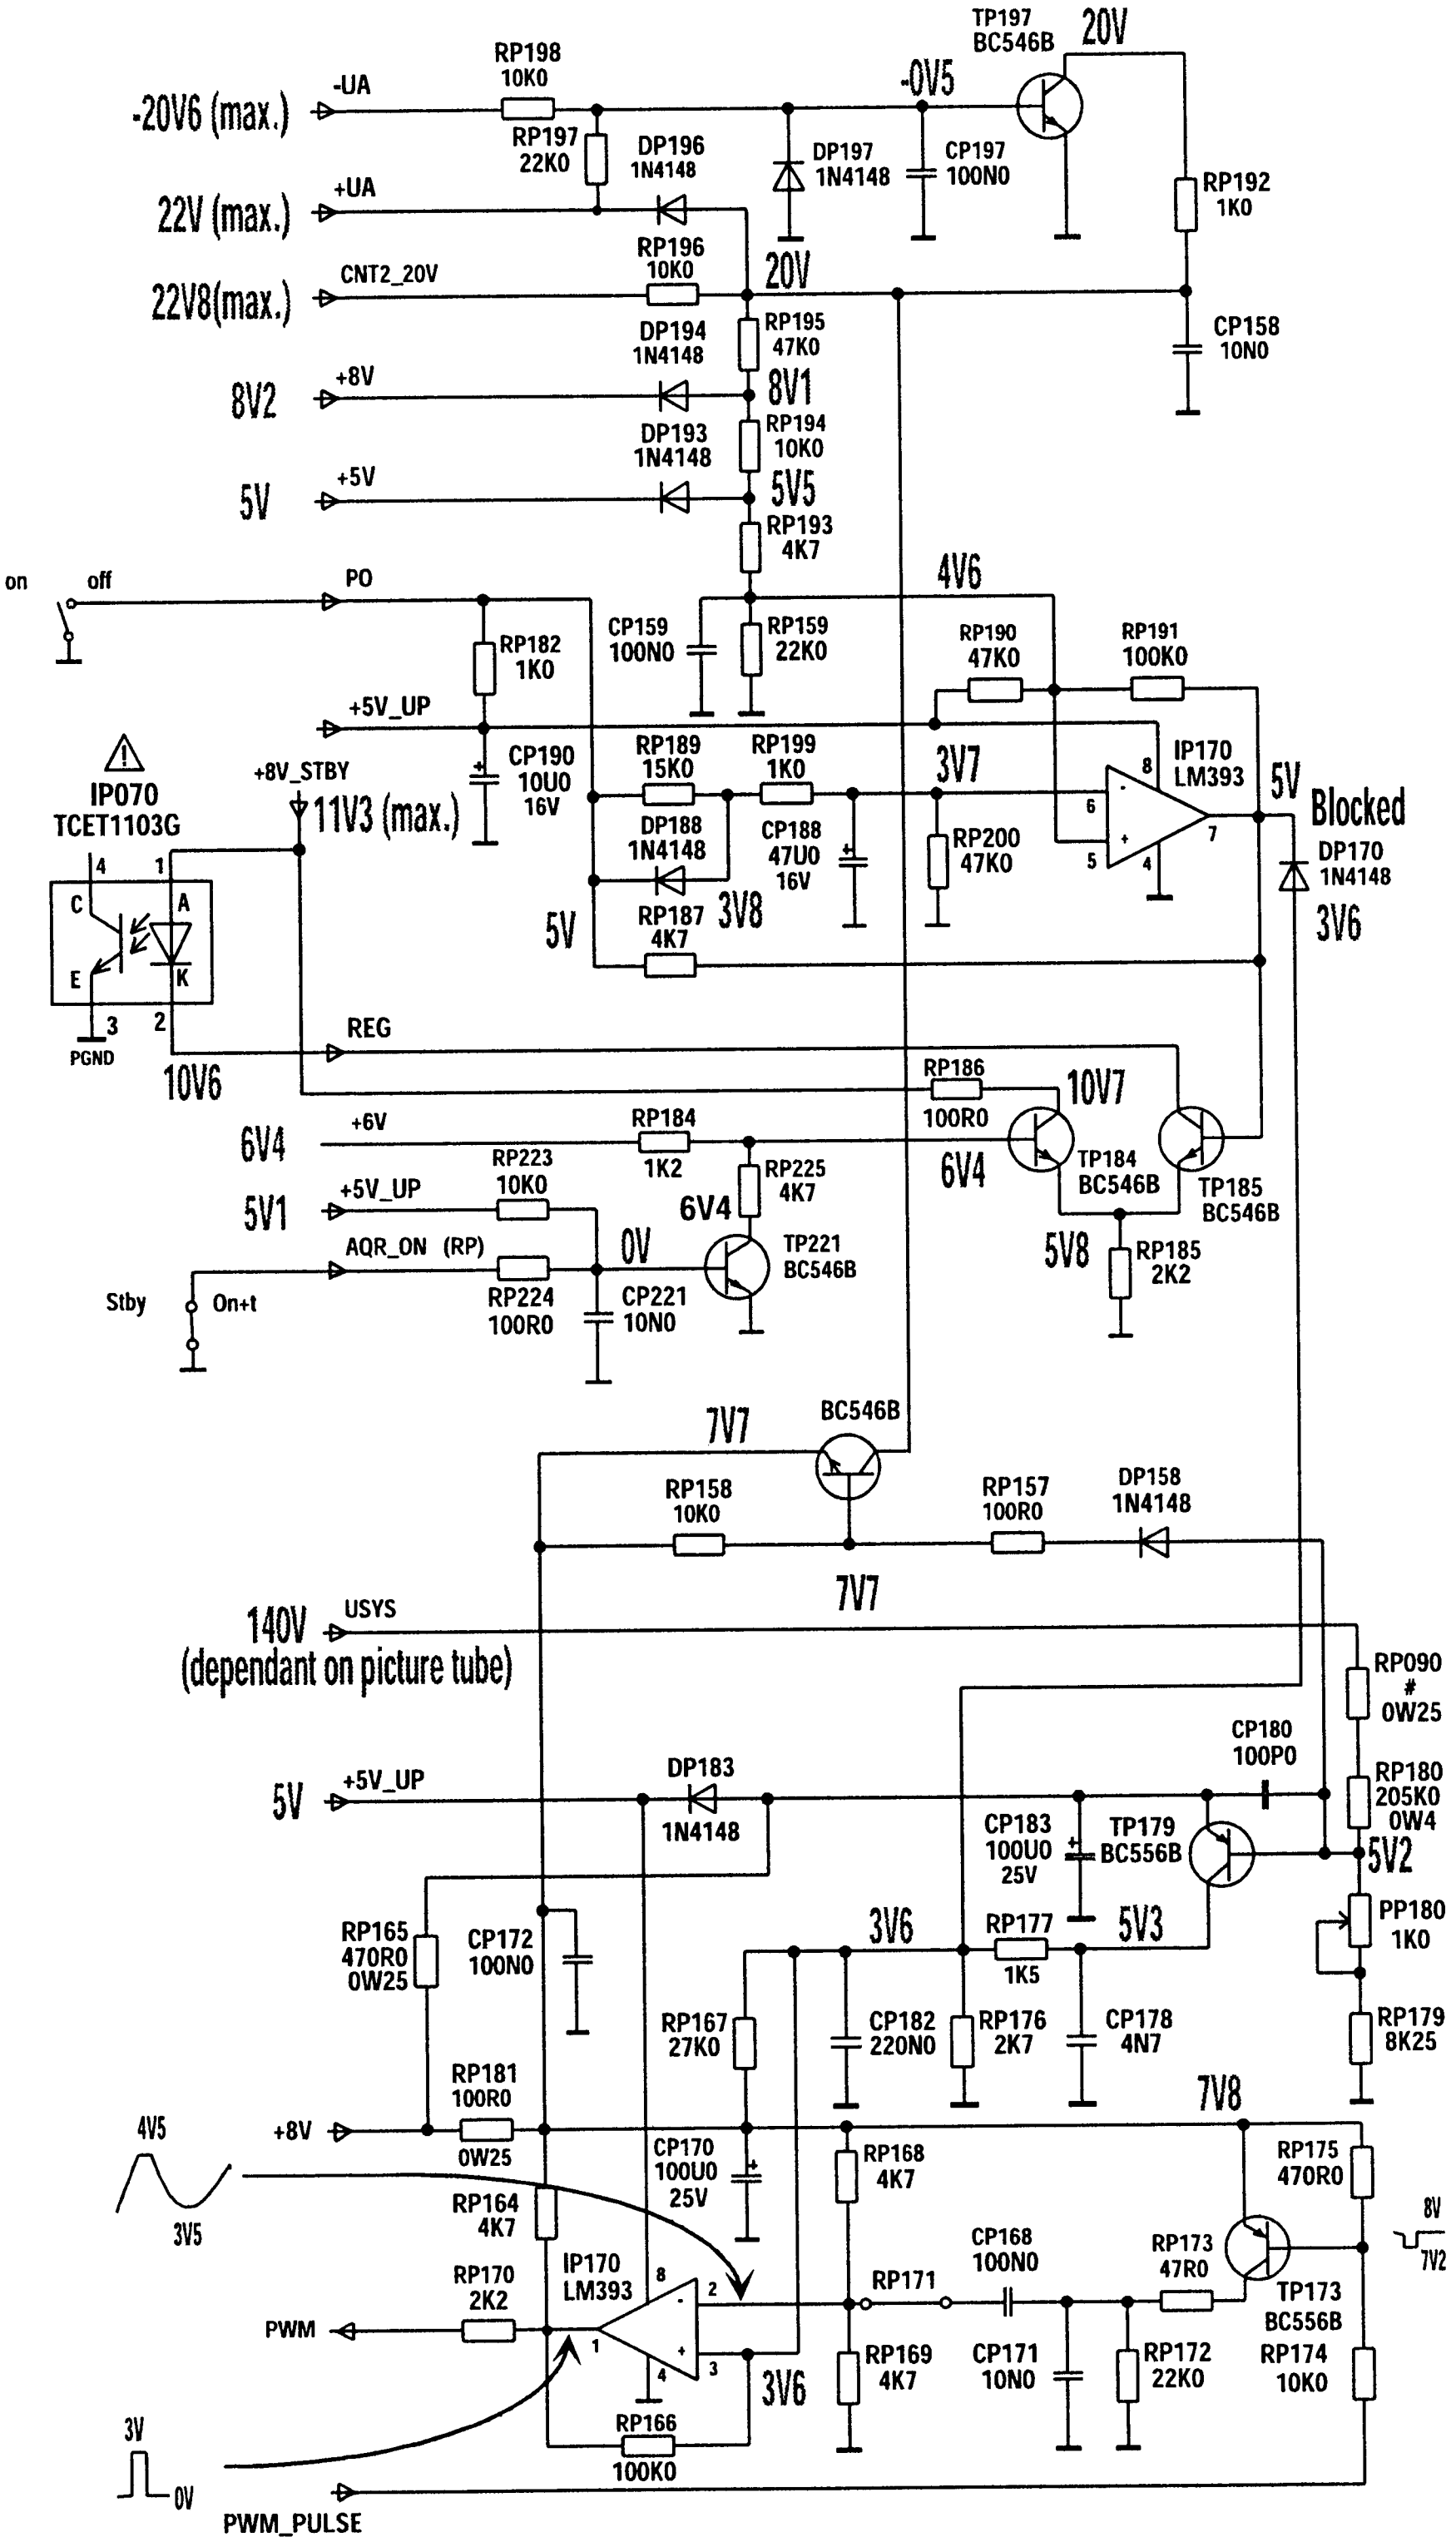

-20V6 (max.)
-UA
RP198 10K0
RP197 22K0
DP196 1N4148
DP197 1N4148
CP197 100N0
-0V5
TP197 BC546B
20V
RP192 1K0
22V (max.)
+UA
22V8(max.)
CNT2_20V
RP196 10K0
20V
CP158 10N0
DP194 1N4148
RP195 47K0
8V2
+8V
8V1
DP193 1N4148
RP194 10K0
5V
+5V
5V5
RP193 4K7
on
off
PO
4V6
RP182 1K0
CP159 100N0
RP159 22K0
RP190 47K0
RP191 100K0
+5V_UP
IP070 TCET1103G
+8V_STBY
11V3 (max.)
CP190 10U0 16V
RP189 15K0
RP199 1K0
3V7
IP170 LM393
5V
Blocked
DP188 1N4148
CP188 47U0 16V
RP200 47K0
DP170 1N4148
3V6
5V
RP187 4K7
3V8
C
E
A
K
PGND
REG
10V6
RP186 100R0
10V7
6V4
+6V
RP184 1K2
RP225 4K7
6V4
TP184 BC546B
TP185 BC546B
5V1
+5V_UP
RP223 10K0
6V4
0V
TP221 BC546B
5V8
RP185 2K2
Stby
On+t
AQR_ON (RP)
RP224 100R0
CP221 10N0
7V7
BC546B
RP158 10K0
RP157 100R0
DP158 1N4148
7V7
140V
USYS
(dependant on picture tube)
RP090 # 0W25
CP180 100P0
5V
+5V_UP
DP183 1N4148
RP180 205K0 0W4
CP183 100U0 25V
TP179 BC556B
5V2
RP165 470R0 0W25
CP172 100N0
3V6
RP177 1K5
5V3
PP180 1K0
RP167 27K0
CP182 220N0
RP176 2K7
CP178 4N7
RP179 8K25
RP181 100R0 0W25
+8V
7V8
4V5
3V5
CP170 100U0 25V
RP168 4K7
RP175 470R0
RP164 4K7
8V
7V2
RP170 2K2
IP170 LM393
RP171
CP168 100N0
RP173 47R0
TP173 BC556B
PWM
3V6
RP169 4K7
CP171 10N0
RP172 22K0
RP174 10K0
RP166 100K0
3V
0V
PWM_PULSE

SECONDARY SAFETY VOLTAGES MEASUREMENTS

STANDBY MODE

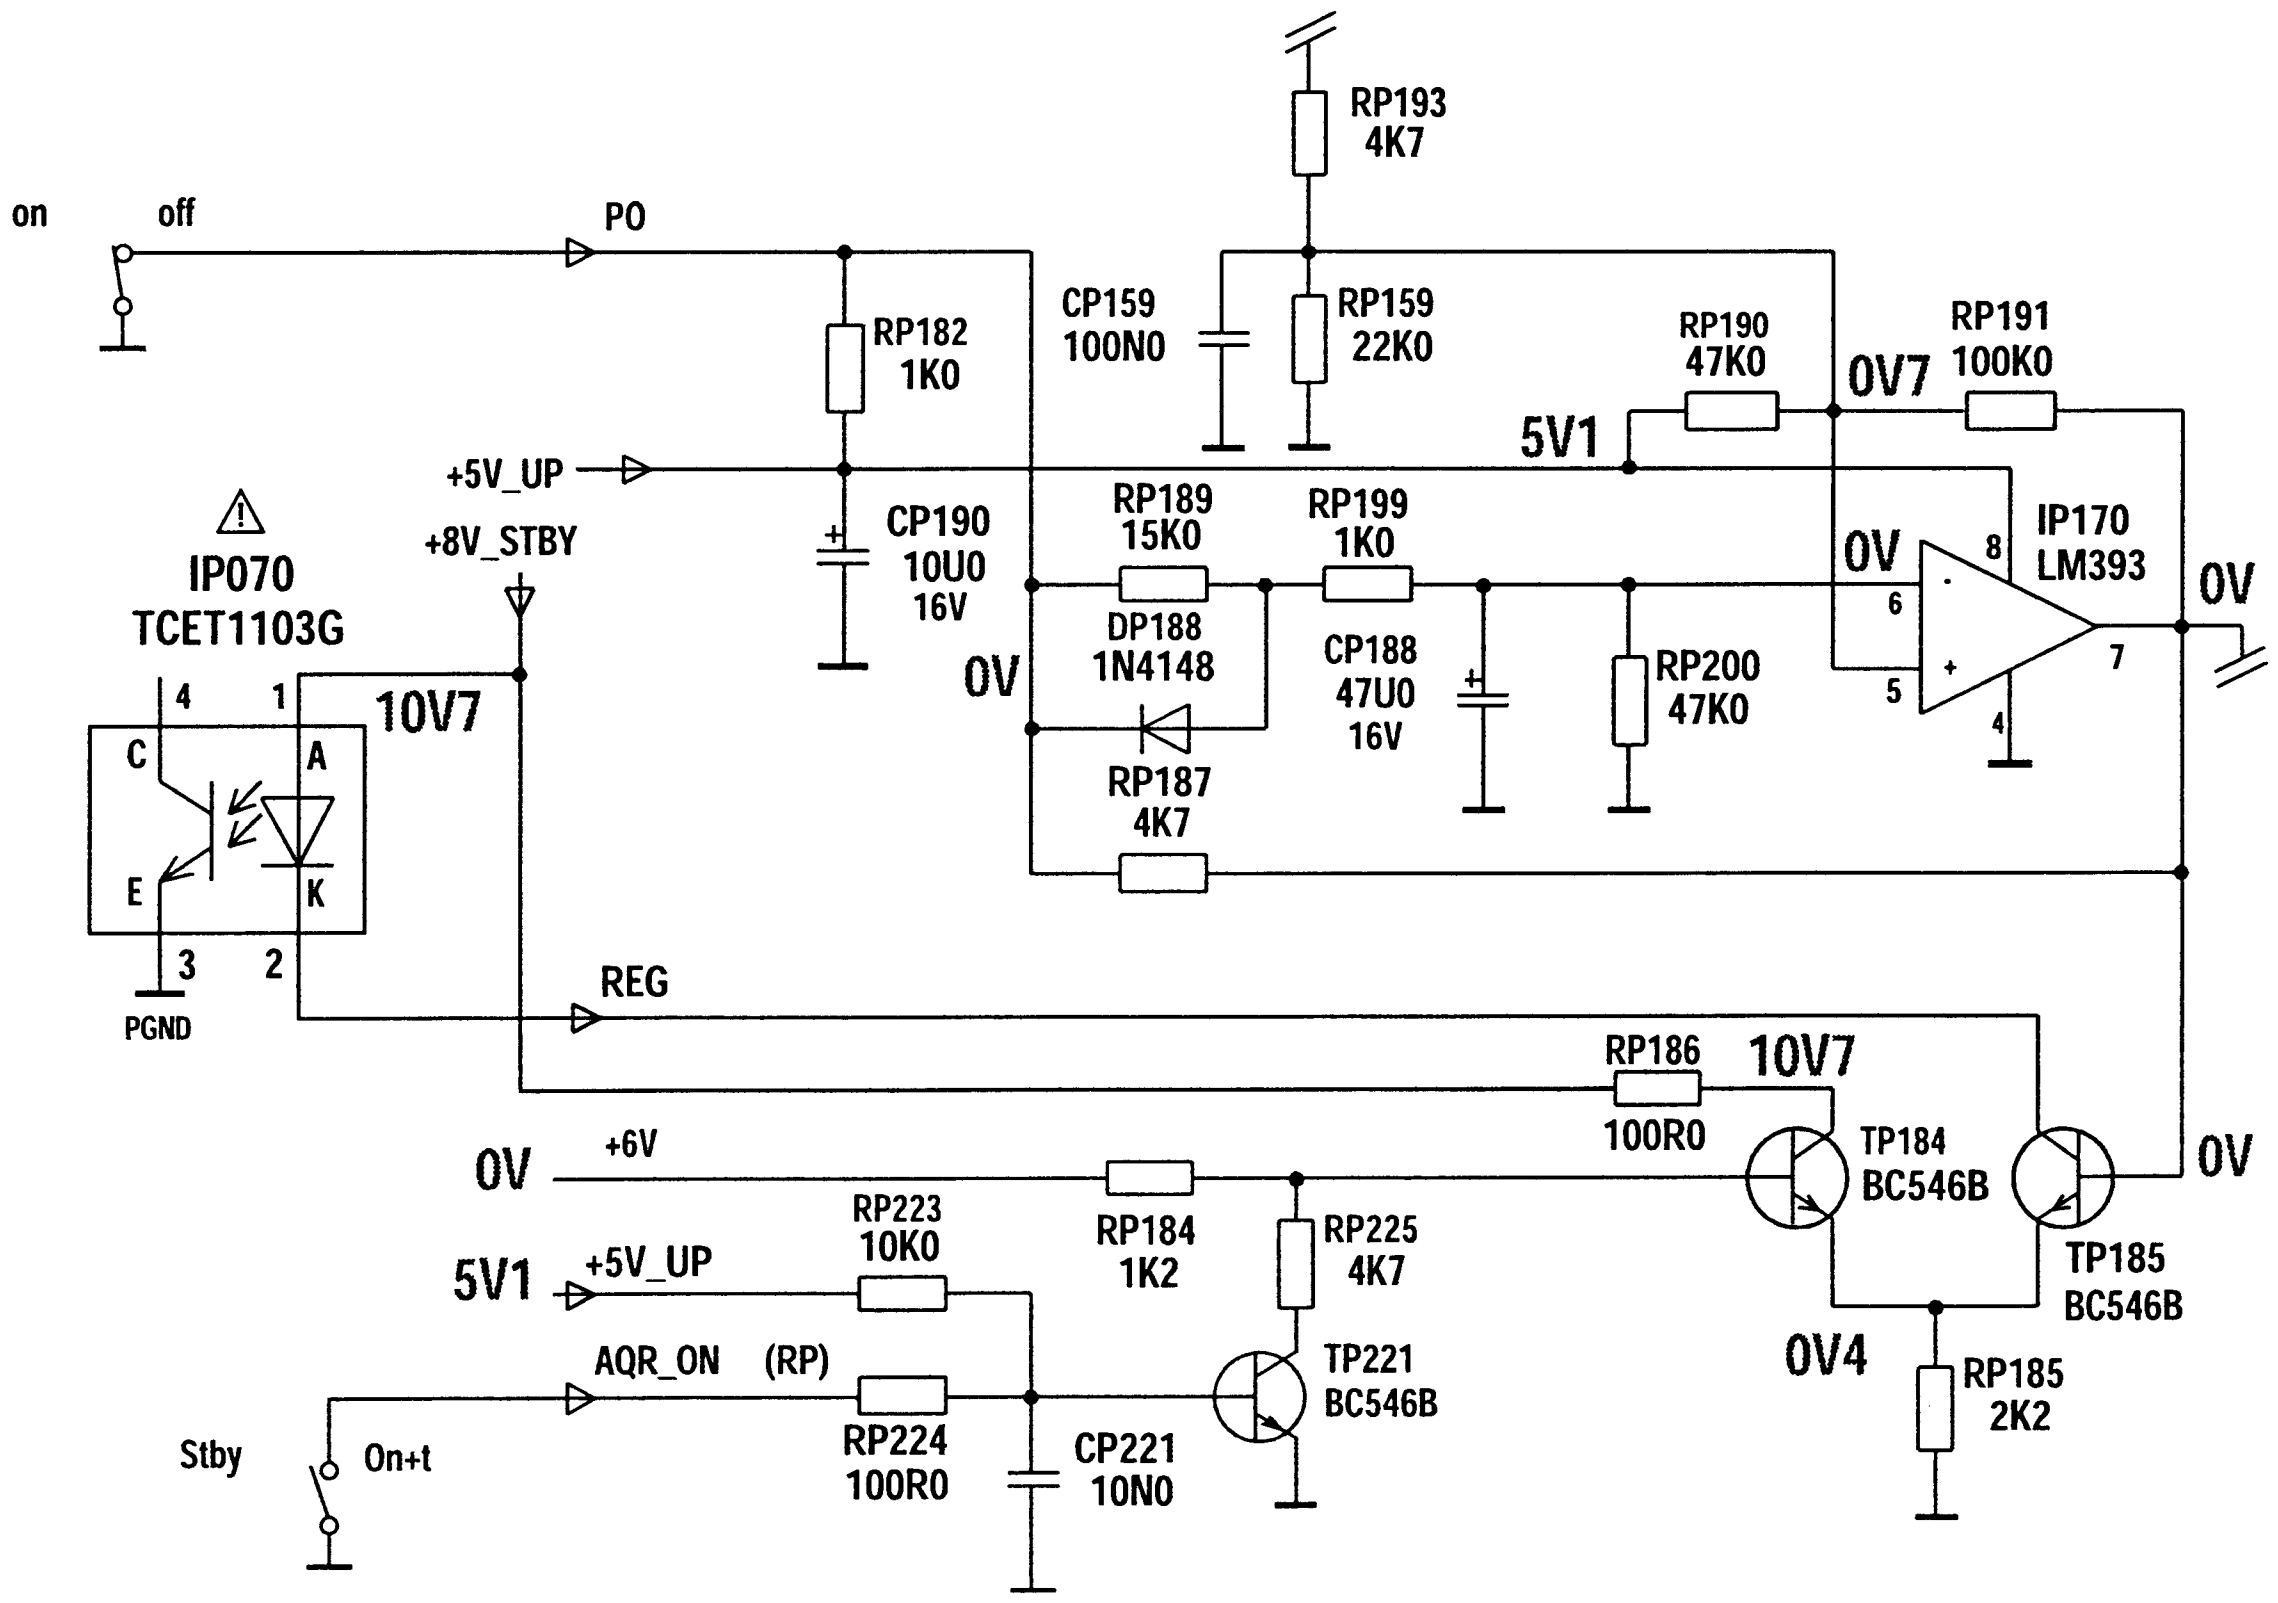

RP193
4K7
on
off
PO
CP159
100N0
RP159
22K0
RP182
1K0
RP190
47K0
RP191
100K0
0V7
5V1
+5V_UP
IP070
TCET1103G
+8V_STBY
CP190
10U0
16V
RP189
15K0
RP199
1K0
0V
IP170
LM393
0V
10V7
0V
DP188
1N4148
CP188
47U0
16V
RP200
47K0
RP187
4K7
4
1
C
A
E
K
3
2
PGND
6
5
8
4
7
REG
RP186
100R0
10V7
TP184
BC546B
0V
+6V
RP184
1K2
RP223
10K0
RP225
4K7
TP185
BC546B
0V
5V1
+5V_UP
AQR_ON
(RP)
TP221
BC546B
0V4
RP185
2K2
Stby
On+t
RP224
100R0
CP221
10N0

BLOCK DIAGRAM - SCHEMA SYNOPTIQUE - BLOCKSCHALTBILD - SCHEMA A BLOCCHI - ESQUEMA DE BLOQUES

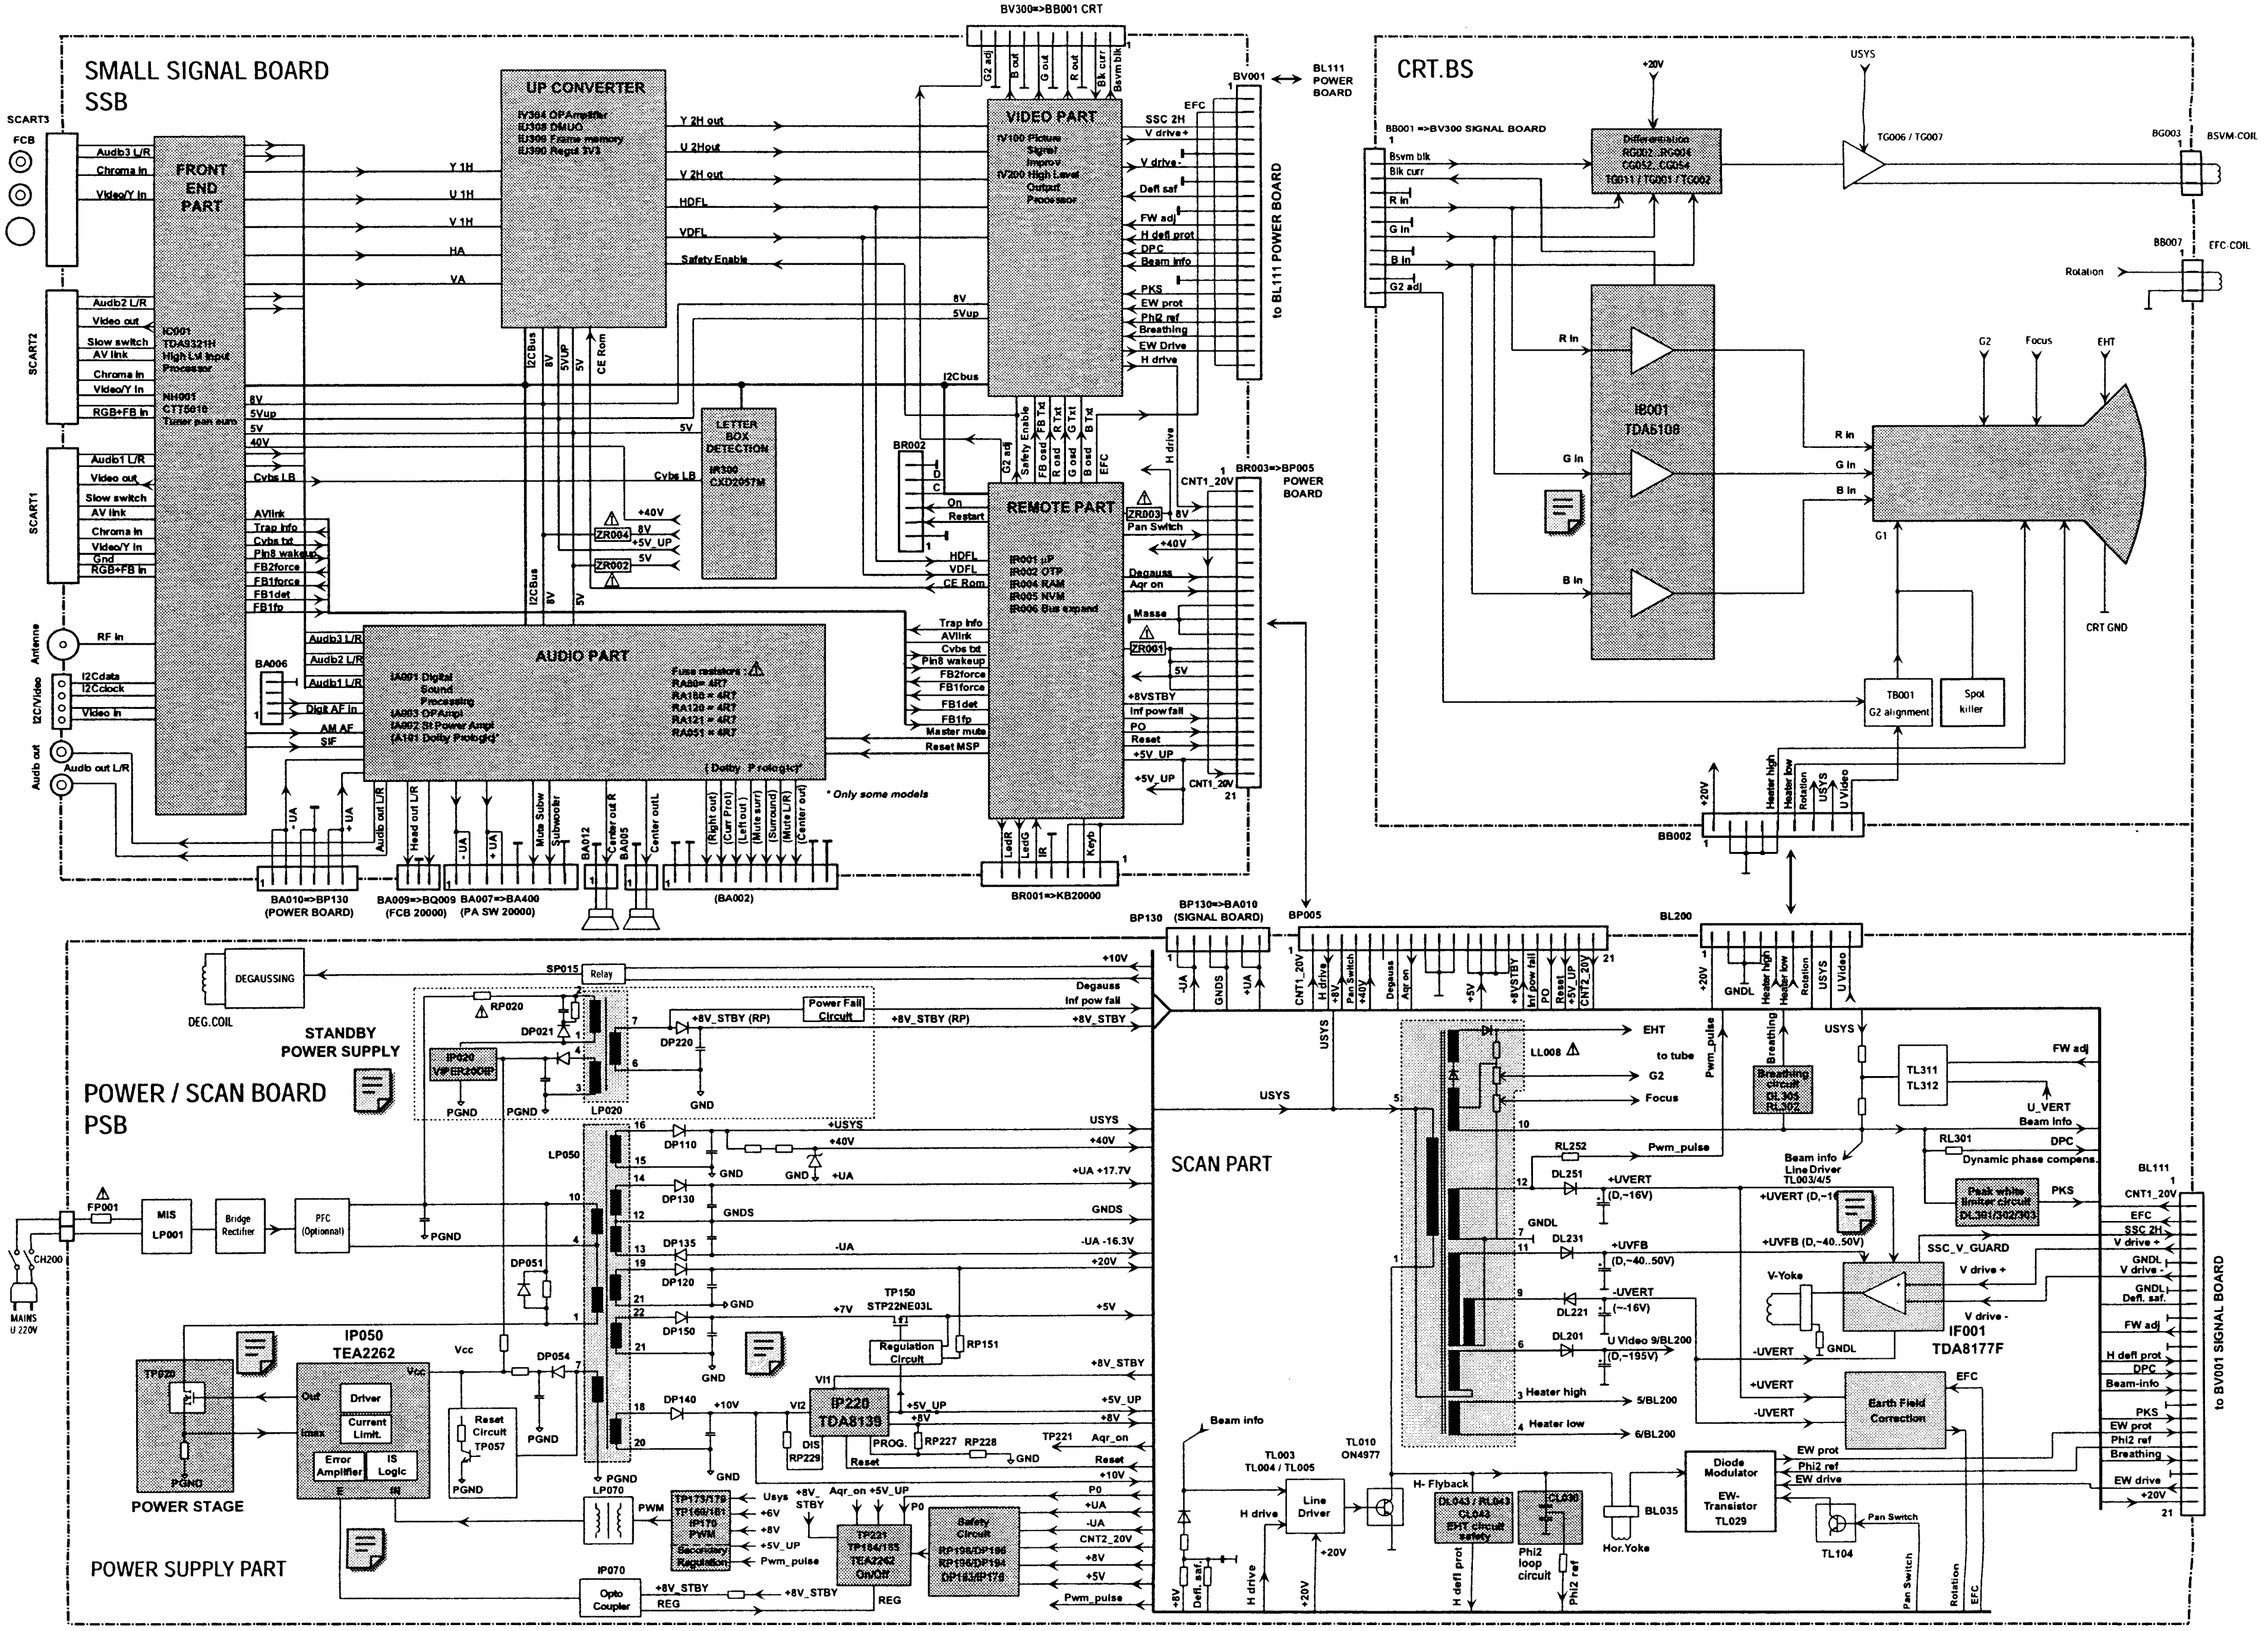
SMALL SIGNAL BOARD
SSB
SCART3
FCB
SCART2
SCART1
Antenne
I2C/Video
Audio out
FRONT END PART
IC001 TDA9321H High Lvl Input Processor
NH001 CTT5010 Tuner pan euro
UP CONVERTER
IV304 OPAmplifier
IU308 DMUO
IU306 Frame memory
IU390 Regul 3V3
Y 2H out
U 2Hout
V 2H out
HDFL
VDFL
Safety Enable
Y 1H
U 1H
V 1H
HA
VA
LETTER BOX DETECTION
IR300 CXD2057M
VIDEO PART
IV100 Picture Signal Improv.
IV200 High Level Output Processor
BV300=>BB001 CRT
BV001
BL111 POWER BOARD
to BL111 POWER BOARD
SSC 2H
V drive +
V drive -
Defl saf
FW adj
H defl prot
DPC
Beam info
PKS
EW prot
Phi2 ref
Breathing
EW Drive
H drive
REMOTE PART
IR001 µP
IR002 OTP
IR004 RAM
IR005 NVM
IR006 Bus expand
BR002
BR003=>BP005 POWER BOARD
CNT1_20V
AUDIO PART
IA001 Digital Sound Processing
IA003 OPAmpl
IA002 St Power Ampl
(A101 Dolby Prologic)*
Fuse resistors :
RA80= 4R7
RA180 = 4R7
RA120 = 4R7
RA121 = 4R7
RA051 = 4R7
(Dolby Prologic)*
* Only some models
BA006
BA010=>BP130 (POWER BOARD)
BA009=>BQ009 (FCB 20000)
BA007=>BA400 (PA SW 20000)
(BA002)
BR001=>KB20000
CRT.BS
BB001 =>BV300 SIGNAL BOARD
Differentiation RG002...RG004 CG052...CG054 TG011 / TG001 / TG002
TG006 / TG007
BG003
BSVM COIL
BB007
EFC COIL
Rotation
IB001 TDA6108
R In
G In
B In
G2
Focus
EHT
G1
CRT GND
TB001 G2 alignment
Spot killer
BB002
BP130 (SIGNAL BOARD)
BP130=>BA010
BP005
BL200
POWER / SCAN BOARD
PSB
DEGAUSSING
DEG.COIL
SP015
Relay
STANDBY POWER SUPPLY
IP020 VIPER20DIP
LP020
Power Fail Circuit
+8V_STBY (RP)
LP050
FP001
MIS LP001
Bridge Rectifier
PFC (Optional)
CH200
MAINS U 220V
IP050 TEA2262
Driver
Current Limit.
Error Amplifier
IS Logic
TP020
POWER STAGE
Reset Circuit TP057
TP150 STP22NE03L
Regulation Circuit
IP220 TDA8139
LP070
TP173/179 TP160/181 IP170 PWM Secondary Regulation
TP221 TP184/185 TEA2262 On/Off
Safety Circuit RP198/DP196 RP196/DP194 DP183/IP178
IP070 Opto Coupler
POWER SUPPLY PART
SCAN PART
LL008
EHT
to tube
G2
Focus
Breathing circuit DL305 RL302
TL311 TL312
U_VERT
RL301
DPC
Dynamic phase compens.
Peak white limiter circuit DL301/302/303
PKS
Beam info Line Driver TL003/4/5
V-Yoke
IF001 TDA8177F
Earth Field Correction
Line Driver
TL003 TL004 / TL005
TL010 ON4977
H- Flyback
DL043 / RL043 CL043 EHT circuit safety
CL030
Phi2 loop circuit
BL035
Hor.Yoke
Diode Modulator
EW-Transistor TL029
TL104
Pan Switch
BL111
to BV001 SIGNAL BOARD

ICC20
First issue 05 / 00